

	Pictorial index	Search by illustration
1	For safety and security	Make sure to read through them
2	Instrument Cluster	How to read the gauges and meters, the variety of warning lights and indicators, etc.
3	Operation of each component	Opening and closing the doors and windows, adjustment before driving, etc.
4	Driving	Operations and advices which are necessary for driving
5	Interior features	Usage of the interior features, etc.
6	Maintenance and care	Caring for your vehicle and maintenance procedures
7	When trouble arises	What to do in case of malfunction or emergency
8	Vehicle specifications	Vehicle specifications, customizable features, etc.
	Index	Search by symptom
		Search alphabetically

For your information..... 8  
 Reading this manual ..... 12  
 How to search ..... 13  
 Pictorial index ..... 14

**1 For safety and security**

1-1. For safe use  
     Before driving ..... 38  
     For safety drive ..... 40  
     Seat belts ..... 42  
     SRS airbags ..... 47  
     Airbag manual on-off system ..... 59  
     Safety information for children ..... 61  
     Child restraint systems ..... 62  
     Installing child restraints ..... 72  
     Exhaust gas precautions ..... 81  
 1-2. Theft deterrent system  
     Engine immobilizer system. 82  
     Double locking system ..... 87  
     Alarm ..... 88

**2 Instrument cluster**

2. Instrument cluster  
     Warning lights and indicators..... 96  
     Gauges and meters ..... 101  
     Multi-information display . 105

**3 Operation of each components**

3-1. Key information  
     Keys ..... 114  
 3-2. Opening, closing and locking the doors and trunk  
     Smart entry & start system 122  
     Wireless remote control .... 142  
     Doors ..... 147  
     Trunk ..... 151  
 3-3. Adjusting the seats  
     Front seats ..... 158  
     Power rear seat ..... 163  
     Driving position memory .. 167  
     Rear seat position memory 172  
     Head restraints..... 174  
 3-4. Adjusting the steering wheel and mirrors  
     Steering wheel..... 178  
     Inside rear view mirror..... 179  
     Outside rear view mirrors . 181  
 3-5. Opening, closing the windows and moon roof  
     Power windows ..... 185  
     Moon roof ..... 188

<p><b>4 Driving</b></p> <p>4-1. Before driving</p> <p>    Driving the vehicle..... 194</p> <p>    Cargo and luggage..... 205</p> <p>    Trailer towing..... 206</p> <p>4-2. Driving procedures</p> <p>    Engine (ignition) switch.... 207</p> <p>    Automatic transmission     (vehicles without paddle     shift switches) ..... 212</p> <p>    Automatic transmission     (vehicles with paddle     shift switches) ..... 216</p> <p>    Turn signal lever ..... 223</p> <p>    Parking brake ..... 224</p> <p>    Brake Hold ..... 227</p> <p>    Horn ..... 229</p> <p>4-3. Operating the lights and     wipers</p> <p>    Headlight switch ..... 230</p> <p>    AHS (Adaptive High-beam     System) ..... 234</p> <p>    Fog light switch..... 241</p> <p>    Windshield wipers and     washer ..... 242</p> <p>    Headlight cleaner switch... 245</p> <p>4-4. Refueling</p> <p>    Opening the fuel tank cap . 246</p>	<p>4-5. Using the driving support     systems</p> <p>    Cruise control..... 250</p> <p>    Dynamic radar cruise     control ..... 254</p> <p>    Dynamic radar cruise     control with full-speed     range..... 268</p> <p>    LKA     (Lane-Keeping Assist) .... 285</p> <p>    Lexus parking     assist-sensor ..... 295</p> <p>    Lexus parking assist     monitor..... 306</p> <p>    Driving mode select     switch ..... 335</p> <p>    Electronically modulated     air suspension..... 339</p> <p>    Driving assist systems ..... 341</p> <p>    PCS (Pre-Crash     Safety system)..... 349</p> <p>    Rear Pre-Crash Safety     system ..... 363</p> <p>    BSM     (Blind Spot Monitor)..... 369</p> <p>        • The Blind Spot Monitor         function ..... 374</p> <p>        • The Rear Crossing Traffic         Alert function..... 377</p> <p>    Lexus night view ..... 380</p> <p>4-6. Driving tips</p> <p>    Winter driving tips ..... 386</p>	 <p>1</p> <p>2</p> <p>3</p> <p>4</p> <p>5</p> <p>6</p> <p>7</p> <p>8</p>
---	--	--

## 5 Interior features

- 5-1. Remote Touch screen
  - Remote Touch ..... 392
  - Remote Touch screen ..... 394
  - Set up screen ..... 404
  - 12.3-inch display operation 421
  - Speech command system .. 430
- 5-2. Lexus Climate Concierge
  - Lexus Climate Concierge .. 437
- 5-3. Using the air conditioning system and defogger
  - Front automatic air conditioning system ..... 438
  - Rear air conditioning system ..... 456
  - Rear window and outside rear view mirror defoggers ..... 462
  - Windshield wiper de-icer .. 463
- 5-4. Using the audio system
  - Audio system type ..... 464
  - Using the radio ..... 489
  - Using the CD/DVD player ..... 496
  - Playing an audio CD and MP3/WMA discs ..... 498
  - Playing DVD video ..... 504
  - CD/DVD player and DVD video disc information .... 516
  - Listening to Bluetooth® audio ..... 525
  - Listening to a USB memory ..... 536
  - Listening to an iPod ..... 546
  - Using the AUX port ..... 556
  - Optimal use of the audio/video system ..... 558
  - Using the rear seat audio controls ..... 560
  - Using the steering wheel audio switches ..... 563
- 5-5. Using the rear seat entertainment system
  - Rear seat entertainment system features ..... 566
  - Playing a Blu-ray Disc™ (BD) and DVD disc ..... 582
  - Playing an audio CD and MP3/WMA discs ..... 610
  - Playing an SD card ..... 615
  - Using the front audio system ..... 622
  - Using the video mode ..... 624
  - Changing other setting ..... 626
- 5-6. Using the hands-free phone system (for cellular phone)
  - Hands-free system (for cellular phone) ..... 630
  - Using a Bluetooth® phone ..... 641
  - Setting the hands-free system (for cellular phone) ..... 662
  - Setting the Bluetooth® ..... 687

5-7. Using the interior lights		
Interior lights list..... 700		
• Interior lights ..... 701		
• Personal lights..... 702		
5-8. Using the storage features		
List of storage features ..... 704		
• Glove box..... 705		
• Coin holder ..... 706		
• Door pockets ..... 706		
• Cup holders ..... 707		
• Console box ..... 709		
• Cool box/auxiliary box . 710		
• Auxiliary boxes..... 712		
Trunk features ..... 714		
5-9. Other interior features		
Sun visors and vanity		
mirrors..... 717		
Clock ..... 719		
Ashtrays ..... 720		
Cigarette lighters ..... 721		
Power outlets..... 723		
Heated steering wheel ..... 725		
Climate control seats/ seat heaters ..... 727		
Armrest..... 732		
Rear sunshade ..... 733		
Rear door sunshades..... 736		
Trunk storage extension .... 739		
Coat hooks..... 741		
Assist grips ..... 742		
	<b>6</b>	<b>Maintenance and care</b>
	6-1.	Maintenance and care
		Cleaning and protecting the vehicle exterior..... 744
		Cleaning and protecting the vehicle interior ..... 748
	6-2.	Maintenance
		Maintenance requirements..... 751
	6-3.	Do-it-yourself maintenance
		Do-it-yourself service precautions ..... 754
		Hood..... 757
		Positioning a floor jack .... 758
		Engine compartment ..... 760
		Tires..... 775
		Tire inflation pressure ..... 788
		Wheels..... 790
		Air conditioning filter ..... 792
		Electronic key battery ..... 795
		Checking and replacing fuses ..... 798
		Light bulbs ..... 803

**7 When trouble arises**

7-1. Essential information

Emergency flashers ..... 814

If your vehicle has to be stopped in an emergency ..... 815

7-2. Steps to take in an emergency

If your vehicle needs to be towed..... 816

If you think something is wrong ..... 822

Fuel pump shut off system 823

If a warning light turns on or a warning buzzer sounds ..... 824

If a warning message is displayed ..... 832

If you have a flat tire (vehicles with a spare tire) ..... 836

If you have a flat tire (vehicles without a spare tire) ..... 847

If the engine will not start . 865

If the shift lever cannot be shifted from P..... 867

If the parking brake cannot be released ..... 869

If the electronic key does

not operate properly ..... 874

If the vehicle battery is discharged ..... 877

If your vehicle overheats... 881

If the vehicle becomes stuck ..... 885

**8 Vehicle specifications**

8-1. Specifications

Maintenance data (fuel, oil level, etc.)..... 888

Fuel information..... 902

8-2. Customization

Customizable features ..... 904

**Index**

What to do if... (Troubleshooting)918

Alphabetical index ..... 924

For vehicles with a navigation system, refer to the “Navigation System Owner’s Manual” for information regarding the navigation system.

# امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

[FarmaSOS.com](http://FarmaSOS.com)

1

2

3

4

5

6

7

8

---

## For your information

### Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Lexus policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of color and equipment.

### Accessories, spare parts and modification of your Lexus

Both genuine Lexus and a wide variety of other spare parts and accessories for Lexus vehicles are currently available on the market. Should it be determined that any of the genuine Lexus parts or accessories supplied with the vehicle need to be replaced, Lexus recommends that genuine Lexus parts or accessories, be used to replace them. Other parts or accessories of matching quality can also be used. Lexus cannot accept any liability or guarantee spare parts and accessories which are not genuine Lexus products, nor for replacement or installation involving such parts. In addition, damage or performance problems resulting from the use of non-genuine Lexus spare parts or accessories may not be covered under warranty.

FarmaSOS.com

## Installation of an RF-transmitter system

The installation of an RF-transmitter system in your vehicle could affect electronic systems such as:

- Multiport fuel injection system/sequential multiport fuel injection system
- Dynamic radar cruise control with full-speed range
- Dynamic radar cruise control system
- Cruise control system
- Anti-lock brake system
- Vehicle dynamics integrated management
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for precautionary measures or special instructions regarding installation of an RF-transmitter system.

Further information regarding frequency bands, power levels, antenna positions and installation provisions for the installation of RF-transmitters, is available on request at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## Scrapping of your Lexus

The SRS airbag and seat belt pretensioner devices in your Lexus contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional before you scrap your vehicle.



Your vehicle contains batteries and/or accumulators. Do not discard them into the environment but cooperate with separate collection (Directive 2006/66/EC).

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

 CAUTION**■ General precautions while driving**

**Driving under the influence:** Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

**Defensive driving:** Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

**Driver distraction:** Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

**■ General precaution regarding children's safety**

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

FarmaSOS.com

## Reading this manual



### CAUTION:

Explains something that, if not obeyed, could cause death or serious injury to people.



### NOTICE:

Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.



1 2 3... Indicates operating or working procedures. Follow the steps in numerical order.



Indicates the action (pushing, turning, etc.) used to operate switches and other devices.




Indicates the outcome of an operation (e.g. a lid opens).



Indicates the component or position being explained.




Means “Do not”, “Do not do this”, or “Do not let this happen”.

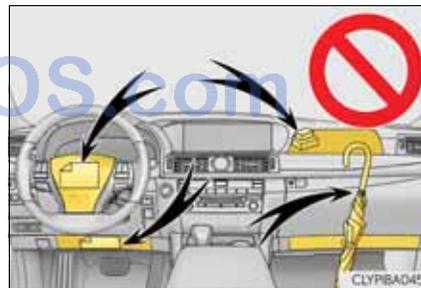

## How to search

- Searching by name
  - Alphabetical index.....P. 924

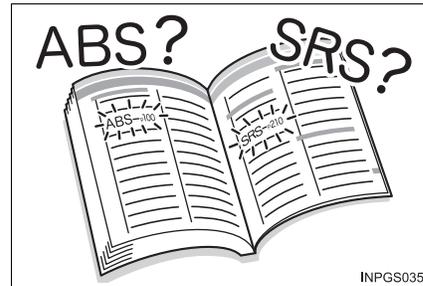


- Searching by installation position
  - Pictorial index .....P. 14



- Searching by symptom or sound
  - What to do if...  
(Troubleshooting).....P. 918




- Searching by title
  - Table of contents .....P. 2

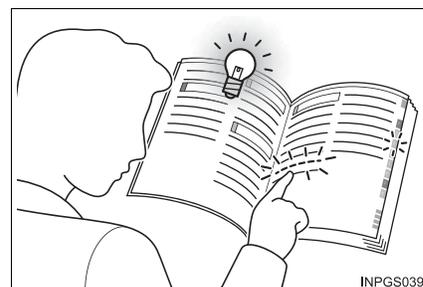

## Pictorial index

### ■ Exterior

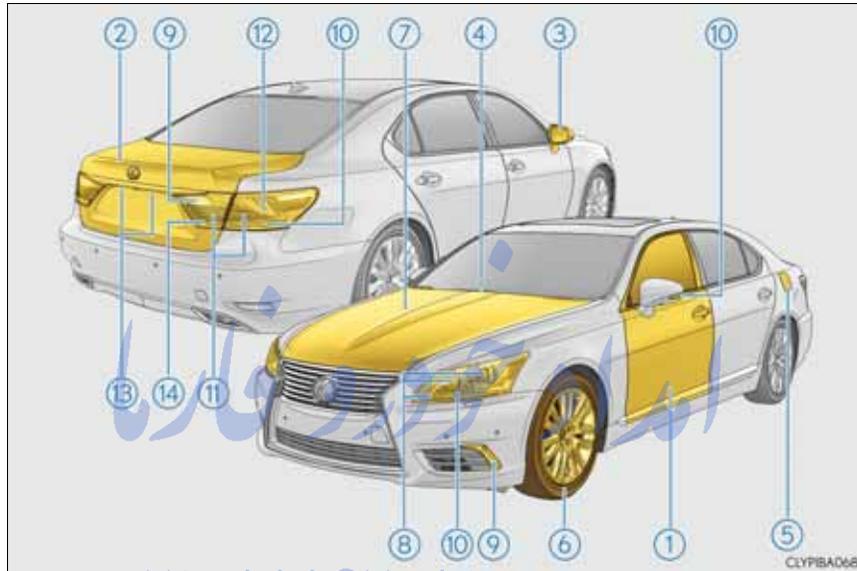


The shape of the headlights may differ depending on the grade, etc. (→P. 352)

- ① Doors . . . . . P. 147
  - Locking/unlocking . . . . . P. 124, 142
  - Opening/closing the door glasses . . . . . P. 185
  - Locking/unlocking by using the mechanical key . . . . . P. 874
  - Warning lights/warning messages . . . . . P. 827, 832
- ② Trunk . . . . . P. 151
  - Opening from inside . . . . . P. 151
  - Opening from outside . . . . . P. 124, 142
  - Opening by using the mechanical key . . . . . P. 875
  - Warning lights/warning messages . . . . . P. 827, 832
- ③ Outside rear view mirrors . . . . . P. 181
  - Adjusting the mirror angle . . . . . P. 181
  - Folding the mirrors . . . . . P. 182
  - Driving position memory . . . . . P. 167
  - Defogging the mirrors . . . . . P. 462



### ■ Instrument panel (Left-hand drive vehicles)

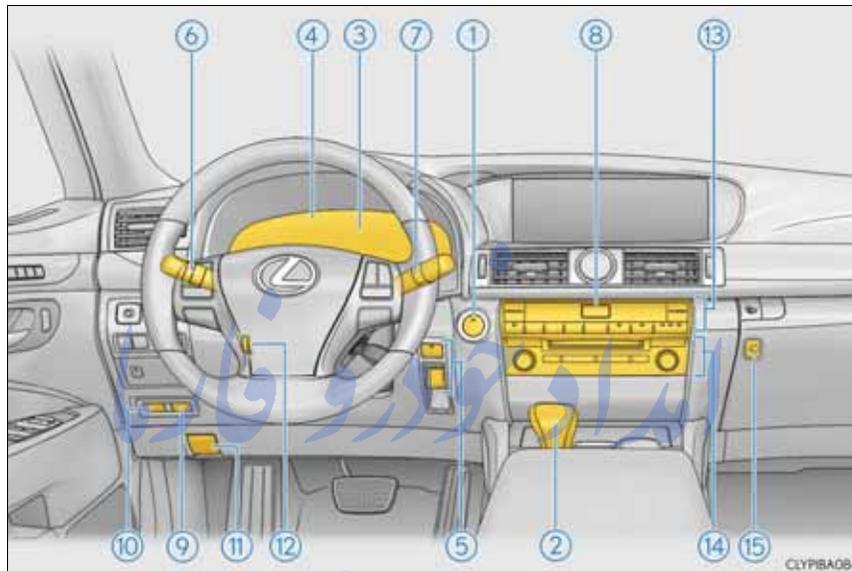


- ① Engine switch . . . . . P. 207  
 Starting the engine/changing the modes . . . . . P. 207  
 Emergency stop of the engine . . . . . P. 815  
 When the engine will not start . . . . . P. 865  
 Warning messages . . . . . P. 832
- ② Shift lever . . . . . P. 212, 216  
 Changing the shift position . . . . . P. 212, 216  
 Precautions against towing . . . . . P. 816  
 When the shift lever does not move . . . . . P. 867
- ③ Meters . . . . . P. 101  
 Reading the meters/adjusting the instrument panel light . . . . . P. 101  
 Warning lights/indicator lights . . . . . P. 96  
 When the warning lights come on . . . . . P. 824

- ④ Multi-information display . . . . . P. 105  
 Display . . . . . P. 105  
 When the warning messages are displayed. . . . . P. 832
- ⑤ Parking brake switches . . . . . P. 224  
 Applying/releasing . . . . . P. 224  
 Precautions against winter season. . . . . P. 387  
 Warning buzzer/message . . . . . P. 832
- ⑥ Turn signal lever . . . . . P. 223  
 Headlight switch . . . . . P. 230  
 Headlights/front position lights/tail lights/daytime running lightsP. 230  
 Front fog lights/rear fog lights . . . . . P. 241
- ⑦ Windshield wiper and washer switch . . . . . P. 242  
 Usage . . . . . P. 242  
 Adding washer fluid . . . . . P. 774  
 Warning messages. . . . . P. 832
- ⑧ Emergency flasher switch . . . . . P. 814
- ⑨ Trunk opener . . . . . P. 151
- ⑩ Fuel filler door opener . . . . . P. 248
- ⑪ Hood lock release lever . . . . . P. 757
- ⑫ Tilt and telescopic steering control switch . . . . . P. 178  
 Adjustment . . . . . P. 178  
 Driving position memory . . . . . P. 167
- ⑬ Air conditioning system . . . . . P. 438  
 Usage . . . . . P. 438  
 Rear window defogger . . . . . P. 462
- ⑭ Audio system . . . . . P. 464  
 Audio system . . . . . P. 464  
 Hands-free system. . . . . P. 630
- ⑮ Trunk opener main switch . . . . . P. 152

■ Instrument panel switches (Left-hand drive vehicles)



- ① Outside rear view mirror switches .....P. 181
- ② Instrument panel light control switches .....P. 102
- ③ Headlight cleaner switch. ....P. 245
- ④ Lexus parking assist-sensor switch. ....P. 295
- ⑤ BSM (Blind Spot Monitor) main switch\* تلفن شبانه روزی .....P. 369
- ⑥ Heated steering wheel switch\* .....P. 725
- ⑦ Adaptive High-beam System switch\* .....P. 234
- ⑧ Odometer/trip meter and trip meter reset switches.....P. 102
- ⑨ Lexus night view switch\* .....P. 380

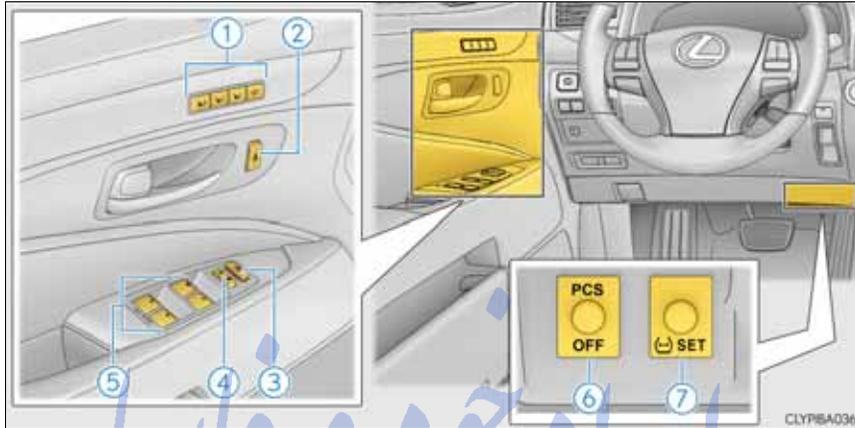

- ① Driving position memory switches . . . . . P. 167
- ② Shoulder anchor control switches . . . . . P. 43
- ③ Window lock switch . . . . . P. 185
- ④ Door lock switches . . . . . P. 147
- ⑤ Power window switches . . . . . P. 185
- ⑥ Pre-crash braking off switch\* . . . . . P. 351
- ⑦ Tire pressure warning reset switch . . . . . P. 778

FarmaSOS.com

\*: If equipped



- ① Audio remote control switches . . . . . P. 563  
 ② Paddle shift switches\*<sup>2</sup> . . . . . P. 218  
 ③ Back switch\*<sup>1</sup> . . . . . P. 430  
 ④ Talk switch\*<sup>1</sup> . . . . . P. 430  
 ⑤ Telephone switches . . . . . P. 630  
 ⑥ “DISP” button . . . . . P. 106  
 ⑦ Vehicle-to-vehicle distance button\*<sup>2</sup> . . . . . P. 257, 271  
 ⑧ Cruise control switch  
   Cruise control\*<sup>2</sup> . . . . . P. 250  
   Dynamic radar cruise control\*<sup>2</sup> . . . . . P. 254  
   Dynamic radar cruise control with full-speed range\*<sup>2</sup> . . . . . P. 268  
 ⑨ LKA (Lane-Keeping Assist) switch\*<sup>2</sup> . . . . . P. 287  
 ⑩ Brake hold switch . . . . . P. 227




- ① Snow mode switch . . . . . P. 214, 221
- ② Driving mode select switch. . . . . P. 335
- ③ Vehicle height adjustment switch . . . . . P. 339
- ④ VSC (Vehicle Stability Control) OFF switch . . . . . P. 343
- ⑤ Remote Touch . . . . . P. 392
- ⑥ Seat and interior feature switches\*<sup>3</sup>
  - Rear sunshade switch . . . . . P. 733
  - Rear door sunshade switches\*<sup>2</sup> . . . . . P. 736
  - Front climate control seat switches. . . . . P. 727
  - Rear seat return switch\*<sup>2</sup> . . . . . P. 164

\*<sup>1</sup>: Refer to “Navigation System Owner’s Manual”.


\*<sup>2</sup>: If equipped

\*<sup>3</sup>: Location of the switches varies according to the vehicle grade level.

■ Front interior (Left-hand drive vehicles)

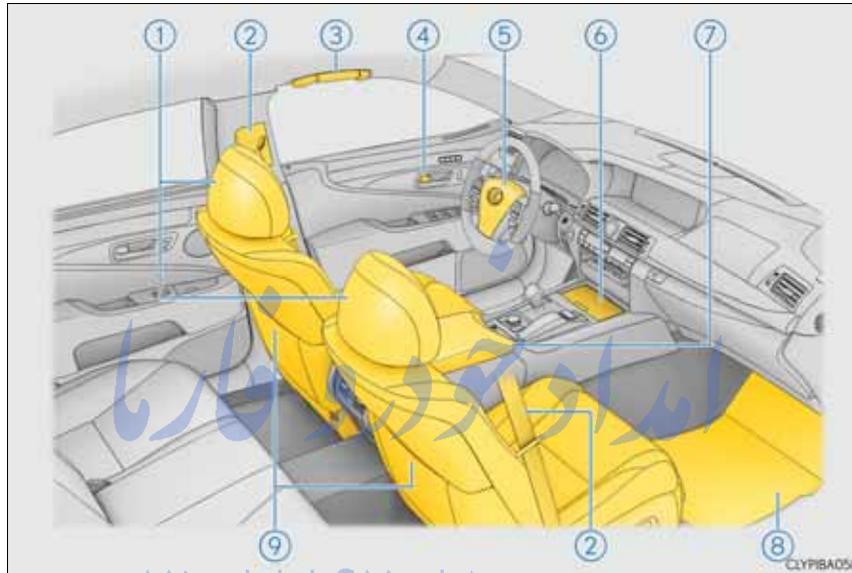

- ① Head restraints ..... P. 174  
 ② Seat belts ..... P. 42  
 ③ Assist grips ..... P. 742  
 ④ Inside lock buttons ..... P. 147  
 ⑤ SRS airbags ..... P. 47  
 ⑥ Cup holders ..... P. 707  
 Power outlet\*<sup>1</sup> ..... P. 723  
 Cigarette lighter\*<sup>1</sup> ..... P. 721  
 ⑦ Console box ..... P. 709  
 Power outlet ..... P. 723  
 AUX port ..... P. 556  
 USB port ..... P. 536, 546  
 ⑧ Floor mats ..... P. 38  
 ⑨ Front seats ..... P. 158

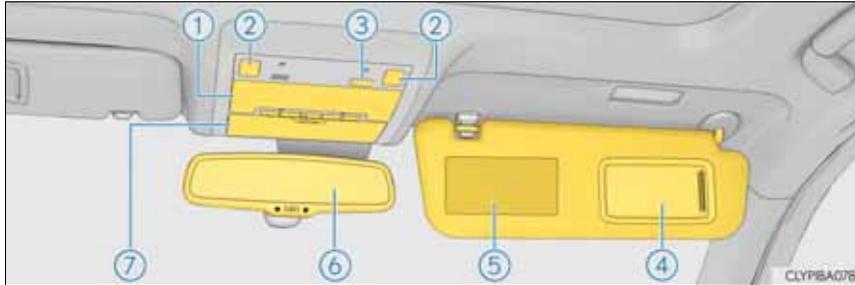

- ① Interior light .....P. 701
- Personal lights.....P. 702
- ② Moon roof switches\*<sup>1</sup> .....P. 188
- ③ Intrusion sensor and tilt sensor cancel switch\*<sup>1</sup>.....P. 91
- ④ Vanity mirrors .....P. 717
- ⑤ Sun visors\*<sup>2</sup> .....P. 717
- ⑥ Inside rear view mirror .....P. 179
- ⑦ Auxiliary box .....P. 712

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵


FarmaSOS.com

\*<sup>1</sup>:If equipped

\*<sup>2</sup>:NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P.



### ■ Instrument panel (Right-hand drive vehicles)

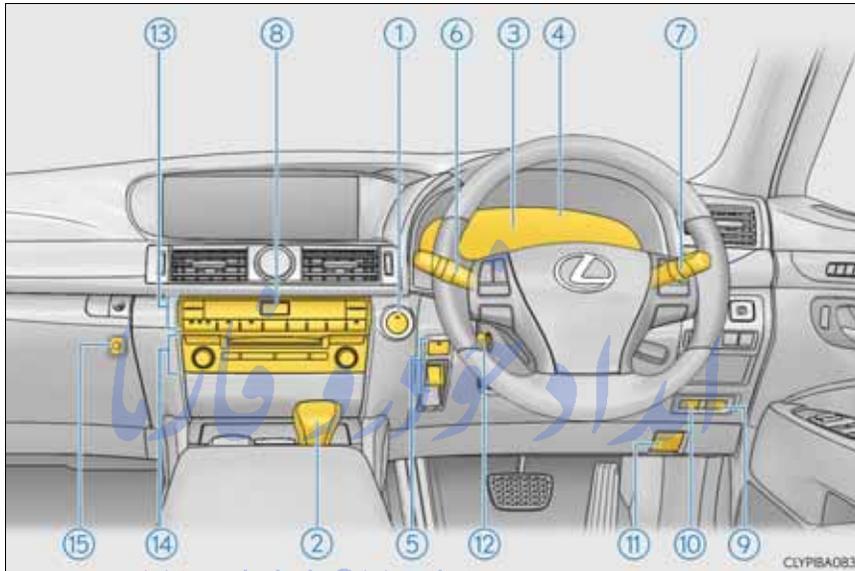


- ① Engine switch . . . . . P. 207  
 Starting the engine/changing the modes . . . . . P. 207  
 Emergency stop of the engine . . . . . P. 815  
 When the engine will not start . . . . . P. 865  
 Warning messages . . . . . P. 832
- ② Shift lever . . . . . P. 212, 216  
 Changing the shift position . . . . . P. 212, 216  
 Precautions against towing . . . . . P. 816  
 When the shift lever does not move . . . . . P. 867
- ③ Meters . . . . . P. 101  
 Reading the meters/adjusting the instrument panel light . . . . . P. 101  
 Warning lights/indicator lights . . . . . P. 96  
 When the warning lights come on . . . . . P. 824

- ④ Multi-information display . . . . . P. 105  
 Display . . . . . P. 105  
 When the warning messages are displayed. . . . . P. 832
- ⑤ Parking brake switches . . . . . P. 224  
 Applying/releasing . . . . . P. 224  
 Precautions against winter season. . . . . P. 387  
 Warning buzzer/message . . . . . P. 832
- ⑥ Turn signal lever . . . . . P. 223  
 Headlight switch . . . . . P. 230  
 Headlights/front position lights/tail lights/daytime running lights P. 230  
 Front fog lights/rear fog lights . . . . . P. 241
- ⑦ Windshield wiper and washer switch . . . . . P. 242  
 Usage . . . . . P. 242  
 Adding washer fluid . . . . . P. 774  
 Warning messages. . . . . P. 832
- ⑧ Emergency flasher switch . . . . . P. 814
- ⑨ Trunk opener . . . . . P. 151
- ⑩ Fuel filler door opener . . . . . P. 248
- ⑪ Hood lock release lever . . . . . P. 757
- ⑫ Tilt and telescopic steering control switch . . . . . P. 178  
 Adjustment . . . . . P. 178  
 Driving position memory . . . . . P. 167
- ⑬ Air conditioning system . . . . . P. 438  
 Usage . . . . . P. 438  
 Rear window defogger . . . . . P. 462
- ⑭ Audio system . . . . . P. 464  
 Audio system . . . . . P. 464  
 Hands-free system. . . . . P. 630
- ⑮ Trunk opener main switch . . . . . P. 152

### ■ Instrument panel switches (Right-hand drive vehicles)



- ① Lexus night view switch\* . . . . .P. 380
- ② Odometer/trip meter and trip meter reset switches . . . . .P. 102
- ③ Headlight cleaner switch . . . . .P. 245
- ④ Instrument panel light control switches . . . . .P. 102
- ⑤ Outside rear view mirror switches . . . . .P. 181
- ⑥ Adaptive High-beam System switch\* . . . . .P. 234
- ⑦ Heated steering wheel switch\* . . . . .P. 725
- ⑧ BSM (Blind Spot Monitor) main switch\* . . . . .P. 369
- ⑨ Lexus parking assist-sensor switch . . . . .P. 295

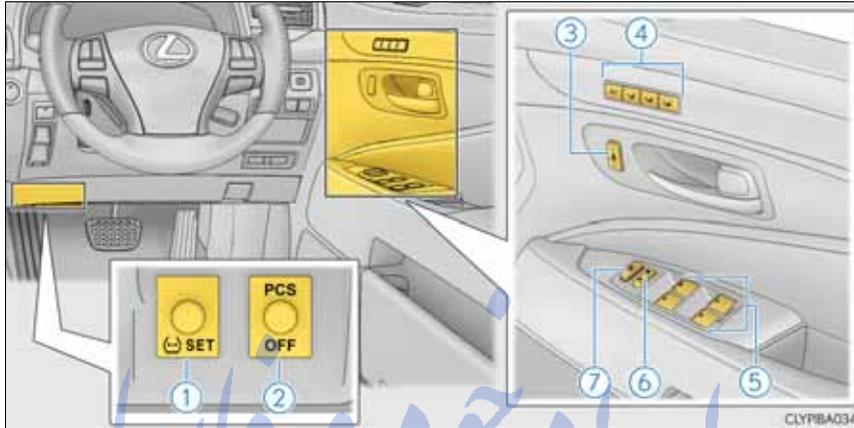


- ① Tire pressure warning reset switch ..... P. 778
- ② Pre-crash braking off switch\* ..... P. 351
- ③ Shoulder anchor control switches ..... P. 43
- ④ Driving position memory switches ..... P. 167
- ⑤ Power window switches ..... P. 185
- ⑥ Door lock switches ..... P. 147
- ⑦ Window lock switch ..... P. 185

FarmaSOS.com

\*: If equipped



- ① Audio remote control switches . . . . . P. 563  
 ② Paddle shift switches\*<sup>2</sup> . . . . . P. 218  
 ③ Back switch\*<sup>1</sup> . . . . . P. 430  
 ④ Talk switch\*<sup>1</sup> . . . . . P. 430  
 ⑤ Telephone switches . . . . . P. 630  
 ⑥ “DISP” button . . . . . P. 106  
 ⑦ Vehicle-to-vehicle distance button\*<sup>2</sup> . . . . . P. 271  
 ⑧ Cruise control switch  
   Cruise control\*<sup>2</sup> . . . . . P. 250  
   Dynamic radar cruise control with full-speed range\*<sup>2</sup> . . . . . P. 268  
 ⑨ LKA (Lane-Keeping Assist) switch\*<sup>2</sup> . . . . . P. 287  
 ⑩ Brake hold switch . . . . . P. 227

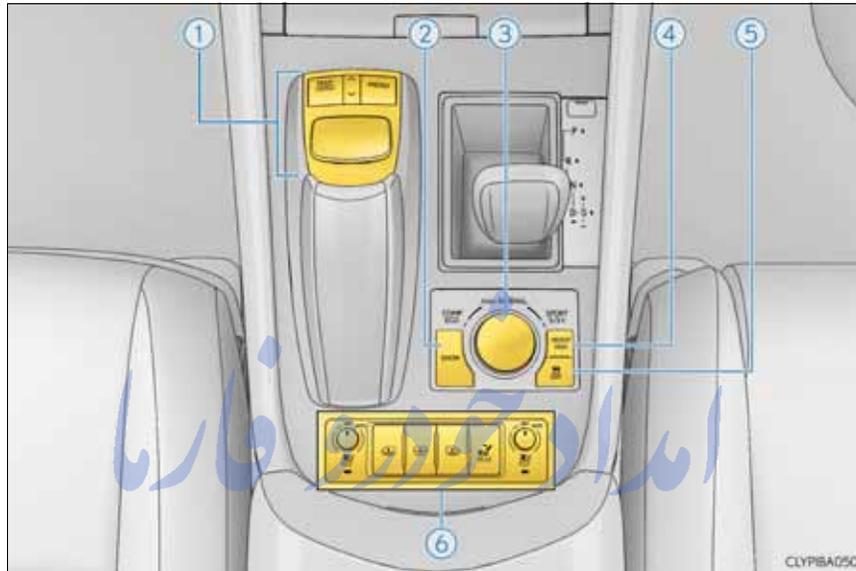


- ① Remote Touch . . . . . P. 392
- ② Snow mode switch . . . . . P. 214, 221
- ③ Driving mode select switch. . . . . P. 335
- ④ Vehicle height adjustment switch . . . . . P. 339
- ⑤ VSC (Vehicle Stability Control) OFF switch . . . . . P. 343
- ⑥ Seat and interior feature switches\*<sup>3</sup>
  - Rear sunshade switch . . . . . P. 733
  - Rear door sunshade switches\*<sup>2</sup> . . . . . P. 736
  - Front climate control seat switches. . . . . P. 727
  - Rear seat return switch\*<sup>2</sup> . . . . . P. 164

\*<sup>1</sup>: Refer to “Navigation System Owner’s Manual”.


\*<sup>2</sup>: If equipped

\*<sup>3</sup>: Location of the switches varies according to the vehicle grade level.

### ■ Front interior (Right-hand drive vehicles)

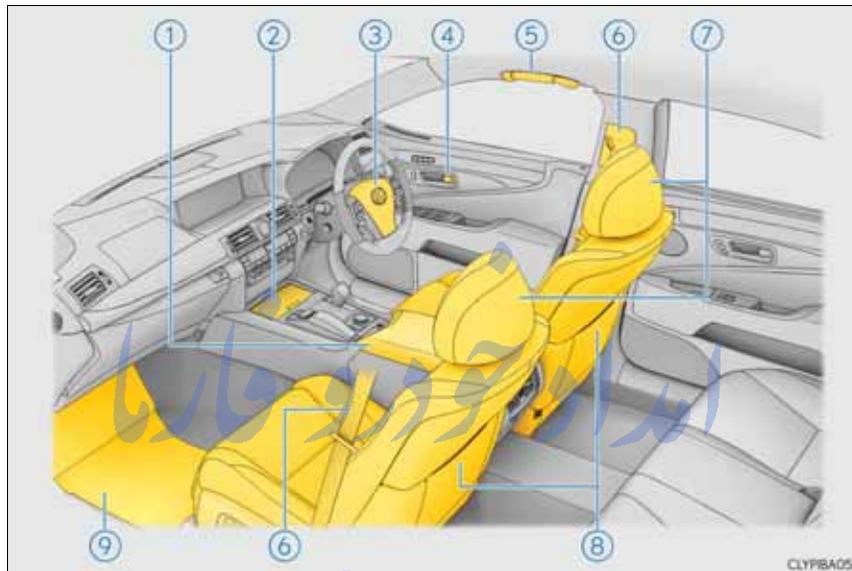

- |                                 |       |             |
|---------------------------------|-------|-------------|
| ① Console box                   | ..... | P. 709      |
| Power outlet                    | ..... | P. 723      |
| AUX port                        | ..... | P. 556      |
| USB port                        | ..... | P. 536, 546 |
| ② Cup holders                   | ..... | P. 707      |
| Power outlet* <sup>1</sup>      | ..... | P. 723      |
| Cigarette lighter* <sup>1</sup> | ..... | P. 721      |
| ③ SRS airbags                   | ..... | P. 47       |
| ④ Inside lock buttons           | ..... | P. 147      |
| ⑤ Assist grips                  | ..... | P. 742      |
| ⑥ Seat belts                    | ..... | P. 42       |
| ⑦ Head restraints               | ..... | P. 174      |
| ⑧ Front seats                   | ..... | P. 158      |
| ⑨ Floor mats                    | ..... | P. 38       |

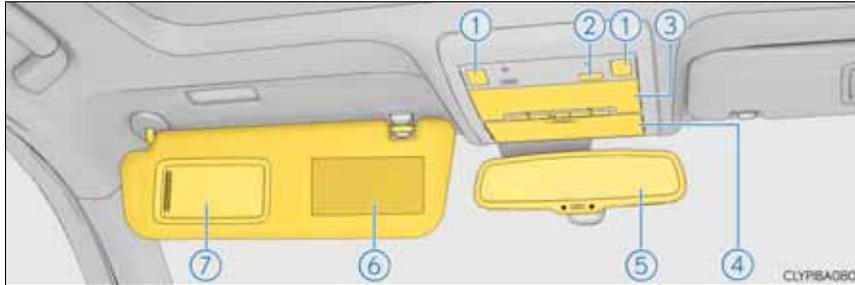

- ① Moon roof switches\*1 .....P. 188
- ② Intrusion sensor and tilt sensor cancel switch. ....P. 91
- ③ Interior light .....P. 701  
Personal lights .....P. 702
- ④ Auxiliary box .....P. 712
- ⑤ Inside rear view mirror .....P. 179
- ⑥ Sun visors\*2 .....P. 717
- ⑦ Vanity mirrors .....P. 717

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

\*1: If equipped

\*2: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P.



### ■ Rear interior



- ① Head restraints ..... P. 174
- ② Interior light ..... P. 701  
 Personal lights ..... P. 702
- ③ Assist grips ..... P. 742
- ④ Rear seat entertainment system\* ..... P. 566
- ⑤ Vanity mirrors ..... P. 717
- ⑥ Coat hooks ..... P. 741
- ⑦ Seat position memory switches\* ..... P. 172

- ⑧ Auxiliary boxes\* .....P. 712
- Ashtrays\* .....P. 720
- ⑨ Power window switches .....P. 185
- ⑩ Seat belts.....P. 42
- ⑪ Cup holders.....P. 707
- ⑫ Auxiliary box .....P. 712
- Rear seat entertainment system controller\* .....P. 567
- Headphone jacks\*.....P. 572
- ⑬ Cool box/auxiliary box\*.....P. 710
- Trunk storage extension\* .....P. 739


امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com


\*: If equipped

### ■ Rear interior switches

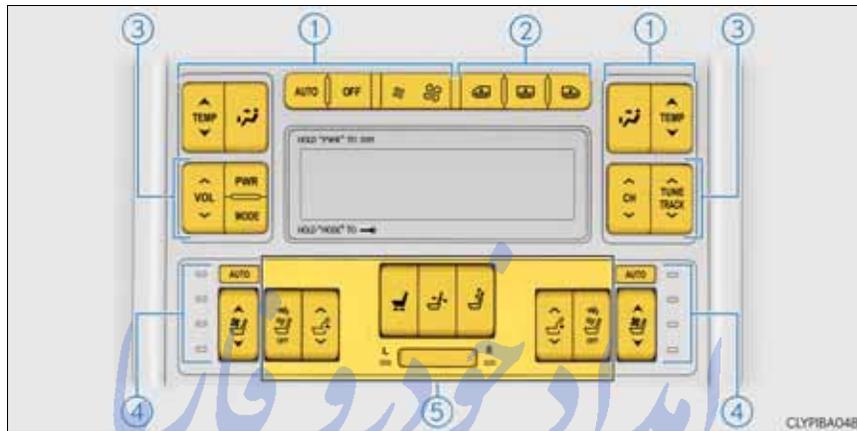

- ① Rear air conditioning switches\*<sup>1</sup> .....P. 456
- ② Rear sunshade switch\*<sup>2</sup> .....P. 733  
Rear door sunshade switches\*<sup>1</sup> .....P. 736
- ③ Rear audio switches\*<sup>1</sup> .....P. 560
- ④ Rear climate control seat switches\*<sup>1</sup> .....P. 728  
Rear seat heater switches\*<sup>1</sup> .....P. 728
- ⑤ Power rear seat switches\*<sup>1, 2</sup> .....P. 163  
Pelvic support seat switches\*<sup>1, 2</sup> .....P. 164

FarmaSOS.com

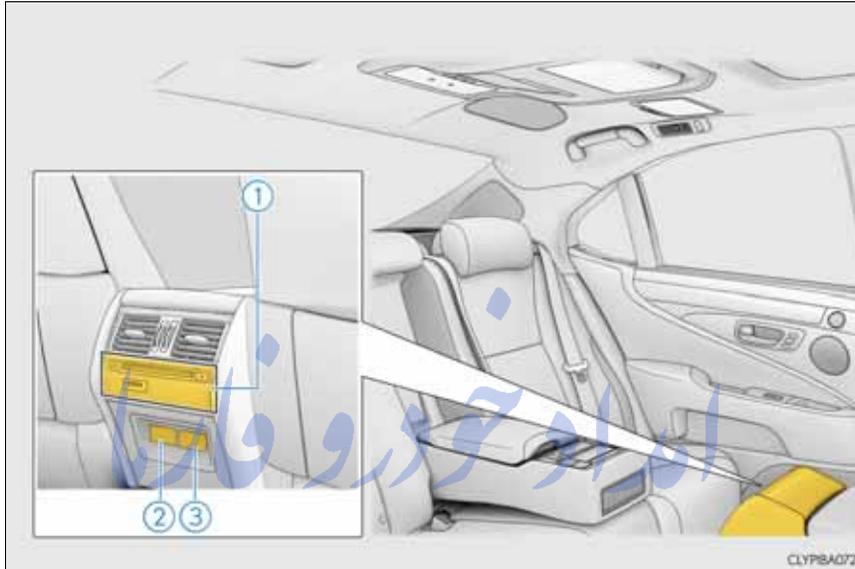

- ① BD/DVD player\*<sup>1</sup>
  - Disc slot ..... P. 569
  - SD card slot ..... P. 570
- ② A/V input port\*<sup>1</sup> ..... P. 625
- ③ Cigarette lighter\*<sup>1</sup> ..... P. 721
- Power outlet\*<sup>1</sup> ..... P. 723

FarmaSOS.com

\*<sup>1</sup>: If equipped

\*<sup>2</sup>: Location of the switches varies according to the vehicle grade level.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

[FarmaSOS.com](http://FarmaSOS.com)

## For safety and security

## 1

## 1-1. For safe use

Before driving ..... 38

For safety drive ..... 40

Seat belts ..... 42

SRS airbags ..... 47

Airbag manual on-off  
system ..... 59Safety information for  
children ..... 61

Child restraint systems ..... 62

Installing child restraints .... 72

Exhaust gas precautions ..... 81

## 1-2. Theft deterrent system

Engine immobilizer system 82

Double locking system ..... 87


Alarm ..... 88

## Before driving

### Floor mat


Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

- 1 Insert the retaining hooks (clips) into the floor mat eye-lets.

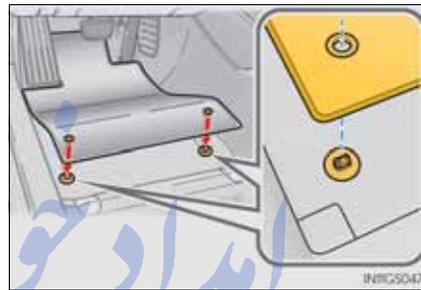

- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

\*: Always align the  $\triangle$  marks.

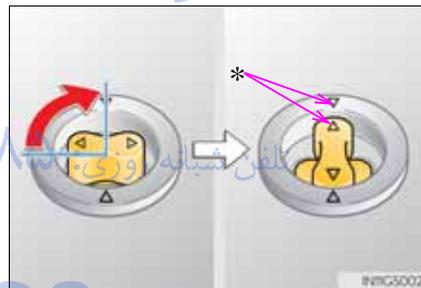

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

**⚠ CAUTION**

Observe the following precautions.


Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle, leading to an accident, or leading to death or a serious injury.

**■ When installing the driver's floor mat**

- Do not use floor mats designed for other models or different model year vehicles, even if they are Lexus Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

**■ Before driving**

- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.
- With the engine stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

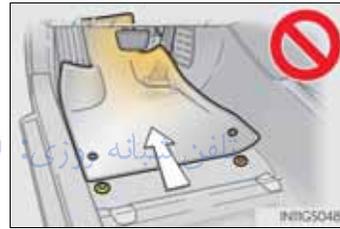


## For safety drive

For safe driving, adjust the seat and mirror to an appropriate position before driving.

### Correct driving posture

- ① Adjust the angle of the seat-back so that you are sitting straight up and so that you do not have to lean forward to steer. (→P. 158)
- ② Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P. 158)
- ③ Lock the head restraint in place with the center of the head restraint closest to the top of your ears. (→P. 174)
- ④ Wear the seat belt correctly. (→P. 42)

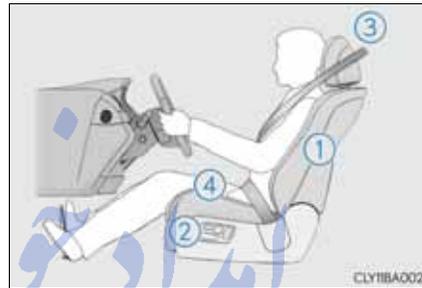

### Correct use of the seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle. (→P. 42)

Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 62)

## Adjusting the mirrors

Make sure that you can see backward clearly by adjusting the inside and outside rear view mirrors properly. (→P. 179, 181)

### CAUTION

Observe the following precautions.

Failure to do so may result in death or serious injury.

- Do not adjust the position of the driver's seat while driving.  
Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback.  
A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.
- Do not place anything under the front seats.  
Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- When driving over long distances, take regular breaks before you start to feel tired.  
Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

1

For safety and security


FarmaSOS.com

## Seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle.

### Correct use of the seat belts


- Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.
- Position the lap belt as low as possible over the hips.
- Adjust the position of the seat-back. Sit up straight and well back in the seat.
- Do not twist the seat belt.

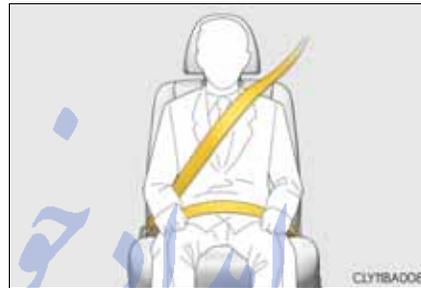

### Fastening and releasing the seat belt

- ① To fasten the seat belt, push the plate into the buckle until a click sound is heard.
- ② To release the seat belt, press the release button.

If the seat belt cannot be pulled out of the retractor, firmly pull the belt and release it.

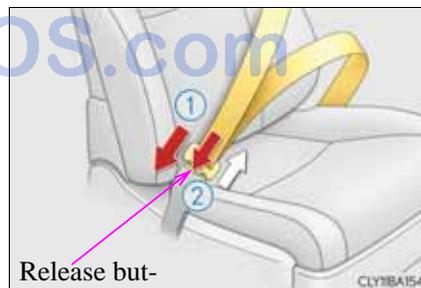

### Adjusting the seat belt shoulder anchor height (front seats)

- ① Moves the seat belt shoulder anchor up
- ② Moves the seat belt shoulder anchor down



### Seat belt comfort guide (outer rear seats)

For children or smaller-than-average people, slide the seat belt comfort guide forward so that the shoulder belt does not sit close to the person's neck.




### Seat belt pretensioners (front and outer rear seats)

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal collision.

The front seat belt pretensioners also activate when the vehicle is subjected to certain types of severe side collision.

The pretensioners do not activate in the event of a minor frontal impact, a minor side impact, a rear impact or a vehicle rollover.

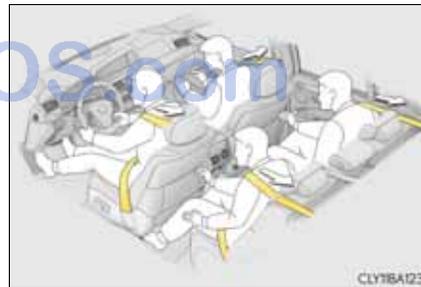

### Pre-crash seat belts (front seats of vehicles with pre-crash safety system)

If the system determines that a collision is unavoidable, the front seat belts will retract before the collision. (→P. 349)

---

#### ■ Child seat belt usage

The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. (→P. 62)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions regarding seat belt usage. (→P. 42)

#### ■ Automatic adjustment of the seat belt shoulder anchor height (front seats)

A desired seat belt shoulder anchor height can be entered to memory and recalled automatically by the driving position memory and seat position memory. (→P. 167)

#### ■ Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

#### ■ Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

#### ■ Seat belt regulations

If seat belt regulations exist in the country where you reside, please contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, for seat belt replacement or installation.

**⚠ CAUTION**

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.  
Failure to do so may cause death or serious injury.

■ Wearing a seat belt

- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Lexus recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

■ Pregnant women

Obtain medical advice and wear the seat belt in the proper way. (→P. 42)

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a colli-



■ People suffering illness

Obtain medical advice and wear the seat belt in the proper way. (→P. 42)

 CAUTION**■ When children are in the vehicle**

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

**■ Seat belt pretensioners**

If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**■ Adjustable shoulder anchor**

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident. (→P. 43)

**■ Seat belt damage and wear**

- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.
- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. Inappropriate handling may lead to incorrect operation.

## SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.



### ◆ SRS front airbags

- ① SRS driver airbag/front passenger airbag  
Can help protect the head and chest of the driver and front passenger from impact with interior components
- ② SRS knee airbags  
Can help provide driver and front passenger protection

---

◆ SRS side and curtain shield airbags

---


- ③ SRS front side airbags  
Can help protect the torso of the front seat occupants
- ④ SRS rear side airbags (if equipped)  
Can help protect the torso of occupants in the rear outer seats
- ⑤ SRS curtain shield airbags  
Can help protect primarily the head of occupants in the outer seats

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### SRS airbag system components

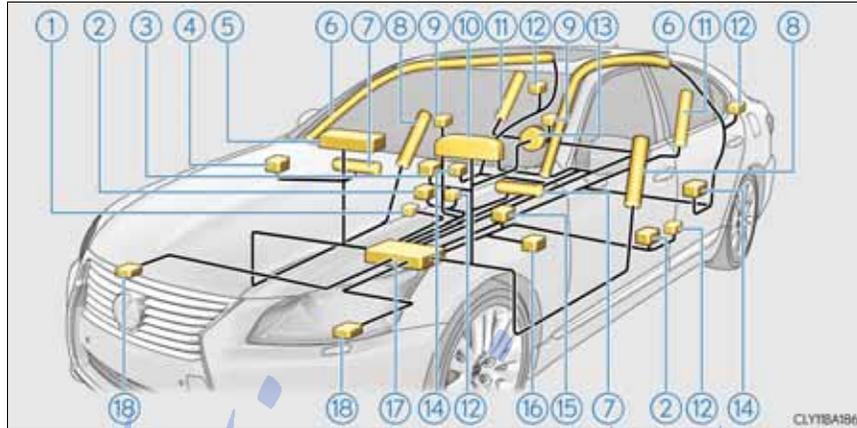

- |   |  |
|---|--|
| ① Front passenger's seat belt buckle switch | ⑩ SRS warning light                          |
| ② Side impact sensors (front)               | ⑪ Rear side airbags (if equipped)            |
| ③ "PASSENGER AIR BAG" indicator light       | ⑫ Seat belt pretensioners and force limiters |
| ④ Airbag manual on-off switch               | ⑬ Driver airbag                              |
| ⑤ Front passenger airbag                    | ⑭ Side impact sensors (rear)                 |
| ⑥ Curtain shield airbags                    | ⑮ Driver's seat belt buckle switch           |
| ⑦ Knee airbags                              | ⑯ Driver's seat position sensor              |
| ⑧ Front side airbags                        | ⑰ Airbag sensor assembly                     |
| ⑨ Active head restraints (if equipped)      | ⑱ Front impact sensors                       |

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the motion of the occupants.

 CAUTION

■ SRS airbag precautions

Observe the following precautions regarding the SRS airbags. Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts properly. The SRS airbags are supplemental devices to be used with the seat belts.
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the airbag.

Since the risk zone for the driver's airbag is the first 50 - 75 mm (2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:

- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- Slightly recline the back of the seat. Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.
- If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

**⚠ CAUTION**

■ SRS airbag precautions

- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Lexus strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P. 62)
- Do not sit on the edge of the seat or lean against the dashboard.



- Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.
- Do not allow the front seat occupants to hold items on their knees.



- Do not lean against the door, the roof side rail or the front, side and rear pillars.



**⚠ CAUTION**

■ SRS airbag precautions

- Do not allow anyone to kneel on the passenger seats toward the door or put their head or hands outside the vehicle.



- Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the instrument panel. These items can become projectiles when the SRS driver, front passenger and knee airbags deploy.



- Do not attach anything to areas such as a door, windshield glass, side door glass, front and rear pillar, roof side rail and assist grip. (Except for the speed limit label →P. 855)



- Do not hang coat hangers or hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- If a vinyl cover is put on the area where the SRS knee airbag will deploy, be sure to remove it.
- Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the SRS airbags. Such accessories may prevent the side airbags from activating correctly, disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.

 CAUTION

## ■ SRS airbag precautions

- Do not strike or apply significant levels of force to the area of the SRS airbag components. Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes are damaged or cracked, have them replaced by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

## ■ Modification and disposal of SRS airbag system components

Do not dispose of your vehicle or perform any of the following modifications without consulting any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars or roof side rails
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows, winches
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as mobile two-way radios (RF-transmitter) and CD players

- 
- If the SRS airbags deploy (inflate)
    - Bruising and slight abrasions may result from contact with a deploying (inflating) SRS airbag.
    - A loud noise and white powder will be emitted.
    - Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the seats, parts of the front and rear pillars, and roof side rails, may be hot for several minutes. The airbag itself may also be hot.
    - The windshield may crack.
  - SRS airbag deployment conditions (SRS front airbags)
    - The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 20 - 30 km/h [12 - 18 mph] frontal collision with a fixed wall that does not move or deform).


However, this threshold velocity will be considerably higher in the following situations:

      - If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
      - If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle “underrides”, or goes under, the bed of a truck
    - Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.
  - SRS airbag deployment conditions (SRS side and curtain shield airbags)
    - The SRS side and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 20 - 30 km/h [12 - 18 mph]).
    - The SRS curtain shield airbags may also deploy in the event of a severe frontal collision.

- Conditions under which the SRS airbags may deploy (inflate), other than a collision (SRS front airbags and SRS curtain shield airbag)

The SRS front airbags and SRS curtain shield airbag may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.


- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

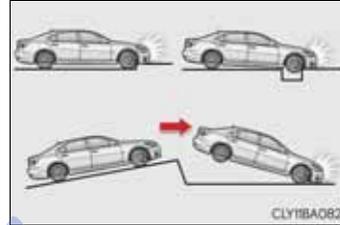

- Types of collisions that may not deploy the SRS airbags (SRS front airbags)

The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.

- Collision from the side
- Collision from the rear
- Vehicle rollover

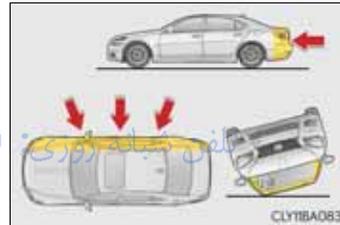


FarmaSOS.com

- Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)


The SRS side and curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

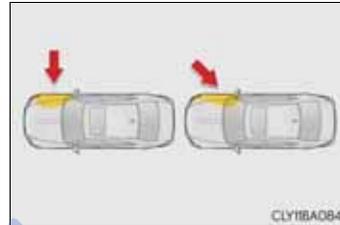

The SRS side airbags do not generally inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

- Collision from the front
- Collision from the rear
- Vehicle rollover

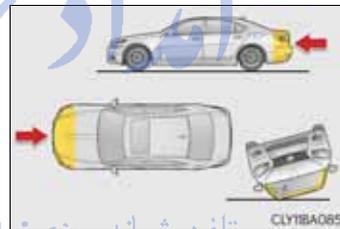

The SRS curtain shield airbags do not generally inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed side or low-speed frontal collision.


- Collision from the rear
- Vehicle rollover




- When to contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional

In the following cases, the vehicle will require inspection and/or repair. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.

- Any of the SRS airbags have been inflated.
- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS airbags to inflate.

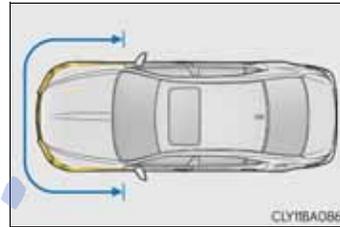


- A portion of a door is damaged or deformed, or the vehicle was involved in an accident that was not severe enough to cause the SRS side and curtain shield airbags to inflate.

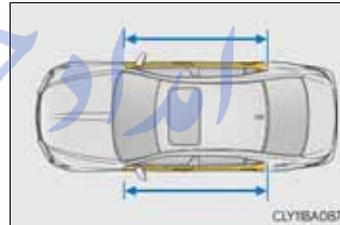


- The pad section of the steering wheel, dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.



- The surface of the seats with the side airbag is scratched, cracked, or otherwise damaged.

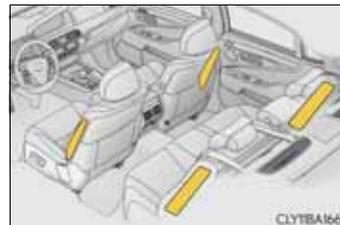

- The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the curtain shield airbags inside is scratched, cracked, or otherwise damaged.

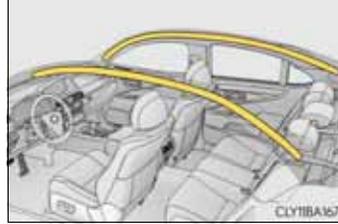

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Airbag manual on-off system


This system deactivates the front passenger airbag, front passenger knee airbag.

Only deactivate the airbags when using a child restraint system on the front passenger seat.

### ① “PASSENGER AIR BAG” indicator

This indicator light turns on when the airbag system is on (only when the engine switch is in IGNITION ON mode).

### ② Airbag manual on-off switch

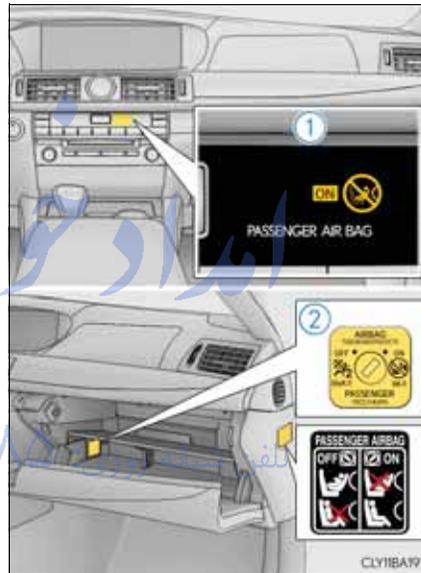

FarmaSOS.com

## Deactivating the front seat passenger airbag and front passenger knee airbag

Insert the mechanical key into the cylinder and rotate to the “OFF” position.

The “OFF” indicator light turns on (only when the engine switch is in IGNITION ON mode).



### ■ “PASSENGER AIR BAG” indicator information

If any of the following problems occur, it is possible that there is a malfunction in the system. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- Neither “ON” nor “OFF” comes on.
- The indicator light does not change when the airbag manual on-off switch is switched to “ON” or “OFF”.

### ⚠ CAUTION

#### ■ When installing a child restraint system

For safety reasons, always install a child restraint system in a rear seat. In the event that the rear seat cannot be used, the front seat can be used as long as the airbag manual on-off system is set to off. If the airbag manual on-off system is left on, the strong impact of the airbag deployment (inflation) may cause serious injury or even death.

#### ■ When a child restraint system is not installed on the front passenger seat

Ensure that the airbag manual on-off system is set to on. If it is left off, the airbag may not deploy in the event of an accident, which may result in serious injury or even death.

## Safety information for children

Observe the following precautions when children are in the vehicle.

Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch etc.
- Use the rear door child-protector lock or the window lock switch to avoid children opening the door while driving or operating the power window accidentally.
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, trunk, seats etc.

### ⚠ CAUTION

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the cigarette lighter, the windows, the moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

## Child restraint systems

Lexus strongly urges the use of child restraint systems.

### Points to remember

Studies have shown that installing a child restraint on a rear seat is much safer than installing one on the front passenger seat.

- Choose a child restraint system that suits your vehicle and is appropriate to the age and size of the child.
- For installation details, follow the instructions provided with the child restraint system.  
General installation instructions are provided in this manual.  
(→P. 73)
- If child restraint system regulations exist in the country where you reside, please contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for the child restraint system installation.
- Lexus recommends that you use a child restraint system which conforms to the regulation ECE No.44.

FarmaSOS.com

## Types of child restraints

Child restraint systems are classified into the following 5 groups according to the regulation ECE No.44:

Group 0: Up to 10 kg (22 lb.) (0 - 9 months)

Group 0<sup>+</sup>: Up to 13 kg (28 lb.) (0 - 2 years)

Group I: 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)

Group II: 15 to 25 kg (34 to 55 lb.) (4 years - 7 years)

Group III: 22 to 36 kg (49 to 79 lb.) (6 years - 12 years)


In this owner's manual, the following 3 types of popular child restraint systems that can be secured with the seat belts are explained:

► Baby seat

Equal to Group 0 and 0<sup>+</sup> of ECE No.44

► Child seat

Equal to Group 0<sup>+</sup> and I of ECE No.44

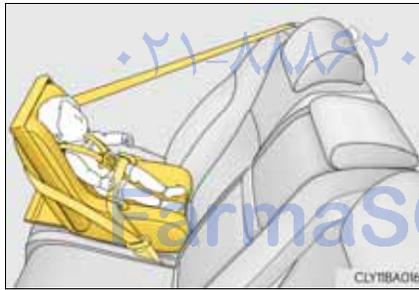

► Junior seat

Equal to Group II and III of ECE No.44



# امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

[FarmaSOS.com](http://FarmaSOS.com)

### Child restraint system suitability for various seating positions

Information provided in the table shows your child restraint system suitability for various seating positions.

Seating position Mass groups	Front passenger seat		Rear seat		
	Airbag manual on-off switch		Right-hand	Left-hand	Center
	ON	OFF			
0 Up to 10 kg (22 lb.) (0 - 9 months)	X Never put	U* <sup>1</sup> , L* <sup>1</sup>	U, L	U, L	X
0 <sup>+</sup> Up to 13 kg (28 lb.) (0 - 2 years)	X Never put	U* <sup>1</sup> , L* <sup>1</sup>	U, L	U, L	X
I 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	Rear-facing — X Never put	U* <sup>1</sup>	U* <sup>2</sup>	U* <sup>2</sup>	X
	Forward-facing — UF* <sup>1</sup>				
II, III 15 to 36 kg (34 to 79 lb.) (4 - 12 years)	UF* <sup>1</sup>	U* <sup>1</sup>	U* <sup>2</sup>	U* <sup>2</sup>	X

Key of letters inserted in the above table:

U: Suitable for “universal” category child restraint systems approved for use in this mass group.

UF: Suitable for forward-facing “universal” category child restraint systems approved for use in this mass group.

L: Suitable for child restraint systems shown in the child restraint system list.

X: Not suitable seat position for children in this mass group.

\*<sup>1</sup>: Adjust the front seatback to the most upright position. Move the front seat to the rearmost position.

If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.

If the passenger seat is equipped with a vertical height adjuster, it must be placed in the upper most position.

Follow these procedures:

- For installing a baby seat with support base

If the baby seat interferes with the seatback when latching the baby seat into the support base, adjust the seatback rearward until there is no interference.

- For installing a forward-facing child seat

If there is gap between the child seat and the seatback, tilt the seatback rearward until good contact is achieved.

If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

- For installing a junior seat

If the child in your child restraint system is in a very upright position, adjust the seatback to the most comfortable position.

If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

\*<sup>2</sup>: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.

The child restraint system mentioned in the table may not be available outside of the EU area.

Other child restraint system which is different from the system mentioned in the table can be used, but the suitability of the systems must be carefully checked with the child restraint system manufacturer concerned and the seller of those seats.

#### Child restraint system list

Mass groups	Child restraint systems	Category
0 Up to 10 kg (22 lb.) (0 - 9 months)	LEXUS G 0+, BABYSAFE PLUS with SEAT BELT FIXATION, BASE PLATFORM	Semi-universal
0+ Up to 13 kg (28 lb.) (0 - 2 years)	LEXUS G 0+, BABYSAFE PLUS with SEAT BELT FIXATION, BASE PLATFORM	Semi-universal

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

### Child restraint system suitability for various seating positions (with ISOFIX rigid anchors)

Information provided in the table shows your child restraint system suitability for various seating positions.

Mass groups	Size class	Fixture	Vehicle ISOFIX positions	
			Outboard rear seat	
			Right-hand	Left-hand
Carrycot	F	ISO/L1	X	X
	G	ISO/L2	X	X
0 Up to 10 kg (22 lb.) (0 - 9 months)	E	ISO/R1	IL	IL
0 <sup>+</sup> Up to 13 kg (28 lb.) (0 - 2 years)	E	ISO/R1	IL	IL
	D	ISO/R2	IL	IL
	C	ISO/R3	IL	IL
I 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	D	ISO/R2	X	X
	C	ISO/R3	X	X
	B	ISO/F2	IUF*, IL*	IUF*, IL*
	B1	ISO/F2X	IUF*, IL*	IUF*, IL*
	A	ISO/F3	IUF*, IL*	IUF*, IL*

Key of letters inserted in the above table:

IUF: Suitable for ISOFIX forward-facing child restraint systems of universal category approved for use in this mass group.

IL: Suitable for child restraint systems shown in the ISOFIX child restraint system list.

When using a “LEXUS MINI” or “LEXUS MIDI”, adjust the support leg and ISOFIX connectors as follows:

- ① Lock the ISOFIX connectors where numbers 3 and 4 and 5 can be seen.
- ② Lock the support leg where 4th hole can be seen.



X: ISOFIX position not suitable for ISOFIX child restraint systems in this mass group and/or this size class.

\*: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint.

The child restraint system mentioned in the table may not be available outside of the EU area.

FarmaSOS.com

Other child restraint systems different from the systems mentioned in the table can be used, but the suitability of the systems must be carefully checked with the child restraint system manufacturer and retailer.

#### ISOFIX child restraint system list

Mass groups	Size class	Fixture	ISOFIX child restraint systems	Category
0 Up to 10 kg (22 lb.) (0 - 9 months)	E	ISO/R1	LEXUS MINI	Semi-universal
	E	ISO/R1	LEXUS MIDI	Semi-universal
0+ Up to 13 kg (28 lb.) (0 - 2 years)	E	ISO/R1	LEXUS MINI	Semi-universal
	E	ISO/R1	LEXUS MIDI	Semi-universal
	D	ISO/R2	LEXUS MINI	Semi-universal
	D	ISO/R2	LEXUS MIDI	Semi-universal
	C	ISO/R3	LEXUS MINI	Semi-universal
	C	ISO/R3	LEXUS MIDI	Semi-universal
I 9 to 18 kg (20 to 39 lb.) (9 months - 4 years)	B	ISO/F2	LEXUS MIDI	Semi-universal
	B1	ISO/F2X	LEXUS MIDI	Semi-universal
	A	ISO/F3	LEXUS MIDI	Semi-universal

■ When installing a child restraint system on the front passenger seat

When you have to use a child restraint system on the front passenger seat, adjust the following:

- The seatback to the most upright position
- The seat cushion to the highest position
- The seat to the rearmost position



■ Selecting an appropriate child restraint system

- Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt.
- If the child is too large for a child restraint system, sit the child on a rear seat and use the vehicle's seat belt. (→P. 42)

**⚠ CAUTION**

■ Using a child restraint system

The use of a child restraint system not suitable for the vehicle may not properly secure the infant or child. It may result in death or serious injury (in the event of sudden braking or an accident).

■ Child restraint precautions

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system depending on the age and size of the child. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior.
- Lexus strongly urges the use of a proper child restraint system that conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

 **CAUTION****■ Child restraint precautions**

- Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on. (→P. 59)  
In the event of an accident, the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.
- A forward-facing child restraint system may be installed on the front passenger seat only when it is unavoidable. A child restraint system that requires a top strap should not be used in the front passenger seat since there is no top strap anchor for the front passenger seat. Adjust the seat-back as upright as possible and always move the seat as far back as possible because the front passenger airbag could inflate with considerable speed and force. Otherwise, the child may be killed or seriously injured.
- Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front and rear pillars or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured. If it is not secured properly, it may cause death or serious injury to the child in the event of a sudden stop or accident.

**■ When children are in the vehicle**

Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death.

If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

**■ When the child restraint system is not in use**

- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.
- If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the trunk. This will prevent it from injuring passengers in the event of a sudden stop or accident.

## Installing child restraints

Follow the child restraint system manufacturer's instructions. Firmly secure child restraints to the outer rear seats using a seat belt or ISOFIX rigid anchors. Attach the top strap when installing a child restraint.

Seat belts (An ELR belt requires a locking clip)



ISOFIX rigid anchors (ISOFIX child restraint system)

Lower anchors are provided for the outer rear seats. (Buttons displaying the location of the anchors are attached to the seats.)



Anchor brackets (for top strap)

An anchor bracket is provided for each rear seat.



### Before installing the child restraint system on an outer rear seat (power rear seat)

When using a child restraint system in an outer rear seat, adjust the following:


- The head restraint to the lowest and rearmost position
- The upper seatback to the rearmost position
- The seat cushion to the fully rearward position




### Installing child restraints using a seat belt

- Rear-facing — Baby seat/child seat


- 1 Place the child restraint system on the rear seat facing the rear of the vehicle.

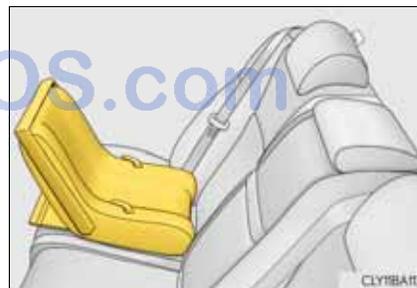

- 2 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

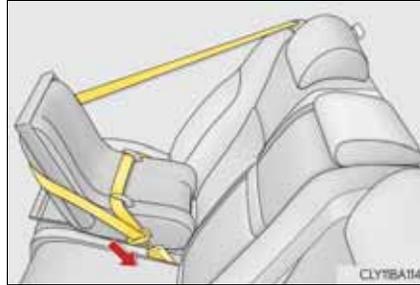

Install a locking clip near the tab of the lap and shoulder belt by inserting the lap and shoulder webbing through the recesses of the locking clip. Buckle the belt again. If the belt has any slack, release the buckle and reinstall the locking clip.

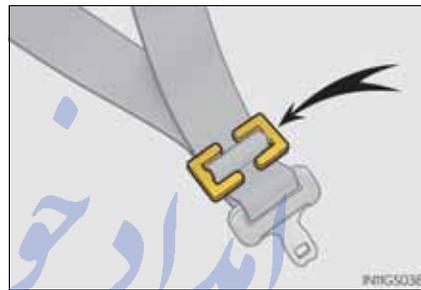


■ Forward-facing — Child seat


- 1 Place the child restraint system on the seat facing the front of the vehicle.



- 2 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted.

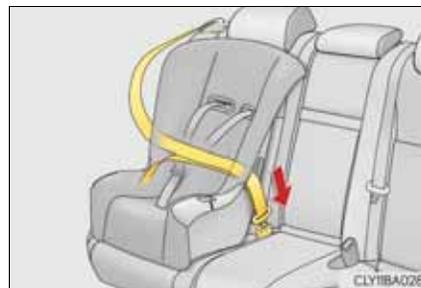

Install a locking clip near the tab of the lap and shoulder belt by inserting the lap and shoulder webbing through the recesses of the locking clip. Buckle the belt again. If the belt has any slack, release the buckle and reinstall the locking clip.

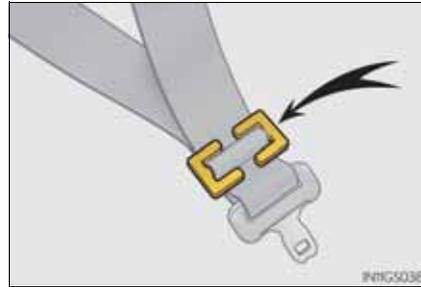

■ Junior seat

- 1 Place the child restraint system on the seat facing the front of the vehicle.



- 2 Sit the child in the child restraint system. Fit the seat belt to the child restraint system according to the manufacturer's instructions and insert the plate into the buckle. Make sure that the belt is not twisted.



Check that the shoulder belt is correctly positioned over the child's shoulder and that the lap belt is as low as possible. (→P. 42)

### Removing a child restraint installed with a seat belt


Push the buckle release button and fully retract the seat belt.



### Installation with ISOFIX rigid anchors (ISOFIX child restraint system)

- 1 Widen the gap between the seat cushion and seatback slightly.
- 2 Latch the buckles onto the exclusive fixing bars.

If the child restraint has a top strap, the top strap should be latched onto the anchor bracket.

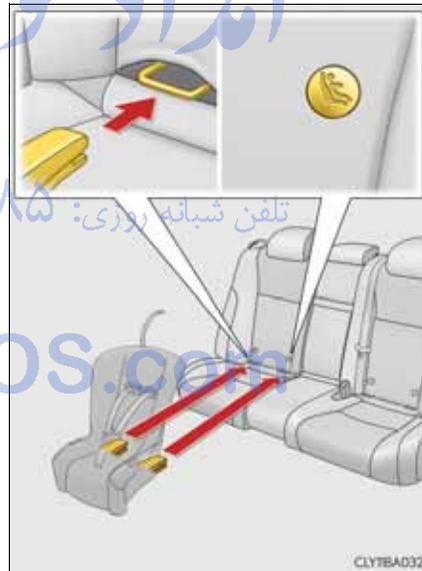


### Child restraint systems with a top strap

- 1 Secure the child restraint using a seat belt or ISOFIX rigid anchors and move the head restraint to the lowest position (outer rear seats) or fold the head restraint (rear center seat). (→P. 174)



- 2 Open the anchor bracket cover, latch the hook onto the anchor bracket and tighten the top strap.

Make sure the top strap is securely latched.

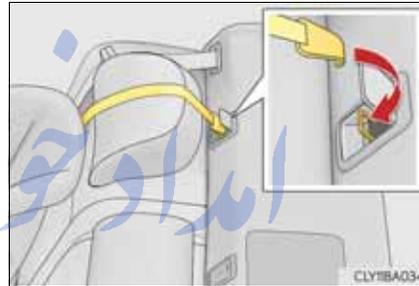

#### ■ When installing a child restraint system

You need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from any authorized Lexus dealer or repairer, or another duly qualified and equipped professional:

Locking clip for child restraint system  
(Part No. 73119-22010)

**⚠ CAUTION****■ When installing a child restraint system**

Follow the directions given in the child restraint system installation manual and fix the child restraint system securely in place.

If the child restraint system is not correctly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking or an accident.

- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat (left-hand drive vehicles) or the left-hand rear seat (right-hand drive vehicles).



- Adjust the front passenger seat or rear seats so that it does not interfere with the child restraint system.

- When installing a forward-facing child restraint system on the front passenger seat, move the seat as far back as possible.

Failure to do so may result in death or serious injury if the airbags deploy.



FarmaSOS.com

**⚠ CAUTION**

■ When installing a child restraint system


- Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on. (→P. 59)

The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.



- There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat.

Details of the label(s) are shown in the illustration below.

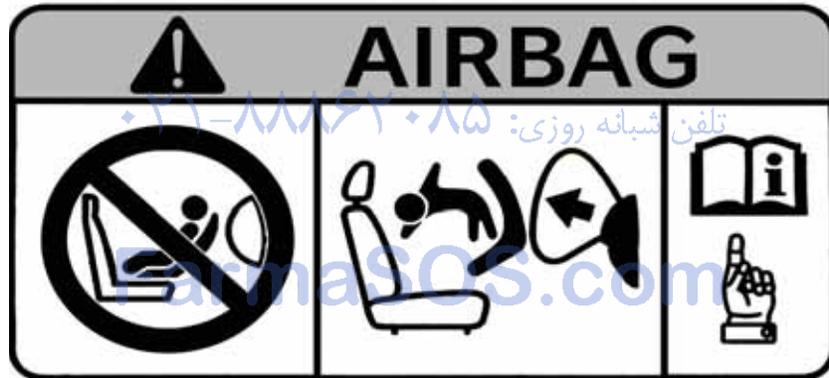

CLY1BA160

 CAUTION

- When installing a child restraint system
  - If child restraint system regulations exist in the country where you reside, please contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for the child restraint system installation.
  - When a junior seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder. Failing to do so may result in death or serious injury in the event of an accident or sudden braking.
  - Ensure that the belt and plate are securely locked and the seat belt is not twisted.
  - Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
  - After securing a child restraint system, never adjust the seat.
  - Follow all installation instructions provided by the child restraint system manufacturer.
- To correctly attach a child restraint system to the anchors

When using the lower anchors, be sure that there are no foreign objects around the anchors and that the seat belt is not caught behind the child restraint system. Make sure the child restraint system is securely attached, or it may cause death or serious injury to the child or other passengers in the event of sudden braking or an accident.

## Exhaust gas precautions

Substances in the exhaust gases are harmful to the human body if inhaled.

### CAUTION

Exhaust gases include harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.

Failure to do so may cause exhaust gases enter the vehicle and may lead to an accident caused by light-headedness, or may lead to death or a serious health hazard.

#### ■ Important points while driving

Keep the trunk lid closed.

If you smell exhaust gases in the vehicle even when the trunk lid is closed, open the windows and have the vehicle inspected at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.

#### ■ When parking

- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the engine.

- Do not leave the vehicle with the engine on for a long time.

If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.

- Do not leave the engine running in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the engine is running, exhaust gases may collect and enter the vehicle.

#### ■ Exhaust pipe

The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

## Engine immobilizer system

The vehicle's keys have built-in transponder chips that prevent the engine from starting if a key has not been previously registered in the vehicle's on-board computer.

Never leave the keys inside the vehicle when you leave the vehicle.

This system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.

The indicator light flashes after the engine switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the engine switch has been turned to ACCESSORY or IGNITION ON mode to indicate that the system has been canceled.



### ■ System maintenance

The vehicle has a maintenance-free type engine immobilizer system.

### ■ Conditions that may cause the system to malfunction

- If the grip portion of the key is in contact with a metallic object
- If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

■ Certification for the engine immobilizer system

**TOYOTA**

**TOYOTA MOTOR CORPORATION**

1, TOYOTA-CHO, TOYOTA, AICHI, 471-8571(Head Office)  
or 471-8572(Research & Development Group) JAPAN  
TEL : (0565)28-2121

**R&TTE Declaration of Conformity**

We,

Manufacturer's Name: TOYOTA MOTOR CORPORATION  
Manufacturer's Address: 1, Toyota-cho, Toyota, Aichi, 471-8572 Japan

hereby declare under our sole responsibility that the product:

Product Name: Immobilizer  
Product Model: TMIMB-1

 
to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC). The product is compliant with the following standards and/or other normative documents:

- Health & safety requirements: EN60950-1:2001
- EMC requirements: EN301 489-1 V1.4.1 & EN301 489-3 V1.4.1
- Effective use of radio spectrum: EN300 330-2 V1.1.1

Supplementary information:

* CE mark	
* Member states intended for use	EU and EFTA

Date: September 17, 2004

Signature:   
Tomoaki Katayama

Hereby, Toyota Motor Corporation, declares that this TMIMB-1 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Toyota Motor Corporation vakuuttaa täten että TMIMB-1 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Hierbij verklaart Toyota Motor Corporation dat het toestel TMIMB-1 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Par la présente Toyota Motor Corporation déclare que l'appareil TMIMB-1 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Härmed intygar Toyota Motor Corporation att denna TMIMB-1 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Undertegnede Toyota Motor Corporation erklærer herved, at følgende udstyr TMIMB-1 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Hiermit erklärt Toyota Motor Corporation, dass sich das Gerät TMIMB-1 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Toyota Motor Corporation ΔΗΛΩΝΕΙ ΟΤΙ ΤΜΙΜΒ-1 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Con la presente Toyota Motor Corporation dichiara che questo TMIMB-1 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Por medio de la presente Toyota Motor Corporation declara que el TMIMB-1 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Toyota Motor Corporation declara que este TMIMB-1 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Hawnhekk, Toyota Motor Corporation, jiddikjara li dan TMIMB-1 jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
Käesolevaga kinnitab Toyota Motor Corporation seadme TMIMB-1 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Alulírott, Toyota Motor Corporation nyilatkozom, hogy a TMIMB-1 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Toyota Motor Corporation tímto vyhlasuje, že TMIMB-1 splňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Toyota Motor Corporation tímto prohlašuje, že tento TMIMB-1 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Toyota Motor Corporation izjavlja, da je ta TMIMB-1 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Šiuo Toyota Motor Corporation deklaruoja, kad šis TMIMB-1 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Ar šo Toyota Motor Corporation deklarē, ka TMIMB-1 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Niniejszym Toyota Motor Corporation oświadcza, że TMIMB-1 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Hér með lýsir Toyota Motor Corporation yfir því að TMIMB-1 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Toyota Motor Corporation erklærer herved at utstyret TMIMB-1 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
С настоящето, Toyota Motor Corporation, декларира, че TMIMB-1 е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 1999/5/EC.
Prin prezenta, Toyota Motor Corporation, declară că aparatul TMIMB-1 este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 1999/5/CE.
Ovim, Toyota Motor Corporation, izjavljuje da ovaj TMIMB-1 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.
Nepermjet kesaj, Toyota Motor Corporation, deklaroj qe ky TMIMB-1 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.
Ovim Toyota Motor Corporation, izjavljuje da je TMIMB-1 u skladu s bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC i Pravilnika o RiTT opremi (NN 25/2012).
Ovim, Toyota Motor Corporation, deklariše da je TMIMB-1 u skladu sa osnovnim zahtjevima i ostalim relevantnim odredbama Direktive 1999/5/EC.

 NOTICE

- To ensure the system operates correctly  
Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Double locking system

Unauthorized access to the vehicle is prevented by disabling the door unlocking function from both the interior and exterior of the vehicle.

Vehicles employing this system have labels on the window glass of both front doors.



### Setting the double locking system

Turn the engine switch off, have all the passengers exit the vehicle and ensure that all the doors are closed.

Using the entry function: تلفن شبانه روزی: ۰۲۱ ۸۸۸۶۲۰۸۵

Press the lock button on the outside door handle twice within 5 seconds.

Using the wireless remote control:

Press  twice within 5 seconds.

### Canceling the double locking system

Using the entry function: Hold the outside door handle.

Using the wireless remote control: Press  .

#### CAUTION

##### ■ Double locking system precaution

Never activate the double locking system when there are people in the vehicle because all the doors cannot be opened from inside the vehicle.

## Alarm\*

### The alarm

The alarm uses light and sound to give an alert when an intrusion is detected.

The alarm is triggered in the following situations when the alarm is set:

- A locked door or trunk is unlocked or opened in any way other than using the entry function or wireless remote control. (The door will lock again automatically.)
- The hood is opened.
- The intrusion sensor detects something moving inside the vehicle. (An intruder gets in the vehicle.)
- The tilt sensor detects a change of vehicle inclination.

### Setting the alarm system

Close the doors, trunk and hood, and lock all the doors using the entry function or wireless remote control. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.



\*: If equipped

### Deactivating or stopping the alarm

Do one of the following to deactivate or stop the alarm:

- Unlock the doors or open the trunk using the entry function or wireless remote control.
- Start the engine. (The alarm will be deactivated or stopped after a few seconds.)

---

#### ■ System maintenance

The vehicle has a maintenance-free type alarm system.

#### ■ Items to check before locking the vehicle

To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:

- Nobody is in the vehicle.
- The windows and moon roof (if equipped) are closed before the alarm is set.
- No valuables or other personal items are left in the vehicle.


تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

### ■ Triggering of the alarm

The alarm may be triggered in the following situations:  
(Stopping the alarm deactivates the alarm system.)

- The doors or trunk are unlocked using the mechanical key.

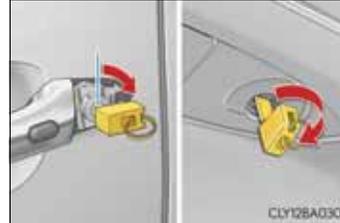

- A person inside the vehicle opens a door, the trunk or hood.



- The battery is recharged or replaced when the vehicle is locked. (→P. 879)



### ■ Alarm-operated door lock

- When the alarm is operating, the doors are locked automatically to prevent intruders.
- Do not leave the key inside the vehicle when the alarm is operating, and make sure the key is not inside the vehicle when recharging or replacing the battery.



#### NOTICE

- To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

### Intrusion sensor and tilt sensor

- The intrusion sensor detects intruders or movement in the vehicle.
- The tilt sensor detects changes in vehicle inclination, such as when the vehicle is towed away.

This system is designed to deter and prevent vehicle theft but does not guarantee absolute security against all intrusions.

#### ■ Setting the intrusion sensor and tilt sensor

The intrusion sensor and tilt sensor will be set automatically when the alarm is set. (→P. 88)

#### ■ Canceling the intrusion sensor and tilt sensor

If you are leaving pets or other moving things inside the vehicle, make sure to stop the intrusion sensor and tilt sensor before setting the alarm, as they will respond to movement inside the vehicle.

- 1 Turn the engine switch off.
- 2 Press the intrusion sensor and tilt sensor cancel switch.

A message will be shown on the multi-information display in the instrument cluster.

Press the switch again to re-enable the intrusion sensor and tilt sensor.




- Canceling and automatic re-enabling of the intrusion sensor and tilt sensor
  - The alarm will still be set even when the intrusion sensor and tilt sensor are canceled.
  - After the intrusion sensor and tilt sensor are canceled, pressing the engine switch or unlocking the doors using the entry function or wireless remote control will re-enable the intrusion sensor and tilt sensor.
  - The intrusion sensor and tilt sensor will automatically be re-enabled when the alarm system is deactivated.

- Intrusion sensor detection considerations

The sensor may trigger the alarm in the following situations:

- A window or the moon roof is open.  
In this case, the sensor may detect the following:
  - Wind or the movement of objects such as leaves and insects inside the vehicle
  - Ultrasonic waves emitted from devices such as the intrusion sensors of other vehicles
  - The movement of people outside the vehicle.

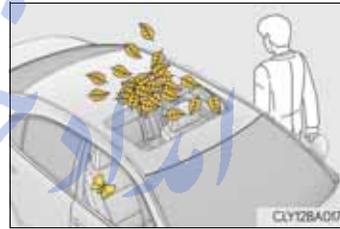

- Unstable items, such as dangling accessories or clothes hanging on the coat hooks, are in the vehicle.



- Places with extreme vibrations or noises, or situations in which the vehicle is subject to repeated impacts or vibrations:
  - When parked in a parking garage
  - When the vehicle is transported by a ferry, trailer, train, etc.
  - When ice adhering to the vehicle is removed
  - When the vehicle is in an automatic or high-pressure car wash
  - When in a hail or lightning storm

■ Tilt sensor detection considerations

The sensor may trigger the alarm in the following situations:

- The vehicle is transported by a ferry, trailer, train, etc.
- The vehicle is parked in a parking garage.
- The vehicle is inside a car wash that moves the vehicle.
- Any of the tires loses air pressure.
- The vehicle is jacked up.
- An earthquake occurs or the road caves in.

 NOTICE

■ To ensure the intrusion sensor function correctly

- To ensure that the sensors operate properly, do not touch or cover them.



- Do not spray air fresheners or other products directly into the sensor holes.



- Installing accessories other than genuine Lexus parts or leaving objects between the driver's seat and front passenger's seat may reduce the detection performance.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

[FarmaSOS.com](http://FarmaSOS.com)

## Instrument cluster

## 2

- 2. Instrument cluster
  - Warning lights and indicators ..... 96
  - Gauges and meters ..... 101
  - Multi-information display. 105

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com



◆ Outside rear view mirrors (vehicles with BSM)



2

Instrument cluster

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Warning lights

Warning lights inform the driver of malfunctions in the indicated vehicle's systems.

 *1	Brake system warning light (→P. 824)	 *1, 2	Brake hold operated indicator (→P. 826)
 *1	Charging system warning light (→P. 825)	 *1, 2	Parking brake indicator (→P. 826)
 *1	Malfunction indicator lamp (→P. 825)	 *1	Brake system warning light (→P. 826)
 *1	SRS warning light (→P. 825)	 *1	Open door warning light (→P. 827)
 *1	ABS warning light (→P. 825)	 *1	Low fuel level warning light (→P. 827)
 *1	Electric power steering system warning light (→P. 826)	 *1	Seat belt reminder light (→P. 827)
 *1, 2	Pre-crash safety system warning light (→P. 826) (if equipped)	 *1	Master warning light (→P. 827)
 *1	Slip indicator (→P. 826)	 *1	Tire pressure warning light (→P. 828)

\*1: These lights come on when the engine switch is turned to IGNITION ON mode to indicate that a system check is being performed. They will go off after the engine is on, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or go off. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

\*2: The light flashes to indicate a malfunction.

## Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.

	Turn signal indicator (→P. 223)		<sup>*1</sup> Brake hold operated indicator (→P. 227)
	Tail light indicator (→P. 230)		Cruise control "SET" indicator (→P. 250, 254, 268)
	Headlight high beam indicator (→P. 230)		Cruise control indicator (→P. 250, 254, 268)
	Adaptive High-beam System indicator (→P. 234) (if equipped)		Radar cruise control indicator (→P. 254, 268) (if equipped)
	Front fog light indicator (→P. 241)		LKA (Lane-Keeping Assist) indicator (→P. 287) (if equipped)
	Rear fog light indicator (→P. 241)		<sup>*1</sup> "HEIGHT HIGH" indicator (→P. 339)
	<sup>*1</sup> Gear Shift Indicator (→P. 220) (if equipped)		<sup>*1, 2</sup> Slip indicator (→P. 343)
	Snow mode indicator (→P. 214, 221)		<sup>*1</sup> VSC (Vehicle Stability Control) OFF indicator (→P. 344)
	<sup>*1</sup> Parking brake indicator (→P. 224)		<sup>*1, 3</sup> Pre-crash safety system warning light (→P. 351) (if equipped)



\*1

Brake hold standby indicator (→P. 227)



\*4

(if equipped)

BSM (Blind Spot Monitor) outside rear view mirror indicators (→P. 369)



\*1

“PASSENGER AIR BAG” indicator (→P. 59)

\*1: These lights come on when the engine switch is turned to IGNITION ON mode to indicate that a system check is being performed. They will go off after the engine is on, or after a few seconds. There may be a malfunction in a system if the lights do not come on, or go off. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

\*2: The light flashes to indicate that the system is operating.

\*3: The light comes on when the system is turned off. The light flashes faster than usual to indicate that the system is operating.

\*4: In order to confirm operation, the BSM outside rear view mirror indicators illuminate in the following situations:

- When the engine switch is turned to IGNITION ON mode while the BSM main switch is set to ON.
- When the BSM main switch is set to ON while the engine switch is in IGNITION ON mode.

If the system is functioning correctly, the BSM outside rear view mirror indicators will turn off after a few seconds.

If the BSM outside rear view mirror indicators do not illuminate or do not turn off, there may be a malfunction with the system.

If this occurs, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

 CAUTION**■ If a safety system warning light does not come on**


Should a safety system light such as the ABS and SRS warning light not come on when you start the engine, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately if this occurs.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Gauges and meters

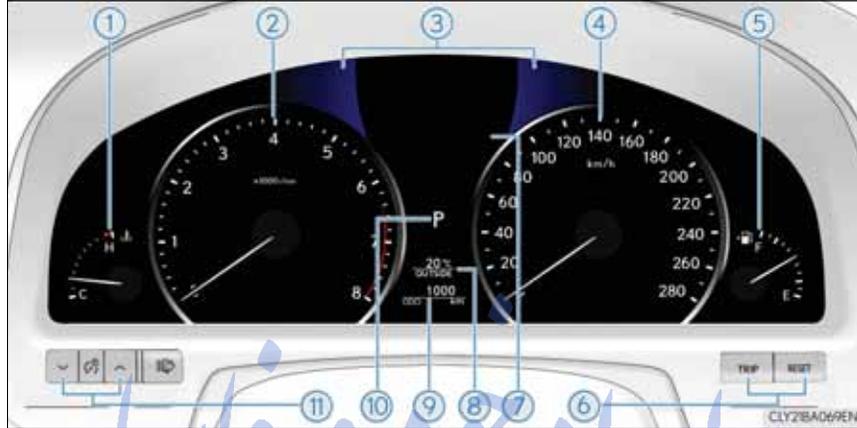

The units used on the speedometer may differ depending on the target region.

- ① Engine coolant temperature gauge  
Displays the engine coolant temperature
- ② Tachometer  
Displays the engine speed in revolutions per minute
- ③ ECO lamp and SPORT lamp  
Changes colors or brightness according to driving mode or way of driving (→P. 105)
- ④ Speedometer  
Displays the vehicle speed
- ⑤ Fuel gauge  
Displays the quantity of fuel remaining in the tank
- ⑥ Odometer/trip meter and trip meter reset switches
- ⑦ Multi-information display  
Presents the driver with a variety of driving-related data (→P. 107)
- ⑧ Outside temperature

Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F)

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

⑨ Odometer and trip meter display

Odometer:

Displays the total distance the vehicle has been driven

Trip meter:

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters “A” and “B” can be used to record and display different distances independently.


⑩ Shift position and shift range

Displays the selected shift position or selected shift range (→P. 212, 216)

⑪ Instrument panel light control switches

Changing the odometer and trip meter display


- ① Switches the display
- ② Resets the trip meter currently displayed to “0”

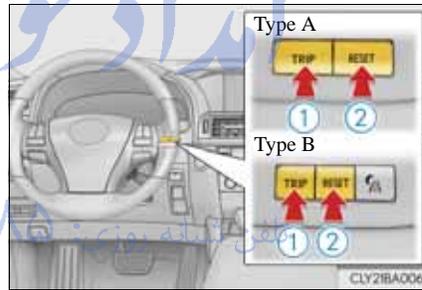

Instrument panel light control

The brightness of the instrument panel lights can be adjusted.

- ① Darker
- ② Brighter

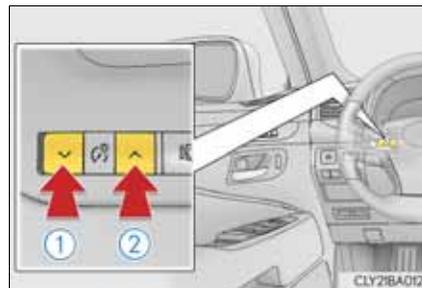

- The meters and display illuminate when  
The engine switch is in IGNITION ON mode.
- Instrument panel brightness adjustment
  - Meters:  
The brightness level of the meters when the surroundings are bright (day mode) and dark (night mode) can be adjusted individually. However, when in day mode, adjusting the brightness level will also change the brightness level of night mode.
  - Clock, air conditioning temperature display and switch lights:  
The brightness level of the clock, air conditioning temperature display and switch lights are linked with the brightness level of meter night mode.
- Light dimmer control (Changing to night mode)  
The brightness level of the meter, clock and air conditioning temperature display lights will change to night mode only when the surroundings are dark and the tail lights are on.
- Automatic adjustment of the brightness level of the meters  
The brightness level of the meters will be adjusted automatically according to the brightness of the surroundings detected by the light sensor. However, the brightness level of the meters will not be adjusted automatically in the following conditions.
  - Day mode: When the brightness of the meter is adjusted to the brightest manually
  - Night mode: When the brightness of the meter is adjusted to the brightest or darkest manually
- ECO lamp and SPORT lamp
  - When all of the following conditions are satisfied and Eco-friendly driving is being performed ECO lamp (blue) will illuminate. (ECO lamp will become brighter the more Eco-friendly your driving is. Also, while the vehicle is stopped or the acceleration exceeds Zone of Eco driving, ECO lamp turns off. (→P. 110) However, when Eco drive mode is selected, while the vehicle is stopped or the acceleration exceeds Zone of Eco driving, ECO lamp does not turn off.):
    - Driving with the shift lever in D.
    - Vehicles with paddle shift switches: Paddle shift switch is not operated.
    - Normal mode, comfort mode or Eco drive mode is selected, and snow mode is not in use.
    - The vehicle speed is approximately 130 km/h (80 mph) or below.
  - When sport mode is selected, SPORT lamp (red) will illuminate.

■ Outside temperature display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.

- When stopped, or driving at low speeds (less than 20 km/h [12 mph])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

■ Customization

Settings (e.g. on/off operation of ECO lamp) can be changed.  
(Customizable features →P. 906)

 NOTICE

■ To prevent damage to the engine and its components

- Do not let the indicator needle of the tachometer enter the red zone, which indicates the maximum engine speed.
- The engine may be overheating if the engine coolant temperature gauge is in the red zone (H). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P. 881)

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## Multi-information display

### Display contents

The multi-information display presents the driver with a variety of driving-related data.

- Trip information (→P. 108)

Displays driving range, fuel consumption and other cruising related information

- Drive monitor (→P. 112)

Displays either the average fuel consumption after refueling or the driving range

- Lexus parking assist-sensor display\* (→P. 296)

- Dynamic radar cruise control display\* (if equipped) (→P. 296)

- Dynamic radar cruise control with full-speed range display\* (if equipped) (→P. 268)

- LKA (Lane-Keeping Assist) display\* (if equipped) (→P. 289)

- Warning messages (→P. 832)

Automatically displayed when a malfunction occurs in one of the vehicle's systems. Display can be switched by pressing the "DISP" button. (→P. 108)



- \*: Automatically displayed when the system is used. Display can be switched by pressing the “DISP” button.  
(→P. 108)

### Trip information

- Switching the display

Items displayed can be switched by pressing the “DISP” button.

The information displayed on the drive monitor will not be displayed on the trip information screen.



- Driving range

CRUISING RANGE  
200 km

Displays the estimated approximate distance that can be driven with the quantity of fuel remaining

- This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the engine switch off. If the vehicle is refueled without turning the engine switch off, the display may not be updated.

2


Instrument cluster

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

■ Eco Driving Indicator Zone Display and average fuel consumption

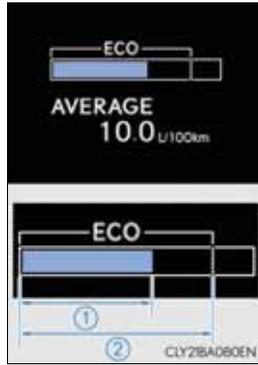

● Displays Eco Driving Indicator Zone Display

Suggests Zone of Eco driving and Eco driving ratio based on acceleration.

① Eco driving ratio based on acceleration

If the acceleration exceeds Zone of Eco driving, the right side of Eco Driving Indicator Zone Display blinks.

② Zone of Eco driving

Eco Driving Indicator will not operate in the following conditions:

- The shift lever is anything other than D.
- Vehicles with paddle shift switches: Paddle shift switch is operated.
- Normal mode, comfort mode or Eco drive mode is not selected. (→P. 335)
- The vehicle speed is approximately 130 km/h (80 mph) or higher.


● Displays the average fuel consumption since the function was reset

- The function can be reset by pressing the “DISP” button for longer than 1 second when the average fuel consumption is displayed.

On vehicles with a navigation system, the “Past record” screen on the Remote Touch screen will also be updated. (→P. 402)

- Use the displayed average fuel consumption as a reference.

■ Current fuel consumption

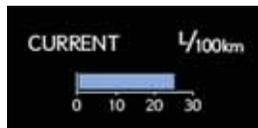

Displays the current rate of fuel consumption

- Average fuel consumption after refueling



Displays the average fuel consumption since the vehicle was last refueled

Use the displayed average fuel consumption as a reference.

- Distance after refueling



Displays the distance the vehicle has been driven since the vehicle was last refueled

- Elapsed time



Displays the elapsed time since it was last reset

The function can be reset by pressing the “DISP” button for longer than 1 second when the elapsed time is displayed.

- Average vehicle speed



Displays the average vehicle speed since the function was reset


The function can be reset by pressing the “DISP” button for longer than 1 second when the average vehicle speed is displayed.

- Tire inflation pressure



Displays inflation pressure of each tire

### ■ Customization

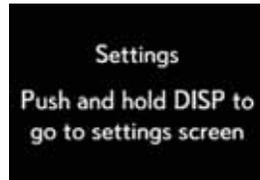

The multi-information display settings can be changed (→P. 113)

### Drive monitor

Either average fuel consumption after refueling or driving range can be selected and displayed.

If displayed on the drive monitor, other trip information or warning messages can be displayed simultaneously.

For display and selection procedures, follow the “Setting up the displays”.

The information displayed on the drive monitor will not be displayed on the trip information screen.



تلفن شبانه روزی: ۰۸۵-۸۸۶۲۰۲۱  
FarmaSOS.com

### Setting up the displays

- 1 While the vehicle is stopped, press the “DISP” button until the “Settings” screen appears.



- 2 Press and hold the “DISP” button until the screen changes.




- 3 Press and hold the “DISP” button after selecting the desired setting item by pressing the “DISP” button.



- 4 Press and hold the “DISP” button after selecting the desired setting by pressing the “DISP” button.

The display goes back to step 3.

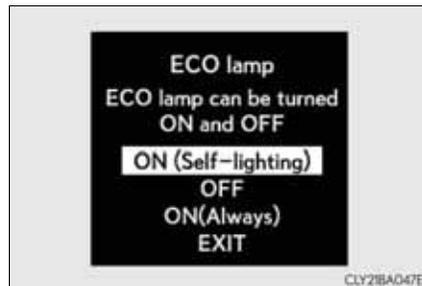

- 5 Press and hold the “DISP” button after selecting the “EXIT” by pressing the “DISP” button.

The display goes back to step 1.



#### ■ System check display

After turning the engine switch to IGNITION ON mode, “SYSTEM CHECK” is displayed while system operation is checked.

#### ■ Tire inflation pressure

- It may take a few minutes to display the tire inflation pressure after the engine switch is turned to IGNITION ON mode. It may also take a few minutes to display the tire inflation pressure after inflation pressure has been adjusted.
- “---” may be displayed if the tire position information cannot be determined due to unfavorable radio wave conditions.
- Tire inflation pressure changes with temperature. The displayed values may also be different from the values measured using a tire pressure gauge.

#### ■ When disconnecting and reconnecting battery terminals

The following information data will be reset:

- Driving range
- Average fuel consumption
- Average fuel consumption after refueling
- Distance after refueling
- Elapsed time
- Average vehicle speed

#### ■ Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

#### ■ Customization

Setting of available languages can be changed. (Customizable features →P. 906)

 CAUTION

## ■ The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the information display monitor may respond slowly, and display changes may be delayed. For example, there is a lag between the driver's shifting and the new gear number appearing on the display. This lag could cause the driver to down-shift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.

## ■ Cautions during setting up the display

As the engine needs to be running during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

 NOTICE

## ■ During setting up the display

To prevent battery discharge, ensure that the engine is running while setting up the display features.

FarmaSOS.com

## Operation of each component

### 3


- 3-1. Key information  
 Keys ..... 114
- 3-2. Opening, closing and  
 locking the doors and  
 trunk  
 Smart entry & start system 122  
 Wireless remote control .... 142  
 Doors ..... 147  
 Trunk..... 151
- 3-3. Adjusting the seats  
 Front seats..... 158  
 Power rear seat..... 163  
 Driving position memory.. 167  
 Rear seat position  
 memory ..... 172  
 Head restraints ..... 174
- 3-4. Adjusting the steering  
 wheel and mirrors  
 Steering wheel ..... 178  
 Inside rear view mirror .... 179  
 Outside rear view mirrors . 181
- 3-5. Opening, closing the  
 windows and moon roof  
 Power windows..... 185  
 Moon roof ..... 188

## Keys

### The keys

The following keys are provided with the vehicle.

- ① Electronic keys
  - Operating the smart entry & start system (→P. 122)
  - Operating the wireless remote control function (→P. 142)
- ② Mechanical keys
- ③ Key number plate
- ④ Card key (electronic key)  
(if equipped)  
Operating the smart entry & start system (→P. 122)

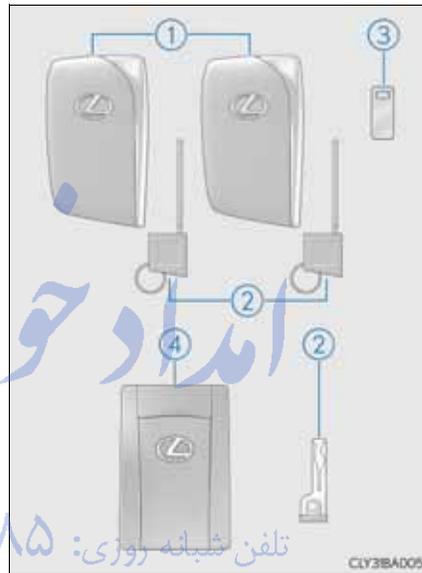

FarmaSOS.com

### Using the mechanical key


To take out the mechanical key:

Electronic keys: Slide the release lever and take the key out.

Card key: Press the lock release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.  
(→P. 874)

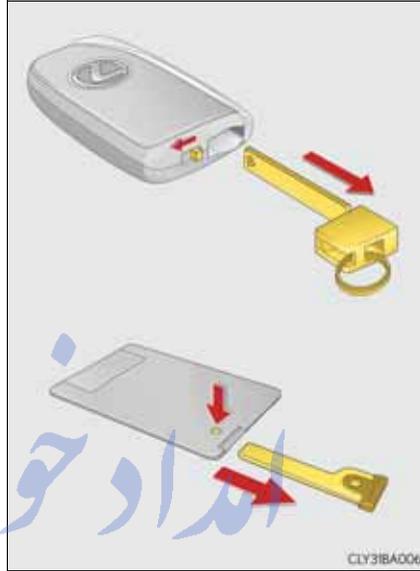

3

Operation of each component

FarmaSOS.com

■ Electronic keys

- Part of the electronic key uses leather. Refer to P. 748 for details on cleaning the leather portion.
- When cleaning the metallic portion, wet a cloth and firmly wring out any excess water from it, then thoroughly wipe off any dirt.
- When not using the electronic key for an extended period of time, store it in a dry place of normal temperature away from direct sunlight and interior light after removing any dirt.

■ Card key (if equipped)

- The card key is not waterproof.
- The mechanical key that is stored inside the card key should be used only if a problem arises, such as when the card key does not operate properly.
- If it is difficult to take out the mechanical key, push down the lock release button using a pen tip etc. If it is still difficult to pull it out, use a coin etc.
- To store the mechanical key in the card key, insert it while pressing the lock release button.



- If the battery cover is not installed and the battery falls out or if the battery was removed because the key got wet, reinstall the battery with the positive terminal facing the Lexus emblem.



■ When required to leave the vehicle's key with a parking attendant

Turn the trunk opener main switch off and lock the glove box and the trunk storage extension (if equipped) as circumstances demand. (→P. 152, 705, 739)

Remove the mechanical key for your own use and provide the attendant with the electronic key only.

- If you lose your mechanical keys

New genuine mechanical keys can be made by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional using the other mechanical key and the key number stamped on your key number plate. Keep the plate in a safe place such as your wallet, not in the vehicle.

- When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

■ Certification for the card key

-Replace only with the same or equivalent type recommended by the manufacturer.

-Dispose of used batteries according to the local laws.



The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:

<http://www.globaldenso.com/en/products/oem/index.html>

Hereby, DENSO CORPORATION declares that this 14AEX is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

DENSO CORPORATION vakuuttaa täten että 14AEX tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Hierbij verklaart DENSO CORPORATION dat het toestel 14AEX in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Par la présente DENSO CORPORATION déclare que l'appareil 14AEX est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Härmed intygar DENSO CORPORATION att denna 14AEX står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Undertegnede DENSO CORPORATION erklærer herved, at følgende udstyr 14AEX overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Hiermit erklärt DENSO CORPORATION, dass sich das Gerät 14AEX in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ DENSO CORPORATION ΔΗΛΩΝΕΙ ΟΤΙ 14ΑΕΧ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

Con la presente DENSO CORPORATION dichiara che questo 14AEX è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Por medio de la presente DENSO CORPORATION declara que el 14AEX cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

DENSO CORPORATION declara que este 14AEX está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Hawnhekk, DENSO CORPORATION, jiddikjara li dan 14AEX jikkonforma mal-htigijiet essenzjali u ma provvediment i oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.

Käesolevaga kinnitab DENSO CORPORATION seadme 14AEX vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Alulírott, DENSO CORPORATION nyilatkozom, hogy a 14AEX megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

DENSO CORPORATION týmto vyhlasuje, že 14AEX spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

DENSO CORPORATION tímto prohlašuje, že tento 14AEX je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.

DENSO CORPORATION izjavlja, da je ta 14AEX v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Šiuo DENSO CORPORATION deklaruoja, kad šis 14AEX atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Ar šo DENSO CORPORATION deklarē, ka 14AEX atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Niniejszym DENSO CORPORATION oświadcza, że 14AEX jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.

Hér með lýsir DENSO CORPORATION yfir því að 14AEX er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.

DENSO CORPORATION erklærer herved at utstyret 14AEX er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

С настоящето, DENSO CORPORATION, декларира, че 14AEX е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 1999/5/EC.

Prin prezenta, DENSO CORPORATION, declară că aparatul 14AEX este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 1999/5/CE.

Ovim, DENSO CORPORATION, izjavljuje da ovaj 14AEX je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.

**NOTICE**

- To prevent key damage
  - Do not drop the keys, subject them to strong shocks or bend them.
  - Do not expose the keys to high temperatures for a long period of time.
  - Do not get the keys wet or wash them in an ultrasonic washer etc.
  - Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.
  - Do not disassemble the keys.
  - Do not attach a sticker or anything else to the surface of the electronic key.
  - Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers, or medical electrical equipment, such as low-frequency therapy equipment.
- Handling the electronic keys
  - Observe the following to prevent deterioration, changes in shape and damage to the leather area.
    - Do not carry the electronic key together with hard objects, such as other keys or accessories.
    - Do not expose the electronic keys to direct sunlight or interior light for extended periods of time.
    - Do not place the electronic key on items made of vinyl, plastic or that contain wax.  
They may stick to the leather surface if the items become warm.
    - Do not get the electronic key wet.  
Even if the electronic gets slightly wet, dry it with a soft cloth and let it dry in the shade.
    - Do not touch the electronic key with hands that have oil, medicine, hand cream or perfume on them.
    - When cleaning, do not use a leather cleaner, solvents or leather filling agents.
  - Because the leather portion is dyed, if the electronic key touches clothing while it has sweat and moisture adhered to it, there is a possibility that the clothing may change color.
- In case of a smart entry & start system malfunction or other key-related problems

Take your vehicle with all the electronic keys provided with your vehicle, including the card key, to any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

 NOTICE

## ■ When an electronic key is lost

If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately with all remaining electronic keys and the card key that was provided with your vehicle.

## ■ Handling the card key

- Do not apply excess force when inserting the mechanical key into the card key. Doing so may damage the card key.
- If the battery or card key terminals get wet, the battery may corrode. If the key is dropped into water, or if drinking water etc. is spilled on the key, immediately remove the battery cover and wipe the battery and terminals. (To remove the battery cover, lightly grasp and pull it.) If the battery is corroded, have any authorized Lexus dealer or repairer, or another duly qualified and equipped professional replace the battery.
- Do not crush the battery cover or use a screwdriver to remove the battery cover. Forcibly removing the battery cover may bend or damage the key.
- If the battery cover is frequently removed, the battery cover may become loose.
- When installing the battery, make sure to check the direction of the battery. Installing the battery in the wrong direction may cause the battery to deplete rapidly.
- The surface of the card key may be damaged, or its coating may peel off in the following situations:
  - The card key is carried together with hard objects, such as coins and keys.
  - The card key is scraped with a sharp object, such as the tip of a mechanical pencil.
  - The surface of the card key is wiped with thinner or benzene.

## Smart entry & start system

### Function summary

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket. (The driver should always carry the electronic key.)



- ① Locks and unlocks the doors (→P. 124) تلفن شبانه روزی
- ② Opens the trunk (→P. 124)
- ③ Starts the engine (→P. 207)

FarmaSOS.com

**■ Operation signals****Doors:**

The emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: Once; Unlocked: Twice)

**Windows and moon roof:**

A buzzer sounds to indicate that the windows and moon roof are operating.

**■ Security feature**

If a door is not opened within approximately 30 seconds after the vehicle is unlocked, the security feature automatically locks the vehicle again.

**■ Welcome light illumination control**

The front position, tail and license plate lights automatically turn on at night when the doors are unlocked using the entry function or wireless remote control if the headlight switch is in the "AUTO" position.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵


FarmaSOS.com

### Unlocking and locking the doors

Grip the handle to unlock the doors.

Make sure to touch the sensor on the back of the handle.


The doors cannot be unlocked for 3 seconds after the doors are locked.

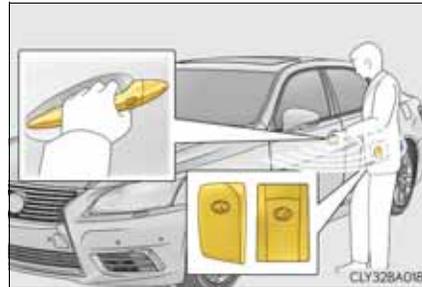

Press the lock button to lock the door.

Pressing and holding the button closes the windows.

The moon roof will also close.  
(if equipped)

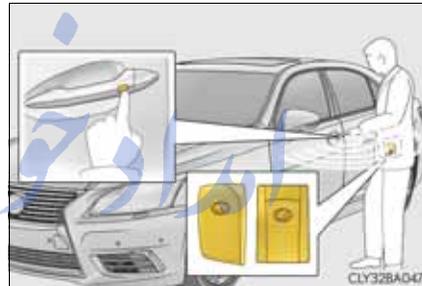

### Opening the trunk

Press the button.

The trunk lid automatically opens fully.

When all the doors are unlocked using one of the following methods, the trunk can be opened without the electronic key:


- Entry function
- Wireless remote control
- Door lock switches
- Automatic door unlocking system
- Mechanical key



### Antenna location and effective range

#### ■ Antenna location

- ① Antennas outside the cabin
- ② Antennas inside the cabin
- ③ Antenna outside the trunk
- ④ Antenna inside the trunk

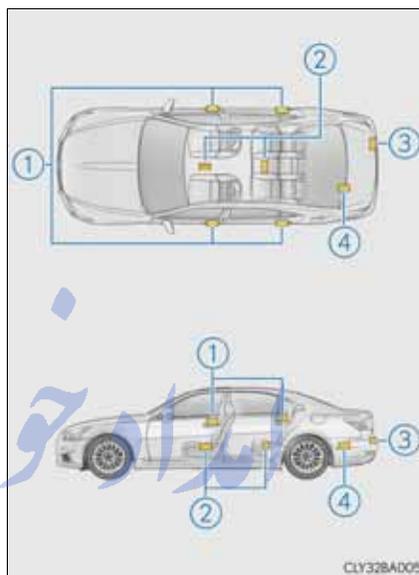

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com


3

Operation of each component

- Effective range (areas within which the electronic key is detected)

- When locking or unlocking the doors

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of an outside door handle. (Only the doors detecting the key can be operated.)

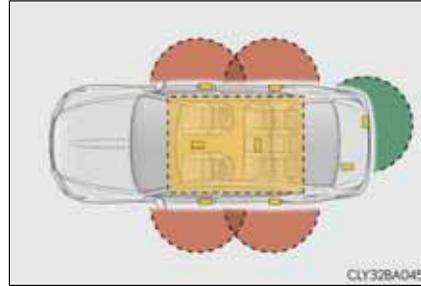

- When opening the trunk

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of the trunk release button.

- When starting the engine or changing engine switch modes

The system can be operated when the electronic key is inside the vehicle.

امداد خودرو پارسی  
تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵  
FarmaSOS.com

■ Alarms and warning indicators

A combination of exterior and interior alarms as well as warnings displayed on the multi-information display are used to prevent theft of the vehicle and unforeseeable accidents resulting from erroneous operation. Perform the appropriate correction procedure described in the following table.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds.	An attempt was made to lock the doors using the entry function while the electronic key was still inside the passenger compartment.	Retrieve the electronic key from the passenger compartment and lock the doors again.
	The trunk was closed with the electronic key inside and all doors were locked.	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds.	An attempt was made to exit the vehicle and lock the doors while carrying the electronic key without first turning the engine switch off.	Turn the engine switch off and lock the doors again.
Exterior alarm sounds once for 5 seconds.	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.

Alarm	Situation	Correction procedure
Interior alarm pings continuously.	The engine switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the engine switch was in ACCESSORY mode).	Turn the engine switch off and close the driver's door.
	The engine switch was turned off while the driver's door was open.	Close the driver's door.
Interior alarm sounds continuously.* <sup>1</sup>	When the engine switch is in IGNITION ON or ACCESSORY mode, an attempt was made to open the door and exit the vehicle, and the shift lever was not in P.	Shift the shift lever to P and turn the engine switch off.
Interior and exterior alarms sound continuously.* <sup>1</sup>	When the engine switch is in IGNITION ON or ACCESSORY mode, the driver's door was closed after the key was carried outside the vehicle, and the shift lever was not in P.	Shift the shift lever to P, turn the engine switch off and close the driver's door again.

Alarm	Situation	Correction procedure
Interior alarm pings once.* <sup>1</sup>	The electronic key has a low battery.	Replace the electronic key battery.
	An attempt was made to start the engine without the electronic key being present, or the electronic key was not functioning normally.	Start the engine with the electronic key present.* <sup>2</sup>
Interior alarm pings once and exterior alarm sounds 3 times.* <sup>1</sup>	The driver's door was closed after the key was carried outside the vehicle, and the engine switch was not turned off.	Turn the engine switch off and close the driver's door again.
	An occupant carried the electronic key outside the vehicle and closed the door while the engine switch was not off.	Bring the electronic key back into the vehicle.

\*<sup>1</sup>: A warning message will be shown on the multi-information display in the instrument cluster.


\*<sup>2</sup>: If the engine does not start when the electronic key is inside the vehicle, the electronic key battery may be depleted or there may be difficulties receiving the signal from the key. (→P. 132)

### ■ Switching the door unlock function

It is possible to set which doors the entry function unlocks using the wireless remote control.

- 1 Turn the engine switch off.
- 2 Cancel the intrusion sensor and tilt sensor of the alarm system to prevent unintended triggering of the alarm during the setting change (if equipped). (→P. 91)
- 3 Press and hold  or  for approximately 5 seconds while pressing and holding  .

The setting changes each time an operation is performed, as shown below. (When changing the setting continuously, release the buttons, wait for at least 5 seconds, and repeat step 3.)

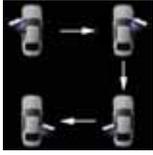Multi-information display	Unlocking function	Beep
	Hold a door handle to unlock all doors	Exterior: Beeps twice Interior: Rings once
	Hold the driver's door handle to unlock only the driver's door	Exterior: Beeps 3 times Interior: Rings once
	Hold a passenger's door handle to unlock all the doors	
	Hold the door handle to unlock the front and rear doors on your side	Exterior: Beeps 4 times Interior: Rings once
	Hold the door handle to unlock the door	Exterior: Beeps once Interior: Rings once

For vehicles with an alarm: To prevent unintended triggering of the alarm, unlock the doors using the wireless remote control and open and close a door once after the settings have been changed. (If a door is not opened within 30 seconds after  is pressed, the doors will be locked again and the alarm will automatically be set.)

In case that the alarm is triggered, immediately stop the alarm. (→P. 89)

**■ Battery-saving function**

In the following circumstances, the entry function is disabled in order to prevent the vehicle battery from discharging and the electronic key battery from depleting.

- When the entry function has not been used for 30 days or more
- When the electronic key has been left within approximately 2 m (6 ft.) of the vehicle for 10 minutes or more

The system will resume operation when

- The vehicle is locked using the door handle lock switch when carrying the electronic key on your person.
- The vehicle is locked/unlocked using the wireless remote control function. (→P. 142)
- The vehicle is locked/unlocked using the mechanical key. (→P. 874)

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

**■ Conditions affecting operation**

The smart entry & start system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system, wireless remote control and engine immobilizer system from operating properly. (Ways of coping: →P. 874)

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device
- When the electronic key is in contact with, or is covered by the following metallic objects
  - Cards to which aluminum foil is attached
  - Cigarette boxes that have aluminum foil inside
  - Metallic wallets or bags
  - Coins
  - Hand warmers made of metal
  - Media such as CDs and DVDs
- When multiple electronic keys are in the vicinity
- When other wireless keys (that emit radio waves) are being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
  - Another vehicle's electronic key or a wireless key that emits radio waves
  - Personal computers or personal digital assistants (PDAs)
  - Digital audio players
  - Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window

- Note for the entry function
  - Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
    - The electronic key is too close to the window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
    - The electronic key is near the ground or in a high place, or too close to the rear bumper center when the trunk is opened.
    - The electronic key is on the instrument panel, rear package tray or floor, or in the door pockets or glove box when the engine is started or engine switch modes are changed.
  - Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
  - As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
  - Even if the electronic key is not inside the vehicle, it may be possible to start the engine if the electronic key is near the window.
  - The doors may unlock if a large amount of water splashes on the door handle, such as in the rain or in a car wash when the electronic key is within the effective range. (The door will automatically be locked after approximately 30 seconds if the doors are not opened and closed.)
  - Gripping the door handle when wearing a glove may not unlock the door.
  - If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
  - A sudden approach to the effective range or door handle operation may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.

- When the vehicle is not driven for extended periods  
To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
- Alarm (if equipped)  
Using the smart entry & start system to lock the doors will set the alarm system.  
(→P. 88)
- To operate the system properly
  - Make sure to carry the electronic key when operating the system. Do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.  
  
Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention function may not operate.)
  - Do not leave the electronic key inside the trunk.  
The key confinement prevention function may not operate, depending on the location of the key (close to a spare tire [if equipped], the inside edge of the trunk), conditions (inside a metal bag, close to metallic objects) and the radio waves in the surrounding area. (→P. 154)
- If the smart entry & start system does not operate properly
  - Locking and unlocking the doors and trunk: Use the mechanical key. (→P. 874)
  - Starting the engine: →P. 876

FarmaSOS.com

- Electronic key battery depletion
  - The standard battery life is 1 to 2 years. (The card key battery life is about a year and a half.)
  - If the battery is low, an alarm will sound in the cabin when the engine is started or stopped. (→P. 127)
  - The battery becomes depleted even if the electronic key is not used because the key always receives radio waves. If the smart entry & start system or the wireless remote control does not operate, or the detection area becomes smaller, the battery may be depleted. Replace the battery when necessary. (→P. 795)
  - To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
    - TVs
    - Personal computers
    - Cellular phones, cordless phones and battery chargers
    - Recharging cellular phones or cordless phones
    - Table lamps
    - Induction cookers
- When the electronic key battery is fully depleted  
→P. 795
- Customization  
Settings (e. g. smart entry & start system) can be changed.  
(Customizable features →P. 904)

FarmaSOS.com

■ Certification for the smart entry & start system

**TOYOTA**  
**TOYOTA MOTOR CORPORATION**  
1, TOYOTA-CHO, TOYOTA, AICHI, 471-8571 (Head Office)  
or 471-8572 (Research & Development Group) JAPAN  
TEL: +81-565-28-2121

**R&TTE Declaration of Conformity**

We,

Manufacturer's Name: TOYOTA MOTOR CORPORATION  
Manufacturer's Address: 1, Toyota -cho, Toyota, Aichi, 471-8572, Japan

hereby declare under our sole responsibility that the product:

Product Name: LF Oscillator  
Product Model: TMLF-4

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC). The product is compliant with the following standards and/or other normative documents:

- Health & safety requirements: EN60950-1: 2001
- EMC requirements: EN301 489-1 V1.5.1 & EN301 489-3 V1.4.1
- Effective uses of radio spectrum: EN300 330-2 V1.1.1

Supplementary information:

* CE mark	
* Member states intended for use	EU and EFTA

Date: January 31, 2006

Signature: Hiroshi Honda  
Hiroshi Honda

Hereby, Toyota Motor Corporation, declares that this TMLF-4 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Toyota Motor Corporation vakuuttaa täten että TMLF-4 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Hierbij verklaart Toyota Motor Corporation dat het toestel TMLF-4 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Par la présente Toyota Motor Corporation déclare que l'appareil TMLF-4 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Härmed intygar Toyota Motor Corporation att denna TMLF-4 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Undertegnede Toyota Motor Corporation erklærer herved, at følgende udstyr TMLF-4 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Hiermit erklärt Toyota Motor Corporation, dass sich das Gerät TMLF-4 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Toyota Motor Corporation ΔΗΛΩΝΕΙ ΟΤΙ ΤΜΛF-4 ΣΥΜΜΟΡΦΟΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Con la presente Toyota Motor Corporation dichiara che questo TMLF-4 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Por medio de la presente Toyota Motor Corporation declara que el TMLF-4 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Toyota Motor Corporation declara que este TMLF-4 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Hawnhekk, Toyota Motor Corporation, jiddikjara li dan TMLF-4 jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
Käesolevaga kinnitab Toyota Motor Corporation seadme TMLF-4 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Alulírott, Toyota Motor Corporation nyilatkozom, hogy a TMLF-4 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Toyota Motor Corporation tímto vyhlasuje, že TMLF-4 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Toyota Motor Corporation tímto prohlašuje, že tento TMLF-4 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Toyota Motor Corporation izjavlja, da je ta TMLF-4 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Šiuo Toyota Motor Corporation deklaruoja, kad šis TMLF-4 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Ar šo Toyota Motor Corporation deklarē, ka TMLF-4 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Niniejszym Toyota Motor Corporation oświadcza, że TMLF-4 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Hér með lýsir Toyota Motor Corporation yfir því að TMLF-4 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Toyota Motor Corporation erklærer herved at utstyret TMLF-4 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
С настоящето, Toyota Motor Corporation, декларира, че TMLF-4 е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 1999/5/EC.
Prin prezenta, Toyota Motor Corporation, declară că aparatul TMLF-4 este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 1999/5/CE.
Ovim, Toyota Motor Corporation, izjavljuje da ovaj TMLF-4 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.
Nepermjjet kesaj, Toyota Motor Corporation, deklaror qe ky TMLF-4 eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.
Ovim Toyota Motor Corporation, izjavljuje da je TMLF-4 u skladu s bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC i Pravilnika o RITT opremi (NN 25/2012).
Ovim, Toyota Motor Corporation, deklarirše da je TMLF-4 u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 1999/5/EC.

Hereby, Tokai Rika Co., Ltd., declares that this B82UA is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Tokai Rika Co., Ltd. vakuuttaa täten että B82UA tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Hierbij verklaart Tokai Rika Co., Ltd. dat het toestel B82UA in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Par la présente Tokai Rika Co., Ltd. déclare que l'appareil B82UA est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Härmed intygar Tokai Rika Co., Ltd. att denna B82UA står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Undertegnede Tokai Rika Co., Ltd. erklærer herved, at følgende udstyr B82UA overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Hiermit erklärt Tokai Rika Co., Ltd., dass sich das Gerät B82UA in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Tokai Rika Co., Ltd. ΔΗΛΩΝΕΙ ΟΤΙ Β82UA ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Con la presente Tokai Rika Co., Ltd. dichiara che questo B82UA è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Por medio de la presente Tokai Rika Co., Ltd. declara que el B82UA cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Tokai Rika Co., Ltd. declara que este B82UA está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Hawnhekk, Tokai Rika Co., Ltd., jiddikjara li dan B82UA jikkonforma mal-ftigijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.
Käesolevaga kinnitab Tokai Rika Co., Ltd. seadme B82UA vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Alulírott, Tokai Rika Co., Ltd. nyilatkozom, hogy a B82UA megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Tokai Rika Co., Ltd. tímto vyhlasuje, že B82UA spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Tokai Rika Co., Ltd. tímto prohlašuje, že tento B82UA je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Tokai Rika Co., Ltd. izjavlja, da je ta B82UA v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Šiuo Tokai Rika Co., Ltd. deklaruoja, kad šis B82UA atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Ar šo Tokai Rika Co., Ltd. deklarē, ka B82UA atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Niniejszym Tokai Rika Co., Ltd. oświadcza, że B82UA jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Hér með lýsir Tokai Rika Co., Ltd. yfir því að B82UA er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Tokai Rika Co., Ltd. erklærer herved at utstyret B82UA er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
С настоящето, Tokai Rika Co., Ltd., декларира, че B82UA е в съответствие със съществениите изисквания и другите приложими разпоредби на Директива 1999/5/EC.
Prin prezenta, Tokai Rika Co., Ltd., declară că aparatul B82UA este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 1999/5/CE.
Ovim, Tokai Rika Co., Ltd., izjavljuje da ovaj B82UA je uskladen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.
Nepermjet kesaj, Tokai Rika Co., Ltd., deklaroj qe ky B82UA eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.
Ovim Tokai Rika Co., Ltd., izjavljuje da je B82UA u skladu s bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC i Pravilnika o RiTT opremi (NN 25/2012).
Ovim, Tokai Rika Co., Ltd., deklarise da je B82UA u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 1999/5/EC.

The DECLARATION of CONFORMITY (DoC) is available at the following address:

<http://www.tokai-rika.co.jp/pc/>



### ⚠ CAUTION

#### ■ Caution regarding interference with electronic devices

- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the smart entry & start system antennas. (→P. 125)

The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.

- Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves.

Radio waves could have unexpected effects on the operation of such medical devices.

Ask any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for details on disabling the entry function.

### ⚠ NOTICE

#### ■ When opening the trunk

Do not press the rear view monitor system camera by mistake.

If the camera or surrounding area receives a strong impact, the camera may move off its installed position and/or angle.



## Wireless remote control

### Function summary

The wireless remote control can be used to lock and unlock the vehicle.

- ① Locks all the doors
- ② Closes the windows and moon roof (press and hold)\*
- ③ Unlocks all the doors
- ④ Opens the windows and moon roof (press and hold)\*
- ⑤ Opens the trunk (press and hold)



The trunk lid automatically opens fully.

\*: These settings must be changed using the customize function. (→P. 904) تلفن شبانه روزی: ۰۲۱-۸۵۰۰۰۰۰۰

FarmaSOS.com

- Operation signals

- Doors:

- The emergency flashers flash to indicate that the doors have been locked/unlocked. (Locked: once; Unlocked: twice)

- Windows and moon roof:

- A buzzer sounds to indicate that the windows and moon roof are operating.

- Welcome light illumination control

- P. 123

- Door lock buzzer

- If an attempt to lock the doors is made when a door is not fully closed, a buzzer sounds continuously for 5 seconds. Fully close the door to stop the buzzer, and lock the vehicle once more.

- Security feature

- P. 123

- Alarm (if equipped)

- Using the wireless remote control to lock the doors will set the alarm system. (→P. 88)

- Conditions affecting operation

- P. 132

- If the wireless remote control does not operate properly

- Locking and unlocking the doors and trunk: Use the mechanical key. (→P. 874)

- Electronic key battery depletion

- P. 135

- When the electronic key battery is fully depleted

- P. 795

- Customization

- Settings (e.g. wireless remote control system) can be changed. (Customizable features →P. 904)

■ Certification for wireless remote control

Hereby, Tokai Rika Co., Ltd., declares that this B76EA is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Tokai Rika Co., Ltd. vakuuttaa täten että B76EA tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Hierbij verklaart Tokai Rika Co., Ltd. dat het toestel B76EA in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Par la présente Tokai Rika Co., Ltd. déclare que l'appareil B76EA est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Härmed intygar Tokai Rika Co., Ltd. att denna B76EA står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Undertegnede Tokai Rika Co., Ltd. erklærer herved, at følgende udstyr B76EA overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Hiermit erklärt Tokai Rika Co., Ltd., dass sich das Gerät B76EA in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Tokai Rika Co., Ltd. ΔΗΛΩΝΕΙ ΟΤΙ Β76ΕΑ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Con la presente Tokai Rika Co., Ltd. dichiara che questo B76EA è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Por medio de la presente Tokai Rika Co., Ltd. declara que el B76EA cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Tokai Rika Co., Ltd. declara que este B76EA está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
Hawnhekk, Tokai Rika Co., Ltd., jiddikjara li dan B76EA jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Dirrettiva 1999/5/EC.
Käesolevaga kinnitab Tokai Rika Co., Ltd. seadme B76EA vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Alulírott, Tokai Rika Co., Ltd. nyilatkozom, hogy a B76EA megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Tokai Rika Co., Ltd. tímto vyhlasuje, že B76EA spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
Tokai Rika Co., Ltd. tímto prohlašuje, že tento B76EA je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Tokai Rika Co., Ltd. izjavlja, da je ta B76EA v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
Šiuo Tokai Rika Co., Ltd. deklaruoja, kad šis B76EA atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Ar šo Tokai Rika Co., Ltd. deklarē, ka B76EA atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Niniejszym Tokai Rika Co., Ltd. oświadcza, że B76EA jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
Hér með lýsir Tokai Rika Co., Ltd. yfir því að B76EA er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Tokai Rika Co., Ltd. erklærer herved at utstyret B76EA er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
С настоящето, Tokai Rika Co., Ltd., декларира, че B76EA е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 1999/5/EC.
Prin prezenta, Tokai Rika Co., Ltd., declară că aparatul B76EA este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 1999/5/CE.
Ovim, Tokai Rika Co., Ltd., izjavljuje da ovaj B76EA je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.
Nepermjet kesaj, Tokai Rika Co., Ltd., deklaruj qe ky B76EA eshte ne pajtim me kerkesat thelbesore dhe dispozitat e tjera perkatese te Direktives 1999/5/EC.
Ovim Tokai Rika Co., Ltd., izjavljuje da je B76EA u skladu s bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC i Pravilnika o RiTT opremi (NN 25/2012).
Ovim, Tokai Rika Co., Ltd., deklarirše da je B76EA u skladu sa osnovnim zahtjevima i ostalim relevantnim odredbama Direktive 1999/5/EC.

The DECLARATION of CONFORMITY (DoC) is available at the following address:

<http://www.tokai-rika.co.jp/pc/>



3  
Operation of each component

**⚠ CAUTION**

Observe the following precautions.

Failing to do so may result in death or serious injury.

■ When closing the windows or moon roof using wireless remote control

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window or moon roof is being operated.
- To prevent inadvertent power windows and moon roof operation, never let a small child have and use the wireless remote control.

■ Jam protection function

- Never try jamming any part of your body to activate the jam protection function intentionally.
- The jam protection function may not work if something gets caught just before the window or moon roof fully closes.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## Doors

### Unlocking and locking the doors

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.

#### ◆ Entry function


→P. 122

#### ◆ Wireless remote control

→P. 142

#### ◆ Door lock switches


- ① Locks all the doors
- ② Unlocks all the doors

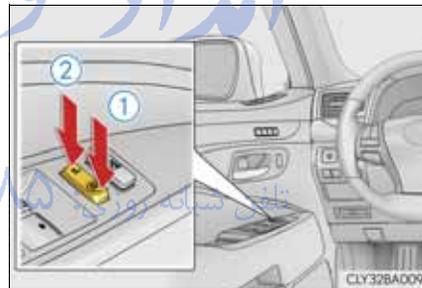

#### ◆ Inside lock buttons

- ① Locks the door
- ② Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

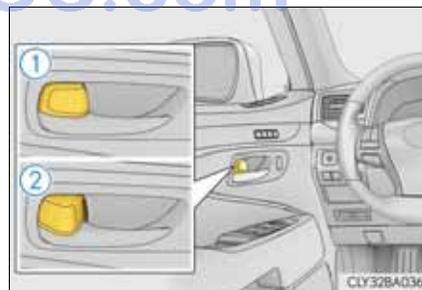

### Locking the front doors from the outside without a key

- 1 Move the inside lock button to the lock position.
- 2 Close the door while pulling the door handle.

The door cannot be locked if the engine switch is in ACCESSORY or IGNITION ON mode, or the electronic key is left inside the vehicle.


The key may not be detected correctly and the door may be locked.

### Rear door child-protector lock

The door cannot be opened from inside the vehicle when the lock is set.

- 1 Unlock
- 2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

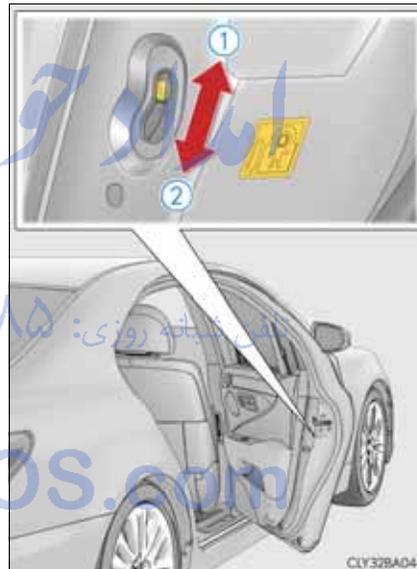

### Automatic door locking and unlocking systems

The following functions can be set or canceled:

For instructions on customizing, refer to P. 904.

Function	Operation
Speed linked door locking function	All doors are automatically locked when vehicle speed is approximately 20 km/h (12 mph) or higher.
Shift position linked door locking function	All doors are automatically locked when shifting the shift lever to position other than P.
Shift position linked door unlocking function	All doors are automatically unlocked when shifting the shift lever to P.
Driver's door linked door unlocking function	All doors are automatically unlocked when driver's door is opened.

#### ■ Impact detection door lock release system

In the event that the vehicle is subject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

#### ■ Door closer

In the event that a door is left slightly open, the door closer will automatically close it to the fully closed position.

- The door closer will operate regardless of the engine switch mode.
- The door closer will not function if the door has been closed while pulling the inside or outside door handle.
- The door can be opened by pulling the inside or outside door handle, even when the door closer is operating (except when the lock button is in the lock position or the child-protector lock is set).
- The motor sound may be heard for several seconds after the door closer closes the door. This does not indicate a malfunction.

#### ■ Using the mechanical key

The doors can also be locked and unlocked with the mechanical key. (→P. 874)

#### ■ If a wrong key is used

The key cylinder rotates freely to isolate inside mechanism.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

**FarmaSOS.com**

### ■ Customization

Settings (e.g. unlocking function using a key) can be changed.  
(Customizable features →P. 904)

#### CAUTION

##### ■ To prevent an accident

Observe the following precautions while driving the vehicle.  
Failure to do so may result in a door opening and an occupant throwing out of the vehicle, resulting in death or serious injury.

- Ensure that all doors are properly closed.
- Do not pull the inside handle of the doors while driving.  
Be especially careful for the front doors, as the doors may be opened even if the inside lock buttons are in locked position.
- Set the rear door child-protector locks when children are seated in the rear seats.

##### ■ Door closer

In the event that a door is left slightly open, the door closer will automatically close it to the fully closed position.  
If the child-protector lock is set, the door closer will not stop during operation even if an attempt is made to open the door from inside the vehicle. Be careful not to catch fingers or anything else in the door. Failure to do so may result in serious injury.

#### NOTICE

##### ■ To prevent door closer malfunction

Do not frequently repeat opening and closing of doors, or apply excessive force to a door while the door closer is operating.

## Trunk


The trunk can be opened using the trunk opener, entry function or wireless remote control.

The trunk can be closed using the trunk closer.

### Opening the trunk from inside the vehicle

Press the opener switch.

The trunk lid automatically opens fully.

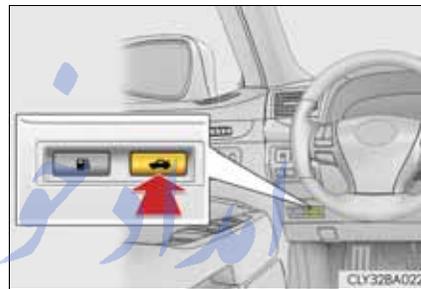

### Opening the trunk from outside the vehicle

- Entry function: تلفن شبانه روزی: ۰۸۵-۸۸۶۲-۲۱  
→P. 122
- Wireless remote control  
→P. 142

FarmaSOS.com

### Trunk closer switch

Pressing the switch closes the trunk lid automatically. (A buzzer sounds.)

Pressing the switch while the trunk lid is closing opens the trunk lid again.



### When closing the trunk

Using the trunk grip, lower the trunk without applying force to the side and push the trunk down from the outside to close it.




### Luggage security system

The trunk opener switch can be temporarily disabled to protect luggage stored in the trunk against theft.

Turn the main switch in the glove box off to disable the trunk opener.

- ① On
- ② Off

The trunk lid cannot be opened even with the wireless remote control or the entry function.

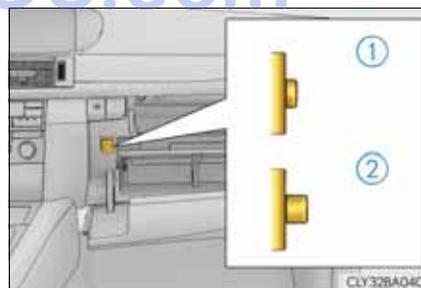

**■ Trunk lid light/trunk light**

The trunk lid light/trunk light turns on when the trunk is opened.

**■ Trunk easy closer**

In the event that the trunk lid is left slightly open, the trunk easy closer will automatically close it to the fully closed position.

**■ Function to prevent the trunk being locked with the electronic key inside (when all the doors are locked)**

Closing the trunk lid with the electronic key left inside the trunk will sound an alarm. In this case, the trunk lid can be opened by pressing the button on the trunk lid.

**■ Overload protection function**

The trunk lid will not operate when excessive load is present on the top of the trunk lid.

**■ Fall-down protection function**

While the trunk lid is opening automatically, applying excessive force to it will stop the opening operation to prevent the trunk lid from rapidly falling down.

**■ Jam protection function**

While the trunk lid is closing automatically, the trunk lid will stop closing and open if something gets caught.

**■ Using the mechanical key**

The trunk can be also opened using the mechanical key. (→P. 875)

**■ When leaving a key to the vehicle with a parking attendant**

→P. 116

**⚠ CAUTION**

Observe the following precautions.

Failure to do so may result in death or serious injury.

**■ Before driving**

- Make sure that the trunk lid is fully closed. If the trunk lid is not fully closed, it may open unexpectedly while driving and hit near-by objects or luggage in the trunk may be thrown out, causing an accident.
- Do not allow children to play in the trunk.  
If a child is accidentally locked in the trunk, they could suffer from heat exhaustion, suffocation or other injuries.
- Do not allow a child to open or close the trunk lid.  
Doing so may cause the trunk lid to open unexpectedly, or cause the child's hands, head, or neck to be caught by the closing trunk lid.

**■ Important points while driving**

Never let anyone sit in the trunk. In the event of sudden braking or a collision, they are susceptible to death or serious injury.

3

Operation of each component

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

**⚠ CAUTION**

■ Using the trunk

Observe the following precautions.


Failure to do so may cause parts of the body to be caught, resulting in serious injury.

- Remove any heavy loads, such as snow and ice, from the trunk lid before opening it. Failure to do so may cause the trunk lid to suddenly shut again after it is opened.
- When opening or closing the trunk lid, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the trunk is about to open or close.
- Use caution when opening or closing the trunk lid in windy weather as it may move abruptly in strong wind.

- The trunk lid may suddenly shut if it is not opened fully. It is more difficult to open or close the trunk lid on an incline than on a level surface, so beware of the trunk lid unexpectedly opening or closing by itself. Make sure that the trunk lid is fully open and secure before using the trunk.



- When closing the trunk lid, take extra care to prevent your fingers etc. from being caught.
- When closing the trunk lid, make sure to press it lightly on its outer surface. If the trunk handle is used to fully close the trunk lid, it may result in hands or fingers being caught.

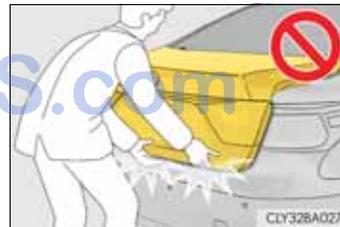


- Do not attach any accessories other than genuine Lexus parts to the trunk lid. Such additional weight on the trunk lid may cause the lid to suddenly shut again after it is opened.

**⚠ CAUTION**

■ Trunk easy closer

In the event that the trunk lid is left slightly open, the trunk easy closer will automatically close it to the fully closed position. It takes several seconds before the trunk easy closer begins to operate. Be careful not to catch fingers or anything else in the trunk lid, as this may cause bone fractures or other serious

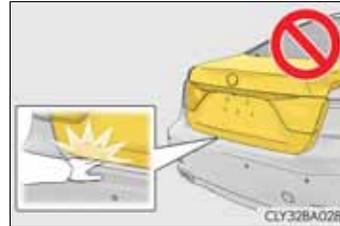

■ Power trunk lid

Observe the following precautions when operating the power trunk lid. Failure to do so may cause serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- If anyone is in the vicinity, make sure they are safe and let them know that the trunk is about to open or close.
- If the trunk closer switch is pressed while the trunk lid is opening during automatic operation, the trunk lid stops opening. Take extra care when on an incline, as the trunk lid may open or close suddenly.
- On an incline, the trunk lid may suddenly shut after it opens automatically. Make sure the trunk lid is fully open and secure before using the trunk.
- In the following situations, the power trunk lid may detect an abnormality and automatic operation may be stopped. In this case, the trunk lid has to be operated manually. Take extra care in this situation, as the stopped trunk lid may suddenly shut, causing an accident.
  - When the trunk lid contacts an obstacle
  - When the battery voltage suddenly drops, such as when the engine switch is turned to IGNITION ON mode or the engine is started during automatic operation
- Do not attach any accessories other than genuine Lexus parts to the trunk lid. The power trunk lid may not operate, causing itself to malfunction, or the trunk lid may suddenly shut again after it is opened.

 CAUTION

## ■ Jam protection function

Observe the following precautions.  
Failure to do so may cause serious injury.

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the trunk lid fully closes. Be careful not to catch fingers or anything else in the trunk lid.
- The jam protection function may not work depending on the shape of the object that is caught. Be careful not to catch fingers or anything else.

 NOTICE

## ■ To prevent trunk easy closer malfunctions


Do not apply force to the trunk lid while the trunk easy closer is operating.

## ■ To prevent damage to the power trunk lid

- Make sure that there is no luggage or snow on the trunk lid before operating the power trunk lid. In addition, make sure that there is no ice between the trunk lid and frame that prevents movement of the trunk lid. Operating the power trunk lid when excessive load is present on the trunk lid may cause a malfunction.
- Do not apply excessive force to the trunk lid while the power trunk lid is operating.

## Front seats

### Adjustment procedure

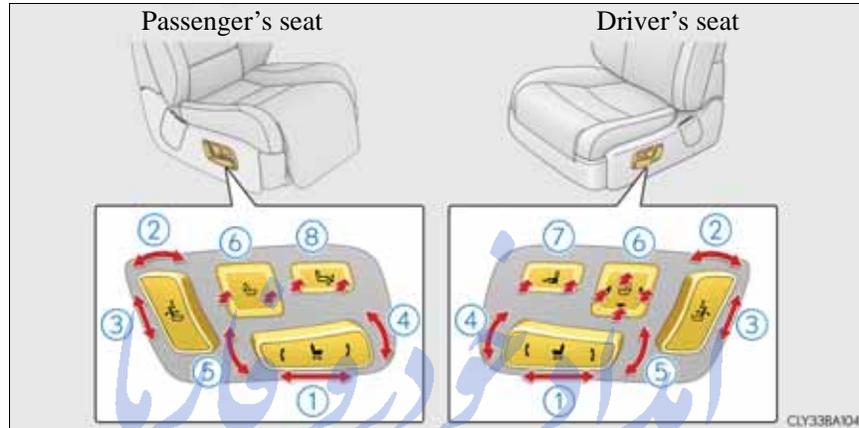

① Seat position adjustment switch

The height of the driver's head restraint is automatically adjusted simultaneously with the seat position adjustment operation.

② Seatback angle adjustment switch

③ Head restraint height adjustment switch (→P. 176)

④ Seat cushion (front) angle adjustment switch

⑤ Vertical height adjustment switch

⑥ Lumbar/pelvic support adjustment switch

Driver's seat: firmness, vertical, backward and forward positioning

Front passenger's seat: firmness, backward and forward positioning

⑦ Seat cushion length adjustment switch

⑧ Ottoman angle adjustment switch (if equipped)

If forward adjustment is performed while the ottoman is raised, the ottoman will move downward.

**Seat operation switches on the side of the front passenger's seat**

- ① Tilts the seatback forward
- ② Tilts the seatback backward
- ③ Moves the seat forward
- ④ Moves the seat backward



امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

3


Operation of each component

### Power easy access system

The seat and steering wheel are automatically adjusted to allow the driver or front passenger to enter and exit the vehicle easily.

#### ■ Driver's seat

When all of the following have been performed, the driver's seat and steering wheel are automatically adjusted to a position that allows driver to enter and exit the vehicle easily.

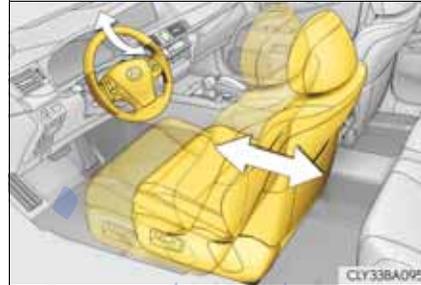

- The shift lever has been shifted to P.
- The engine switch has been turned off.
- The driver's seat belt has been unfastened.

When any of the following has been performed, the driver's seat and steering wheel automatically return to their original positions.

- The engine switch has been turned to ACCESSORY mode.
- The driver's seat belt has been fastened.

#### ■ Front passenger's seat

If the front passenger's door is opened while the vehicle is stopped, the adjusted lumbar/pelvic support, ottoman (if equipped), etc. will return to its original position.

**■ Seat cushion automatic length adjustment (driver's seat)**

If the front of the cushion gets too close to the area around the instrument panel when the seat position is being adjusted, the seat cushion will automatically retract.

**■ Power easy access system operations**

- When exiting the vehicle, the power easy access system may not operate if the seat is already close to the rearmost position, etc.
- If the seat position is adjusted during the power easy access system operation, the operation will stop.
- If the seat position is adjusted during or after the power easy access system operation when the driver is exiting the vehicle, the power easy access system will not operate when entering the vehicle.

**■ Customization**

The distance that the driver's seat moves backward during the power easy access system can be changed. (Customizable features →P. 904)

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

**⚠ CAUTION****■ When adjusting the seat position**

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury.  
Fingers or hands may become jammed in the seat mechanism.

**■ Seat adjustment**

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

**■ Operating the front passenger's seat from the driver's seat or rear seat**

Do not operate the front passenger's seat when a passenger is seated in it. In addition, do not let anyone sit down in the front passenger's seat while the seat is being operated. The front passenger may catch their legs between the instrument panel and seat, resulting in injury.

FarmaSOS.com

**⚠ CAUTION**

- When adjusting the seat positions or the front passenger ottoman (if equipped)  
Make sure to leave enough space around the feet so they do not get stuck.
- When using the front passenger ottoman (if equipped)
  - Do not operate the front passenger ottoman when the vehicle is moving.  
Failure to do so may cause death or serious injury in the event of sudden braking or a collision.
  - Do not sit on the front passenger ottoman of the passenger seat.  
Doing so may cause seat belts to be worn improperly, which may lead to serious injury or death in the event of sudden braking or a collision.
  - Do not step on the front passenger ottoman.  
Doing so could damage the front passenger ottoman, or could cause you to seriously injure yourself by falling over.
  - Stow the front passenger ottoman when you get in or out of the vehicle or when the front passenger ottoman is not in use to avoid stumbling over it.
  - Do not allow anyone to put their hands or feet under the passenger seat when stowing the front passenger ottoman.

**⚠ NOTICE**

- تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵
- Operating the front passenger's seat from the driver's seat or rear seat  
Before operating the front passenger's seat, make sure that there is no luggage or any other objects on the seat or in the footwell that could prevent its operation.  
Such items may result in excess force being applied, causing damage to the seat and/or the luggage.
  - To prevent a front passenger ottoman malfunction (if equipped)
    - Do not place any objects in the front passenger footwell that could prevent the operation of the front passenger ottoman.
    - Do not place heavy luggage on the front passenger ottoman.
    - Do not place anything under the front passenger ottoman when in use.  
There is a possibility that something may get caught and cause damages when stowing the front passenger ottoman.

## Power rear seat\*



- ① Seat selection switch  
The indicator light for the seat that can be operated comes on.
- ② Seat position adjustment switch
- ③ Seatback upper angle adjustment switch
- ④ Head restraint height adjustment switch (→P. 176) تلفن
- ⑤ Pelvic support seat switches

FarmaSOS.com


\*: If equipped

### Seat return function linked to the door opening operation

The seat will return to the neutral position automatically when the door is opened for easier entry and exit of the vehicle.

### Returning the rear seat from the front seats

The seat will return to the neutral position while the button is pressed and held.

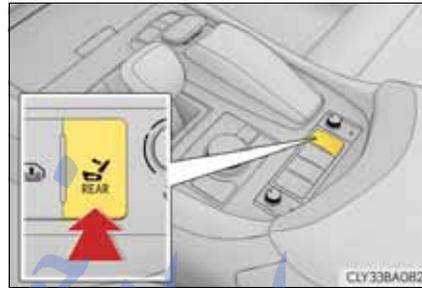

### Pelvic support seat with seat vibrator

Pelvic support seat with seat vibrator, which feature a support plate mounted in the seatback and a vibration function, are equipped on each outer rear seat. The support plate position and vibration speed can be adjusted according to the occupant's preferences.



- ① Support plate position adjustment switch
- ② Vibration switch

Press  to operate the vibration function. Vibration will start in the same speed level as when previously operated. Each time  is pressed, the speed changes between 3 levels. Pressing "OFF" stops the vibration function.


■ Seat return function linked to the door opening operation

- Operating conditions
  - The engine switch is in IGNITION ON mode.
- Canceling operation partway through
  - During the seat return operation, performing either of the following actions cancels the operation:
    - Pressing the “SET”, “M” or “C” button (→P. 174)
    - Pressing any of the seat adjustment switches
- Disabling the seat return function

Pressing the “C” button will disable the seat return function.

The indicator light comes on when the seat return function is disabled.

Pressing the button again will enable the seat return function.

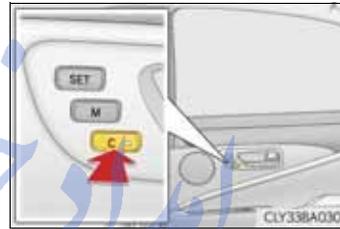

- Seat return operation after turning the engine switch off
  - The seat will automatically return to the neutral position if the door is opened within approximately 45 seconds of the engine switch being turned off.

■ Pelvic support seat with seat vibrator

- Operating conditions
  - The engine switch is in IGNITION ON mode.
- Automatic stop function
  - Vibration will automatically stop approximately 15 minutes after starting.
  - Vibration will automatically stop if the adjacent rear door is opened.
- Pelvic support seat return function
  - The position of the support plate will automatically return to the neutral position if the adjacent rear door is opened.

 CAUTION

## ■ Power rear seats

## ● Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary.

If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.

Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

## ● When adjusting the seat position

Keep sufficient footwell space to prevent your feet from being caught by the front seat.

## ● When returning the rear seats to the neutral position

To avoid injuring the rear passengers, wait until they have gotten out of the vehicle before operating the switch.

## ■ Using the pelvic support seat with seat vibrator

● Those who are pregnant, have recently given birth, or suffer from ailments requiring rest (heart disease etc.) should consult a doctor before use.

● Do not allow children to use the pelvic support seat vibration function.

● Do not use immediately after consuming a meal or alcohol, or for an extended period of time.

● If you feel sick while using the pelvic support seat vibration function, immediately discontinue use.

## Driving position memory

This feature automatically adjusts the front seats, steering wheel, outside rear view mirrors and height of seat belt shoulder anchor to suit your preferences.

### Driving position memory

Your preferred driving position (the position of the driver's seat, steering wheel, outside rear view mirrors and height of seat belt shoulder anchor) can be recorded and recalled by pressing a switch.

Three different driving positions can be recorded into memory.

#### ■ Recording procedure

- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to IGNITION ON mode.
- 3 Adjust the driver's seat, steering wheel, outside rear view mirrors and seat belt shoulder anchor height to the desired positions.
- 4 Press the "SET" switch, then within 3 seconds press switch "1", "2" or "3" until the buzzer sounds.

If the selected switch has already been preset, the previously recorded position will be overwritten.



To record the position of the front passenger's seat, adjust the front passenger's seat to the desired position and perform step 4 using the switches on the front passenger's side.

■ Recall procedure

- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to IGNITION ON mode.
- 3 Press one of the switches for the driving position you want to recall until the buzzer sounds.



- When you want to stop the position recall operation part-way through Perform any of the following operations:
- Press the “SET” switch.
  - Press switch “1”, “2” or “3”.
  - Operate any of the seat adjustment switches (only cancels seat position recall).
  - Operate the tilt and telescopic steering control switch (only cancels steering wheel position recall).
  - Operate the seat belt shoulder anchor height adjusting switch (only cancels height of seat belt shoulder anchor recall).
- Front passenger's seat position recall limitations (vehicles with front passenger ottoman)
- The memorized position will only be recalled if the front passenger ottoman is in a position higher than the memorized position. It will not move in an upward direction.
- Automatic front passenger ottoman adjustment (if equipped)
- While the memorized position is being recalled, if it appears that the front edge of the cushion will make contact with the area surrounding the instrument panel, the front passenger ottoman will be automatically stowed.

- Operating the driving position memory after turning the engine switch off

Driver's seat:

Recorded driving positions (except the steering wheel position) can be recalled up to 180 seconds after the driver's door is opened and up to 60 seconds after it is closed again.

Front passenger's seat:

Recorded seat positions can be recalled up to 180 seconds after the front passenger's door is opened.

- In order to correctly use the driving position memory function

If a seat position is already in the furthest possible position and the seat is operated in the same direction, the recorded position may be slightly different when it is recalled.

### Memory recall function (driver's side only)

Each electronic key (including a card key) can be registered to recall your preferred driving position.

- Registering procedure

Record your driving position to switch “1”, “2” or “3” before performing the following:

- ▶ Using the wireless remote control

- 1 Turn the engine switch off and close the driver's door.
- 2 While pressing the desired switch (“1”, “2” or “3”), press  on the wireless remote control until the buzzer sounds.



To prevent unintended triggering of the alarm, open and close a door once after a driving position has been recorded. (If a door is not opened within 30 seconds after  is pressed, the doors will be locked again and the alarm will automatically be set.)

In case that the alarm is triggered, immediately stop the alarm.

(→P. 89)

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com


3

Operation of each component

► Using the door lock switch

Carry only one of the keys (including the card key) to which you want to link the driving position. If 2 or more keys are in the vehicle, the driving position cannot be linked properly.

- 1 Turn the engine switch off and close the driver's door.
- 2 While pressing the recalled switch, press and hold the door lock switch (either lock or unlock) until the buzzer sounds.

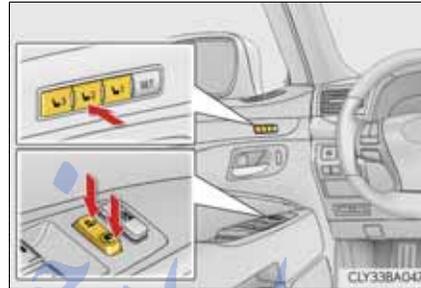

■ Recall procedure

- 1 Carry the electronic key that has been registered to the driving position, and then unlock and open the driver's door using the smart entry & start system or wireless remote control.

The driving position will move to the recorded position (not including the steering wheel). However, the seat will move to a position slightly behind the recorded position in order to make entering the vehicle easier.

If the driving position is in a position that has already been recorded, the seat and outside rear view mirrors will not move.

- 2 Turn the engine switch to ACCESSORY mode or fasten your seatbelt.

The seat and steering wheel will move to the recorded position.

■ Cancellation procedure

► Using the wireless remote control

- 1 Turn the engine switch off and close the driver's door.
- 2 While pressing the "SET" switch, press  on the wireless remote control until the buzzer sounds.

► Using the door lock switch

Carry only the key you want to cancel and then close the driver's door. If 2 or more keys are in the vehicle, the driving position cannot be canceled properly.

- 1 Turn the engine switch off and close the driver's door.
- 2 While pressing the "SET" switch, press the lock or unlock side on the door lock switch until the buzzer sounds.

■ Recalling the driving position using the memory recall function

- Different driving positions can be registered for each electronic key. Therefore, the driving position that is recalled may be different depending on the key being carried.
- If a door other than the driver's door is unlocked with the smart entry & start system, the driving position cannot be recalled. In this case, press the driving position switch which has been set.

 CAUTION

■ Seat adjustment caution

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.

FarmaSOS.com


## Rear seat position memory

The rear seat position can be memorized and recalled with the touch of a button.

### Entering a position to memory

- 1 Turn the engine switch to IGNITION ON mode.
- 2 Adjust the rear seat to the desired position.
- 3 Press the “SET” button until the signal beeps.

If the preset is being used, the previously recorded seat position will be overwritten.

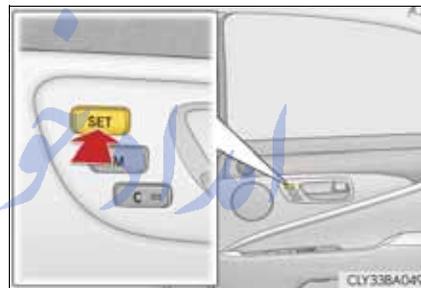

### Recalling the memorized position

Press the “M” button until the signal beeps.




### Disabling the seat return function

Pressing the “C” button will disable the seat position recall or seat return function.

The indicator light comes on when the function is disabled.

Pressing the button again will enable the seat position recall or seat return function.

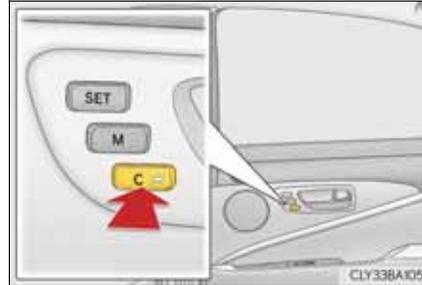

- Seat return function linked to the door opening operation
  - Operating conditions
    - The engine switch is in IGNITION ON mode.
  - Canceling operation partway through
    - During the seat return operation, performing either of the following actions cancels the operation:
      - Pressing the “SET”, “M” or “C” button
      - Pressing any of the seat adjustment switches
  - Seat return operation after turning the engine switch off
    - The seat will automatically return to the neutral position if the door is opened within approximately 45 seconds of the engine switch being turned off.

#### ⚠ CAUTION

##### ■ Seat adjustment caution


Take care during seat adjustment so that the rear passengers do not strike the front seats.

## Head restraints

Head restraints are provided for all seats.

### Front seats

- ① Vertical adjustment
- ② Horizontal adjustment

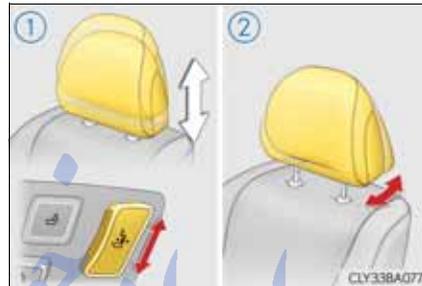

### Outer rear seats

► Manual type



- ① Vertical adjustment  
Pull the head restraints up when raising.

Push and hold the lock release button when lowering.

- ② Horizontal adjustment


► Power type

- ① Vertical adjustment
- ② Side support adjustment

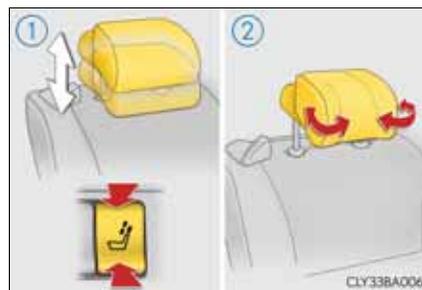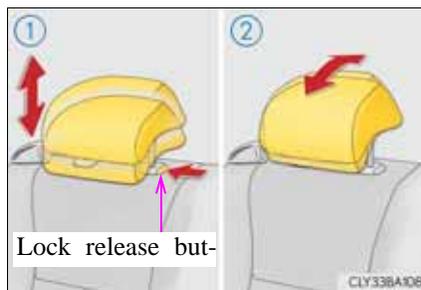

### Rear center seat

- ① To use
- ② To fold

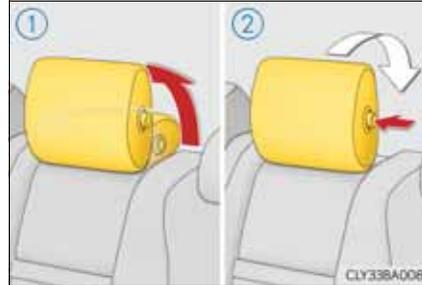


### Active head restraints\* (without rear pre-crash safety system)

If the vehicle detects an impact during a rear-end collision, the front part of the head restraint moves forward and upward to help reduce the risk of whiplash to the seat occupant.

When reversing, even a small amount of force applied from the rear, such as a minor rear impact, may cause the head restraints to move.

\*: Front seats

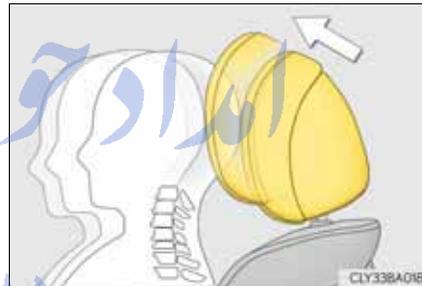

3

Operation of each component

### Pre-crash intelligent head restraints (with rear pre-crash safety system)


→P. 363

**■ Removing the head restraints**

For removal and installation of the head restraint, ask any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**■ Adjusting the height of the head restraints (except rear center seat)**

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears.

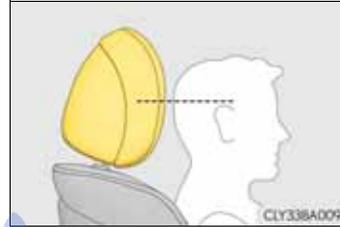**■ When using the rear seat head restraints**

Manual type:

Always raise the head restraint one level from the stowed position when using.

Rear center seat:

Make sure to pull the head restraint forward when using the rear center seat.

**■ Active head restraints (if equipped)**

- The active head restraint on the front passenger seat will not activate if the seat is unoccupied. However, it may activate during a rear-end collision if luggage is in the seat or the seat belt is fastened.
- Once the active head restraint has activated, the head restraint remains protruded forward and upward. After it has operated, have it repaired at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**⚠ CAUTION****■ Head restraint precautions**

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- Manual type: After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

**■ The active head restraint on the front passenger seat (if equipped)**

Do not place anything, such as a cushion, on the front passenger's seat. Doing so will disperse the passenger's weight, which may prevent the sensor from detecting the passenger's weight properly. As a result, the active head restraint may not activate in the event of an accident.

**■ Active head restraint precautions (if equipped)**

- Do not put head restraint covers.
- For removal, installation, modification, disassembly or disposal of the active head restraints, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.  
Inappropriate handling of the active head restraints may prevent them from operating properly during an accident.

3

Operation of each component


FarmaSOS.com

## Steering wheel

### Adjustment procedure

Operating the switch moves the steering wheel in the following directions:

- ① Up
- ② Down
- ③ Toward the driver
- ④ Away from the driver

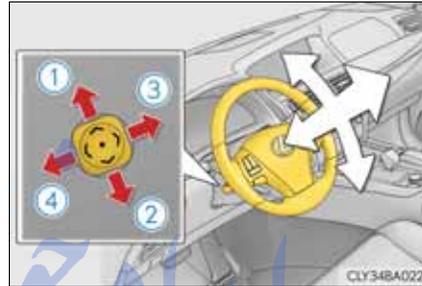

- The steering wheel can be adjusted when

The engine switch is in ACCESSORY or IGNITION ON mode\*.

\*: If the driver's seat belt is fastened, the steering wheel can be adjusted regardless of engine switch mode.

- Automatic adjustment of the steering position

A desired steering position can be entered to memory and recalled automatically by the driving position memory system. (→P. 168)

- Power easy access system

The steering wheel and driver's seat move in accordance with engine switch mode and the driver's seat belt condition. (→P. 160)

### ⚠ CAUTION

Do not adjust the steering wheel while driving.  
Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.


## Inside rear view mirror

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

### Adjusting the height of rear view mirror

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

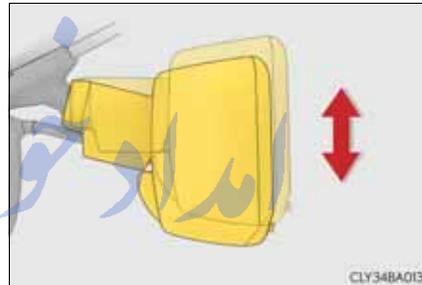

### Anti-glare function

Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.


Changing automatic anti-glare function mode

#### ON/OFF

When the automatic anti-glare function is in ON mode, the indicator illuminates.


The function will set to ON mode each time the engine switch is turned to IGNITION ON mode.

Pressing the button turns the function to OFF mode. (The indicator also turns off.)

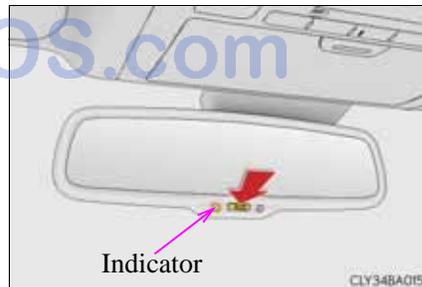

■ To prevent sensor error

To ensure that the sensors operate properly, do not touch or cover them.

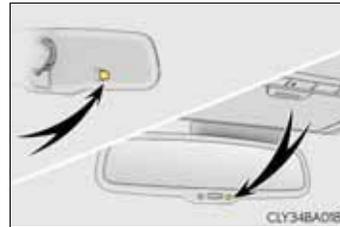

**⚠ CAUTION**

Do not adjust the position of the mirror while driving.  
Doing so may lead to mishandling of the vehicle and cause an accident,  
resulting in death or serious injury.

امداد خودرو فارما  
تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Outside rear view mirrors

### Adjustment procedure


- 1** Select the mirror to be adjusted.

- ① Left
- ② Neutral position
- ③ Right



- 2** To adjust the mirror, press the switch.

- ① Up
- ② Right
- ③ Down
- ④ Left

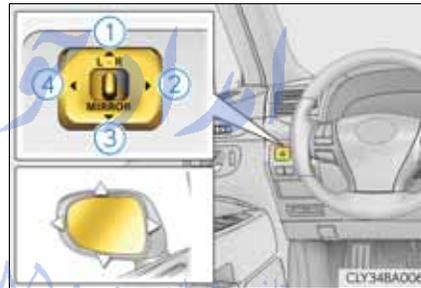

3

Operation of each component

FarmaSOS.com

### Folding and extending the mirrors

#### ■ Using the switch

- ① Folds the mirrors
- ② Extends the mirrors




#### ■ Setting automatic mode

Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

To set to automatic mode, put the switch in the neutral position.

The indicator will come on.

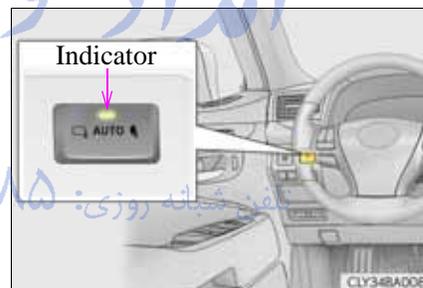

FarmaSOS.com

### Linked mirror function when reversing

- When the mirror select switch is in the “L” or “R” position, the outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground. To disable this function, move the mirror select switch to the neutral position (between “L” and “R”).
- If the mirror angle adjustment switch is operated while the linked mirror function is in operation, the angle and position of the mirrors can be remembered, and the mirrors will operate at the angle adjusted to the last time the linked mirror function was operated. However, because the mirrors move based on the angle they are in when the linked mirror function is not operating, the mirror angle when the linked mirror function is operating will also be changed if the mirrors are adjusted while the function is not operating.

#### ■ Mirror angle can be adjusted when

The engine switch is in ACCESSORY or IGNITION ON mode.

#### ■ When the mirrors are fogged up

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. (→P. 462)

#### ■ Automatic adjustment of the mirror angle

A desired mirror face angle can be entered to memory and recalled automatically by the driving position memory. (→P. 168)

#### ■ Auto anti-glare function

When the anti-glare inside rear view mirror is set to automatic mode, the outside rear view mirrors will activate in conjunction with the anti-glare inside rear view mirror to reduce reflected light. (→P. 179)

#### ■ Using automatic mode in cold weather

When automatic mode is used in cold weather, the door mirror could freeze up and automatic stowing and return may not be possible. In this event, remove any ice and snow from the door mirror, then either operate the mirror using manual mode or move the mirror by hand.

 CAUTION

## ■ Important points while driving

Observe the following precautions while driving.

Failure to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious injury.

- Do not adjust the mirrors while driving.
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

## ■ When a mirror is moving

To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

## ■ When the mirror defoggers are operating

Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com


## Power windows

### Opening and closing procedures

The power windows can be opened and closed using the switches. Operating the switch moves the windows as follows:

- ① Closing
- ② One-touch closing\*
- ③ Opening
- ④ One-touch opening\*

\*: To stop the window partway, operate the switch in the opposite direction.

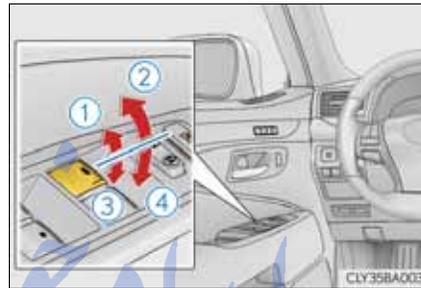

### Window lock switch

Press the switch down to lock the passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.



3

Operation of each component

- The power windows can be operated when  
The engine switch is in IGNITION ON mode.
- Operating the power windows after turning the engine off  
The power windows can be operated for approximately 45 seconds even after the engine switch is turned to ACCESSORY mode or turned off. They cannot, however, be operated once either front door is opened.
- Jam protection function  
If an object becomes caught between the window and the window frame, window travel is stopped and the window is opened slightly.
- When the power window does not close normally  
If the jam protection function is operating abnormally and a window cannot be closed, perform the following operations using the power window switch on the relevant door.
  - After stopping the vehicle, the window can be closed by holding the power window switch in the one-touch closing position while the engine switch is turned to IGNITION ON mode.
  - If the window still cannot be closed even by carrying out the operation as explained above, initialize the function by performing the following procedure.
    - 1 Hold the power window switch in the one-touch closing position. Continue holding the switch for a further 6 seconds after the window has closed.
    - 2 Hold the power window switch in the one-touch opening position. Continue holding the switch for a further 2 seconds after the window has opened completely.
    - 3 Hold the power window switch in the one-touch closing position once again. Continue holding the switch for a further 2 seconds after the window has closed.

If you release the switch while the window is moving, start again from the beginning.

If the window continues to close but then re-open slightly even after performing the above procedure correctly, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- Door lock linked window operation
  - The power windows can be closed using the entry function. (→P. 124)
  - The power windows can be opened and closed using the mechanical key. (→P. 874)
- Customization

Settings (e.g. linked door lock operation) can be changed.  
(Customizable features →P. 904)

**⚠ CAUTION**

Observe the following precautions.  
Failure to do so may result in death or serious injury.

**■ Closing the windows**

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a window is being operated.
- Do not allow children to operate the power windows.  
Closing a power window on someone can cause death or serious injury.  
The driver is responsible for instructing children not to operate the power windows.

**■ Jam protection function**

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the window fully closes.

## Moon roof\*

Use the overhead switches to open and close the moon roof and tilt it up and down.

### Opening and closing


#### ① Opens the moon roof\*

The moon roof stops slightly before the fully open position to reduce wind noise.

Press the switch again to fully open the moon roof.

#### ② Closes the moon roof\*

\*: Lightly press either way of the moon roof switch to stop the moon roof partway.

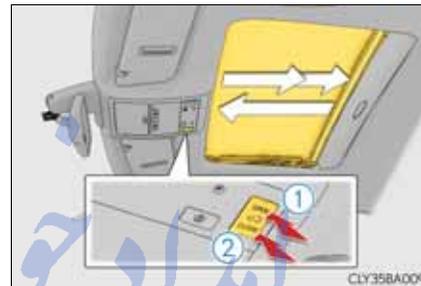

### Tilting up and down

#### ① Tilts the moon roof up\*

#### ② Tilts the moon roof down\*

\*: Lightly press either way of the moon roof switch to stop the moon roof partway.



\*: If equipped

- The moon roof can be operated when  
The engine switch is in IGNITION ON mode.
- Operating the moon roof after turning the engine off  
The moon roof can be operated for approximately 45 seconds after the engine switch is turned to ACCESSORY mode or turned off. It cannot, however, be operated once either front door is opened.
- Jam protection function  
If an object is detected between the moon roof and the frame while the moon roof is closing or tilting down, travel is stopped and the moon roof opens slightly.
- Sunshade  
The sunshade can be opened and closed manually. However, the sunshade will open automatically when the moon roof is opened.
- Door lock linked moon roof operation
  - The moon roof can be closed using the entry function. (→P. 124)
  - The moon roof can be opened and closed using the mechanical key. (→P. 874)

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

■ When the moon roof does not close normally

Perform the following procedure:

● If the moon roof closes but then re-opens slightly

1 Stop the vehicle.

2 Press and hold the “CLOSE” switch.\*1

The moon roof will close, reopen and pause for approximately 10 seconds.\*2 Then it will close again, tilt up and pause for approximately 1 second. Finally, it will tilt down, open and close.

3 Check to make sure that the moon roof is completely closed and then release the switch.

● If the moon roof tilts down but then tilts back up

1 Stop the vehicle.

2 Press and hold the “UP” switch\*1 until the moon roof moves into the tilt up position and stops.

3 Release the “UP” switch once and then press and hold the “UP” switch again.\*1

The moon roof will pause for approximately 10 seconds in the tilt up position.\*2 Then it will adjust slightly and pause for approximately 1 second. Finally, it will tilt down, open and close.

4 Check to make sure that the moon roof is completely closed and then release the switch.

\*1: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.

\*2: If the switch is released after the above mentioned 10 second pause, automatic operation will be disabled. In that case, press and hold the “CLOSE” or “UP” switch, and the moon roof will tilt up and pause for approximately 1 second. Then it will tilt down, open and close. Check to make sure that the moon roof is completely closed and then release the switch.

If the moon roof does not fully close even after performing the above procedure correctly, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

■ Moon roof open warning buzzer

The buzzer sounds and a message is shown on the multi-information display in the instrument cluster when the engine switch is turned off and the driver's door is opened with the moon roof open.

■ Customization

Settings (e.g. linked door lock operation) can be changed.  
(Customizable features →P. 904)

**⚠ CAUTION**

Observe the following precautions.  
Failure to do so may cause death or serious injury.

■ Opening the moon roof

- Do not allow any passengers to put their hands or heads outside the vehicle while it is moving.
- Do not sit on top of the moon roof.

■ Closing the moon roof

- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the moon roof is being operated.
- Do not allow children to operate the moon roof.  
Closing the moon roof on someone can cause death or serious injury. The driver is responsible for instructing children not to operate the moon roof.

■ Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets caught just before the moon roof fully closes.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

**FarmaSOS.com**

## Driving

## 4

4-1. Before driving	4-5. Using the driving support systems
Driving the vehicle..... 194	Cruise control ..... 250
Cargo and luggage ..... 205	Dynamic radar cruise control..... 254
Trailer towing..... 206	Dynamic radar cruise control with full-speed range ..... 268
4-2. Driving procedures	LKA (Lane-Keeping Assist).... 285
Engine (ignition) switch.... 207	Lexus parking assist-sensor ..... 295
Automatic transmission (vehicles without paddle shift switches) ..... 212	Lexus parking assist monitor ..... 306
Automatic transmission (vehicles with paddle shift switches) ..... 216	Driving mode select switch..... 335
Turn signal lever ..... 223	Electronically modulated air suspension ..... 339
Parking brake ..... 224	Driving assist systems ..... 341
Brake Hold ..... 227	PCS (Pre-Crash Safety system)..... 349
Horn ..... 229	Rear Pre-Crash Safety system ..... 363
4-3. Operating the lights and wipers	BSM (Blind Spot Monitor)369
Headlight switch ..... 230	• The Blind Spot Monitor function..... 374
AHS (Adaptive High-beam System) ..... 234	• The Rear Crossing Traffic Alert function ..... 377
Fog light switch ..... 241	Lexus night view ..... 380
Windshield wipers and washer ..... 242	4-6. Driving tips
Headlight cleaner switch... 245	Winter driving tips ..... 386
4-4. Refueling	
Opening the fuel tank cap . 246	

## Driving the vehicle

The following procedures should be observed to ensure safe driving:

### Starting the engine

→P. 207

### Driving

- 1 With the brake pedal depressed, shift the shift lever to D.  
(→P. 212, 216)
- 2 If the parking brake is in manual mode, release the parking brake.  
(→P. 224)
- 3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

### Stopping

- 1 With the shift lever in D, depress the brake pedal.
- 2 If necessary, set the parking brake.  
If the vehicle is to be stopped for an extended period of time, shift the shift lever to P or N. (→P. 212, 216)

### Parking the vehicle

- 1 With the shift lever in D, depress the brake pedal.
- 2 If the parking brake is in manual mode, set the parking brake.  
(→P. 224)
- 3 Shift the shift lever to P. (→P. 212, 216)  
If parking on a hill, block the wheels as needed.
- 4 Press the engine switch to stop the engine.

- 5 Lock the door, making sure that you have the electronic key on your person.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

4

Driving

### Starting off on a steep uphill

- 1 Make sure that the parking brake is set and shift the shift lever to D.
- 2 Gently depress the accelerator pedal.
- 3 Release the parking brake.

---

#### ■ When starting off on a uphill

Hill-start assist control will operate. (→P. 341)

#### ■ Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may be a layer of water between the tires and the road surface, preventing the steering and brakes from operating properly.

#### ■ Engine speed while driving

In the following conditions, the engine speed may become high while driving. This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- The vehicle is judged to be driving uphill or downhill
- When the accelerator pedal is released
- When the brake pedal is depressed while sport mode is selected

**■ Breaking in your new Lexus**

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 300 km (186 miles):  
Avoid sudden stops.
- For the first 1000 km (621 miles):
  - Do not drive at extremely high speeds.
  - Avoid sudden acceleration.
  - Do not drive continuously in low gears.
  - Do not drive at a constant speed for extended periods.

**■ Drum-in-disc type parking brake system**

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drum are replaced. Have any authorized Lexus dealer or repairer, or another duly qualified and equipped professional perform the bedding down operation.

**■ Operating your vehicle in a foreign country**

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (→P. 891)

**■ Regarding engine speed when idling**

When idling with the shift lever in P or N for an extensive period of time, the engine speed may rise to approximately 1000 rpm (r/min). This is not a malfunction. After a set period of time, the engine will return to its previous engine speed.

**⚠ CAUTION**

Observe the following precautions.

Failure to do so may result in death or serious injury.

■ When starting the vehicle

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

■ When driving the vehicle

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.

- Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
- When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
- Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
- Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.

- Do not drive the vehicle over or stop the vehicle near flammable materials. The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.

FarmaSOS.com

**⚠ CAUTION**

Observe the following precautions.

Failure to do so may result in death or serious injury.

**■ When driving the vehicle**

- During normal driving, do not turn off the engine. Turning the engine off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so.

In the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way: →P. 815

- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill.

Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P. 212, 216)

- Do not adjust the positions of the steering wheel, the seat, or the inside or outside rear view mirrors while driving.

Doing so may result in a loss of vehicle control.

- Always check that all passengers' arms, heads or other parts of their body are not outside the vehicle.

**■ When driving on slippery road surfaces**

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle.

- Sudden acceleration, engine braking due to shift changing, or changes in engine speed could cause the vehicle to skid.

- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

**⚠ CAUTION**

Observe the following precautions.

Failure to do so may result in death or serious injury.

■ When shifting the shift lever

- Do not let the vehicle roll backward while the shift lever is in a driving position, or roll forward while the shift lever is in R.  
Doing so may cause the engine to stall or lead to poor brake and steering performance, resulting in an accident or damage to the vehicle.
- Do not shift the shift lever to P while the vehicle is moving.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to R while the vehicle is moving forward.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to D while the vehicle is moving backward.  
Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to N while the vehicle is moving. Doing so will disengage the engine from the transmission. Engine braking is not available when N is selected.
- Be careful not to shift the shift lever with the accelerator pedal depressed. Shifting the shift lever to a gear other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury.

FarmaSOS.com

**⚠ CAUTION**

Observe the following precautions.

Failure to do so may result in death or serious injury.

■ If a brake pad wear warning message is displayed

Have the brake pads checked and replaced by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, as soon as possible.

The rotor damage can result if the pads are not replaced when needed.

Moderate levels of the brake pad and disc wear allow enhanced braking power. As a result, the discs may wear more quickly than conventional brake discs. Therefore, when replacing the brake pads, Lexus recommends that you also have the thickness of the discs measured.

It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

■ When the vehicle is stopped

● Do not race the engine.

If the vehicle is in any gear other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.

● In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while the engine is running, and apply the parking brake as necessary.

● If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.

● Avoid revving or racing the engine.

Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

**⚠ CAUTION**

Observe the following precautions.

Failure to do so may result in death or serious injury.

■ When the vehicle is parked

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.

Doing so may result in the following:

- Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
- The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
- Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.
- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Always apply the parking brake, shift the shift lever to P, stop the engine and lock the vehicle.  
Do not leave the vehicle unattended while the engine is running.
- Do not touch the exhaust pipes while the engine is running or immediately after turning the engine off.  
Doing so may cause burns.

**⚠ CAUTION**

Observe the following precautions.

Failure to do so may result in death or serious injury.

**■ When taking a nap in the vehicle**

Always turn the engine off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to engine overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

**■ When braking****● When the brakes are wet, drive more cautiously.**

Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.

**● If the electronically controlled brake system does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking.**

In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.

**● The brake system consists of 2 or more individual hydraulic systems; if one of the systems fails, the other(s) will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. Have your brakes fixed immediately.****■ If the vehicle becomes stuck (AWD models)**

Do not spin the wheels excessively when any of the tires is up in the air, or the vehicle is stuck in sand, mud, etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident.

**NOTICE****■ When driving the vehicle**

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain driving torque.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

**■ When parking the vehicle**

Always shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

**■ Avoiding damage to vehicle parts**

- Do not turn the steering wheel fully in either direction and hold it there for an extended period of time.  
Doing so may damage the power steering motor.
- When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

**■ If you get a flat tire while driving**

A flat or damaged tire may cause the following situations. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds or vibrations.
- The vehicle will lean abnormally.

Information on what to do in case of a flat tire (→P. 836, 847)

 NOTICE

## ■ When encountering flooded roads

Do not drive on a road that has flooded after heavy rain etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have any authorized Lexus dealer or repairer, or another duly qualified and equipped professional check the following:

- Brake function
- Changes in quantity and quality of oil and fluid used for the engine, transmission, transfer (AWD models), differential, etc.
- Lubricant condition for the propeller shaft, bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load:

### CAUTION

#### ■ Things that must not be carried in the trunk

The following things may cause a fire if loaded in the trunk:

- Receptacles containing gasoline
- Aerosol cans

#### ■ Storage precautions

Observe the following precautions.

Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- Stow cargo and luggage in the trunk whenever possible.
- Do not place cargo or luggage in or on the following locations.
  - At the feet of the driver
  - On the front passenger or rear seats (when stacking items)
  - On the package tray
  - On the instrument panel
  - On the dashboard
  - In front of the Remote Touch screen
- Secure all items in the occupant compartment.

#### ■ Load and distribution

- Do not overload your vehicle.
- Do not apply loads unevenly.  
Improper loading may cause deterioration of steering or braking control which may cause death or serious injury.

## Trailer towing

Lexus does not recommend towing a trailer with your vehicle. Lexus also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your Lexus is not designed for trailer towing or for the use of tow hitch mounted carriers.



ایزاد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Engine (ignition) switch

Performing the following operations when carrying the electronic key on your person starts the engine or changes engine switch modes.

### Starting the engine

- 1 Turn the engine switch to IGNITION ON mode (→P. 208) and check that the parking brake is set.
- 2 Check that the shift lever is set in P.
- 3 Firmly depress the brake pedal.

The engine switch indicator will turn green. If the indicator does not turn green, the engine cannot be started.

- 4 Press the engine switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started.

The engine can be started from any engine switch mode.



### Stopping the engine

- 1 Stop the vehicle.
- 2 Shift the shift lever to P.
- 3 Set the parking brake. (→P. 226)
- 4 Press the engine switch.
- 5 Release the brake pedal and check that the indicator on the engine switch is off.

### Changing engine switch modes

Modes can be changed by pressing the engine switch with brake pedal released. (The mode changes each time the switch is pressed.)

- ① Off\*  
The emergency flashers can be used.
- ② ACCESSORY mode  
Some electrical components such as the audio system can be used.  
The engine switch indicator turns amber.
- ③ IGNITION ON mode  
All electrical components can be used.  
The engine switch indicator turns amber.

\*: If the shift lever is in a position other than P when turning off the engine, the engine switch will be turned to ACCESSORY mode, not to off.



- Auto power off function

If the vehicle is left in ACCESSORY mode for more than 20 minutes with the shift lever in P, the engine switch will automatically turn off.

- Electronic key battery depletion

→P. 135

- Conditions affecting operation

→P. 132

- Notes for the entry function

→P. 133

- If the engine does not start

The engine immobilizer system may not have been deactivated. (→P. 82)  
Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- Steering lock

After turning the engine switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the engine switch again automatically cancels the steering lock.

- When the steering lock cannot be released

The green indicator light on the engine switch will flash and a message will be shown on the multi-information display. Press the engine switch again while turning the steering wheel left and right.



- Steering lock motor overheating prevention

To prevent the steering lock motor from overheating, the motor may be suspended if the engine is turned on and off repeatedly in a short period of time. In this case, refrain from operating the engine. After about 10 seconds, the steering lock motor will resume functioning.

- When the engine switch indicator flashes in amber  
The system may be malfunctioning. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.
- If the electronic key battery is depleted  
→P. 795
- If the smart entry & start system has been deactivated in a customized setting  
→P. 874

**⚠ CAUTION**

- When starting the engine  
Always start the engine while sitting in the driver's seat. Do not depress the accelerator pedal while starting the engine under any circumstances. Doing so may cause an accident resulting in death or serious injury.
- Caution while driving  
If engine failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.
- Stopping the engine in an emergency  
If you want to stop the engine in an emergency while driving the vehicle, press and hold the engine switch for more than 2 seconds, or press it briefly 3 times or more in succession. (→P. 815)  
However, do not touch the engine switch while driving except in an emergency. Turning the engine off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so.

**NOTICE****■ To prevent battery discharge**

Do not leave the engine switch in ACCESSORY or IGNITION ON mode for long periods of time without the engine running.

**■ When starting the engine**

- Do not race a cold engine.
- If the engine becomes difficult to start or stalls frequently, have your vehicle checked by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.

**■ Symptoms indicating a malfunction with the engine switch**


If the engine switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Automatic transmission (vehicles without paddle shift switches)

### Shifting the shift lever

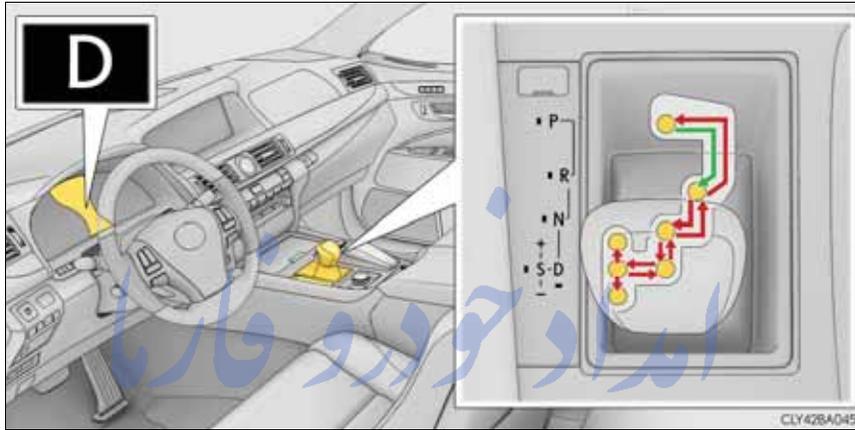

- ← While the engine switch is in IGNITION ON mode, move the shift lever with the brake pedal depressed.  
When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

### Shift position purpose

Shift position	Purpose and condition
P	Parking the vehicle/starting the engine
R	Reversing
N	Condition in which the power is not transmitted
D	Normal driving*
S	S mode driving (→P. 213)


\*: To improve fuel efficiency and reduce noises, set the shift lever in D for normal driving.

### Selecting shift ranges in S mode

To enter S mode, shift the shift lever to the S position.

When in S mode, changing the shift range allows restriction of the highest gear, preventing unnecessary upshifting and enabling the level of engine braking force to be selected.

- ① Upshifting
- ② Downshifting

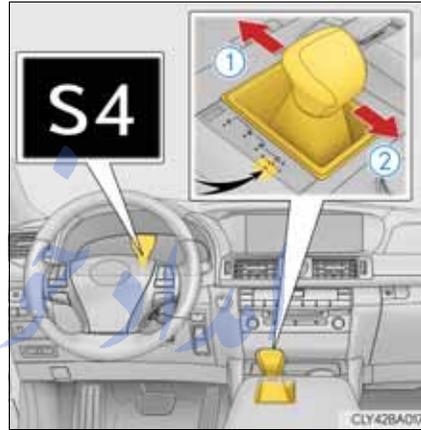

The initial shift range in S mode is set automatically between 3 and 7 according to vehicle speed and driving conditions.

#### ■ Shift ranges and their functions

Meter display	Function
S2 - S8	A gear in the range between 1 and the selected gear is automatically chosen depending on vehicle speed and driving conditions
S1	Setting the gear at 1

A lower shift range will provide greater engine braking forces than a higher shift range.

### Selecting the driving mode

- Sport mode/Comfort mode/Eco drive mode

→P. 335

- Snow mode

Snow mode can be selected to suit the conditions when driving on slippery road surfaces, such as on snow.

Press the switch.

The snow mode indicator light will come on.

Press the switch again to return to normal mode.



- S mode

- When the shift range is 6 or lower, holding the shift lever toward “+” sets the shift range to 8.
- When the shift lever is moved toward “-”, the shift range is downshifted to a range that enables engine braking force that is suitable to driving conditions.
- To prevent the engine from over-revving, upshifting may automatically occur.

- Downshifting restrictions warning buzzer (in the S mode)

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever is operated. (A buzzer will sound twice.)

- When driving with cruise control, radar cruise control or dynamic radar cruise control with full speed range activated

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate because cruise control, radar cruise control or dynamic radar cruise control with full speed range will not be canceled.

- While driving in S mode, downshifting to 7, 6, 5 or 4. (→P. 250, 254, 268)

- When switching the driving mode to sport mode while driving in D position.  
(→P. 335)

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

4

Driving

■ Snow mode automatic deactivation

Snow mode is automatically deactivated if the engine switch is turned off after driving in snow mode.

■ If the shift lever cannot be shifted from P

→P. 867

■ AI-SHIFT

The AI-SHIFT automatically selects the suitable gear according to driver performance and driving conditions.

The AI-SHIFT automatically operates when the shift lever is in the D and S position.

 CAUTION

■ When driving on slippery road surfaces

Be careful of downshifting and sudden acceleration, as this could result in the vehicle skidding to the side or spinning.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Automatic transmission (vehicles with paddle shift switches)

### Shifting the shift lever



- ← While the engine switch is in IGNITION ON mode, move the shift lever with the brake pedal depressed.
- When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

## Shift position purpose

Shift position	Meter display	Purpose and condition
P		Parking the vehicle/starting the engine
R		Reversing
N		Condition in which the power is not transmitted
D		Normal driving* <sup>1</sup>
	 (paddle shift switches activated)	Shift range selection (→P. 219)
M		M mode driving* <sup>2</sup> (→P. 220)

\*<sup>1</sup>: To improve fuel efficiency and reduce noises, set the shift lever in D for normal driving.

\*<sup>2</sup>: Any gear can be fixed when driving in M mode.

FarmaSOS.com

### Selecting shift ranges in the D position

To drive using temporary shift range selection, operate the “-” or “+” paddle shift switch while the shift lever is in the D position.

Changing the shift range allows restriction of the highest gear, preventing unnecessary upshifting and enabling the level of engine braking force to be selected.


When the “-” paddle shift switch is operated, the shift range is downshifted to a range that enables engine braking force that is suitable to driving conditions.

① Upshifting

② Downshifting

The selected shift range, from D1 to D8, will be displayed in the meter.

To return to normal D position driving, the “+” paddle shift switch must be held down for a period of time.

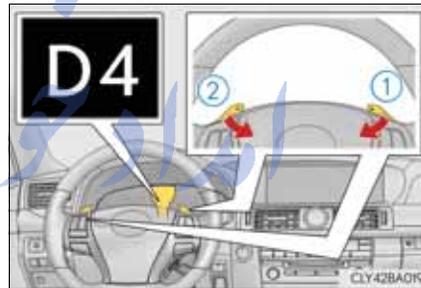

■ Shift ranges and their functions

Meter display	Function
D2 - D8	A gear in the range between 1 and the selected gear is automatically chosen depending on vehicle speed and driving conditions
D1	Setting the gear at 1

A lower shift range will provide greater engine braking forces than a higher shift range.

### Selecting gears in the M position

To enter M mode, shift the shift lever to the M position.


Gears can be selected by operating the shift lever or paddle shift switches, allowing you to drive in the gear of your choosing.

① Upshifting

② Downshifting

The gear changes once every time the shift lever or paddle shift switch is operated.

The selected gear, from M1 to M8, will be fixed and displayed in the meter.

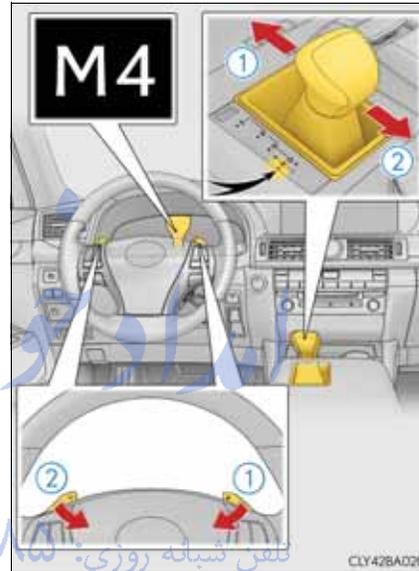

- When in the M position, the gear will not change unless the shift lever or paddle shift switches are operated. However, even when in the M position, the gears will be automatically changed in the following situation:
  - When vehicle speed drops (downshift only).
  - When the automatic transmission fluid or engine coolant temperature is low.
  - When the automatic transmission fluid temperature is high.
  - When the needle of the tachometer is in the red zone (the range which exceeds the allowable revs of the engine).
- When in the vehicle speed is low, the gear will not upshift even if the shift lever or paddle shift switches are operated.

### Gear Shift Indicator

The Gear Shift Indicator display is a guide to help the driver achieve improved fuel economy and reduced exhaust emissions within limits of engine performance.

- ① When not in operation
- ② Shift-up indicator



- Gear Shift Indicator function
  - This function automatically operates during M mode.
  - By following the Shift-up indicator and shifting up accordingly, it is possible to achieve improved fuel economy and reduced exhaust emissions.
  - The Gear Shift Indicator does not have a similar function for downshifting.
  - Depending on the driving conditions, the Gear Shift Indicator may not display the Shift-up indicator while driving in M mode.

### Selecting the driving mode

- Sport mode/Comfort mode/Eco drive mode

→P. 335

- Snow mode

Snow mode can be selected to suit the conditions when driving on slippery road surfaces, such as on snow.

Press the switch.

The snow mode indicator light will come on.

Press the switch again to return to normal mode.



- Automatic deactivation of shift range selection in the D position

Shift range selection in the D position will be deactivated in the following situations: تلفن شبانه روزی: ۰۸۵ ۰۸۸۶۲ ۰۲۱

- When the vehicle comes to a stop
- If the accelerator pedal is depressed for more than a certain period of time
- When the shift lever is shifted to other than D

- Downshifting restrictions warning buzzer

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever or paddle shift switch is operated. (A buzzer will sound twice.)

- When driving with cruise control, radar cruise control or dynamic radar cruise control with full speed range activated

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate because cruise control, radar cruise control or dynamic radar cruise control with full speed range will not be canceled.

- While driving in the D position, downshifting to 7, 6, 5 or 4. (→P. 250, 254, 268)

- When switching the driving mode to sport mode while driving in D position.  
(→P. 335)

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

4

Driving

- Snow mode automatic deactivation

Snow mode is automatically deactivated if the engine switch is turned off after driving in snow mode.

- If the shift lever cannot be shifted from P

→P. 867

- If the automatic transmission fluid temperature warning message is displayed

If the automatic transmission fluid temperature warning message is displayed while driving, make sure you return to normal D position driving and reduce speed by easing off the accelerator pedal. Stop the vehicle in a safe place, shift the shift lever to the P position and let the engine idle until the warning message goes out.

When the warning message goes out, the vehicle can be driven again.

If the warning message does not go out after waiting a while, have your vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- AI-SHIFT

The AI-SHIFT automatically selects the suitable gear according to driver performance and driving conditions.

The AI-SHIFT automatically operates when the shift lever is in the D position. (Shifting the shift lever to the M position cancels the function.)



### CAUTION

- When driving on slippery road surfaces

Be careful of downshifting and sudden acceleration, as this could result in the vehicle skidding to the side or spinning.

- Gear Shift Indicator display


For safety, the driver should not look only at the display. Refer to the display when it is safe to do so while considering actual traffic and road conditions.

Failure to do so may lead to an accident.

## Turn signal lever

### Operating instructions

- ① Right turn
- ② Lane change to the right (move the lever partway and release it)  
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)  
The left hand signals will flash 3 times.
- ④ Left turn

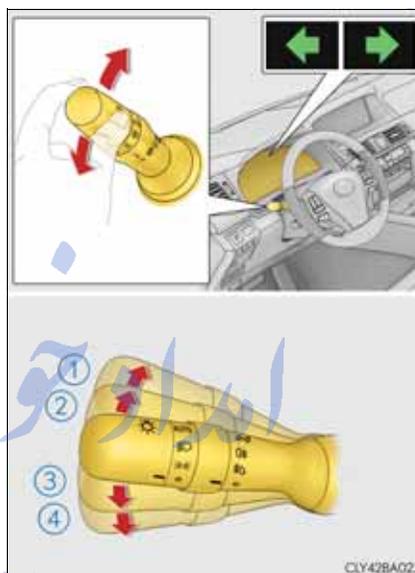

4

Driving

- Turn signals can be operated when  
The engine switch is in IGNITION ON mode.
- If the indicator flashes faster than usual  
Check that a light bulb in the front or rear turn signal lights has not burned out.
- If the turn signals stop flashing before a lane change has been performed  
Operate the lever again.
- To discontinue flashing of the turn signals during a lane change  
Operate the lever in the opposite direction.
- Customization  
The number of times the turn signals flash during a lane change can be changed.  
(Customizable features →P. 904)

## Parking brake

A selections can be made as desired from the following modes.

### Manual mode


#### ① Sets the parking brake

The parking brake indicator light will come on. (→P. 228)

Press and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving. The parking brake is applied only while the switch is being pressed.

#### ② Releases the parking brake

Operate the parking brake switch while depressing the brake pedal. Make sure that the parking brake indicator light goes off.

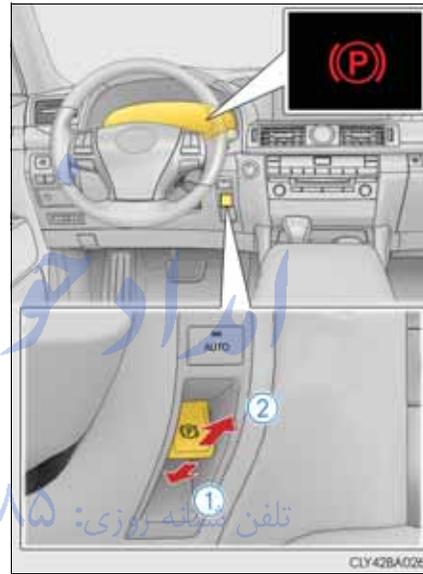

FarmaSOS.com

### Automatic mode

The parking brake is set or released automatically according to shift lever operation.

Turns automatic mode on/off

When automatic mode is turned on, the indicator on the switch comes on and it operates in the following manner:

- When the shift lever is moved into P, the parking brake will be set.
- When the shift lever is moved out of P, the parking brake will be released.

Operate the shift lever with the brake pedal depressed.



#### ■ Parking brake operation

- When the engine switch is not in IGNITION ON mode, the parking brake cannot be released using the parking brake switch.
- When the engine switch is not in IGNITION ON mode, automatic mode (automatic brake setting and releasing) is not available.
- If the parking brake is operated repeatedly over a short period of time, the system may restrict operation to prevent overheating. If this happens, refrain from operating the parking brake. Normal operation will return after about 1 minute.

#### ■ Parking brake operation sound

When the parking brake operates, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

- Parking brake indicator light
  - Depending on the engine switch mode, the parking brake indicator light will come on and stay on as described below:
    - IGNITION ON mode: Comes on until the parking brake is released.
    - Not in IGNITION ON mode: Stays on for approximately 15 seconds.
  - When the engine switch is turned off with the parking brake set, the parking brake indicator light will stay on for about 15 seconds. This does not indicate a malfunction.
- Parking brake engaged warning buzzer
 

A buzzer will sound if the vehicle is driven at a speed of approximately 5 km/h (3 mph) or more with the parking brake engaged.
- When there is a malfunction in the system
 

Warning lights and/or warning message will turn on or flash. (→P. 824, 832)  
Depending on the condition, the parking brake indicator light may flash.
- Usage in winter time
 

→P. 386

 NOTICE

- When parking the vehicle
 

Before you leave the vehicle, set the parking brake, shift the shift lever to P and make sure that the vehicle does not move.
- When the system malfunctions
 

Stop the vehicle in a safe place and check the warning messages.
- When the parking brake cannot be released due to a malfunction
 

Use the parking brake release tool to manually release the parking brake. (→P. 869)  
Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear.

## Brake Hold

The brake hold system keeps the brake applied when the shift lever is in D, N, or S (vehicles without paddle shift switches) or M (vehicles with paddle shift switches) with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D, S or M to allow smooth start off.

### Turns the brake hold system on

The brake hold standby indicator (green) comes on. While the system is holding the brake, the brake hold operated indicator (yellow) comes on.



4

Driving

### ■ Brake hold system operating conditions

The brake hold system cannot be turned on in the following conditions:

- The trunk or hood is not closed.
- The driver's door is not closed.
- The driver is not wearing the seat belt.

If any of the conditions above are detected when the brake hold system is enabled, the system will turn off and the brake hold standby indicator light will go off. In addition, if any of the conditions are detected while the system is holding the brake, a warning buzzer will sound and a message will be shown on the multi-information display. The parking brake will then be set automatically.

- Brake hold function
  - If the brake pedal is left released for a period of about 3 minutes after the system has started holding the brake, the parking brake will be set automatically. In this case, a warning buzzer sounds and a message is shown on the multi-information display.
  - To turn the system off while the system is holding the brake, firmly depress the brake pedal and press the switch again.
  - The brake hold function may not hold the vehicle when the vehicle is on a steep incline. In this situation, it may be necessary for the driver to apply the brakes. The multi-information display will inform the driver of this situation.
- When the parking brake is set automatically while the system is holding the brakes
 

The parking brake will not be released automatically. Release the parking brake by operating the parking brake switch, making sure that the parking brake indicator light goes off. (→P. 226)
- When there is a malfunction in the system
 

Warning lights and/or warning messages will turn on or flash. (→P. 826, 832)

 CAUTION

- When the vehicle is on a steep incline
 

When using the brake hold system on a steep incline exercise caution. The brake hold function may not hold the vehicle in such a situation.
- When stopped on a slippery road
 

The system cannot stop the vehicle when the gripping ability of the tires has been exceeded. Do not use the system when stopped on a slippery road.

 NOTICE

- When parking the vehicle
 

The brake hold system is not designed for use when parking the vehicle for a long period of time. Turning the engine switch off while the system is holding the brake may release the brake, which would cause the vehicle to move. When operating the engine switch, depress the brake pedal, set the parking brake and shift the shift lever to P.

## Horn

To sound the horn, press on or close to the  mark.



# امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

## FarmaSOS.com


## Headlight switch

The headlights can be operated manually or automatically.

### Operating instructions

Turning the end of the lever turns on the lights as follows:

- ① ○ The daytime running lights turn on.
- ② ☰☑ The front position, tail, license plate and instrument panel lights turn on.
- ③ ☰☑ The headlights and all lights listed above turn on.
- ④ AUTO The headlights, daytime running lights and all the lights listed above turn on and off automatically.  
(When the engine switch is in IGNITION ON mode.)

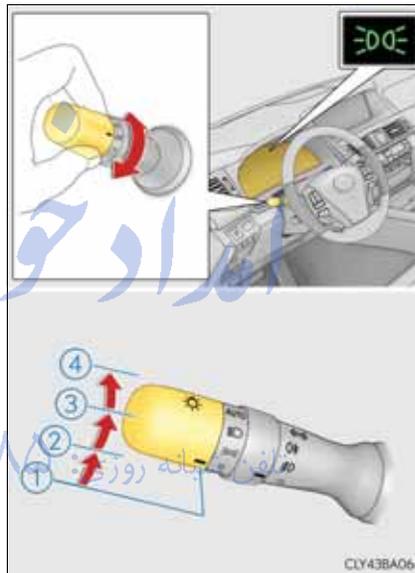


### Turning on the high beam headlights

- ① With the headlights on, push the lever away from you to turn on the high beams.

Pull the lever toward you to the center position to turn the high beams off.

- ② Pull the lever toward you and release it to flash the high beams once.


You can flash the high beams with the headlights on or off.

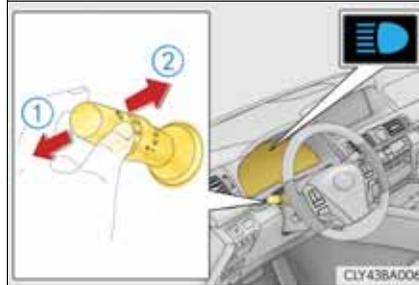

### Follow me home system

This system allows the headlights, tail, license plate and front position lights to be turned on for 30 seconds when the engine switch is off.

Pull the lever toward you and release it with the light switch in AUTO or  $\circ$  after turning the engine switch off.

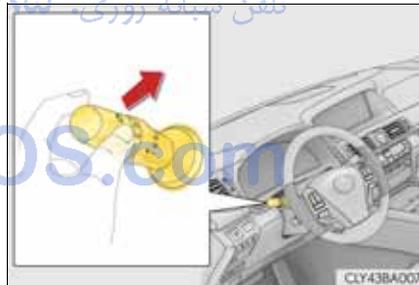

The lights are turned off in the following situations.

- The engine switch is turned to IGNITION ON mode.
- The light switch is turned on.
- The light switch is pulled toward you and then released.

### AFS (Adaptive Front-lighting System)

AFS (Adaptive Front-lighting System) secures excellent visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire's angle as controlled by steering input.

AFS operates at speeds of 10 km/h (6 mph) or higher.

#### ■ Daytime running light system

To make your vehicle more visible to other drivers, the front position lights turn on automatically (at an increased intensity) whenever the engine is started and the parking brake is released. Daytime running lights are not designed for use at night.

#### ■ Headlight control sensor

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.

Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.



#### ■ Automatic light off system

- When the light switch is in ☞ or ☜: The headlights turn off automatically if the engine switch is turned to ACCESSORY mode or turned off.
- When the light switch is in AUTO: The headlights and all lights turn off automatically if the engine switch is turned to ACCESSORY mode or turned off.

To turn the lights on again, turn the engine switch to IGNITION ON mode, or turn the light switch off once and then back to ☞ or ☜.

#### ■ Light reminder buzzer

A buzzer sounds when the engine switch is turned off or turned to ACCESSORY mode and the driver's door is opened while the lights are turned on.

#### ■ Automatic headlight leveling system

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road users.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

4

Driving

■ Battery-saving function

In the following conditions, the remaining lights will go off automatically after 20 minutes in order to prevent the vehicle battery from being discharged:

- The headlights and/or tail lights are on.
- The engine switch is turned to ACCESSORY mode or turned off.
- The light switch is in  or AUTO.

This function will be canceled in any of the following situations:

- When the engine switch is turned to IGNITION ON mode.
- When the light switch is operated.
- When the door or trunk is opened or closed.

■ Customization

Settings (e.g. light sensor sensitivity) can be changed.  
(Customizable features →P. 911)

 NOTICE

■ To prevent battery discharge

Do not leave the lights on longer than necessary when the engine is not running.


تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## AHS (Adaptive High-beam System)\*

The Adaptive High-beam System uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam and variable shade beam on or off as necessary.

When variable shade beam is on, the illumination of the area surrounding oncoming vehicles and preceding vehicles is partially shielded while all other areas continue to be illuminated in high beam. This enables forward lighting to be optimized without blinding surrounding traffic.

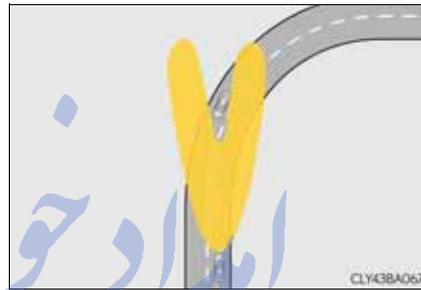

If oncoming or preceding vehicles change position, the shielded area changes and adapts to the vehicle's position.




4

Driving

\*: If equipped

### Activating the Adaptive High-beam System

- 1 Push the lever away from you with the headlight switch in AUTO or  position.

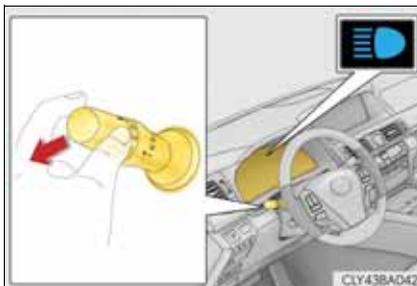

- 2 Press the Adaptive High-beam System switch.

The Adaptive High-beam System indicator will come on when the headlights are turned on automatically to indicate that the system is active.



تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com


### Turning the high beam on/off manually

#### ■ Switching to low beam

Pull the lever to original position.

The Adaptive High-beam System indicator will turn off.

Push the lever away from you to activate the Adaptive High-beam System again.

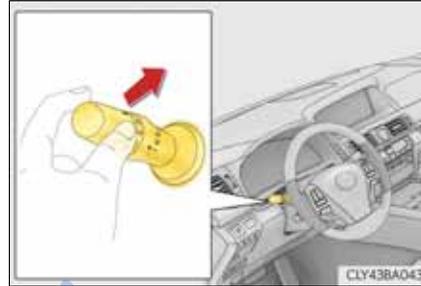

#### ■ Switching to high beam

Press the Adaptive High-beam System switch.

The Adaptive High-beam System indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Adaptive High-beam System again.



### High beam, low beam and variable shade beam automatic turning on conditions

- When all of the following conditions are fulfilled, high beam will be automatically turned on (after approximately 1 second):
  - Vehicle speed is above approximately 60 km/h (37 mph).
  - The area ahead of the vehicle is dark.
  - There are no oncoming or preceding vehicles with headlights or tail lights turned on.
- If any of the following conditions are fulfilled, low beam will be automatically turned on, depending on the location of oncoming or preceding vehicles:
  - Vehicle speed drops below approximately 40 km/h (25 mph).
  - The area ahead of the vehicle is not dark.
  - Preceding vehicles are moving quickly and high beams may blind the drivers of the other vehicles.
- When all of the following conditions are fulfilled, variable shade beam will be automatically turned on, depending on the location of oncoming or preceding vehicles: تلفن شبانه روزی: ۰۲۱-۸۸۳۲۰۸۵
  - Vehicle speed is above approximately 60 km/h (37 mph).
  - The area ahead of the vehicle is dark.

FarmaSOS.com

- The Adaptive High-beam System can be operated when  
The engine switch is in IGNITION ON mode.
- Camera sensor detection information
  - High beam may not be automatically turned off or changed to variable shade beam in the following situations:
    - When oncoming vehicles suddenly appear from a curve
    - When the vehicle is cut in front of by another
    - When oncoming or preceding vehicles are hidden from sight due to repeated curves, road dividers or roadside trees
  - High beam may be turned off or variable shade beam may be changed to if an oncoming vehicle that is using fog lights without using the headlights is detected.
  - House lights, street lights, red traffic signals, and illuminated billboards or signs may cause the high beam to turn off or variable shade beam to be changed to and may change the area that is shielded.
  - The following factors may affect the amount of time taken to turn high beam on or off, or the speed by which the shielded areas change:
    - The brightness of headlights, fog lights, and tail lights of oncoming and preceding vehicles
    - The movement and direction of oncoming and preceding vehicles
    - When a oncoming or preceding vehicle only has operational lights on one side
    - When a oncoming or preceding vehicle is a two-wheeled vehicle
    - The condition of the road (gradient, curve, condition of the road surface etc.)
    - The number of passengers and amount of luggage
  - High beam and variable shade beam may be turned on or off when unexpected by the driver.
  - Small vehicles, such as bicycles, may not be detected.

- In the situations below, the system may not be able to correctly detect the surrounding brightness levels, and may flash or expose oncoming or preceding vehicles to the high beam or may continue using the low beam. Therefore, in these situations you should consider turning the high beams on or off manually rather than relying on the Adaptive High-beam System.
  - In bad weather (rain, snow, fog, sandstorms etc.)
  - The windshield is obscured by fog, mist, ice, dirt etc.
  - The windshield is cracked or damaged.
  - The inside rear view mirror or camera sensor is deformed or dirty.
  - The camera sensor temperature is extremely high.
  - Surrounding brightness levels are equal to those of headlights, tail lights or fog lights.
  - Vehicles ahead have headlights that are either switched off, dirty, are changing color, or have are not aimed properly.
  - When driving through an area of intermittently changing brightness and darkness.
  - When frequently and repeatedly driving ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel tracks etc.).
  - When frequently and repeatedly taking curves or driving on a winding road.
  - There is a highly reflective object ahead of the vehicle, such as a sign or a mirror.
  - The back of a vehicle ahead is highly reflective, such as a container on a truck.
  - The vehicle's headlights are damaged or dirty.
  - The vehicle is listing or tilting, due to a flat tire, a trailer being towed etc.
- Turning the high beam on during Adaptive High-beam System operation (except vehicles with both LED headlights and near-infrared ray transmitters)  
When the vehicle is traveling at a high speed, the system will turn on the inner high beam together with the outer high beam.
- Customization  
The variable shade beam can be turned off. (Customizable features →P. 911)

 CAUTION


■ Limitations of the Adaptive High-beam System

Do not rely on the Adaptive High-beam System. Always drive safely, taking care to observe your surroundings and turn the high beam on or off manually if necessary.

 NOTICE

## ■ Notes when using the Adaptive High-beam System

Observe the following to ensure that the Adaptive High-beam System functions correctly.

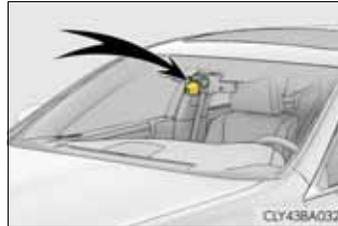

- Do not touch the camera sensor.
- Do not subject the inside rear view mirror or the camera sensor to a strong impact.
- Do not disassemble the camera sensor.
- Do not spill liquid onto the inside rear view mirror or the camera sensor.
- Do not apply window tinting or stickers to the camera sensor or the area of windshield near the camera sensor.
- Do not place items on the dashboard. There is a possibility that the camera sensor will mistake items reflected in the windshield for streetlights, the headlights of other vehicles, etc.
- Do not install a parking tag or any other accessories near or around the inside rear view mirror and the camera sensor.
- Do not overload the vehicle.
- Do not modify the vehicle.
- Do not replace the windshield with a non-genuine windshield. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.


## Fog light switch

The fog lights secure excellent visibility in difficult driving conditions, such as in rain and fog.

- ① ○ Turns the front and rear fog lights off
- ② ㊦ Turns the front fog lights on
- ③ ㊧ Turns both front and rear fog lights on

Releasing the switch ring returns it to ㊦.

Operating the switch ring again turns only the rear fog lights off.

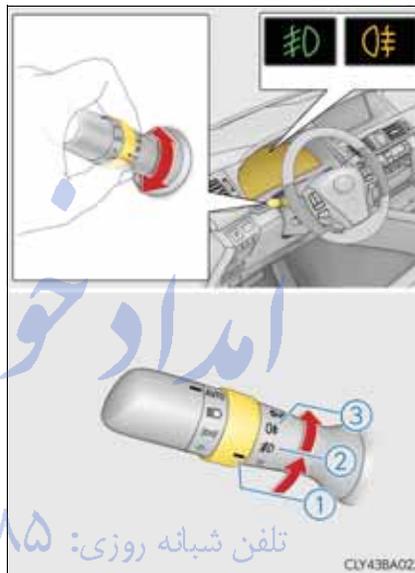

### ■ Fog lights can be used when

Front fog lights: The headlights or the front position lights are turned on.

Rear fog lights: The front fog lights are turned on.

## Windshield wipers and washer

### Operating the wiper lever

Operate the lever as follows to operate the wipers.

- ①  $\triangle$  Temporary operation
- ② AUTO Rain-sensing wiper operation

The wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.



- ③  $\blacktriangledown$  Low speed wiper operation
- ④  $\blacktriangledown$  High speed wiper operation

When "AUTO" mode is selected, the sensor sensitivity can be adjusted by turning the switch ring.

- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity

- ⑦ Washer/wiper dual operation

Wipers will automatically operate a couple of times after the washer squirts.

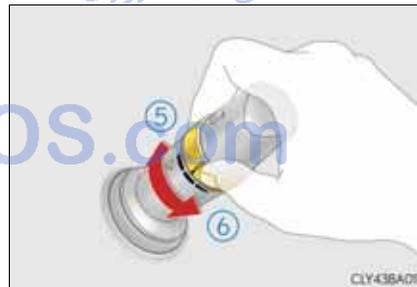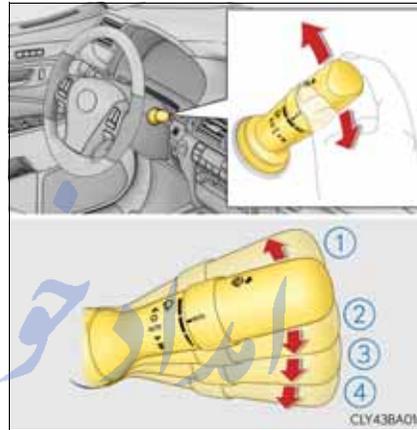

- The windshield wiper and washer can be operated when  
The engine switch is in IGNITION ON mode.
  - Dripping prevention wiper sweep  
After washing and the wiper has operated several times, the wipers operate one more time after a short delay to prevent dripping.  
However, the last sweep will not happen if the vehicle is traveling above 170 km/h (106 mph).
  - Effects of vehicle speed on wiper operation  
Even when the wipers are not in “AUTO” mode, vehicle speed affects the time until the drip prevention wiper sweep occurs.  
With low speed windshield wiper operation selected, wiper operation will be switched from low speed to intermittent wiper operation only when the vehicle is stationary.  
(However, when the sensor sensitivity is adjusted to the highest level, the mode cannot be switched.)
  - Raindrop sensor
    - The raindrop sensor judges the amount of raindrops.  
An optical sensor is adopted. It may not operate properly when sunlight from the rising or setting of the sun intermittently strikes the windshield, or if bugs etc. are present on the windshield.
  - If the wiper is turned to “AUTO” mode while the engine switch is in IGNITION ON mode, the wipers will operate once to show that “AUTO” mode is activated.
  - If the temperature of the raindrop sensor is 90°C (194°F) or higher, or -15°C (5°F) or lower, automatic operation may not occur. In this case, operate the wipers in any mode other than “AUTO” mode.
- If no windshield washer fluid sprays  
Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.
- Outside rear view mirror defogger activation linked to windshield wiper operation  
The outside rear view mirror defoggers automatically turn on when you operate the windshield wipers.  
The outside rear view mirror defoggers automatically turn off approximately



15 minutes after the wipers stop.

For details about the outside rear view mirror defoggers: →P. 462

 CAUTION

- Caution regarding the use of windshield wipers in “AUTO” mode  
The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in “AUTO” mode. Take care that your fingers or anything else do not become caught in the windshield wipers.
- Caution regarding the use of washer fluid  
When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

 NOTICE

- When the windshield is dry  
Do not use the wipers, as they may damage the windshield.
- When there is no washer fluid spray from the nozzle  
Damage to the washer fluid pump may be caused if the lever is pulled toward you and held continually.
- When a nozzle becomes blocked  
In this case, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.  
Do not try to clear it with a pin or other object. The nozzle will be damaged.

## Headlight cleaner switch

Washer fluid can be sprayed on the headlights.

Press the switch to clean the headlights.



- The headlight cleaners can be operated when  
The engine switch is in IGNITION ON mode and the headlight switch is turned on.
- Windshield washer linked operation  
When the windshield washer is operated with the engine switch in IGNITION ON mode and the headlights on, the headlight cleaners will operate once. (→P. 243)

### NOTICE

- When the washer fluid tank is empty  
Do not press the switch continually as the washer fluid pump may overheat.

## Opening the fuel tank cap

### Before refueling the vehicle

- Close all the doors and windows, and turn the engine switch off.
- Confirm the type of fuel.

#### ■ Fuel types

EU area:

Unleaded gasoline conforming to European standard EN228, Research Octane Number of 95 or higher

Except EU area:

Premium unleaded gasoline, Research Octane Number of 95 or higher

#### ■ Use of ethanol blended gasoline in a gasoline engine

Lexus allows the use of ethanol blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

 CAUTION

■ When refueling the vehicle

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

- After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.
- Always hold the grips on the fuel tank cap and turn it slowly to remove it. A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out the filler neck and cause injury.
- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel.  
Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle.  
Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged.  
This may cause static electricity to build up, resulting in a possible ignition hazard.

■ When refueling

Observe the following precautions to prevent fuel overflowing from the fuel tank:

- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.

 NOTICE


■ Refueling

Do not spill fuel during refueling.


Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

### Opening the fuel tank cap


- 1 Press the opener switch.

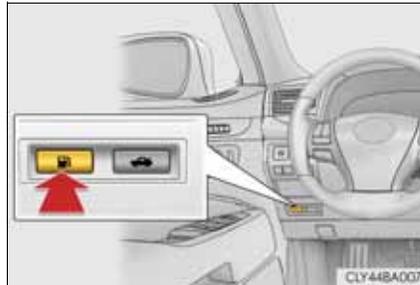

- 2 Turn the fuel tank cap slowly to open.

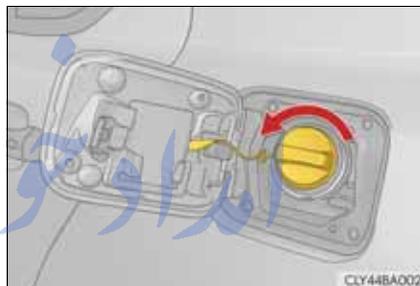


- 3 Hang the fuel tank cap on the back of the fuel filler door.

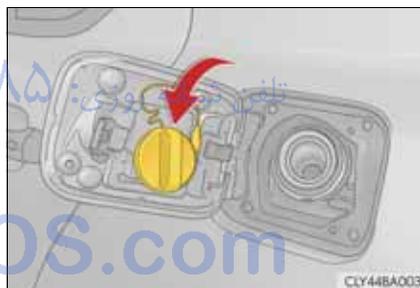


- When the fuel filler door cannot be opened by pressing the inside switch

Remove the cover inside the trunk and pull the lever.

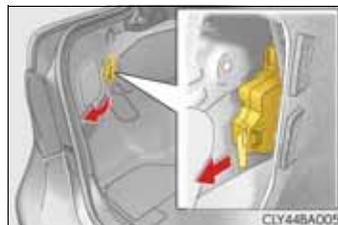

### Closing the fuel tank cap

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

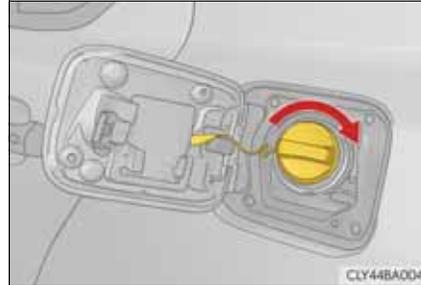

#### CAUTION

##### ■ When replacing the fuel tank cap

Do not use anything but a genuine Lexus fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## Cruise control\*

### Summary of functions

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

- ① Indicators
- ② Cruise control switch



### Setting the vehicle speed

- 1 Press the “ON•OFF” button to activate the cruise control.

Cruise control indicator will come on.


Press the button again to deactivate the cruise control.



- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

“SET” indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

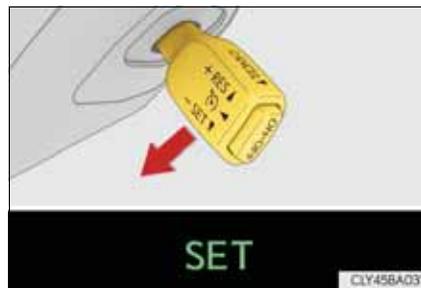

\*: If equipped


### Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is obtained.

- ① Increases the speed
- ② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

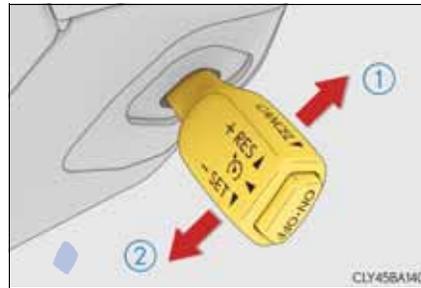

The set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1.6 km/h (1 mph) each time the lever is operated.

Large adjustment: The set speed can be increased or decreased continually until the lever is released.


### Canceling and resuming the constant speed control

- ① Pulling the lever toward you cancels the constant speed control.

The speed setting is also canceled when the brakes are applied.

- ② Pushing the lever up resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 40 km/h (25 mph).

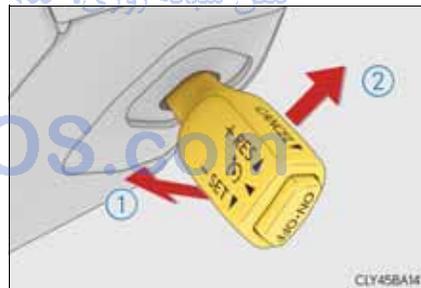

- Cruise control can be set when
  - The shift lever is in the D or range 4 or higher of S has been selected. (vehicles without paddle shift switches)
  - The shift lever is in D. (vehicles with paddle shift switches)
  - Range 4 or higher of D has been selected by using the paddle shift. (vehicles with paddle shift switches)
  - Vehicle speed is above approximately 40 km/h (25 mph).
- Accelerating after setting the vehicle speed
  - The vehicle can be accelerated normally. After acceleration, the set speed resumes.
  - Even without canceling the cruise control, the set speed can be increased by first accelerating the vehicle to the desired speed and then pushing the lever down to set the new speed.
- Automatic cruise control cancelation

Cruise control will stop maintaining the vehicle speed in any of the following situations.

  - Actual vehicle speed falls more than approximately 16 km/h (10 mph) below the preset vehicle speed.  
At this time, the memorized set speed is not retained.
  - Actual vehicle speed is below approximately 40 km/h (25 mph).
  - VSC is activated.
  - TRC is activated for a period of time.
  - When the VSC or TRC system is turned off by pressing the VSC OFF switch.
- If the warning message for the cruise control is shown on the multi-information display

Press the “ON•OFF” button once to deactivate the system, and then press the button again to reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**⚠ CAUTION**

- To avoid operating the cruise control by mistake  
Switch the cruise control off using the “ON•OFF” button when not in use.
- Situations unsuitable for cruise control  
Do not use cruise control in any of the following situations.  
Doing so may result in loss of control and could cause an accident resulting in death or serious injury.
  - In heavy traffic
  - On roads with sharp bends
  - On winding roads
  - On slippery roads, such as those covered with rain, ice or snow
  - On steep hills  
Vehicle speed may exceed the set speed when driving down a steep hill.

4

Driving

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵


FarmaSOS.com

## Dynamic radar cruise control\*

### Summary of functions

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.

- ① Vehicle-to-vehicle distance button
- ② Display
- ③ Set speed
- ④ Indicators
- ⑤ Cruise control switch

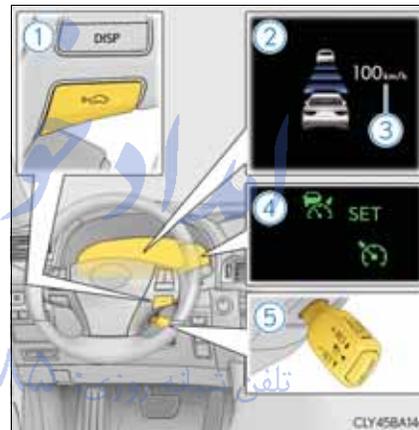

FarmaSOS.com

\*: If equipped

### Setting the vehicle speed (vehicle-to-vehicle distance control mode)

- 1 Press the “ON•OFF” button to activate the cruise control.

Radar cruise control indicator will come on.


Press the button again to deactivate the cruise control.



- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

“SET” indicator will be displayed.

The vehicle speed at the moment the lever is released becomes the set speed.

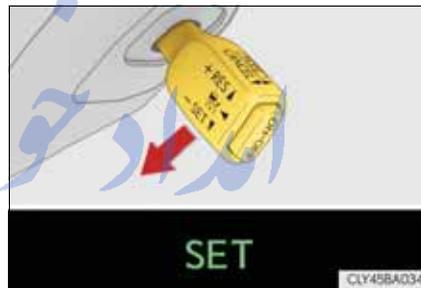

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com


### Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is displayed.

- ① Increases the speed
- ② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

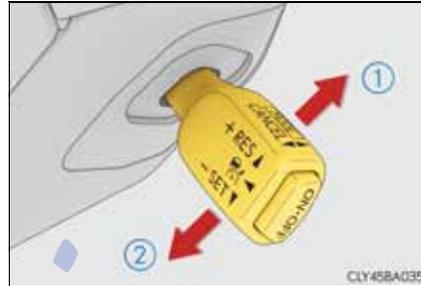

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1 km/h (0.6 mph) each time the lever is operated

Large adjustment: By approximately 5 km/h (3.1 mph) for each 0.75 seconds the lever is held

In the constant speed control mode (→P. 261), the set speed will be increased or decreased as follows:


Fine adjustment: By approximately 1.6 km/h (1 mph) each time the lever is operated

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

### Changing the vehicle-to-vehicle distance

Pressing the button changes the vehicle-to-vehicle distance as follows:

- ① Long
- ② Medium
- ③ Short

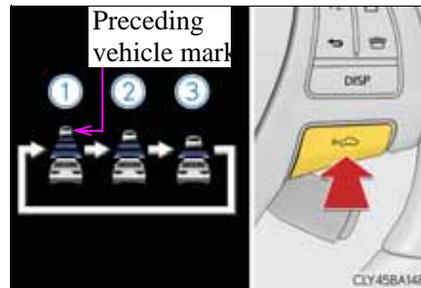

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

### Vehicle-to-vehicle distance settings

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 80 km/h (50 mph). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed.

Distance options	Vehicle-to-vehicle distance
Long	Approximately 50 m (160 ft.)
Medium	Approximately 40 m (130 ft.)
Short	Approximately 30 m (100 ft.)


### Canceling and resuming the speed control

- ① Pulling the lever toward you cancels the cruise control.

The speed setting is also canceled when the brakes are applied.

- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

Resuming is available when the vehicle speed is more than approximately 40 km/h (25 mph).

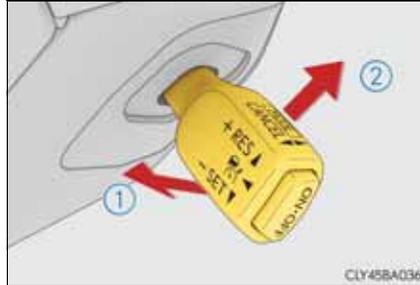

امداد خودرو فارما


تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### Driving in vehicle-to-vehicle distance control mode

This mode employs a radar sensor to detect the presence of vehicles up to approximately 120 m (400 ft.) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead.

Note that vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

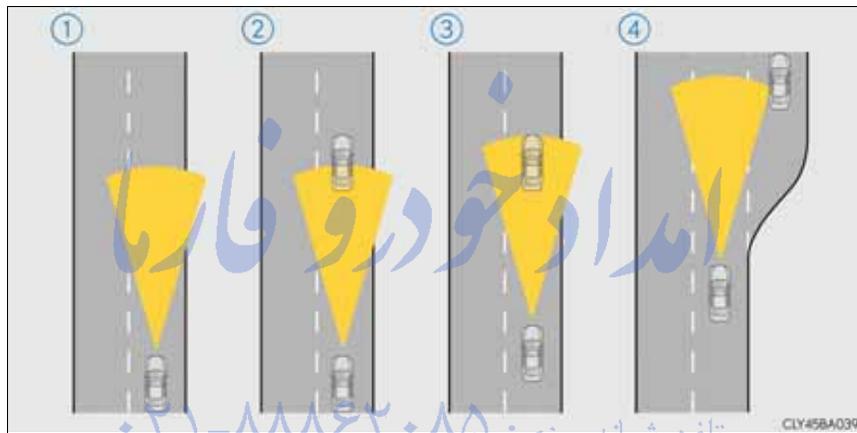

#### ① Example of constant speed cruising

When there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control.

#### ② Example of deceleration cruising

When the vehicle ahead is driving slower than the set speed

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

**③ Example of follow-up cruising**

When following a vehicle driving slower than the set speed

The system continues follow-up cruising while adjusting for changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver.

**④ Example of acceleration**

When there are no longer any vehicles ahead driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

**Approach warning**

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Apply the brakes to ensure an appropriate vehicle-to-vehicle distance.

**■ Warnings may not occur when**

In the following instances, there is a possibility that the warnings will not occur:

- When the speed of the vehicle ahead matches or exceeds your vehicle speed
- When the vehicle ahead is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- At the instant the accelerator is applied

### Selecting conventional constant speed control mode

When constant speed control mode is selected, your vehicle will maintain a set speed without controlling the vehicle-to-vehicle distance. Select this mode only when vehicle-to-vehicle distance control mode does not function correctly due to dirt etc.

- ① Press the “ON•OFF” button to activate the cruise control.

Radar cruise control indicator will come on.

Press the button again to deactivate the cruise control.

- ② Switch to constant speed control mode.


(Push the lever forward and hold for approximately 1 second.)

Cruise control indicator will come on.

When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward and hold for approximately 1 second.

After the desired speed has been set, it is not possible to return to vehicle-to-vehicle distance control mode.

If the engine switch is turned off and then turned to IGNITION ON mode again, the vehicle will automatically return to vehicle-to-vehicle distance control mode.

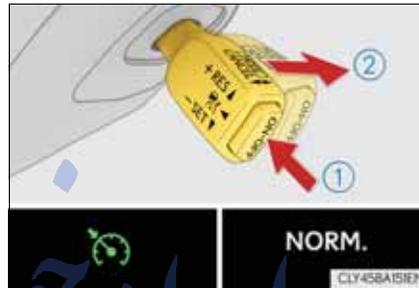

Adjusting the speed setting:

→P. 256

Canceling and resuming the speed

setting: →P. 258

---

■ Dynamic radar cruise control can be set when

- The shift lever is in the D or range 4 or higher of S has been selected. (vehicles without paddle shift switches)
- The shift lever is in D. (vehicles with paddle shift switches)
- Range 4 or higher of D has been selected by using the paddle shift. (vehicles with paddle shift switches)
- Vehicle speed is above approximately 50 km/h (30 mph).

■ Accelerating after setting the vehicle speed

The vehicle can accelerate normally. After acceleration, the set speed resumes. However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the vehicle ahead.

■ Automatic cancelation of vehicle-to-vehicle distance control

Vehicle-to-vehicle distance control driving is automatically canceled in the following situations:

- Actual vehicle speed falls below approximately 40 km/h (25 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off by pressing the VSC OFF switch.
- The sensor cannot operate correctly because it is covered in some way.
- The windshield wipers are operating at high speed (when the wiper switch is set to the “AUTO” mode or the high speed wiper operation position).
- When snow mode is set.

If vehicle-to-vehicle distance control driving is automatically canceled for any other reason, there may be a malfunction in the system. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**■ Automatic cancelation of constant speed control**


The cruise control will stop maintaining the vehicle speed in the following situations:

- Actual vehicle speed is more than approximately 16 km/h (10 mph) below the set vehicle speed.  
At this time, the memorized set speed is not retained.
- Actual vehicle speed falls below approximately 40 km/h (25 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off by pressing the VSC OFF switch.

**■ Radar sensor and grille cover**

Always keep the sensor and grille cover clean to ensure that the vehicle-to-vehicle distance control operates properly. (Some obstructions, such as snow, ice and plastic objects, cannot be detected by the obstruction sensor.)  
Dynamic radar cruise control is canceled if an obstruction is detected.

- ① Grille cover
- ② Radar sensor

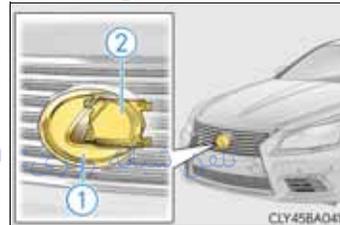**■ Warning messages and buzzers for dynamic radar cruise control**

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. (→P. 832)

 CAUTION**■ Before using dynamic radar cruise control**

Do not overly rely on vehicle-to-vehicle distance control.

Be aware of the set speed. If automatic deceleration/acceleration is not appropriate, adjust the vehicle speed, as well as the distance between your vehicle and vehicles ahead by applying the brakes etc.

**■ Cautions regarding the driving assist systems**

Observe the following precautions.

Failure to do so may cause an accident resulting in death or serious injury.

**● Assisting the driver to measure following distance**

The dynamic radar cruise control is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for driver to pay close attention to the vehicle's surroundings.

**● Assisting the driver to judge proper following distance**

The dynamic radar cruise control determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is appropriate or not. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

**● Assisting the driver to operate the vehicle**

The dynamic radar cruise control has no capability to prevent or avoid a collision with a vehicle traveling ahead. Therefore, if there is ever any danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

**⚠ CAUTION****■ To avoid inadvertent cruise control activation**

Switch the cruise control off using the “ON•OFF” button when not in use.

**■ Situations unsuitable for dynamic radar cruise control**

Do not use dynamic radar cruise control in any of the following situations. Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhill, or where there are sudden changes between sharp up and down gradients  
Vehicle speed may exceed the set speed when driving down a steep hill.
- At entrances to expressways
- When weather conditions are bad enough that they may prevent the sensors from functioning correctly (fog, snow, sandstorm, heavy rain, etc.)
- When an approach warning buzzer is heard often

**⚠ CAUTION**

- When the sensor may not be correctly detecting the vehicle ahead

Apply the brakes as necessary when any of the following types of vehicles are in front of you.  
As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P. 260) will not be activated, and a fatal or serious accident may result.

  - Vehicles that cut in suddenly
  - Vehicles traveling at low speeds
  - Vehicles that are not moving
  - Vehicles with small rear ends (trailers with no load on board etc.)
  - Motorcycles traveling in the same lane
- Conditions under which the vehicle-to-vehicle distance control may not function correctly

Apply the brakes as necessary in the following conditions as the radar sensor may not be able to correctly detect vehicles ahead, and a fatal or serious accident may result:

  - When water or snow thrown up by the surrounding vehicles hinders the functioning of the sensor
  - When your vehicle is pointing upwards (caused by a heavy load in the trunk etc.)
  - When the road curves or when the lanes are narrow
  - When steering wheel operation or your position in the lane is unstable
  - When the vehicle ahead of you decelerates suddenly

**⚠ CAUTION****■ Handling the radar sensor**

Observe the following to ensure the cruise control system can function effectively.

Otherwise, the system may not function correctly and could result in an accident.


- Keep the sensor and grille cover clean at all times.  
Clean the sensor and grille cover with a soft cloth so you do not mark or damage them.
- Do not subject the sensor or surrounding area to a strong impact.  
If the sensor moves even slightly off position, the system may malfunction. If the sensor or surrounding area is subject to a strong impact, always have the area inspected and adjusted by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor, grille cover or surrounding area.
- Do not modify or paint the sensor and grille cover.
- Do not replace them with non-genuine parts.

## Dynamic radar cruise control with full-speed range\*

### Summary of functions

Dynamic radar cruise control with full-speed range supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates or stops in order to maintain a set following distance from vehicles ahead.

- ① Vehicle-to-vehicle distance button
- ② Display
- ③ Set speed
- ④ Indicators
- ⑤ Cruise control switch

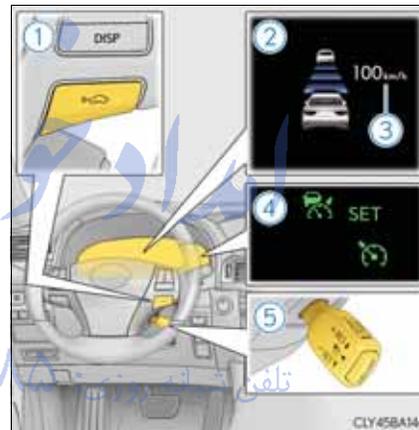

FarmaSOS.com

\*: If equipped

### Setting the vehicle speed (vehicle-to-vehicle distance control mode)

- 1 Press the “ON•OFF” button to activate the cruise control.

Radar cruise control indicator will come on.

Press the button again to deactivate the cruise control.




- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

“SET” indicator will be displayed.

The vehicle speed at the moment the lever is released becomes the set speed.

If this is performed when vehicle speed is less than about 50 km/h (30 mph) and the vehicle ahead can be detected, your vehicle will start following the vehicle ahead of you at a set speed of about 50 km/h (30 mph) (vehicle-to-vehicle distance control mode only).

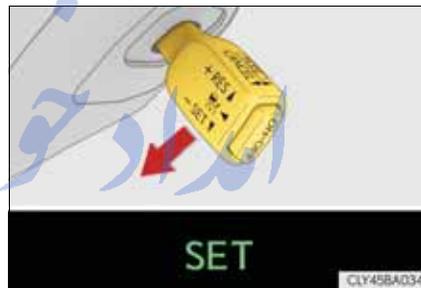

### Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is displayed.


① Increases the speed

(Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

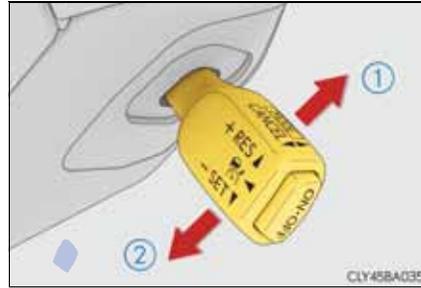

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

- When the set speed is shown in “MPH”

Fine adjustment: By approximately 8 km/h (5 mph) each time the lever is operated

Large adjustment: By approximately 8 km/h (5 mph) for each 0.3 seconds the lever is held

- When the set speed is shown in “km/h”

Fine adjustment: By approximately 5 km/h (3.1 mph) each time the lever is operated

Large adjustment: By approximately 5 km/h (3.1 mph) for each 0.3 seconds the lever is held

In the constant speed control mode (→P. 276), the set speed will be increased or decreased as follows:


Fine adjustment: By approximately 1.6 km/h (1 mph) each time the lever is operated

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

### Changing the vehicle-to-vehicle distance

Pressing the button changes the vehicle-to-vehicle distance as follows:

- ① Long
- ② Medium
- ③ Short

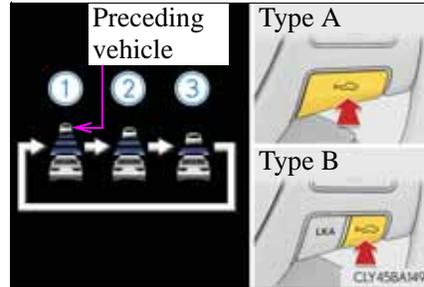

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

### Vehicle-to-vehicle distance settings


Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 80 km/h (50 mph). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed. When the vehicle is stopped by system control, the vehicle-to-vehicle distance will be about 3 m (10 ft.) to 5 m (16 ft.) regardless of the vehicle-to-vehicle distance setting.

Distance options	Vehicle-to-vehicle distance
Long	Approximately 50 m (160 ft.)
Medium	Approximately 40 m (130 ft.)
Short	Approximately 30 m (100 ft.)

### Resuming follow-up cruising when the vehicle has been stopped by system control

After the vehicle ahead of you starts off, push the lever up.

Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

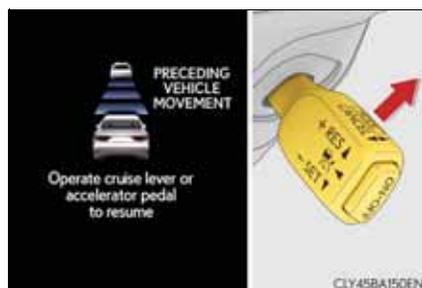

# امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵


## FarmaSOS.com

### Canceling and resuming the speed control

- ① Pulling the lever toward you cancels the cruise control.

The setting is also canceled when the brake pedal is depressed while driving.

(When the vehicle has been stopped by system control, applying the brakes does not cancel the setting.)

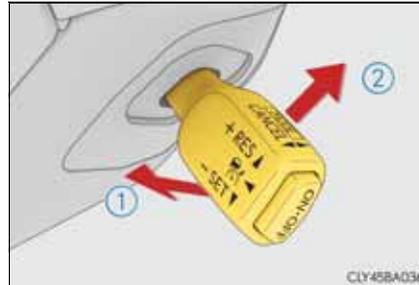


- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

However, when a vehicle ahead is not detected in vehicle-to-vehicle distance control mode, cruise control does not resume when the actual vehicle speed is approximately 40 km/h (25 mph) or less. Also, when the vehicle is in constant speed control mode and the actual vehicle speed is approximately 40 km/h (25 mph) or less, cruise control does not resume as the set speed is cleared.

### Driving in vehicle-to-vehicle distance control mode

This mode employs a radar sensor to detect the presence of vehicles up to approximately 120 m (400 ft.) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead.

Note that vehicle-to-vehicle distance will close in when traveling on long downhill slopes.

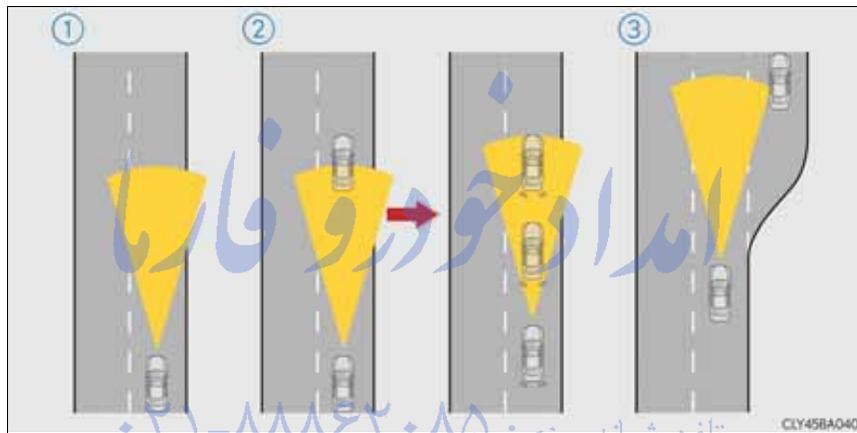

#### ① Example of constant speed cruising

When there are no vehicles ahead

The vehicle travels at the speed set by the driver. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance control.

#### ② Example of deceleration cruising and follow-up cruising

When the vehicle ahead is driving slower than the set speed

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes. The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. A warning tone warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead. When the vehicle ahead of you stops, your vehicle will also stop. After the vehicle ahead starts off, pushing the cruise control

lever up or depressing the accelerator pedal will resume follow-up cruising.

③ Example of acceleration

When there are no longer any vehicles ahead driving slower than the set speed

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

### Approach warning

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Apply the brakes to ensure an appropriate vehicle-to-vehicle distance.

■ Warnings may not occur when

In the following instances, there is a possibility that the warnings will not occur:

- When the speed of the vehicle ahead matches or exceeds your vehicle speed
- When the vehicle ahead is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- At the instant the accelerator is applied

### Selecting conventional constant speed control mode

When constant speed control mode is selected, your vehicle will maintain a set speed without controlling the vehicle-to-vehicle distance. Select this mode only when vehicle-to-vehicle distance control mode does not function correctly due to dirt etc.

- ① Press the “ON•OFF” button to activate the cruise control.

Radar cruise control indicator will come on.

Press the button again to deactivate the cruise control.

- ② Switch to constant speed control mode.


(Push the lever forward and hold for approximately 1 second.)

Cruise control indicator will come on.

When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward again and hold for approximately 1 second.

After the desired speed has been set, it is not possible to return to vehicle-to-vehicle distance control mode.

If the engine switch is turned off and then turned to IGNITION ON mode again, the vehicle will automatically return to vehicle-to-vehicle distance control mode.

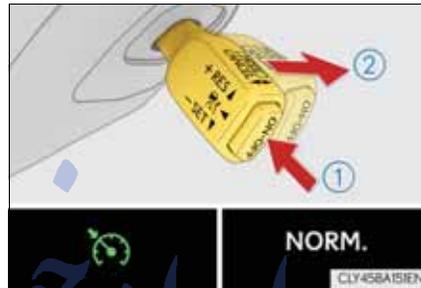

Adjusting the speed setting: →P.  
270

Canceling and resuming the speed  
setting: →P. 273

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

4

Driving

- Dynamic radar cruise control with full-speed range can be set when
  - The shift lever is in the D or range 4 or higher of S has been selected. (vehicles without paddle shift switches)
  - The shift lever is in D. (vehicles with paddle shift switches)
  - Range 4 or higher of D has been selected by using the paddle shift. (vehicles with paddle shift switches)
  - Vehicle speed is above approximately 50 km/h (30 mph).
- Accelerating after setting the vehicle speed

The vehicle can accelerate normally. After acceleration, the set speed resumes. However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the vehicle ahead.
- Automatic cancelation of vehicle-to-vehicle distance control

Vehicle-to-vehicle distance control driving is automatically canceled in the following situations:

  - Actual vehicle speed falls below approximately 40 km/h (25 mph) when there are no vehicle ahead.
  - The preceding vehicle leaves the lane when your vehicle is following at a speed below 40 km/h (25 mph).
  - VSC is activated.
  - TRC is activated for a period of time.
  - When the VSC or TRC system is turned off by pressing the VSC OFF switch.
  - The sensor cannot operate correctly because it is covered in some way.
  - The windshield wipers are operating at high speed (when the wiper switch is set to the “AUTO” mode or the high speed wiper operation position).
  - When snow mode is set.
  - The parking brake is operated.
  - The vehicle is stopped by system control on a steep incline.
  - Pre-crash brake assist is activated.

- The following are detected when the vehicle has been stopped by system control:

- The driver is not wearing a seat belt.
- The driver's door is opened.
- The trunk or hood is opened.
- The vehicle has been stopped for about 3 minutes.

If vehicle-to-vehicle distance control driving is automatically canceled for any other reason, there may be a malfunction in the system. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

#### ■ Automatic cancelation of constant speed control

The cruise control will stop maintaining the vehicle speed in the following situations:

- Actual vehicle speed is more than approximately 16 km/h (10 mph) below the set vehicle speed.  
At this time, the memorized set speed is not retained.
- Actual vehicle speed falls below approximately 40 km/h (25 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off by pressing the VSC OFF switch.

#### ■ When the LKA (Lane-Keeping Assist) will be activated


Using the radar cruise control in vehicle-to-vehicle distance control mode, lane keeping assistance control is activated.

#### ■ Radar sensor and grille cover

Always keep the sensor and grille cover clean to ensure that the vehicle-to-vehicle distance control operates properly. (Some obstructions, such as snow, ice and plastic objects, cannot be detected by the obstruction sensor.)

Dynamic radar cruise control with full-speed range is canceled if an obstruction is detected.

- ① Grille cover
- ② Radar sensor

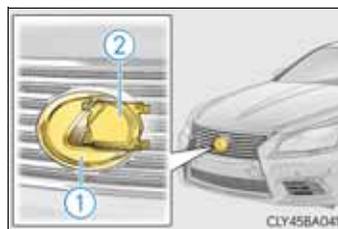

- Warning messages and buzzers for dynamic radar cruise control with full-speed range  
Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. (→P. 832)

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

■ Certification for the dynamic radar cruise control with full-speed range



The latest "DECLARATION of CONFORMITY" (DoC) is available at the following:  
<http://www.globaldenso.com/en/products/oem/index.html#2>

<p>Hereby, DENSO CORPORATION declares that this DNMWR004 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.</p>
<p>Hér með lýsir DENSO CORPORATION yfir því að DNMWR004 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.</p>
<p>Con la presente DENSO CORPORATION dichiara che questo DNMWR004 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.</p>
<p>Käesolevaga kinnitab DENSO CORPORATION seadme DNMWR004 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.</p>
<p>Hierbij verklaart DENSO CORPORATION dat het toestel DNMWR004 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.</p>
<p>ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ DENSO CORPORATION ΔΗΛΩΝΕΙ ΟΤΙ ΔNMWR004 ΣΥΜΜΟΡΦΩΝ ΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.</p>
<p>Härmed intygar DENSO CORPORATION att denna DNMWR004 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.</p>
<p>Por medio de la presente DENSO CORPORATION declara que el DNMWR004 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.</p>
<p>DENSO CORPORATION týmto vyhlasuje, že DNMWR004 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.</p>
<p>DENSO CORPORATION izjavlja, da je ta DNMWR004 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.</p>
<p>DENSO CORPORATION tímto prohlašuje, že tento DNMWR004 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.</p>

<p>Undertegnede DENSO CORPORATION erklærer herved, at følgende udstyr DNMWR004 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.</p>
<p>Hiermit erklärt DENSO CORPORATION, dass sich das Gerät DNMWR004 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.</p>
<p>DENSO CORPORATION erklærer herved at udstyret DNMWR004 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.</p>
<p>Alulírott, DENSO CORPORATION nyilatkozom, hogy a DNMWR004 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.</p>
<p>DENSO CORPORATION vakuuttaa täten että DNMWR004 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.</p>
<p>Par la présente DENSO CORPORATION déclare que l'appareil DNMWR004 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.</p>
<p>Niniejszym DENSO CORPORATION oświadcza, że DNMWR004 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.</p>
<p>DENSO CORPORATION declara que este DNMWR004 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.</p>
<p>Hawnhekk, DENSO CORPORATION, jiddikjara li dan DNMWR004 jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Direttiva 1999/5/EC.</p>
<p>Ar šo, DENSO CORPORATION, deklarē, ka DNMWR004 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.</p>
<p>Šiuo DENSO CORPORATION deklaruoja, kad šis DNMWR004 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.</p>

 CAUTION**■ Before using dynamic radar cruise control with full-speed range**

Do not overly rely on vehicle-to-vehicle distance control.

Be aware of the set speed. If automatic deceleration/acceleration is not appropriate, adjust the vehicle speed, as well as the distance between your vehicle and vehicles ahead by applying the brakes etc.

**■ Cautions regarding the driving assist systems**

Observe the following precautions.

Failure to do so may cause an accident resulting in death or serious injury.

**● Assisting the driver to measure following distance**

The dynamic radar cruise control with full-speed range is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for driver to pay close attention to the vehicle's surroundings.

**● Assisting the driver to judge proper following distance**

The dynamic radar cruise control with full-speed range determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is appropriate or not. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

**● Assisting the driver to operate the vehicle**

The dynamic radar cruise control with full-speed range has no capability to prevent or avoid a collision with a vehicle traveling ahead. Therefore, if there is ever any danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

**⚠ CAUTION**

- To avoid inadvertent dynamic radar cruise control with full-speed range activation

Switch the cruise control off using the “ON•OFF” button when not in use.

- Situations unsuitable for dynamic radar cruise control with full-speed range

Do not use dynamic radar cruise control with full-speed range in any of the following situations.

Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhills, or where there are sudden changes between sharp up and down gradients  
Vehicle speed may exceed the set speed when driving down a steep hill.
- At entrances to expressways
- When weather conditions are bad enough that they may prevent the sensors from functioning correctly (fog, snow, sandstorm, heavy rain, etc.)
- When an approach warning buzzer is heard often

FarmaSOS.com

**⚠ CAUTION**

- When the sensor may not be correctly detecting the vehicle ahead  
Apply the brakes as necessary when any of the following types of vehicles are in front of you.  
As the sensor may not be able to correctly detect these types of vehicles, the approach warning (→P. 275) will not be activated, and a fatal or serious accident may result.
  - Vehicles that cut in suddenly
  - Vehicles traveling at low speeds
  - Vehicles that are not moving
  - Vehicles with small rear ends (trailers with no load on board etc.)
  - Motorcycles traveling in the same lane
- Conditions under which the vehicle-to-vehicle distance control may not function correctly  
Apply the brakes as necessary in the following conditions as the radar sensor may not be able to correctly detect vehicles ahead, and a fatal or serious accident may result:
  - When water or snow thrown up by the surrounding vehicles hinders the functioning of the sensor
  - When your vehicle is pointing upwards (caused by a heavy load in the trunk etc.)
  - When the road curves or when the lanes are narrow
  - When steering wheel operation or your position in the lane is unstable
  - When the vehicle ahead of you decelerates suddenly

**⚠ CAUTION****■ Handling the radar sensor**

Observe the following to ensure the cruise control system can function effectively.

Otherwise, the system may not function correctly and could result in an accident.

- Keep the sensor and grille cover clean at all times.  
Clean the sensor and grille cover with a soft cloth so you do not mark or damage them.
- Do not subject the sensor or surrounding area to a strong impact.  
If the sensor moves even slightly off position, the system may malfunction. If the sensor or surrounding area is subject to a strong impact, always have the area inspected and adjusted by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor, grille cover or surrounding area.
- Do not modify or paint the sensor and grille cover.
- Do not replace them with non-genuine parts.

FarmaSOS.com

## LKA (Lane-Keeping Assist)\*

### Summary of functions

While driving on a freeway or motor highway that has lane markers and no sharp curves, the system recognizes the lanes using a camera located above the inside rear view mirror as a sensor to assist the driver with staying in the lane. The LKA system has two functions.

Camera sensor



4


Driving

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

\*: If equipped

### Functions included in the LKA

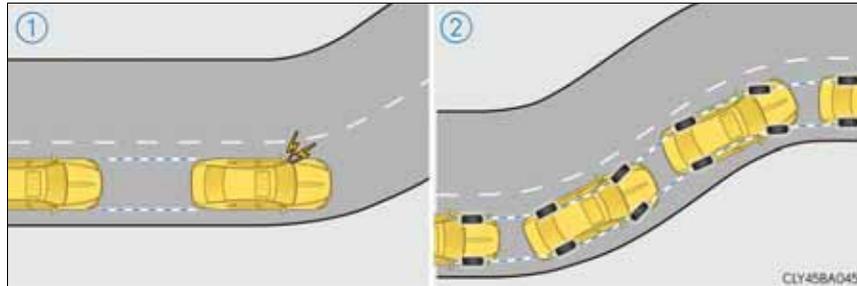

#### ① Lane departure warning function

If the system judges that the vehicle may deviate from its lane, it alerts the driver using rapid beeping, indications on the multi-information display, and a sensory warning\* given via the steering wheel.

\*: A slight steering torque is applied for a short period of time in the direction of the center of the lane.

#### ② Lane keeping assist function

- This function will be active when the vehicle-to-vehicle distance control mode of the dynamic radar cruise control with full-speed range (→P. 268) is set with vehicle speed above approximately 72 km/h (45 mph) and while the lane departure warning function is active.
- When the lane keeping assist function is active, a slight steering torque will be applied, to help the driver maintain the vehicle inside the lane.

The lane keeping assist function will be temporarily canceled if the steering wheel is not operated, or if you continue driving with your hands lightly touching the steering wheel. (→P. 292)

### Turning the LKA system on

Press the LKA switch to activate the system.

LKA indicator will come on.

Press the switch again to turn the LKA system off.

The LKA system will revert to off each time the engine switch is turned to IGNITION ON mode.



امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

**Operating conditions for each function**

- Lane departure warning function
  - When the vehicle speed is approximately 48 km/h (30 mph) or more
  - When the lane width is more than approximately 3.0 m (9.8 ft.)
  - When driving on a straight road or through a curve with a radius of more than approximately 120 m (394 ft.)
- Lane keeping assist function
  - When the vehicle speed is between approximately 72 and 180 km/h (45 and 112 mph)
  - When the vehicle-to-vehicle distance mode of the dynamic radar cruise control with full-speed range is on, and the set vehicle speed is approximately 72 km/h (45 mph) or more (the function will not operate when the dynamic radar cruise control with full-speed range is in set speed mode)
  - When the lane width is between approximately 3.0 and 4.0 m (9.8 and 13.1 ft.)
  - When driving on a straight road or through a curve with a radius of more than approximately 200 m (656 ft.)

### Indication on the multi-information display

When the LKA system is on, the lane line display and steering wheel display are shown.

#### ① Lane keeping assist function operation indication

Steering wheel displayed:

Indicates that the function is currently operating. (If the lane departure warning operates at this time, the steering wheel flashes orange.)

Steering wheel not displayed:

Indicates that the function is not currently operating. (When the lane keeping assist function is canceled, the buzzer will beep twice.)


#### ② Dynamic radar cruise control with full-speed range display

#### ③ Lane departure warning function indication (when the inside of the white line is white):

The function has recognized lane markers. (If the lane departure warning operates at this time, the lines flash orange.)

#### ④ Lane departure warning function indication (when the inside of the white line is black):

A lane marker is not recognized by the system, or the LKA system functions are temporarily canceled.

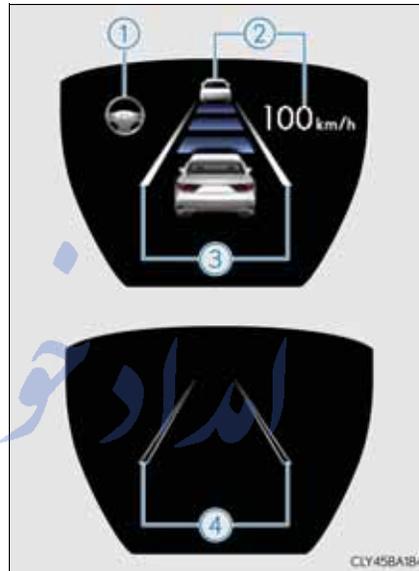

**■ Temporary cancelation of the LKA system functions**

If any of the following occurs, the LKA system functions will be temporarily canceled. The functions will resume after the necessary operating conditions have returned.

- The steering wheel is turned as far as necessary to cause the vehicle to change lanes.
- When the system detects no-handed driving. (The lane keeping assist function will be temporarily canceled, but the lane departure warning function will continue.)
- The turn signal lever is operated.
- The vehicle speed deviates from the operating range of the LKA system functions. (The buzzer will beep twice when the lane keeping assist function is being canceled.)
- When the lane lines cannot be recognized while driving. (The buzzer will beep twice when the lane keeping assist function is being canceled.)
- When the wiper switch is in the high speed position or is set to “AUTO” mode with the wipers operating at high speed. (The lane keeping assist function will be temporarily canceled, but the lane departure warning function will continue.)
- If the vehicle crosses a line for approximately half a minute or more. (The lane keeping assist function will be temporarily canceled, but the lane departure warning function will continue.)
- When the lane departure warning function is activated.  
The lane departure warning function will not operate again for several seconds after it has been activated, even if the vehicle leaves the lane again.

**■ The lane departure warning**

It may be difficult to feel the sensory warning depending on the road conditions.

**■ No-handed driving warning**

If the steering wheel is not operated for approximately 15 seconds on a straight road or approximately 5 seconds on a curve, the buzzer will beep twice, indicators on the multi-information display will flash, and the lane keeping assist function will be temporarily canceled. If you drive the vehicle with your hands lightly touching the steering wheel, this may also be detected as no-handed driving.

■ After the vehicle has been parked in the sun

The LKA system functions may not be available and a warning message (→P. 832) will be displayed for a while after driving has started. In such cases, turn the LKA system off and turn it on again after normal temperature returns. When the temperature in the cabin decreases and the temperature around the camera sensor (→P. 287) becomes suitable for its operation, the functions will begin to operate.

■ If there are lane markers on only one side of the vehicle

The lane keeping assist function will not operate. Also, the lane departure warning will not operate for the side on which lane markers could not be recognized.

■ Conditions in which the function may not operate correctly

In the following conditions, the LKA system functions may not operate, or it may not be possible to ensure adequate performance. Also, the camera sensor may be unable to recognize lane lines causing the lane departure warning function to operate incorrectly, or the lane keeping assist function may not operate properly. However, this does not indicate a malfunction.

- When driving through an area with no lane markers, such as a tollbooth, a crossing or before a ticket checkpoint
- When driving on a sharp curve
- When lanes are extremely narrow or extremely wide
- When the vehicle leans to one side an unusual amount due to a heavy load or improper tire inflation pressure
- When the following distance between your vehicle and the vehicle ahead is extremely short
- When the lane markers are yellow (These may be more difficult for the system to recognize compared to white markers.)
- When the lane markers are broken, “Raised pavement marker” or stones
- When lane markers are obscured or partially obscured by sand, dirt, etc.
- When there are shadows on the road running parallel with lane markers, or if a shadow covers the lane markers
- When driving on a particularly bright road surface, such as concrete
- When driving on a road surface that is bright due to reflected light
- When driving in a location where the light level changes rapidly, such as the entrance to or exit from a tunnel
- When sunlight or the headlights of oncoming vehicles are shining directly into the camera lens

- When driving on roads that are branching or merging
- When driving on a road surface that is wet due to rain, previous rainfall, standing water, etc.
- When the vehicle experiences strong up-and-down motion such as when driving on an extremely rough road or on a seam in the pavement
- When headlight brightness at nighttime is reduced due to dirt on the lenses, or when the headlights are misaligned
- When driving with a strong crosswind
- When driving on winding roads or roads that are uneven
- When driving on rough or unpaved roads
- When changing the tires  
Depending on the tires used, sufficient performance may not be maintainable.
- Warning messages for LKA  
Warning messages are used to indicate a system malfunction or to inform the driver of the need for caution while driving. (→P. 832)

**⚠ CAUTION**

- Before using the LKA system  
Do not rely solely on the LKA system. The LKA system does not drive the vehicle automatically, nor does it reduce the amount of care you need to take. As such, the driver must always assume full responsibility for understanding his/her surroundings, for operating the steering wheel to correct the driving line, and for driving safely.  
Inappropriate or negligent driving could lead to an accident.
- To avoid operating the LKA by mistake  
Switch the LKA off using the LKA switch when not in use.

**⚠ CAUTION****■ Situations unsuitable for LKA**

Do not use LKA in any of the following situations. Otherwise, the system may not function correctly and could result in an accident.

- When driving with snow tires, tire chains, a spare tire, or similar equipment
- When the tires have been excessively worn, or when the tire inflation pressure is low
- When there are objects or structures along the roadside that might be misinterpreted as lane markers (such as guardrails, curb, reflector posts, etc.)
- When driving on snowy roads
- When pavement lane markers are difficult to see due to rain, snow, fog, sand, dirt, etc.
- When there are visible lines on the pavement from road repairs, or if the remains of old lane markers are still visible on the road
- When driving on slippery roads, such as those covered with rain, ice or snow
- When driving in a lane other than the driving or passing lanes on a freeway or highway
- When driving on a road with lane closures due to maintenance, or when driving in a temporary lane

**⚠ NOTICE****■ To prevent damage to or incorrect operation of the LKA system**

- Do not modify the headlights or attach stickers to the surface of the lights.
- Do not modify the suspension, or replace them with non-genuine parts.
- Do not install or place anything on the hood or the grille. Also, do not install a grille guard (bull bars, kangaroo bar etc.).
- Do not modify the sun visor or replace it with anything other than a genuine Lexus product.
- If your windshield needs repairs, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

 NOTICE

■ Camera sensor (→P. 287)


Observe the following to ensure that the LKA system functions correctly.

- Keep the windshield clean at all times.  
Performance could be affected if the windshield is dirty, or if raindrops, condensation or ice are adhering to the windshield.
  - Do not attach a sticker or other items to the windshield near the camera sensor.
  - Do not install or place anything near the camera.
- 
- Do not attach window tinting to the windshield.
  - Do not install an antenna in front of the camera lens.
  - If the windshield is fogged up, use the windshield defogger to remove fog from the windshield.  
When it is cold, using the heater with air blowing to the feet may allow the upper part of the windshield to fog up. This will have a negative effect on the images.
  - Do not place anything on the dashboard.  
The camera sensor may recognize the image reflected on the windshield as lane markers by mistake.
  - Do not scratch the camera lens, or let it get dirty.  
When cleaning the inside of the windshield, be careful not to get any glass cleaner etc. on the lens. Also, do not touch the lens.  
For lens repair, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
  - Do not change the installation position or direction of the camera sensor or remove it. The direction of the camera sensor is precisely adjusted.
  - Do not subject the camera sensor to strong impact or force, and do not disassemble the camera sensor.

## Lexus parking assist-sensor

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, Remote Touch screen and a buzzer. Always check the surrounding area when using this system.

### ■ Types of sensors

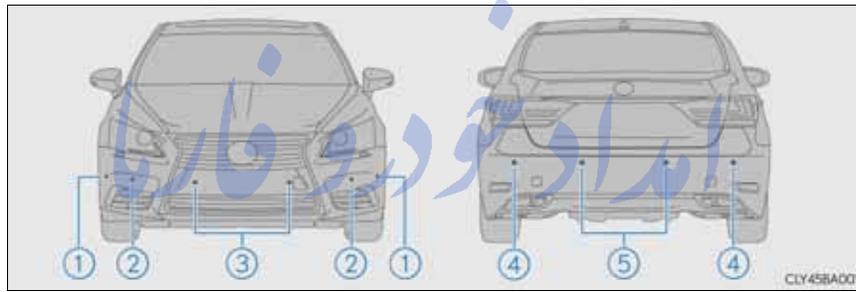


- ① Front side sensors
- ② Front corner sensors
- ③ Front center sensors
- ④ Rear corner sensors
- ⑤ Rear center sensors

### ■ Lexus parking assist-sensor switch

Turns the Lexus parking assist-sensor on/off

When on, the indicator light comes on and the buzzer sounds to inform the driver that the system is operational.

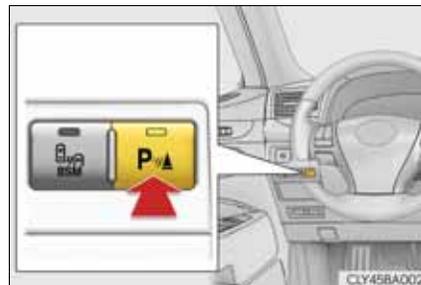


## Display

When the sensors detect an obstacle, a graphic is shown on the multi-information display and Remote Touch screen depending on the position and distance to the obstacle.

### ■ Multi-information display

- ① Front side and front corner sensor detection
- ② Front center sensor detection
- ③ Rear corner sensor detection
- ④ Rear center sensor detection

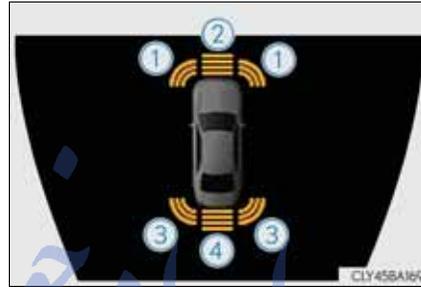

### ■ Remote Touch screen

A graphic will be shown on the side display

A graphic is automatically displayed when an obstacle is detected. The screen can be set so that the graphic is not displayed. (→P. 303)



### Sensor detection display, obstacle distance

#### ■ Front center sensor


Approximate distance to obstacle	Multi-information display	Remote Touch screen
100 cm (3.3 ft.) to 50 cm (1.6 ft.)	 (continuous)	 (continuous)
50 cm (1.6 ft.) to 37.5 cm (1.2 ft.)	 (continuous)	 (continuous)
37.5 cm (1.2 ft.) to 30 cm (1.0 ft.)	 (continuous)	 (continuous)
Less than 30 cm (1.0 ft.)	 (blinking)	 (continuous)

■ Corner sensors and side sensors

Approximate distance to obstacle	Multi-information display	Remote Touch screen
Front side sensor: 50 cm (1.6 ft.) to 37.5 cm (1.2 ft.) Front corner sensor and rear corner sensor: 60 cm (2.0 ft.) to 37.5 cm (1.2 ft.)	 (continuous)	 (continuous)
Front side sensor and front corner sensor: 37.5 cm (1.2 ft.) to 30 cm (1.0 ft.) Rear corner sensor: 37.5 cm (1.2 ft.) to 25 cm (0.8 ft.)	 (continuous)	 (continuous)
Front side sensor and front corner sensor: Less than 30 cm (1.0 ft.) Rear corner sensor: Less than 25 cm (0.8 ft.)	 (blinking)	 (continuous)

FarmaSOS.com

■ Rear center sensor

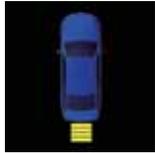Approximate distance to obstacle	Multi-information display	Remote Touch screen
150 cm (4.9 ft.) to 60 cm (2.0 ft.)	 (continuous)	 (continuous)
60 cm (2.0 ft.) to 45 cm (1.5 ft.)	 (continuous)	 (continuous)
45 cm (1.5 ft.) to 35 cm (1.1 ft.)	 (continuous)	 (continuous)
Less than 35 cm (1.1 ft.)	 (blinking)	 (continuous)

### ■ Buzzer operation and distance to an obstacle

A buzzer sounds when the sensors are operating.

- The buzzer beeps faster as the vehicle approaches an obstacle. When the vehicle comes within the following distance of the obstacle, the buzzer sounds continuously:
  - Front center sensors: Approximately 30 cm (1.0 ft.)
  - Front side and front corner sensors: Approximately 30 cm (1.0 ft.)
  - Rear center sensors: Approximately 35 cm (1.1 ft.)
  - Rear corner sensors: Approximately 25 cm (0.8 ft.)
- When 2 or more obstacles are detected simultaneously, the buzzer system responds to the nearest obstacle. If one or both come within the above distances, the beep will repeat a long tone, followed by fast beeps.

### Detection range of the sensors

- ① Approximately 100 cm (3.3 ft.)
- ② Approximately 150 cm (4.9 ft.)
- ③ Approximately 50 cm (1.6 ft.)
- ④ Approximately 60 cm (2.0 ft.)

The diagram shows the detection range of the sensors. Note that the sensors cannot detect obstacles that are extremely close to the vehicle.

The range of the sensors may change depending on the shape of the object etc.



### Setting up Lexus parking assist-sensor

You can change the warning beep volume and Remote Touch screen operating conditions.

- 1 Press the “MENU” button on the Remote Touch. (→P. 392)
- 2 Select “Setup” on the “Menu” screen.
- 3 Select “Vehicle” on the “Setup” screen.
- 4 Select “Lexus park assist” on the “Vehicle settings” screen.
  - ① Alert volume setting
  - ② Display on/off
  - ③ Alert distance setting

Make sure to save after changing settings.



تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

■ Alert volume setting

The alert volume can be adjusted.

- 1 Select “1” to “5” on the “LEXUS park assist settings”.
- 2 Select “OK”.

■ Display on/off setting

On or off can be selected for Lexus parking assist-sensor display.

- 1 Select “Display off”.

When the “Display off” indicator is turned on, the display of Lexus parking assist-sensor will be off. Select “Display off” again to turn the display of Lexus parking assist-sensor on.

- 2 Select “OK”.

■ Alert distance setting

Front or rear center sensors display and tone indication can be set.

- 1 Select “Front” or “Rear”.

Long distance or short distance can be selected.

- 2 Select “OK”.

---

■ The Lexus parking assist-sensor can be operated when

● Front side sensors:

- The engine switch is in IGNITION ON mode.
- The shift lever is in a position other than P.
- The vehicle speed is less than approximately 10 km/h (6 mph).

● Front corner and front center sensors:

- The engine switch is in IGNITION ON mode.
- The shift lever is in a position other than P or R.
- The vehicle speed is less than approximately 10 km/h (6 mph).

● Rear corner and rear center sensors:

- The engine switch is in IGNITION ON mode.
- The shift lever is in R.

#### ■ Sensor detection information

- The sensor's detection areas are limited to the areas around the vehicle's front corner and rear bumpers.
- Certain vehicle conditions and the surrounding environment may affect the ability of the sensor to correctly detect obstacles. Particular instances where this may occur are listed below.
  - There is dirt, snow or ice on the sensor. (Wiping the sensors will resolve this problem.)
  - The sensor is frozen. (Thawing the area will resolve this problem.)  
In especially cold weather, if a sensor is frozen the screen may show an abnormal display, or obstacles may not be detected.
  - The sensor is covered in any way.
  - The vehicle is leaning considerably to one side.
  - On an extremely bumpy road, on an incline, on gravel, or on grass.
  - The vicinity of the vehicle is noisy due to vehicle horns, motorcycle engines, air brakes of large vehicles, or other loud noises producing ultrasonic waves.
  - There is another vehicle equipped with parking assist sensors in the vicinity.
  - The sensor is coated with a sheet of spray or heavy rain.
  - The vehicle is equipped with a fender pole or wireless antenna.
  - Towing eyelet is installed.
  - The bumper or sensor receives a strong impact.
  - The vehicle is approaching a tall or curved curb.
  - In harsh sunlight or intense cold weather.
  - The area directly under the bumpers is not detected.
  - If obstacles draw too close to the sensor.
  - A non-genuine Lexus suspension (lowered suspension etc.) is installed.
  - People may not be detected if they are wearing certain types of clothing.

In addition to the examples above, there are instances in which, because of their shape, signs and other objects may be judged by the sensor to be closer than they are.

- The shape of the obstacle may prevent the sensor from detecting it. Pay particular attention to the following obstacles:
  - Wires, fences, ropes, etc.
  - Cotton, snow and other materials that absorb sound waves
  - Sharply-angled objects
  - Low obstacles
  - Tall obstacles with upper sections projecting outwards in the direction of your vehicle
- The following situations may occur during use.
  - Depending on the shape of the obstacle and other factors, the detection distance may shorten, or detection may be impossible.
  - Obstacles may not be detected if they are too close to the sensor.
  - There will be a short delay between obstacle detection and display. Even at slow speeds, there is a possibility that the obstacle will come within the sensor's detection areas before the display is shown and the warning beep sounds.
  - Thin posts or objects lower than the sensor may not be detected for collision when approached, even if they have been detected once.
  - It might be difficult to hear beeps due to the volume of audio system or air flow noise of air conditioning system.
- If a message is displayed on the multi-information display

→P. 832

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

 CAUTION

■ When using the Lexus parking assist-sensor

Observe the following precautions.

Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

- Do not use the sensor at speeds in excess of 10 km/h (6 mph).
- The sensors' detection areas and reaction times are limited. When moving forward or reversing, check the areas surrounding the vehicle (especially the sides of the vehicle) for safety, and drive slowly, using the brake to control the vehicle's speed.
- Do not install accessories within the sensors' detection areas.

 NOTICE

■ When using Lexus parking assist-sensor

In the following situations, the system may not function correctly due to a sensor malfunction etc. Have the vehicle checked by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- The Lexus parking assist-sensor operation display flashes, and a beep sounds when no obstacles are detected.
- If the area around a sensor collides with something, or is subjected to strong impact.
- If the bumper collides with something.
- If the display shows continuously without a beep.
- If a display error occurs, first check the sensor.  
If the error occurs even if there is no ice, snow or mud on the sensor, it is likely that the sensor is malfunctioning.

■ Notes when washing the vehicle

Do not apply intensive bursts of water or steam to the sensor area.

Doing so may result in the sensor malfunctioning.

## Lexus parking assist monitor

The parking assist monitor assists the driver by displaying an image of the view behind the vehicle while backing up, for example while parking.

The parking assist monitor assists with the following 2 backing-up operations:


- Perpendicular parking (parking in a garage, etc.)
- Parallel parking (parking at the side of the road, etc.)

The screen illustrations used in this text are intended as examples, and may differ from the image that is actually displayed on the screen.

Parking assist monitor will activate when the shift lever is in R.

If you move the lever out of R, the parking assist monitor will be deactivated.

When the shift lever is shifted to the R position and any mode button (such as "MENU") is pressed, the parking assist monitor is canceled, and the screen is switched to the mode of the button that was pressed.

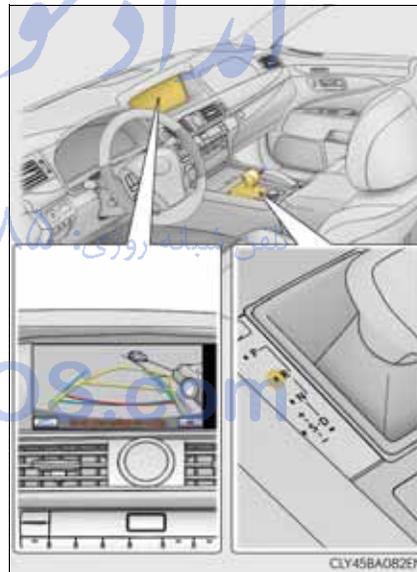

### Using the Lexus parking assist monitor

#### ■ Screen display

The parking assist monitor screen will be displayed if the shift lever is shifted to R while the engine switch is in IGNITION ON mode.

The parking assist monitor displays the last-used parking mode first.

#### ▶ Perpendicular parking

#### ▶ Parallel parking



#### ① Display mode switch screen button

Switches the display mode. (→P. 310)

#### ② Parking mode switch screen button

Switches the parking mode (between perpendicular parking and parallel parking assist screens)

#### ③ Narrow mode screen on-off button


Switch the narrow mode on and off. (→P. 324)

► Using the system when perpendicular parking

Use any of the following modes when perpendicular parking (for example, when parking in a garage).



Each time you select the display mode switch screen button, the display mode switches in the following order:

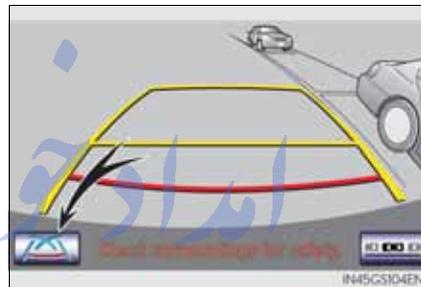


Estimated course line display mode → Parking assist guide line display mode → Distance guide line display mode → Estimated course line display mode

FarmaSOS.com


- Estimated course line display mode (→P. 313)

Estimated course lines are displayed which move in accordance with the operation of the steering wheel.

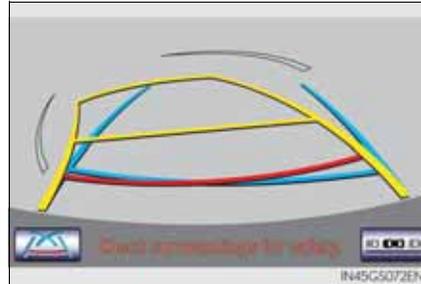

- Parking assist guide line display mode (→P. 315)

The steering wheel return points (parking assist guide lines) are displayed.

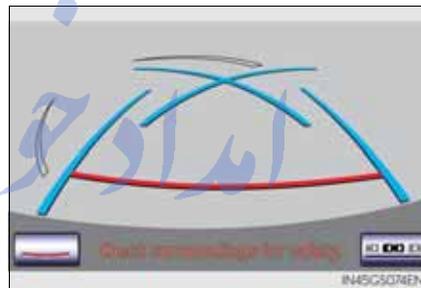


- Distance guide line display mode

Distance guide lines only are displayed.



■ Using the system when parallel parking

Screen display and beep sounds provide an estimation of the point at which you should turn the steering wheel when parallel parking. If the position the vehicle is to be parked in is narrower than usual, narrow mode can be used.

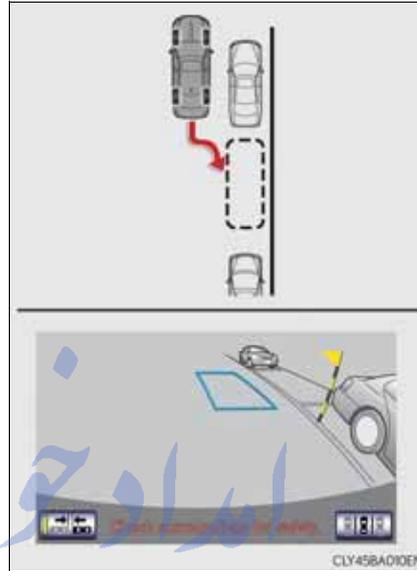


Each time you select the narrow mode screen on-off button, the narrow mode and the normal mode are switched.




■ Switching the parking mode screen

Each time you select the parking mode switch screen button, the perpendicular parking mode and parallel parking mode are switched.

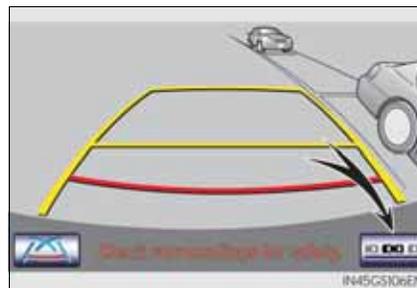

## Perpendicular parking (estimated course line display mode)

### ■ Screen description

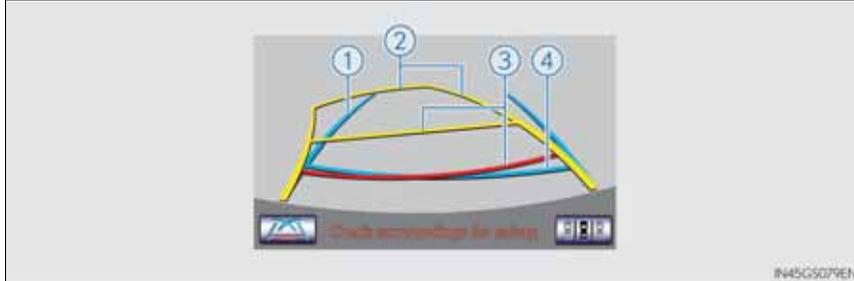

#### ① Vehicle width extension guide line

The line indicates a guide path when the vehicle is being backed straight up.

The displayed width is wider than the actual vehicle width.

The line aligns with the estimated course lines when the steering wheel is straight.

#### ② Estimated course lines

The lines show an estimated course when the steering wheel is turned.

#### ③ Distance guide line

The line moves, together with the estimated course lines, in sync with the steering wheel. The line shows points approximately 0.5 m (1.5 ft.) (red) and approximately 1 m (3 ft.) (yellow) from the center of the edge of the bumper.

#### ④ Distance guide line

The line shows distance behind the vehicle, a point approximately 0.5 m (1.5 ft.) (blue) from the edge of the bumper.

■ Parking operation


When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

1 Shift the shift lever to the R position.

2 Turn the steering wheel so that the estimated course lines are within the parking space, and back up slowly.


① Parking space

② Estimated course lines

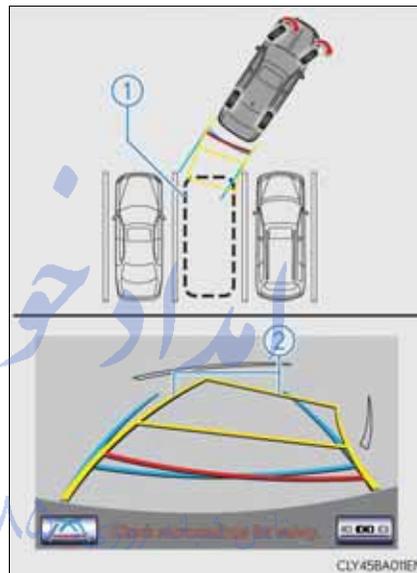

3 When the rear position of the vehicle has entered the parking space, turn the steering wheel so that the vehicle width extension guide lines are within the left and right dividing lines of the parking space.


③ Vehicle width extension guide line

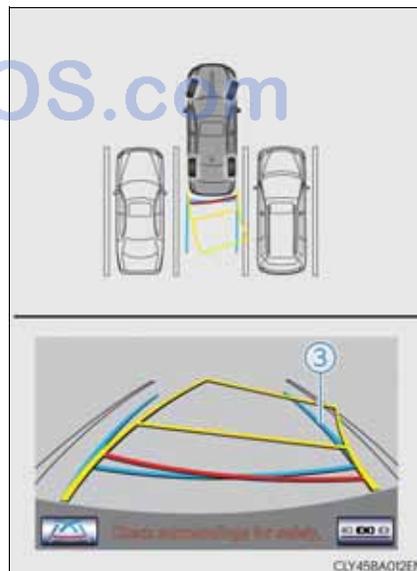

- 4 Once the vehicle width extension guide lines and the parking space lines are parallel, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.
- 5 Stop the vehicle in an appropriate place, and finish parking.

### Perpendicular parking (parking assist guide line display mode)

#### ■ Screen description

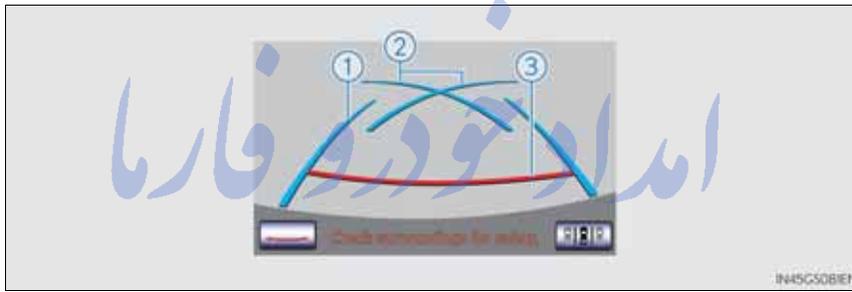

- ① Vehicle width extension guide lines  
These lines indicate a guide path when the vehicle is being backed straight up. The displayed width is wider than the actual vehicle width.
- ② Parking assist guide lines  
These lines indicate the path of the smallest turn possible behind the vehicle.  
These lines also indicate the approximate position of the steering wheel when parking.
- ③ Distance guide line  
This line (red) indicates points approximately 0.5 m (1.5 ft.) behind the rear bumper of your vehicle.

■ Parking operation


When parking in a space which is in the reverse direction to the space described in the procedure below, the steering directions will be reversed.

1 Shift the shift lever to the R position.

2 Back up until the parking assist guide line meets the edge of the left-hand dividing line of the parking space.

① Parking assist guide line

② Parking space dividing line

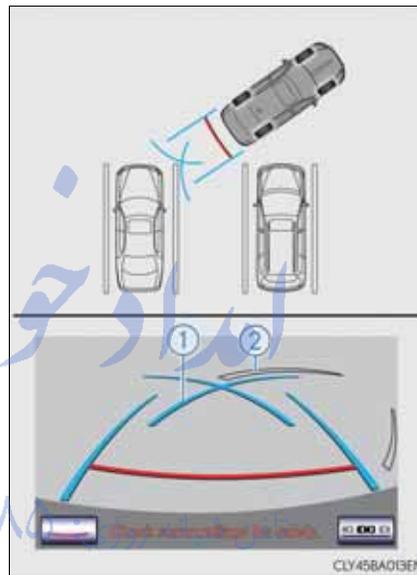


3 Turn the steering wheel all the way to the right, and back up slowly.

4 Once the vehicle is parallel with the parking space, straighten the steering wheel and back up slowly until the vehicle has completely entered the parking space.

5 Stop the vehicle in an appropriate place, and finish parking.

## Parallel parking

### ■ Vehicle movement procedure

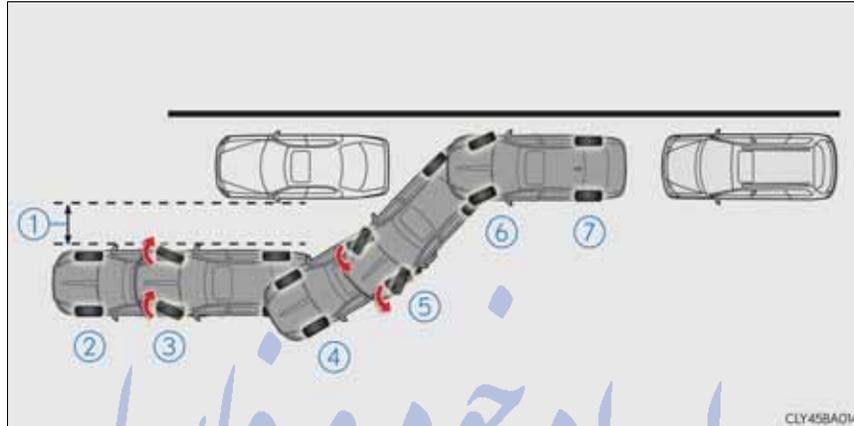

- ① Approx. 1 m (3 ft.)
- ② Keeping parallel with the road, stop the vehicle leaving a gap of approximately 1 m (3 ft.) between your vehicle and the parked vehicle (Step ① in “Parking operation”).
- ③ Back up until the black and yellow vertical pole just overlaps the rear end of the parked vehicle. Then stop the vehicle (Step ④ in “Parking operation”).  
 Leaving the vehicle stopped, move the steering wheel until the blue outline meets the desired parking space, and back up while keeping the steering wheel in that position (Step ⑤ in “Parking operation”).
- ④ A curved blue line is displayed. Keep the steering wheel in the same position and back up until the curved blue line meets the right corner of the parking space (Step ⑦ in “Parking operation”).
- ⑤ When it meets the right corner of the parking space, turn the steering wheel in the opposite direction as far as it will go (Step ⑧ in “Parking operation”).

- ⑥ Keeping the steering wheel in that position, check your surroundings visually and using mirrors, and back up using the distance guide lines etc. as a reference (Step ⑨ in “Parking operation”).
- ⑦ When the vehicle is approximately in the desired parking location, parallel parking assist is complete (Step ⑩ in “Parking operation”).

#### ■ Parking operation

The following example describes the procedure for pulling into a parking space on the right. For pulling into a parking space on the left, substitute left for right and vice versa in all steps.

- ① Stop the vehicle in the position as described below, and straighten the steering wheel.

- ① Roughly half a vehicle's length

- ② Desired parking space


- ③ Approx. 1 m (3 ft.)

- ④ Parked vehicle

- ⑤ Your vehicle

A position in which you are parallel with the road (or the side of the road), and in which there is approximately 1 m (3 ft.) of space between your vehicle and the parked vehicle

A position in which you are half a vehicle's length ahead of the parked vehicle

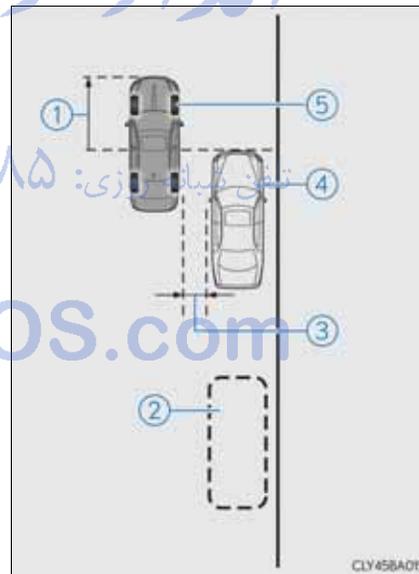


- 2 Shift the shift lever to the R position.
- 3 Make sure the monitor displays the part behind the rear tires of the parked vehicle, and select .

If the area is not displayed, move the vehicle to forward.

- 4 With the steering wheel straight, back up slowly to a position at which the black and yellow vertical pole just overlaps the rear end of the parked vehicle. Then stop the vehicle.


- ① Black and yellow vertical pole
- ② Back the vehicle up to here

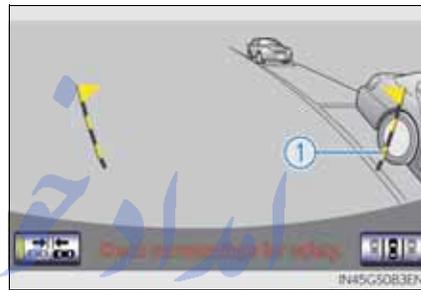


- 5 Turn the steering wheel with the vehicle stopped until the blue outline meets the desired parking space.

- ① Blue outline
- ② Black and yellow vertical pole
- ③ Extended line

If the extended line from the blue outline is displayed, the parallel parking assist is operational.

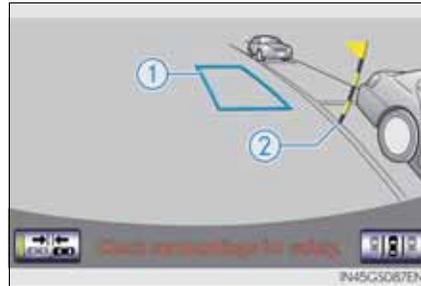

- ④ Turn the steering wheel right
- ⑤ Black and yellow vertical pole
- ⑥ Blue outline

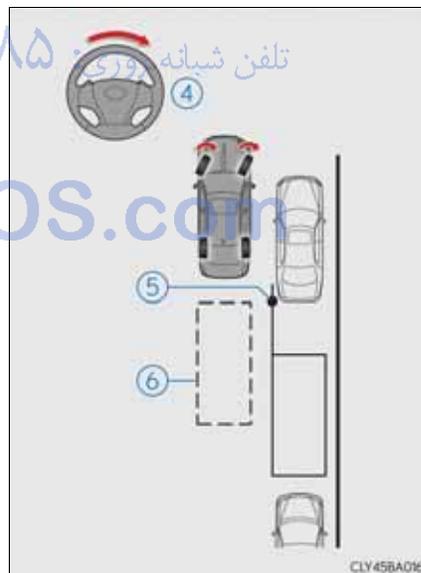

- 6 Keep the steering wheel in its current position and backing up.

The parallel parking assist will be canceled if the steering wheel is moved while backing up. Shift the shift lever out of the R position, and restart from the step 1.

When backing up, be careful not to hit any obstacles with your vehicle. Back the vehicle up slowly.





امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

- 7** A curved blue line will appear on the screen. Keep the steering wheel in its current position and back up slowly. Stop when the curved blue line meets the corner of the desired parking space.

① Curved blue line

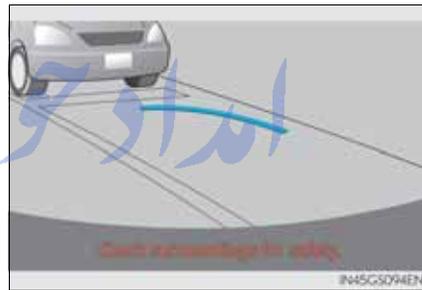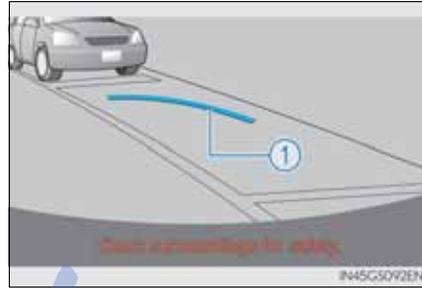

② Back up - keeping the steering wheel in its current position

③ Curved blue line

④ Curved blue line meets the corner here

If you back up too quickly, you may lose synchronization with the parallel parking assist.



- 8** Leaving the vehicle stopped, turn the steering wheel all the way to the left.

Be sure to turn the steering wheel only when the vehicle is stopped.

- 9** When the screen changes, keep the steering wheel in its current position and back up.

When backing up, be careful not to hit any obstacles with your vehicle. Back the vehicle up slowly.

- 10** When the vehicle is parallel with the road or the shoulder, straighten the steering wheel.

Check your surroundings visually and with the mirrors, then back up using the distance guide lines as a reference, and stop.

When the vehicle is approximately in the desired parking location, the parallel parking assist is complete.

- Parallel parking assist mode information
  - There is a possibility that parallel parking guidance may not be given when backing up at a very slow speed.
  - If the trunk is opened, the parallel parking assist will be discontinued halfway.

- Canceling parallel parking assist

Select .

- If the message “Steering wheel turned too far, please return.” is displayed

The steering wheel has been turned too far, and the system cannot function. Return the steering wheel to its original position.

If the message is displayed before the outline is positioned over the desired parking space, it is likely that the vehicle is too far away from the shoulder. Check that there is a gap of approximately 1 m (3 ft.) between your vehicle and the parked vehicle.


**■ Narrow mode**

If the position the vehicle is to be parked in is narrower than usual, narrow mode can be used.

## ① Normal mode

## ② Narrow mode

The engine switch is turned off when the parking assist monitor is canceled with narrow mode, the caution screen is displayed first when the parallel parking assist is selected next time.

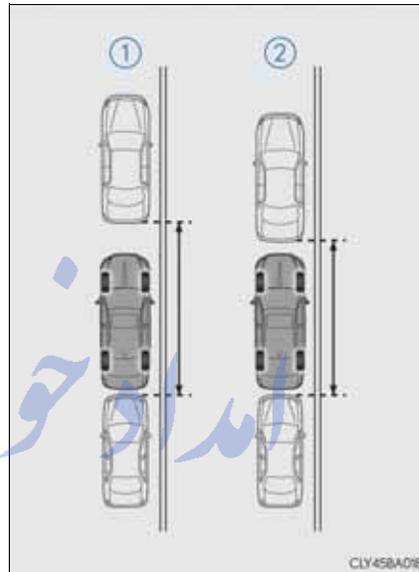


تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵


FarmaSOS.com

- Operating narrow mode

- 1 Select  while in parallel parking assist mode.

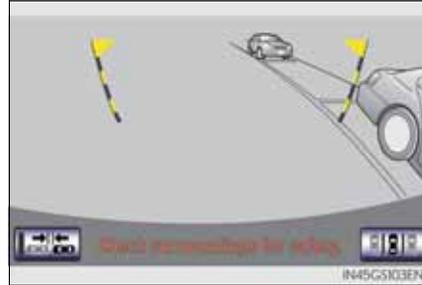


- 2 Confirm the warning on the caution screen. If you agree, select “I agree”. To cancel narrow mode, select .

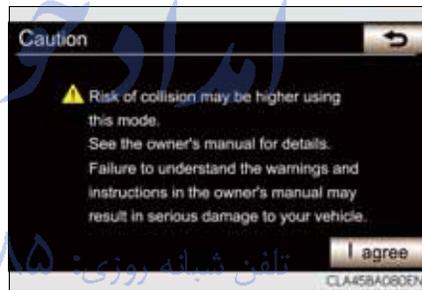

- 3 When the system is switched to narrow mode, the indicator on  will be turned on.

Select  again to switch the system to the normal mode.

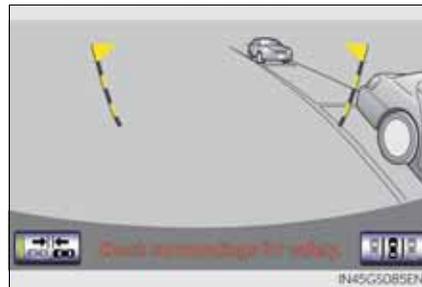

### Lexus parking assist monitor precautions


#### ■ Area displayed on screen

The parking assist monitor displays an image of the view from the bumper of the rear area of the vehicle.

To adjust the image on the parking assist monitor screen.

(→P. 396)


- The area displayed on the screen may vary according to vehicle orientation conditions.
- Objects which are close to either corner of the bumper or under the bumper cannot be seen on the screen.
- The camera uses a special lens. The distance of the image that appears on the screen differs from the actual distance.
- Items which are located higher than the camera may not be displayed by the monitor.

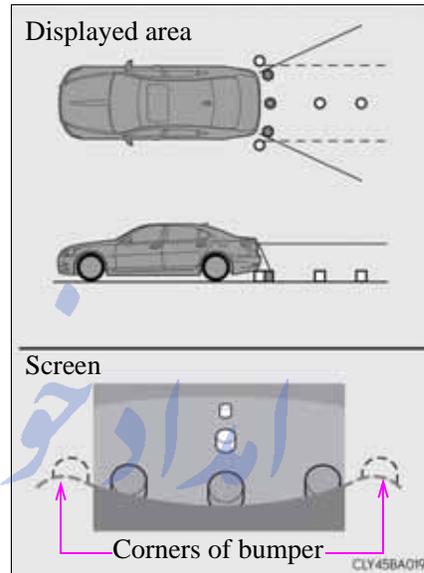

FarmaSOS.com

- Lexus parking assist monitor camera

The camera for the parking assist monitor is located above the license plate.

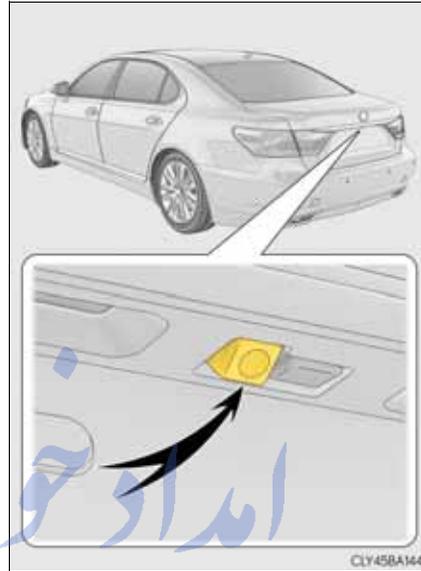

- Using the camera

If the camera lens becomes dirty, it cannot transmit a clear image. If water droplets, snow or mud adhere to the lens, rinse with water and wipe with a soft cloth. If the lens is extremely dirty, wash it with a mild cleanser and rinse.

- Differences between the screen and the actual road

The distance guide lines and the vehicle width extension guide lines may not actually be parallel with the dividing lines of the parking space, even when they appear to be so. Be sure to check visually.

The distances between the vehicle width extension guide lines and the left and right dividing lines of the parking space may not be equal, even when they appear to be so. Be sure to check visually.

The distance guide lines give a distance guide for flat road surfaces. In any of the following situations, there is a margin of

error between the guide lines on the screen and the actual distance/course on the road.


امداد خودرو فارما

تلفن شبانه روزی: ۰۸۵-۸۸۸۶۲-۰۲۱

FarmaSOS.com


- When the ground behind the vehicle slopes up sharply

The distance guide lines will appear to be closer to the vehicle than the actual distance. Because of this, objects will appear to be farther away than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

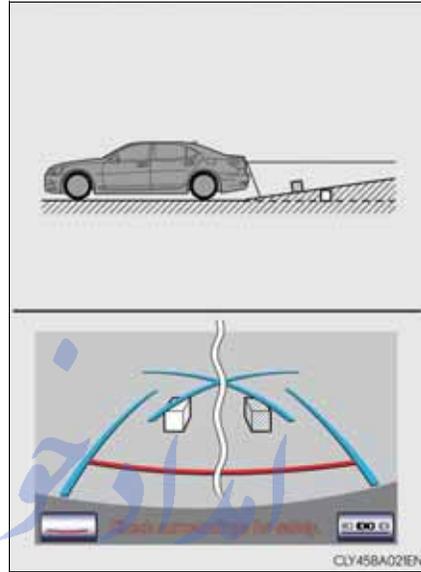


- When the ground behind the vehicle slopes down sharply

The distance guide lines will appear to be further from the vehicle than the actual distance. Because of this, objects will appear to be closer than they actually are. In the same way, there will be a margin of error between the guidelines and the actual distance/course on the road.

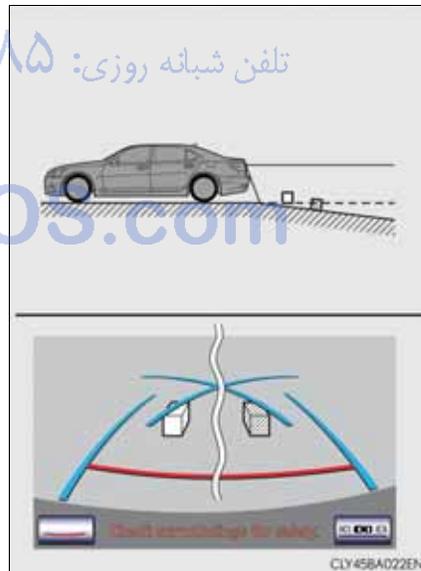

- When any part of the vehicle sags

When any part of the vehicle sags due to the number of passengers or the distribution of the load, there is a margin of error between the guide lines on the screen and the actual distance/course on the road.

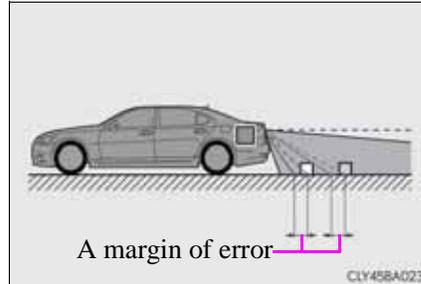


- When approaching three-dimensional objects

The estimated course lines target a flat surfaced objects (such as the road). It is not possible to determine the position of three-dimensional objects (such as vehicles) using the estimated course lines and distance guide lines. When approaching a three-dimensional object that extends outward (such as the flatbed of a truck), be careful of the following.


- Estimated course lines

Visually check the surroundings and the area behind the vehicle. In the case shown in the illustration, the truck appears to be outside of the estimated course lines and the vehicle does not look as if it hits the truck. However, the rear body of the truck may actually cross over the estimated course lines. In reality if you back up as guided by the estimated course lines, the vehicle may hit the truck.

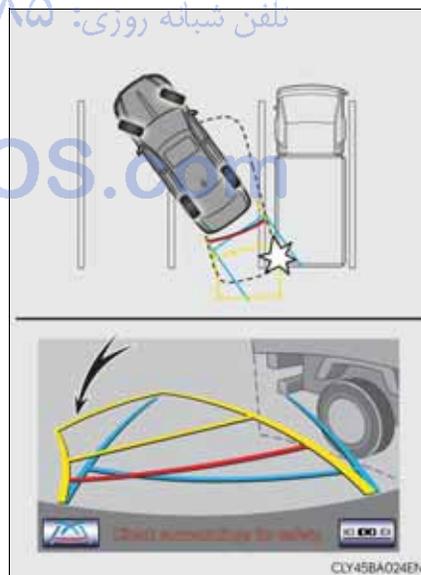

- Distance guidelines

Visually check the surroundings and the area behind the vehicle. On the screen, it appears that a truck is parking at point ②. However, in reality if you back up to point ①, you will hit the truck. On the screen, it appears that ① is closest and ③ is furthest away. However, in reality, the distance to ① and ③ is the same and ② is farther than ① and ③.

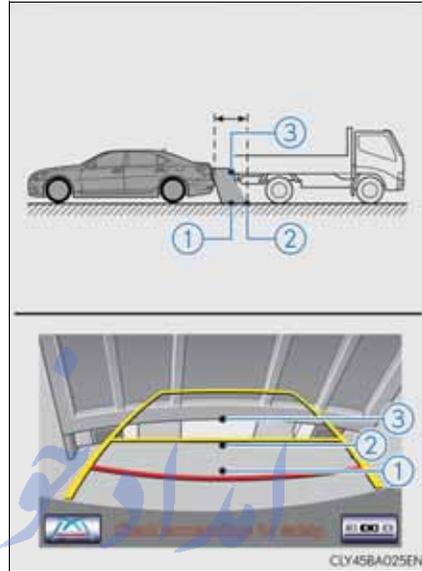

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

### Things you should know


■ If you notice any symptoms

If you notice any of the following symptoms, refer to the likely cause and the solution, and re-check.

If the symptom is not resolved by the solution, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

Symptom	Likely cause	Solution
The image is difficult to see	<ul style="list-style-type: none"> <li>• The vehicle is in a dark area</li> <li>• The temperature around the lens is either high or low</li> <li>• The outside temperature is low</li> <li>• There are water droplets on the camera</li> <li>• It is raining or humid</li> <li>• Foreign matter (mud etc.) is adhering to the camera</li> <li>• There are scratches on the camera</li> <li>• Sunlight or headlights are shining directly into the camera</li> <li>• The vehicle is under fluorescent lights, sodium lights, mercury lights etc.</li> </ul>	<p>Back up while visually checking the vehicle's surroundings. (Use the monitor again once conditions have been improved.)</p> <p>To adjust the image on the parking assist monitor screen. (→P. 396)</p>

Symptom	Likely cause	Solution
The image is blurry	Dirt or foreign matter (such as water droplets, snow, mud etc.) is adhering to the camera.	Rinse the camera lens with water and wipe it clean with a soft cloth. Wash with a mild soap if the dirt is stubborn.
The image is out of alignment	The camera or surrounding area has received a strong impact.	Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
The guide lines are very far out of alignment	The camera position is out of alignment.	Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
The estimated course lines move even though the steering wheel is straight	There is a malfunction in the signals being output by the steering sensor.	Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

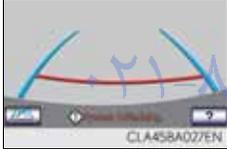Symptom	Likely cause	Solution
<p>Guide lines are not displayed</p>	<p>The trunk lid is open.</p>	<p>Close the trunk lid. If this does not resolve the symptom, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.</p>
<p>“System initializing.” is displayed</p> 	<ul style="list-style-type: none"> <li>• The battery has been reinstalled.</li> <li>• The steering wheel has been moved while the battery was being reinstalled.</li> <li>• Battery power is low.</li> <li>• The steering sensor has been reinstalled.</li> <li>• There is a malfunction in the signals being output by the steering sensor.</li> </ul>	<p>Stop the vehicle, and turn the steering wheel as far as it will go to the left and right. If this does not resolve the symptom, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.</p> <ul style="list-style-type: none"> <li>• On the system initialization screen, select the “?” button to display the operating procedure.</li> </ul> 

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

4

Driving



امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

■ When using the Lexus parking assist monitor system

The parking assist monitor is a supplemental device intended to assist the driver when backing up. When backing up, be sure to visually check all around the vehicle both directly and using the mirrors before proceeding. If you do not, you may hit another vehicle, and could possibly cause an accident.

Observe the following precautions to avoid an accident that could result in death or serious injuries.

- Never depend on the parking assist monitor entirely when backing up. The image and the position of the guide lines displayed on the screen may differ from the actual state.  
Use caution, just as you would when backing up any vehicle.
- Be sure to back up slowly, depressing the brake pedal to control vehicle speed.
- If you seem likely to hit nearby vehicles, obstacles, people or mount the shoulder, depress the brake pedal to stop the vehicle, then disable the assist system by select  on the screen to cancel the system.
- The instructions given are only guidelines.  
When and how much to turn the steering wheel will vary according to traffic conditions, road surface conditions, vehicle condition, etc. when parking. It is necessary to be fully aware of this before using the parking assist system.
- When parking, be sure to check that the parking space will accommodate your vehicle before maneuvering into it.
- Do not use the Lexus parking assist monitor system in the following cases:
  - On icy or slick road surfaces, or in snow
  - When using tire chains or emergency tires
  - When the trunk lid is not closed completely
  - On roads that are not flat or straight, such as curves or slopes.
- In low temperatures, the screen may darken or the image may become faint. The image could distort when the vehicle is moving, or you may become unable to see the image on the screen. Be sure to check direct visually and with the mirrors all around the vehicle before proceeding.
- If the tire sizes are changed, the position of the guide lines displayed on the screen may change.
- The camera uses a special lens. The distances between objects and pedestrians that appear in the image displayed on the screen will differ from the actual distances. (→P. 327)

**⚠ CAUTION**

- When using the perpendicular parking assist screen (estimated course line display mode)

If the steering wheel is straight and the vehicle width extension guide lines and the estimated course lines are not in alignment, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- When using the parallel parking assist screen

- Do not use the system if the display is incorrect due to an uneven (curvy/hilly) road or a non-straight road.

- Make sure to operate the steering wheel only when the vehicle is stopped.

- Be sure to check that there are no obstacles inside the blue outline.

If there are any obstacles inside the blue outline, do not use the parallel parking assist.

- When positioning the blue outline over the parking space, be sure to position it so that the extended blue line may not cross the tire of the vehicle parked in front of the empty space.

- If the extended line of the blue outline is crossing the parked vehicle, your vehicle may be too close. Check that there is a gap of approximately 1 m (3 ft.) between your vehicle and the parked vehicle.




**NOTICE****■ How to use the camera**

- The parking assist monitor may not operate properly in the following cases.
  - If the back of the vehicle is hit, the position and mounting angle of the camera may change.
  - As the camera has a water proof construction, do not detach, disassemble or modify it. This may cause incorrect operation.
  - Do not strongly rub the camera lens. If the camera lens is scratched, it cannot transmit a clear image.
  - Do not allow organic solvent, car wax, window cleaner or glass coat to adhere to the camera. If this happens, wipe it off as soon as possible.
  - If the temperature changes rapidly, such as when hot water is poured on the vehicle in cold weather, the system may not operate normally.
  - When washing the vehicle, do not apply intensive bursts of water to the camera or camera area. Doing so may result in the camera malfunctioning.
  - When the camera is used under fluorescent lights, sodium light or mercury light etc., the lights and the illuminated areas may appear to flicker.
- Do not expose the camera to strong impact as this could cause a malfunction. If this happens, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.

FarmaSOS.com

## Driving mode select switch

The driving modes can be selected to suit driving condition.

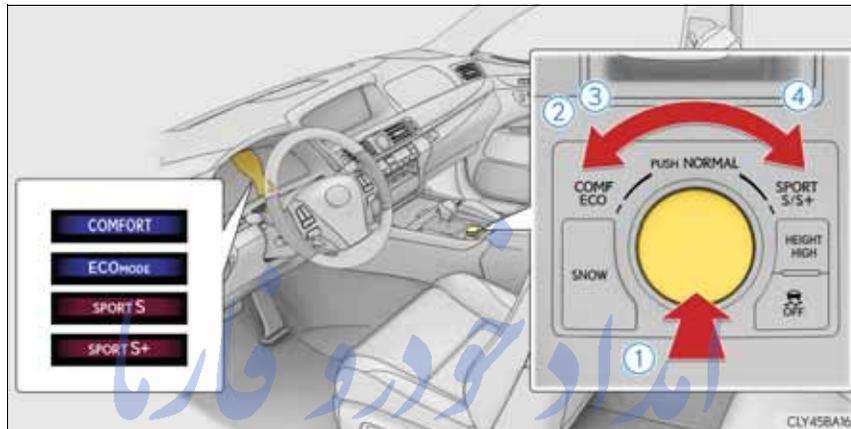

### ① Normal mode

For normal driving.

Press the switch to change the driving mode to normal mode when not in normal mode.

### ② Comfort mode

By controlling the suspension, riding comfort is further enhanced. Suitable for city driving.

When not in comfort mode and the driving mode select switch is turned to the left, the “COMFORT” indicator comes on in the multi-information display.

Also, the driving mode is automatically displayed on the “Side Display”. (→P. 394)



### ③ Eco drive mode

Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.

When in comfort mode and the driving mode select switch is turned to the left, the “ECO MODE” indicator comes on and Eco Driving Indicator Zone Display and average fuel consumption is shown on the multi-information display.

(→P. 110)

Also, the driving mode is automatically displayed on the “Side Display”. (→P. 394)



تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

④ Sport mode

- SPORT S mode

Assists acceleration response by controlling the transmission and the engine. Suitable for when powerful acceleration is desirable.

When not in SPORT S mode and the driving mode select switch is turned to the right, the “SPORT S” indicator comes on in the multi-information display.

Also, the driving mode is automatically displayed on the “Side Display”. (→P. 394)



- SPORT S+ mode

Helps to ensure steering performance and driving stability by simultaneously controlling the steering and suspension in addition to the transmission. Suitable for sporty driving.

When in SPORT S mode and the driving mode select switch is turned to the right, the “SPORT S+” indicator comes on in the multi-information display.

Also, the driving mode is automatically displayed on the “Side Display”. (→P. 394)



**■ Operation of the air conditioning system in Eco drive mode**

Eco drive mode controls the heating/cooling operations and fan speed of the air conditioning system to enhance fuel efficiency (→P. 438). To improve air conditioning performance, adjust the fan speed or turn off Eco drive mode.

**■ Sport mode automatic deactivation**

Sport mode is automatically deactivated if the engine switch is turned off after driving in sport mode.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Electronically modulated air suspension


By independently controlling the damping force of the shock absorbers for each of the 4 wheels according to the road and driving conditions and the selected driving mode, this system achieves ride comfort with superior steering stability, and ensures good vehicle posture.

In addition, vehicle height can be selected according to road and driving conditions.

The vehicle height is maintained at the selected level regardless of the number of occupants and luggage weight.

Turns high mode on/off.

When on, the “HEIGHT HIGH” indicator will come on.

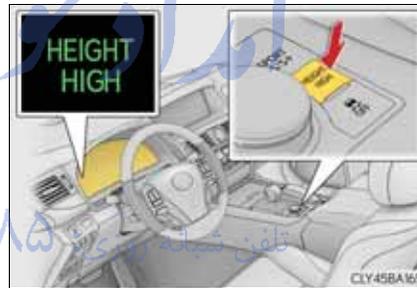

### ■ Operating sound of the air suspension compressor

When the vehicle height is lowered, such as when entering or loading the vehicle, or high mode is selected, the compressor may operate and a whirring sound may be heard. This does not indicate a malfunction.

 CAUTION

■ Be sure to stop the engine in the following situations in order to stop operation of the electronically modulated air suspension:

- The vehicle is parked on a curb.
- Any of the wheels is stuck in a ditch.
- It is necessary to jack up the vehicle.
- It is necessary to tow the vehicle with part of it lifted.

If the engine switch remains in IGNITION ON mode, the vehicle height may change, and you may catch part of your body in the vehicle, resulting in accidental damage.

امداد خودرو فارما

تلفن شبانه روزی: ۰۸۵-۸۸۸۶۲۰۲۱

FarmaSOS.com

## Driving assist systems

To help enhance driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

### ◆ ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

### ◆ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

### ◆ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces

### ◆ TRC (Traction Control)

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

### ◆ Hill-start assist control

Helps to prevent the vehicle from rolling backward when starting on an incline or slippery slope

---

◆ VGRS (Variable Gear Ratio Steering)

---

Adjusts the wheel turning angle in accordance with the vehicle speed and steering wheel movement

◆ EPS (Electric Power Steering)

---

Employs an electric motor to reduce the amount of effort needed to turn the steering wheel

◆ VDIM (Vehicle Dynamics Integrated Management)

---

Provides integrated control of the ABS, brake assist, TRC, VSC, hill-start assist control, EPS and VGRS systems

Helps to maintain vehicle stability when swerving on slippery road surfaces by controlling the brakes, engine output, steering assist, and steering ratio

◆ PCS (Pre-Crash Safety system) (if equipped)

---

→P. 355

◆ Rear Pre-Crash Safety (if equipped)

---

→P. 369

◆ Emergency brake signal

---

When the brakes are applied suddenly, the stop lights automatically flash to alert the vehicle behind

◆ BSM (Blind Spot Monitor) (if equipped)

---

→P. 375

### When the TRC/VSC/ABS/hill-start assist control systems are operating

The slip indicator light will flash while the TRC/VSC/ABS/hill-start assist control systems are operating.

The stop lights and high mounted stoplight turn on when the hill-start assist control system is operating.




### Disabling the TRC/VSC systems

If the vehicle gets stuck in fresh snow or mud, the TRC and VSC systems may reduce power from the engine to the wheels. Pressing VSC OFF switch to turn the system off may make it easier for you to rock the vehicle in order to free it.

#### ■ Turning off the TRC system only

To turn the TRC system off, quickly press and release the switch.

The “TRC OFF” will be shown on the multi-information display. Press the switch again to turn the system back on.

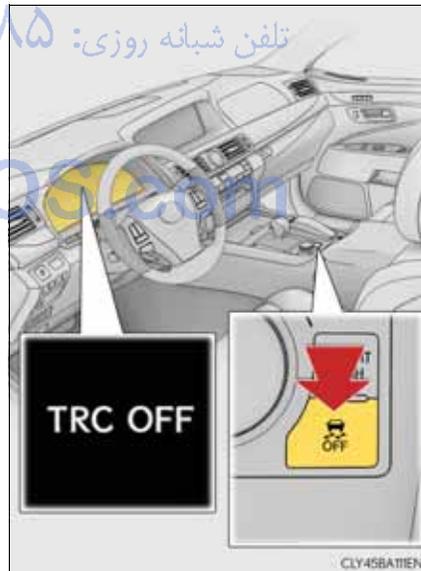


### ■ Turning off both TRC and VSC systems

To turn the TRC and VSC systems off, press and hold the switch for more than 3 seconds while the vehicle is stopped.

The VSC OFF indicator light will come on and the “TRC OFF” will be shown on the multi-information display.\*

Press the switch again to turn the systems back on.

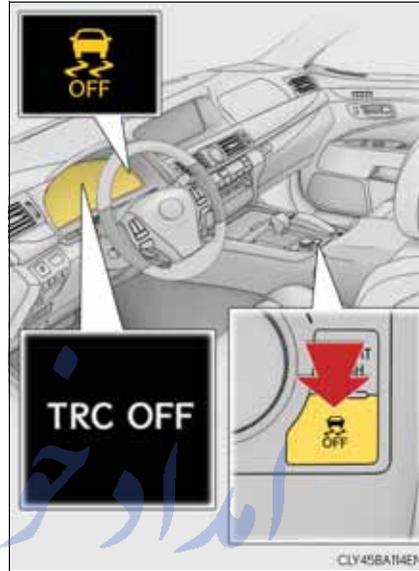

\*: On vehicles with pre-crash safety system, pre-crash alert braking, pre-crash brake assist and pre-crash braking will also be disabled. The pre-crash safety system warning light will come on and the “Pre-crash brakes are disabled because VSC is OFF” will be shown on the multi-information display. (→P. 355)

- When the message is displayed on the multi-information display showing that TRC has been disabled even if the VSC OFF switch has not been pressed  
TRC and hill-start assist control cannot be operated. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Hill-start assist control is operational when
  - The system has detected that the vehicle is moving backward.
  - Vehicles without paddle shift switches: The shift lever is in the D or S position.  
Vehicles with paddle shift switches: The shift lever is in the D or M position.
  - The brake pedal is not depressed.
- VGRS is disabled when  
VGRS may stop operating in the following situations.  
In this event, the steering wheel may move from its straight forward position, but it will return when the system restarts.
  - When the steering wheel is operated for an extended period of time while the vehicle is stopped or is moving very slowly
  - When the steering wheel has been held fully to the left or right
  - When the battery is low or the voltage temporarily drops
  - After the engine is started at lower than  $-30^{\circ}\text{C}$  ( $-22^{\circ}\text{F}$ )The center position of the steering wheel may change when VGRS is disabled. However, the position will return to normal after VGRS is reactivated.
- Sounds and vibrations caused by the ABS, brake assist, TRC, VSC, hill-start assist control and VGRS systems
  - A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the engine is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
  - Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
    - Vibrations may be felt through the vehicle body and steering.
    - A motor sound may be heard after the vehicle comes to a stop.
  - The steering wheel may be moved slightly or a sound may be heard when the engine is started or stopped. None of these indicate that a malfunction has occurred.
- EPS operation sound

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

امداد خودرو فارما

تلفن شبانه روزی: ۰۸۵-۸۸۸۶۲۰۲۱

FarmaSOS.com

**■ Reactivation of the TRC/VSC systems**

Even after the TRC/VSC systems have been turned off, turning the engine off and then on again will automatically reactivate the TRC/VSC systems.

**■ Reactivation of the TRC system linked to vehicle speed**

When only the TRC system is turned off, the TRC system will turn on when vehicle speed increases. However, when both TRC and VSC systems are turned off, the systems will not turn on even when vehicle speed increases.

**■ Reduced effectiveness of the EPS system**

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result.\* Should this occur, refrain from excessive steering input or stop the vehicle and turn the engine off. The EPS system should return to normal within 10 minutes.

\*: If the LKA (Lane-Keeping Assist) system cannot operate in this case, a warning message will be shown on the multi-information display.

**■ Operating conditions of emergency brake signal**

When the following three conditions are met, the emergency brake signal will operate:

- The emergency flashers are off.
- Actual vehicle speed is over 55 km/h (35 mph).
- The brake pedal is depressed in a manner that cause the system to judge from the vehicle deceleration that this is a sudden braking operation.

**■ Automatic system cancelation of emergency brake signal**

The emergency brake signal will turn off in any of the following situations:

- The emergency flashers are turned on.
- The brake pedal is released.
- The system judges from the vehicle deceleration that is not a sudden braking operation.

 CAUTION

- The ABS does not operate effectively when
  - The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
  - The vehicle hydroplanes while driving at high speed on wet or slick roads.
- Stopping distance when the ABS is operating may exceed that of normal conditions
 

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

  - When driving on dirt, gravel or snow-covered roads
  - When driving with tire chains
  - When driving over bumps in the road
  - When driving over roads with potholes or uneven surfaces
- TRC may not operate effectively when
 

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRC system is operating. Do not drive the vehicle in conditions where stability and power may be lost.
- Hill- start assist control does not operate effectively when
 

Do not overly rely on the hill-start assist control. The hill-start assist control may not operate effectively on steep inclines and roads covered with ice.
- When the VSC is activated
 

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.
- When the TRC/VSC systems are turned off
 

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to ensure vehicle stability and driving force, do not turn the TRC/VSC systems off unless necessary.

**⚠ CAUTION****■ Replacing tires**

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS, TRC and VSC systems will not function correctly if different tires are installed on the vehicle.

Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for further information when replacing tires or wheels.

**■ Handling of tires and the suspension**

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com


## PCS (Pre-Crash Safety system)\*

When the sensor detects that a frontal collision is highly likely or even unavoidable, safety systems such as the brakes and seat belts are automatically engaged to help avoid a collision or to lessen impact as well as vehicle damage.

### ◆ Pre-crash warning

When a high possibility of a frontal collision is detected, the pre-crash safety system warning light flashes, a buzzer sounds and a message is shown on the multi-information display to urge the driver to take evasive action.

Pre-crash warning can be disabled using the pre-crash braking off switch.

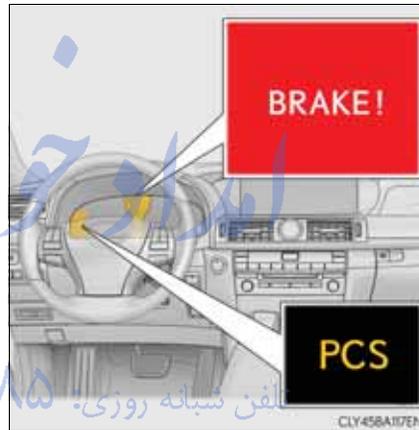

### ◆ Pre-crash seat belts (front seat only)

If the pre-crash sensor detects that a collision is unavoidable, the pre-crash safety system will retract the seat belt before the collision occurs.

The same will happen if the driver makes an emergency braking or loses control of the vehicle. (→P. 44)

### ◆ Pre-crash brake assist

When there is a high possibility of a frontal collision, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

\*: If equipped

#### ◆ Pre-crash braking

When there is a high possibility of a frontal collision, the system warns the driver using a warning light, warning display and buzzer. If the system determines that a collision is unavoidable, the brakes are automatically applied to help avoid a collision or to reduce the collision speed.

When the vehicle is being stopped by pre-crash braking, the brake will be engaged for a maximum of 2 seconds and then released automatically. This pre-crash braking can be canceled by depressing the accelerator pedal or brake pedal.

Pre-crash braking can be disabled using the pre-crash braking off switch.

#### ◆ Suspension control

When there is a high possibility of a frontal collision, the operation of suspension control helps prevent the front of the vehicle from dropping when the brakes are applied suddenly.

#### ◆ Steering gear control (VGRS) (vehicles with camera sensors)

When the system determines that a collision is unavoidable, the steering gear ratio is changed to help improve the response to steering input.

#### ◆ Driver monitor system (if equipped)

When the system determines that there is a possibility of a collision, and either the driver is not facing forward or the driver's eyes are closed, pre-crash warnings are given in advance to warn the driver. If the system determines that the conditions to operate pre-crash alert braking have been met even when the possibility of a collision increases further, pre-crash alert braking will operate.


Pre-crash alert braking can be disabled using the pre-crash braking off switch.

### Disabling pre-crash braking

Pre-crash warning, pre-crash braking and pre-crash alert braking (vehicles with driver monitor system) can be switched between enabled and disabled by pressing the pre-crash braking off switch.

- ① Enabled
- ② Disabled

The pre-crash safety system warning light comes on when the system is disabled.

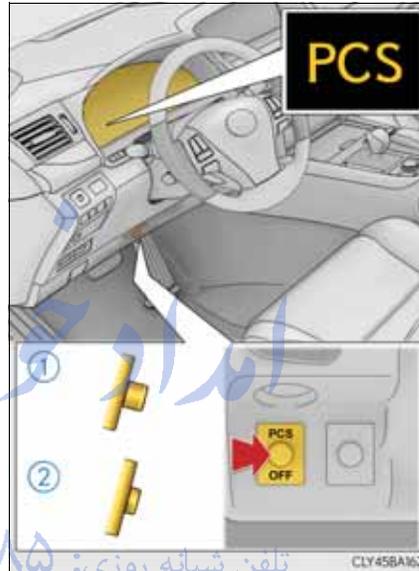

4

Driving

### Radar sensor

The radar sensor detects vehicles or other obstacles on or near the road ahead and determines whether a collision is imminent based on the position, speed, and heading of the obstacles.



### Camera sensors (if equipped)

The camera sensors detect pedestrians and other three-dimensional objects on or near the road ahead together with the radar sensor while the vehicle is moving.

When the headlights are on, near-infrared rays are projected to ensure proper detection performance in the night time.

① Camera sensors

② Near-infrared ray transmitters

▶ Vehicles with discharge head-lights

▶ Vehicles with LED head-lights



### Driver monitor sensor (vehicles with driver monitor system)

The driver monitor sensor detects the direction the driver is facing and whether the driver's eyes are open or closed.

The system determines whether the driver is facing forward and whether or not the driver's eyes are closed.



- The pre-crash safety system is operational when
  - Pre-crash warning:
    - ▶ Vehicles without camera sensors
      - The pre-crash braking off switch is not pressed.
      - Vehicle speed is greater than about 15 km/h (10 mph).
      - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 15 km/h (10 mph).
    - ▶ Vehicles with camera sensors
      - The pre-crash braking off switch is not pressed.
      - Vehicle speed is greater than about 5 km/h (4 mph).
      - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 5 km/h (4 mph).
  - Pre-crash seat belts (operating conditions A):
    - Vehicle speed is greater than about 30 km/h (19 mph).
    - The system detects sudden braking or skidding.
    - The front occupants are wearing a seat belt.
  - Pre-crash seat belts (operating conditions B):
    - Vehicle speed is greater than about 5 km/h (4 mph).
    - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 30 km/h (19 mph).
    - The front occupants are wearing a seat belt.
  - Pre-crash brake assist:
    - The VSC OFF switch is not pressed.
    - Vehicle speed is greater than about 30 km/h (19 mph).
    - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 30 km/h (19 mph).
    - The brake pedal is depressed.

- Pre-crash braking:
  - ▶ Vehicles without camera sensors
    - The pre-crash braking off switch is not pressed.
    - The VSC OFF switch is not pressed.
    - Vehicle speed is greater than about 15 km/h (10 mph).
    - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 15 km/h (10 mph).
  - ▶ Vehicles with camera sensors
    - The pre-crash braking off switch is not pressed.
    - The VSC OFF switch is not pressed.
    - Vehicle speed is greater than about 5 km/h (4 mph).
    - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 5 km/h (4 mph).
- Suspension control:
  - Vehicle speed is greater than about 5 km/h (4 mph).
  - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 30 km/h (19 mph).
- Steering gear control (VGRS) (vehicles with camera sensors):
  - Vehicle speed is greater than about 30 km/h (19 mph).
  - The speed at which your vehicle is approaching the obstacle or the vehicle running ahead of you is greater than about 30 km/h (19 mph).
- Pre-crash alert braking (vehicles with driver monitor system):
  - The pre-crash braking off switch is not pressed.
  - The VSC OFF switch is not pressed.
  - The system determines that the driver is not facing forward, or that the driver's eyes are closed.
  - Vehicle speed is greater than about 40 km/h (25 mph).
  - The speed at which your vehicle is approaching the vehicle running ahead of you is greater than about 40 km/h (25 mph).
  - The steering is not being turned.

- Conditions that may trigger the system even if there is no danger of a collision
  - When there is an object by the roadside at the entrance to a curve
  - When passing an oncoming vehicle on a curve
  - When driving over a narrow iron bridge
  - When there is a metal object on the road surface
  - When driving on an uneven road surface
  - When passing an oncoming vehicle on a left-turn (left-hand drive vehicles) or right-turn (right-hand drive vehicles)
  - When your vehicle rapidly closes on the vehicle in front
  - When a grade separation/interchange, sign, billboard, or other structure appears to be directly in the vehicle's line of travel
  - When there is a metal plate in the road in front of the vehicle on a downhill slope
  - When climbing a steep hill causes an overhead billboard or other metallic structure to appear directly in the vehicle's line of travel
  - When driving under an overpass
  - When an extreme change in vehicle height occurs
  - When passing through certain toll gates
  - When driving through a lump of steam or smoke
  - When the radar sensor moves off position due to its surrounding area being subjected to a strong impact

When the system is activated in the situations described above, there is also a possibility that the seat belts will retract quickly and the brakes will be applied with a force greater than normal. When the seat belt is locked in the retracted position, stop the vehicle in a safe place, release the seat belt and refasten it.

- Obstacles not detected
 

The radar sensor cannot detect plastic obstacles such as traffic cones. There may also be occasions when the sensor cannot detect pedestrians, animals, bicycles, motorcycles, trees, or snowdrifts.
- A camera sensor cannot detect obstacles in the following situations:
  - A camera sensor is directly receiving intense light, such as sunlight.
  - Visibility is poor because of bad weather or other reasons.
  - The sensor temperature is extremely high.
  - The headlights are not turned on in darkness such as at night or in a tunnel.

■ Situations in which the pre-crash safety system does not function properly

The system may not function effectively in situations such as the following:

- On roads with sharp bends or uneven surfaces
- If a vehicle suddenly moves in front of your vehicle, such as at an intersection
- If a vehicle suddenly cuts in front of your vehicle, such as when overtaking
- In inclement weather such as heavy rain, fog, snow or sand storms
- If the vehicle is skidding when VSC is not operating
- When an extreme change in vehicle height occurs
- When only part of your vehicle's front end collides with, or contacts, a vehicle or object in a frontal collision
- When the radar sensor moves off position due to its surrounding area being subjected to a strong impact
- If an obstacle in front of the vehicle is small
- When the system judges that the driver performed a collision avoidance operation via the accelerator pedal, brake pedal, or steering wheel

■ Automatic cancelation of the pre-crash safety system

When a malfunction occurs due to sensor contamination, etc. that results in the sensors being unable to detect obstacles, the pre-crash safety system will be automatically disabled. In this case, the system will not activate even if there is a collision possibility.

■ When there is a malfunction in the system

The pre-crash safety system warning light will flash and warning messages will be displayed. (→P. 826, 832)

■ Certification for the pre-crash safety system



The latest "DECLARATION of CONFORMITY" (DoC) is available at the following:  
<http://www.globaldenso.com/en/products/oem/index.html#2>

<p>Hereby, DENSO CORPORATION declares that this DNMWR004 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.</p>
<p>Hér með lýsir DENSO CORPORATION yfir því að DNMWR004 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.</p>
<p>Con la presente DENSO CORPORATION dichiara che questo DNMWR004 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.</p>
<p>Käesolevaga kinnitab DENSO CORPORATION seadme DNMWR004 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.</p>
<p>Hierbij verklaart DENSO CORPORATION dat het toestel DNMWR004 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.</p>
<p>ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ DENSO CORPORATION ΔΗΛΩΝΕΙ ΟΤΙ DNMWR004 ΣΥΜΜΟΡΦΩΝ ΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.</p>
<p>Härmed intygar DENSO CORPORATION att denna DNMWR004 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.</p>
<p>Por medio de la presente DENSO CORPORATION declara que el DNMWR004 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.</p>
<p>DENSO CORPORATION tímto vyhlasuje, že DNMWR004 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.</p>
<p>DENSO CORPORATION izjavlja, da je ta DNMWR004 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.</p>
<p>DENSO CORPORATION tímto prohlašuje, že tento DNMWR004 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.</p>

<p>Undertegnede DENSO CORPORATION erklærer herved, at følgende udstyr DNMWR004 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.</p>
<p>Hiermit erklärt DENSO CORPORATION, dass sich das Gerät DNMWR004 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.</p>
<p>DENSO CORPORATION erklærer herved at udstyret DNMWR004 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.</p>
<p>Alulírott, DENSO CORPORATION nyilatkozom, hogy a DNMWR004 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.</p>
<p>DENSO CORPORATION vakuuttaa täten että DNMWR004 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.</p>
<p>Par la présente DENSO CORPORATION déclare que l'appareil DNMWR004 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.</p>
<p>Niniejszym DENSO CORPORATION oświadcza, że DNMWR004 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.</p>
<p>DENSO CORPORATION declara que este DNMWR004 está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.</p>
<p>Hawnhekk, DENSO CORPORATION, jiddikjara li dan DNMWR004 jikkonforma mal-htigijiet essenzzjali u ma provvedimenti oħrajn rilevanti li hemm fid-Direttiva 1999/5/EC.</p>
<p>Ar šo, DENSO CORPORATION, deklarē, ka DNMWR004 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.</p>
<p>Šiuo DENSO CORPORATION deklaruoja, kad šis DNMWR004 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.</p>

**⚠ CAUTION****■ Limitations of the pre-crash safety system**

Do not overly rely on the pre-crash safety system. Always drive safely, taking care to observe your surroundings and checking for any obstacles or other road hazards.

Failure to do so may cause an accident resulting in death or serious injury.

**■ Handling the radar sensor**

Observe the following to ensure the pre-crash safety system can function effectively. Otherwise, the system may not function correctly and could result in an accident.

- Keep the sensor and grille cover clean at all times.  
Clean the sensor and grille cover with a soft cloth so you do not mark or damage them.
- Do not subject the sensor or surrounding area to a strong impact.  
If the sensor moves even slightly off position, the system may malfunction. If the sensor or surrounding area is subject to a strong impact, always have the area inspected and adjusted by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor, grille cover or surrounding area.
- Do not modify or paint the sensor and grille cover.
- Do not replace them with non-genuine parts.

**⚠ CAUTION****■ Handling the camera sensors (if equipped)**

Observe the following to ensure that the PCS functions effectively:

- Keep the windshield clean at all times.  
PCS effectiveness may be reduced due to the presence of raindrops, condensation, ice or snow on the windshield.
- Do not subject the camera sensor to a strong impact or force, and do not disassemble the camera sensor.
- Do not change the installation position of the camera sensor, or remove and reinstall it. The direction of the camera sensor is precisely adjusted.
- When the windshield fogs up, use the windshield defogger to dry the windshield.  
During cold weather, using the heater with air blowing to the feet may allow the upper part of the windshield to fog up, having a negative effect on the images.
- Do not place anything on the dashboard.  
Images reflected on the windshield may reduce the effectiveness of the camera sensor.
- Do not scratch the camera lens, or let it get dirty.
- Do not attach a sticker or other items to the windshield near the camera sensor.

**■ Headlights (vehicles with camera sensors)**

● Observe the following to ensure proper near-infrared ray projection:

- Keep the headlights clean at all times.
- The detection performance may deteriorate if the high beams are misaligned or inoperative.
- The near-infrared ray transmitters project strong energy that is not visible. Although the transmitters normally turn off when the vehicle is stopped, never look into the headlights for your safety.

**⚠ CAUTION**

- Determining the direction the driver is facing and whether the driver's eyes are open or closed (vehicles with driver monitor system)

The direction the driver is facing and whether the driver's eyes are open or closed may not be determined correctly if the following conditions exist:

- There is an object between the driver monitor sensor and the driver's face, such as when the sensor is blocked.
- A part of the driver's face is covered.
- The sensor or the driver's face is exposed to intense light such as sunlight.
- The driving posture is improper.
- The vehicle is parked.

- Handling the driver monitor sensor (vehicles with driver monitor system)

Observe the following to ensure the driver monitor sensor can function effectively.

Failure to do so may result in a malfunction or may prevent the system from correctly determining the direction the driver is facing and whether the driver's eyes are open or closed, resulting in an unexpected accident.

- Do not disassemble, damage, lift or pull on the sensor.
- Do not touch the sensor while driving.
- Do not wet or spill water on the sensor.
- Do not drop anything on or allow anything to hit against the sensor. Do not subject the sensor to an impact.
- Make sure that there are no scratches, dirt or stickers on the side of the sensor that faces the driver.
- Do not place any objects in front of the side of the sensor that faces the driver or cover the sensor.

 CAUTION**■** Cautions regarding the assist contents of the system

By means of alarms and brake control, the pre-crash safety system is intended to assist the driver in avoiding collisions through the process of LOOK-JUDGE-ACT. There are limits to the degree of assistance the system can provide, so please keep in mind the following important points.

**●** Assisting the driver in watching the road

The pre-crash safety system is only able to detect obstacles directly in front of the vehicle, and only within a limited range. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility conditions. It is still necessary for the driver to pay close attention to the vehicle's surroundings.

**●** Assisting the driver in making correct judgment

When attempting to estimate the likelihood of a collision, the only data available to the pre-crash safety system is that from obstacles it has detected directly in front of the vehicle. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of collision in any given situation.

**●** Assisting the driver in taking action

The pre-crash safety system's braking assist feature is designed to help reduce the severity of a collision, and so only acts when the system has judged that a collision is unavoidable. This system by itself is not capable of automatically avoiding a collision or bringing the vehicle to a stop safely. For this reason, when encountering a dangerous situation the driver must take direct and immediate action in order to ensure the safety of all involved.

 NOTICE**■** Precautions for cleaning the driver monitor sensor (vehicles with driver monitor system)

- Gently wipe the sensor with a soft cloth to prevent damage.
- Wipe any excess dirt with a cloth dampened with neutral detergent, all liquids having been wringed out of the cloth. After that, wipe again with a dry cloth.
- Do not use benzene, thinner, glass cleaners, wax, etc.

## Rear Pre-Crash Safety system\*


When the radar sensor detects the possibility of a rear-end collision, the rear pre-crash safety system will operate to warn the approaching vehicle and mitigate whiplash.

### ◆ Warning for the approaching vehicle (emergency flashers)

When the system determines that there is a risk of a rear-end collision, the emergency flashers flash to warn the driver of the vehicle approaching from the rear.

### ◆ Whiplash mitigation (pre-crash intelligent head restraints)

When a vehicle draws near from behind and the system has determined that the possibility of a rear-end collision is very high, the sensor in each front head restraint detects the position of the occupant's head and the pre-crash intelligent head restraint moves, contributing to whiplash mitigation when a rear-end collision occurs.

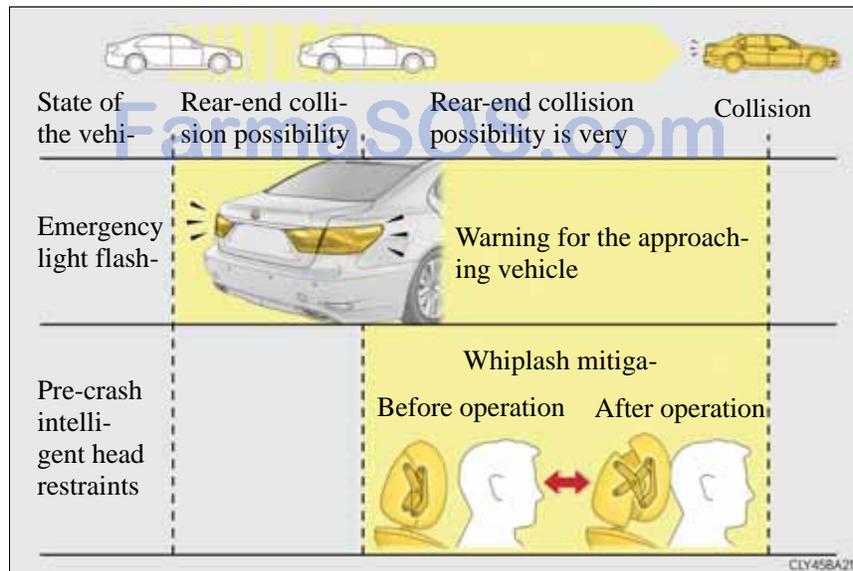

\*: If equipped

### Rear radar sensor

The rear radar sensor detects objects approaching from behind and determines whether a rear-end collision is imminent based on the position, speed and heading of the object before it happens.



#### ■ System operating conditions

When the engine switch is in IGNITION ON mode and there is a possibility of a rear-end collision due to a vehicle in the same lane approaching from the rear, the system operates if all of the following conditions are met:

- Warning for the approaching vehicle (emergency flashers):
  - The relative speed difference between your vehicle and the vehicle approaching from behind is greater than about 15 km/h (9 mph).
  - When the vehicle is stationary or moving forward while the brake pedal is depressed.
  - When the turn signal lights and emergency flashers are off.
- Whiplash mitigation (pre-crash intelligent head restraints):
  - The relative speed difference between your vehicle and the vehicle approaching from behind is greater than about 15 km/h (9 mph).
  - Your vehicle is stopped or moving forward.

#### ■ Whiplash mitigation

The pre-crash intelligent head restraint may not stop in the proper position if a hat is worn or the occupant's hair is bound at the back.

**■ Conditions in which it is hard for the sensor to detect objects**

The rear pre-crash safety system is not a system that can detect all possible rear-end collisions. The system may not operate in the following situations. Always be aware of the surrounding conditions.

- The vehicle posture is abnormal.
- The sensor may not detect objects such as bicycles and motorcycles.
- Raindrops, ice or snow are attached to the rear bumper.
- The road has curves or is bumpy.
- A rear-end collision occurs from an angle or with a large offset.

**■ Conditions that may trigger the system even if there is no danger of a rear-end collision**

- Another vehicle drives past just behind your vehicle when your vehicle is stopped to turn right or left.
- Another vehicle drives past just beside your vehicle when your vehicle is stopped on the side of the road.
- The vehicle behind you passes your vehicle from a short distance while your vehicle is moving.
- The vehicle behind you approaches your vehicle rapidly to a close distance while your vehicle is moving or stopped.

**■ When there is a malfunction in the system**

Warning lights and/or warning messages will turn on or flash. (→P. 826, 832)

■ Certification for the rear pre-crash safety system

The latest “DECLARATION of CONFORMITY”(DoC) is available at the following:

DoC address:FUJITSU TEN LIMITED

2-28, Goshō-dori 1-chome, Hyogo-ku, Kobe, 652-8510, Japan

# CE0891

С настоящето, FUJITSU TEN LIMITED, декларира, че 271000-3060 е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 1999/5/ЕС.
FUJITSU TEN LIMITED tímto prohlašuje, že tento 271000-3060 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Undertegnede FUJITSU TEN LIMITED erklærer herved, at følgende udstyr 271000-3060 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Hiermit erklärt FUJITSU TEN LIMITED, dass sich das Gerät 271000-3060 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Käesolevaga kinnitab FUJITSU TEN LIMITED seadme 271000-3060 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
Hereby, FUJITSU TEN LIMITED, declares that this 271000-3060 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Por medio de la presente FUJITSU TEN LIMITED declara que el 271000-3060 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ FUJITSU TEN LIMITED ΔΗΛΩΝΕΙ ΟΤΙ 271000-3060 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Par la présente FUJITSU TEN LIMITED déclare que l'appareil 271000-3060 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Con la presente FUJITSU TEN LIMITED dichiara che questo 271000-3060 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Ar šo FUJITSU TEN LIMITED deklarē, ka 271000-3060 atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Šiuo FUJITSU TEN LIMITED deklaruoja, kad šis 271000-3060 atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.



**⚠ CAUTION****■ Precautions for the radar sensor and rear bumper**

The rear bumper of vehicles with a rear pre-crash safety system is a functional part that has radio wave permeability. Observe the following to ensure the system can function effectively:

- Keep the rear bumper clean at all times.  
Raindrops, ice or snow may deteriorate radar sensor performance.
- Do not subject the radar sensor or surrounding area to a strong impact.  
If the sensor moves even slightly out of position, the system may malfunction. If the sensor or surrounding area is subjected to a strong impact, always have the area inspected and repaired by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Do not disassemble the radar sensor.
- Do not attach a towing hitch, bike holder, protective film or stickers to the center portion of the rear bumper.
- Do not replace the rear bumper with non-genuine parts or modify it.
- For painting or repair of the rear bumper, consult with any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**■ Precaution for the pre-crash intelligent head restraints**

Do not put head restraint covers.

FarmaSOS.com


## BSM (Blind Spot Monitor)\*

### Summary of the Blind Spot Monitor

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function  
Assists the driver in making the decision when changing lanes
- The Rear Crossing Traffic Alert function  
Assists the driver when backing up

These functions use same sensors.

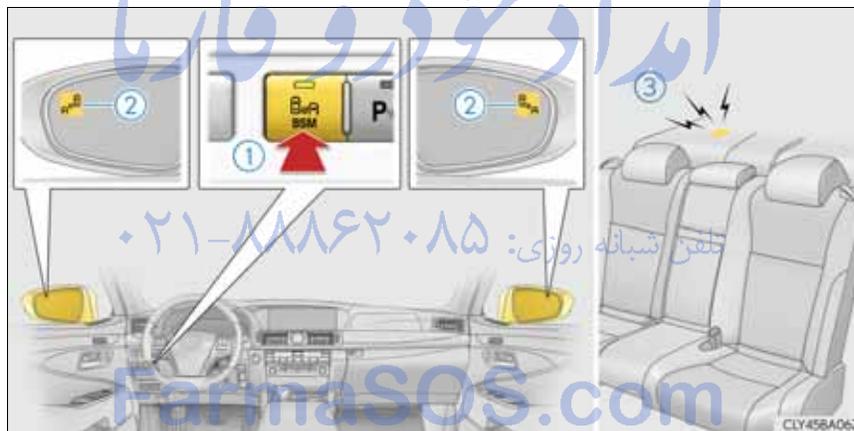

#### ① BSM main switch

Pressing the switch turns the system on or off. When the switch is set to on, the switch's indicator illuminates and the buzzer sounds. Common switch for Blind Spot Monitor function and Rear Crossing Traffic Alert function.

\*: If equipped

② Outside rear view mirror indicators

Blind Spot Monitor function:

When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated and the outside rear view mirror indicator flashes while the turn signal lever is operated.

Rear Crossing Traffic Alert function:

When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.

③ Rear Crossing Traffic Alert buzzer (Rear Crossing Traffic Alert function only)

When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the rear seat.

---

■ The outside rear view mirror indicators visibility

When under strong sunlight, the outside rear view mirror indicator may be difficult to see.

■ Rear Crossing Traffic Alert buzzer hearing

Rear Crossing Traffic Alert function may be difficult to hear over loud noises such as high audio volume.

■ When there is a malfunction in the Blind Spot Monitor

If a system malfunction is detected due to any of the following reasons, warning messages will be displayed: (→P. 832)

- There is a malfunction with the sensors
- The sensors have become dirty
- The outside temperature is extremely high or low
- The sensor voltage has become abnormal

### ■ Certification for the Blind Spot Monitor

# CE 0700

The latest "DECLARATION of CONFORMITY" (DoC) is available at the following:

DoC address : <http://continental.automotive-approvals.de/index.php?produkt=SRR2-A>

CONTINENTAL tímto prohlašuje, že tento SRR2-A je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Undertegnede CONTINENTAL erklærer herved, at følgende udstyr SRR2-A overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Hiermit erklärt CONTINENTAL, dass sich das Gerät SRR2-A in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Käesolevaga kinnitab CONTINENTAL seadme SRR2-A vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
Hereby, CONTINENTAL, declares that this SRR2-A is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Por medio de la presente CONTINENTAL declara que el SRR2-A cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ CONTINENTAL ΔΗΛΩΝΕΙ ΟΤΙ SRR2-A ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/EK.
Par la présente CONTINENTAL déclare que l'appareil SRR2-A est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Con la presente CONTINENTAL dichiara che questo SRR2-A è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Ar šo CONTINENTAL deklarē, ka SRR2-A atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Šiuo CONTINENTAL deklaruoja, kad šis SRR2-A atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

4

Driving

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

Hierbij verklaart CONTINENTAL dat het toestel SRR2-A in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
Hawnhekk, CONTINENTAL, jiddikjara li dan SRR2-A jikkonforma mal-htigjijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Direttiva 1999/5/EC.
Alulírott, CONTINENTAL nyilatkozik, hogy a SRR2-A megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Niniejszym CONTINENTAL oświadcza, że SRR2-A jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.
CONTINENTAL declara que este SRR2-A está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.
CONTINENTAL izjavlja, da je ta SRR2-A v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.
CONTINENTAL tímto vyhlasuje, že SRR2-A splňuje základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.
CONTINENTAL vakuuttaa täten että SRR2-A tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
Härmed intygar CONTINENTAL att denna SRR2-A står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
Hér með lýsir CONTINENTAL yfir því að SRR2-A er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
CONTINENTAL erklærer herved at utstyret SRR2-A er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.
С настоящето, CONTINENTAL, декларира, че SRR2-A е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 1999/5/EC.
Prin prezenta, CONTINENTAL, declară că aparatul SRR2-A este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 1999/5/CE.
“Ovim, CONTINENTAL, izjavljuje da ovaj SRR2-A je uskladen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.”
Ovim CONTINENTAL, izjavljuje da je SRR2-A u skladu s bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC i Pravilnika o RiTT opremi(NN25/2012)

تلفن شبانه روزی: ۰۸۵-۸۸۸۸۸۸۸۸-۰۲۱

FarmaSOS.com

**⚠ CAUTION****■ Handling the radar sensor**

One Blind Spot Monitor sensor is installed inside the left and right side of the vehicle rear bumper respectively. Observe the following to ensure the Blind Spot Monitor can function correctly.

- Keep the sensor and its surrounding area on the bumper clean at all times.



- Do not subject the sensor or surrounding area on the bumper to a strong impact. If the sensor moves even slightly off position, the system may malfunction and vehicles that enter the detection area may not be detected. If the sensor or surrounding area is subject to a strong impact, always have the area inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Do not disassemble the sensor.
- Do not attach accessories or stickers to the sensor or surrounding area on the bumper.
- Do not modify the sensor or surrounding area on the bumper.
- Do not paint the sensor or surrounding area on the bumper.

### The Blind Spot Monitor function


The Blind Spot Monitor function uses radar sensors to detect vehicles that are traveling in an adjacent lane in the area that is not reflected in the outside rear view mirror (the blind spot), and advises the driver of the vehicles existence via the outside rear view mirror indicator.

### The Blind Spot Monitor function detection areas

The areas that vehicles can be detected in are outlined below.

The range of the detection area extends to:

- ① Approximately 3.5 m (11.5 ft.) from the side of the vehicle  
The first 0.5 m (1.6 ft.) from the side of the vehicle is not in the detection area
- ② Approximately 3 m (9.8 ft.) from the rear bumper
- ③ Approximately 1 m (3.3 ft.) forward of the rear bumper

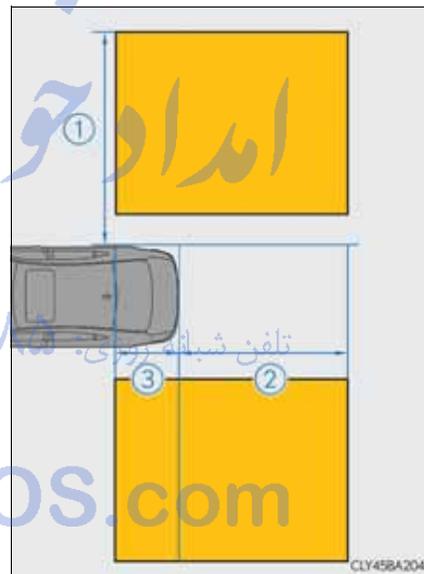

**⚠ CAUTION**

■ Cautions regarding the use of the system

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The Blind Spot Monitor function is a supplementary function which alerts the driver that a vehicle is present in the blind spot. Do not overly rely on the Blind Spot Monitor function. The function cannot judge if it is safe to change lanes, therefore over reliance could cause an accident resulting in death or serious injury.

According to conditions, the system may not function correctly. Therefore the driver's own visual confirmation of safety is necessary.

- The Blind Spot Monitor function is operational when
  - The BSM main switch is set to on
  - Vehicle speed is greater than approximately 16 km/h (10 mph).
- The Blind Spot Monitor function will detect a vehicle when
  - A vehicle in an adjacent lane overtakes your vehicle.
  - Another vehicle enters the detection area when it changes lanes.
- Conditions under which the Blind Spot Monitor function will not detect a vehicle

The Blind Spot Monitor function is not designed to detect the following types of vehicles and/or objects:


- Small motorcycles, bicycles, pedestrians etc.\*
- Vehicles traveling in the opposite direction
- Guardrails, walls, signs, parked vehicles and similar stationary objects\*
- Following vehicles that are in the same lane\*
- Vehicles driving 2 lanes across from your vehicle\*

\*: Depending on conditions, detection of a vehicle and/or object may occur.

- Conditions under which the Blind Spot Monitor function may not function correctly
  - The Blind Spot Monitor function may not detect vehicles correctly in the following conditions:
    - During bad weather such as heavy rain, fog, snow etc.
    - When ice or mud etc. is attached to the rear bumper
    - When driving on a road surface that is wet due to rain, standing water etc.
    - When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
    - When a vehicle is in the detection area from a stop and remains in the detection area as your vehicle accelerates
    - When driving up or down consecutive steep inclines, such as hills, a dip in the road etc.
    - When multiple vehicles approach with only a small gap between each vehicle
    - When vehicle lanes are wide, and the vehicle in the next lane is too far away from your vehicle
    - When the vehicle that enters the detection area is traveling at about the same speed as your vehicle
    - When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
    - Directly after the BSM main switch is set to on
  - Instances of the Blind Spot Monitor function unnecessarily detecting a vehicle and/ or object may increase under the following conditions:
    - When there is only a short distance between your vehicle and a guardrail, wall etc.
    - When there is only a short distance between your vehicle and a following vehicle
    - When vehicle lanes are narrow and a vehicle driving 2 lanes across from your vehicle enters the detection area
    - When items such as a bicycle carrier are installed on the rear of the vehicle

### The Rear Crossing Traffic Alert function

The Rear Crossing Traffic Alert functions when your vehicle is in reverse. It can detect other vehicles approaching from the right or left rear of the vehicle. It uses radar sensors to alert the driver of the other vehicle's existence through flashing the outside rear view mirror indicators and sounding a buzzer.

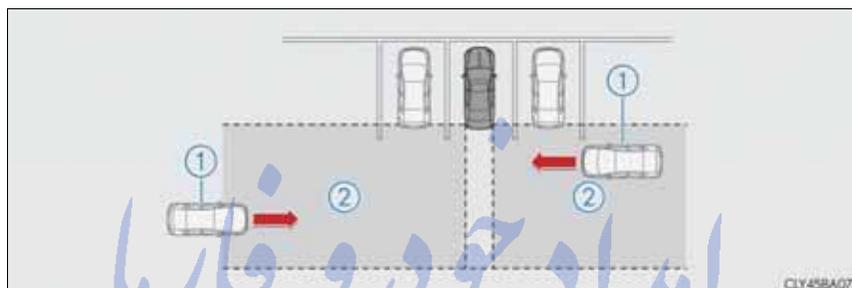

① Approaching vehicles      ② Detection areas

#### ⚠ CAUTION

##### ■ Cautions regarding the use of the system


The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.

The Rear Traffic Alert function is only an assist and is not a replacement for careful driving. Driver must be careful when backing up, even when using Rear Traffic Alert function. The driver's own visual confirmation of behind you and your vehicle is necessary and be sure there are no pedestrians, other vehicles etc. before backing up. Failure to do so could cause death or serious injury.

According to conditions, the system may not function correctly. Therefore the driver's own visual confirmation of safety is necessary.

### The Rear Crossing Traffic Alert function detection areas

The areas that vehicles can be detected in are outlined below.

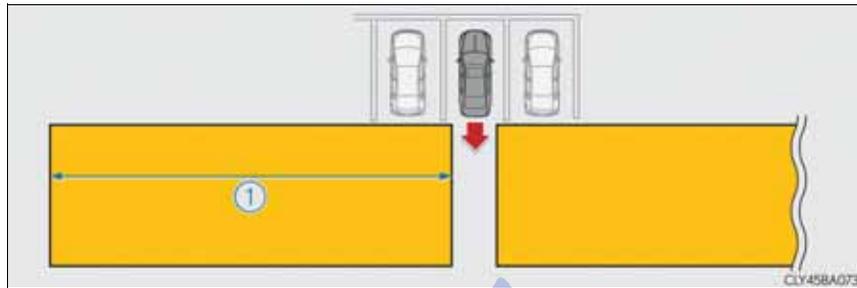

To give the driver a more consistent time to react, the buzzer can alert for faster vehicles from farther away.

Example:

Approaching vehicle	Speed	① Approximate alert distance
Fast	28 km/h (18 mph)	20 m (65 ft.)
Slow	8 km/h (5 mph)	5.5 m (18 ft.)

- The Rear Crossing Traffic Alert function is operational when
  - The BSM main switch is set to on.
  - The shift lever is in R.
  - Vehicle speed is less than approximately 8 km/h (5 mph).
  - Approaching vehicle speed is between approximately 8 km/h (5 mph) and 28 km/h (18 mph).

- Conditions under which the Rear Crossing Traffic Alert function will not detect a vehicle

The Rear Crossing Traffic Alert function is not designed to detect the following types of vehicles and/or objects.


- Small motorcycles, bicycles, pedestrians etc.\*
- Vehicles approaching from directly behind
- Guardrails, walls, signs, parked vehicles and similar stationary objects\*
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle\*
- Vehicles backing up in the parking space next to your vehicle

\*: Depending on conditions, detection of a vehicle and/or object may occur.

- Conditions under which the Rear Crossing Traffic Alert function may not function correctly

The Rear Crossing Traffic Alert function may not detect vehicles correctly in the following conditions:

- During bad weather such as heavy rain, fog, snow etc.
- When ice or mud etc. is attached to the rear bumper
- When multiple vehicles approach continuously
- Shallow angle parking
- When a vehicle is approaching at high speed
- When parking on a steep incline, such as hills, a dip in the road etc.
- Directly after the BSM main switch is set to on
- Directly after the engine is started with the BSM main switch on
- Vehicles that the sensors cannot detect because of obstacles

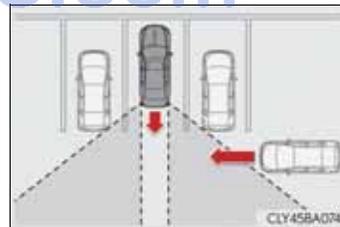

## Lexus night view\*

Lexus night view is a system which assists with nighttime driving. Near-infrared rays are irradiated forward and an image converted from the irradiated light is shown on the Remote Touch screen. The image shows pedestrians, obstacles, and road conditions ahead of the vehicle, which are difficult to see at nighttime with the naked eye.

### Displaying the Lexus night view

- 1 Turn the engine switch to IGNITION ON mode.
- 2 Turn the headlights on.
- 3 Press the Lexus night view switch.

The Lexus night view is displayed on the Remote Touch screen.

To return the screen to its previous state, press the switch again.


When the light sensor (→P. 232) determines that it is currently night time from the brightness of the surrounding area, the Lexus night view can be operated by pressing the Lexus night view switch while the headlights are on.



\*: If equipped

## The Lexus night view display

- When displaying on the “Main Display” (→P. 394)

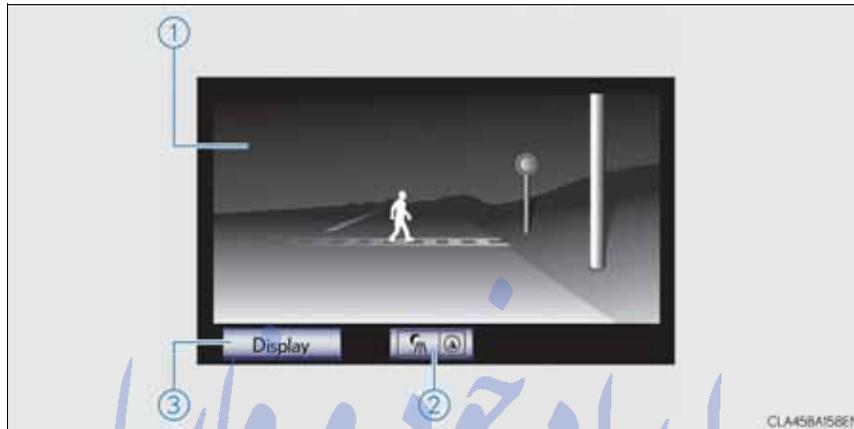

- ① Lexus night view screen
- ② “Side Display” switching button

If this button is selected using the Remote Touch when the Lexus night view is being shown on the “Main Display”, the “Side Display” will change to a map display (vehicles with navigation system) or compass display (vehicles without navigation system). (→P. 392)

If the button is selected again, the screen will return to its previous display.

- ③ Brightness adjustment button

The brightness of the display can be adjusted by selecting this button using Remote Touch. Make sure to select the “OK” after adjusting the brightness.

“-”: Darker

“+”: Brighter



- When displaying on the “Side Display”

When another screen is displayed on the “Main Display” while the Lexus night view is being shown on the “Main Display”, the Lexus night view screen will be displayed on the “Side Display”.



- ① Lexus night view screen
- ② “Main Display” switching button

Switches the Lexus night view from the “Side Display” to the “Main Display”.

- Imaging range

The image is shown ranging from the tip of the low beam to the high beam.

- If the vehicle speed is less than approximately 15 km/h (9 mph) when the Lexus night view is operating

An image will be displayed on the Lexus night view screen, but both the range and the distance of the projection will be limited as near-infrared rays are not being radiated outward.

- When the Lexus night view switch is pressed while the Lexus night view cannot be operated

Advice information will be displayed on the Lexus night view screen. Follow the displayed advice.

- If the Lexus night view switch is pressed at a time when the Lexus night view operation is not possible

Follow the advice displayed on the Remote Touch screen.

- When the shift lever is shifted to R while the Lexus night view is operating

The Lexus night view screen switches as follows.

“Main Display”: Switches to the parking assist monitor screen.

“Side Display”: The display blacks out and no image is displayed.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

4

Driving

 CAUTION

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

[FarmaSOS.com](http://FarmaSOS.com)

■ Before using the Lexus night view

Never depend on this system only.

Lexus night view is intended as a supplemental aid to help you see pedestrians and road conditions ahead of the vehicle. As there are limits to the system, do not rely solely on the system while in use, and drive safely while observing the following precautions.

■ When using the Lexus night view

Observe the following precautions.

Failure to do so may cause an accident resulting in death or serious injury.

- Never drive while looking at the Lexus night view screen only.
- Do not look continuously at the Lexus night view screen while driving. Pedestrians, objects etc. ahead of the vehicle may be overlooked by the system. The system should always be used as a supplemental aid only.
- Lexus night view is designed to help you see objects better when driving in darkness on a road with few curves. Do not use the Lexus night view in well-lit areas or on roads with many curves or slopes. There may be areas that cannot be displayed by the system due to the road conditions (curve size, gradient, etc.)
- Lexus night view may be unable to project some features at an appropriate level of brightness. Some or all parts of certain features may be dark or difficult to see. Do not rely solely on the Lexus night view, and drive carefully while checking the surroundings for safety, as you would with a normal vehicle. Also, the following features and conditions may not be displayed clearly.

Features that are difficult to display:

- Clothing of a pedestrian made of a certain kind of material (ex. leather jackets)
- The characters on signs and billboards
- The information on road signs

Conditions in which display is difficult:

- Unfavorable weather conditions such as rain, fog, snowfall, snow storms etc.
- There are large puddles of water on the road surface following rainfall
- The area of the windshield in front of the camera is fogged up, dirty or icy
- The areas around the headlights are covered with ice, snow, mud etc.
- The battery voltage is remarkably low
- There are bright lights ahead of the vehicle

**⚠ CAUTION****■ The near-infrared light**

Follow these precautions to avoid damage to or incorrect operation of the Lexus night view system.

- System performance may deteriorate if the areas around the headlights are dirty. Clean the vehicle if it is dirty.
- Vehicles with discharge headlights: The near-infrared ray transmitter bulbs are also used as the high beam bulbs and may burn out. If a bulb burns out, the high beams will also not be able to used. Therefore, replace a bulb if it burns out.
- The near-infrared ray transmitters irradiate strong energy not visible to the eyes. Do not stare at the light at close range for a long time.


**▶ Vehicles with discharge headlights****▶ Vehicles with LED headlights**

FarmaSOS.com

 NOTICE

## ■ The near-infrared camera

Follow these precautions to avoid damage to or incorrect operation of the Lexus night view.

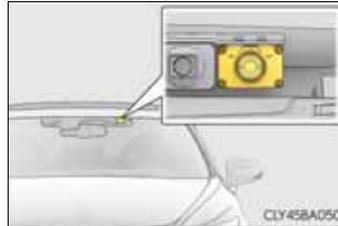

- Make sure the windshield is kept clean.
- System performance may deteriorate if rain water, condensation or ice adheres to the camera. If you notice the inner lens of the camera is dirty, the garnish will have to be replaced. Consult any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Do not subject the camera to strong impacts, or disassemble the camera.
- As the alignment of the camera has been very finely adjusted, do not change or remove the mounting.
- If the windshield fogs up, defog the windshield using the front defroster.
- Do not dirty or scratch the camera lens.
- Night view may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.

## Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

### Preparation for winter

- Use fluids that are appropriate to the prevailing outside temperatures.
  - Engine oil
  - Engine coolant
  - Washer fluid
- Have a service technician inspect the condition of the battery.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the rear tires.

Ensure that all tires are the specified size and brand, and that chains match the size of the tires.

FarmaSOS.com

### Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

### When driving the vehicle

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.


### When parking the vehicle

Park the vehicle and move the shift lever to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If necessary, block the wheels to prevent inadvertent sliding or creeping.

### Selecting tire chains

Use the correct tire chain size when mounting the tire chains.  
Chain size is regulated for each tire size.

- ① Side chain  
(3 mm [0.12 in.] in diameter)
- ② Cross chain  
(4 mm [0.16 in.] in diameter)

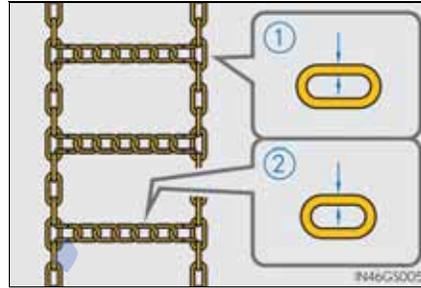

### Regulations on the use of tire chains

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

- Tire chain installation  
تلفن شبانه روزی: ۰۸۵-۸۸۶۲-۳۱۱  
Observe the following precautions when installing and removing chains:
  - Install and remove tire chains in a safe location.
  - Install tire chains on the rear tires. Do not install tire chains on the front tires.
  - Install tire chains on rear tires as tightly as possible. Retighten chains after driving 0.5 — 1.0 km (1/4 — 1/2 mile).
  - Install tire chains following the instructions provided with the tire chains.

 CAUTION

■ Driving with snow tires

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in a loss of vehicle control and cause death or serious injury.

- Use tires of the specified size.
- Maintain the recommended level of air pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being used.
- Use snow tires on all, not just some wheels.
- Do not use LKA (Lane-Keeping Assist) system.

■ Driving with tire chains

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LKA (Lane-Keeping Assist) system.

4

Driving

 NOTICE

■ Repairing or replacing snow tires

Request repairs or replacement of snow tires from Lexus dealers or legitimate tire retailers.

This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

■ Fitting tire chains

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

5-1. Remote Touch screen	
Remote Touch .....	392
Remote Touch screen .....	394
Set up screen .....	404
12.3-inch display operation	421
Speech command system ..	430
5-2. Lexus Climate Concierge	
Lexus Climate Concierge..	437
5-3. Using the air conditioning system and defogger	
Front automatic air conditioning system .....	438
Rear air conditioning system .....	456
Rear window and outside rear view mirror defoggers.....	462
Windshield wiper de-icer ..	463
5-4. Using the audio system	
Audio system type .....	464
Using the radio.....	489
Using the CD/DVD player .....	496
Playing an audio CD and MP3/WMA discs .....	498
Playing DVD video.....	504
CD/DVD player and DVD video disc information....	516
Listening to Bluetooth® audio .....	525
Listening to a USB memory .....	536
Listening to an iPod.....	546
Using the AUX port.....	556
Optimal use of the audio/video system .....	558
Using the rear seat audio controls .....	560
Using the steering wheel audio switches .....	563
5-5. Using the rear seat entertainment system	
Rear seat entertainment system features .....	566
Playing a Blu-ray Disc™ (BD) and DVD disc .....	582
Playing an audio CD and MP3/WMA discs .....	610
Playing an SD card .....	615
Using the front audio system .....	622
Using the video mode .....	624
Changing other setting.....	626

## Interior features

## 5

- |  |  |
|--|--|
| <p>5-6. Using the hands-free phone system (for cellular phone)</p> <p>Hands-free system (for cellular phone) ..... 630</p> <p>Using a Bluetooth® phone 641</p> <p>Setting the hands-free system (for cellular phone) ..... 662</p> <p>Setting the Bluetooth® ..... 687</p> <p>5-7. Using the interior lights</p> <p>Interior lights list..... 700</p> <ul style="list-style-type: none"> <li>• Interior lights ..... 701</li> <li>• Personal lights..... 702</li> </ul> <p>5-8. Using the storage features</p> <p>List of storage features..... 704</p> <ul style="list-style-type: none"> <li>• Glove box ..... 705</li> <li>• Coin holder ..... 706</li> <li>• Door pockets..... 706</li> <li>• Cup holders..... 707</li> <li>• Console box ..... 709</li> <li>• Cool box/auxiliary box . 710</li> <li>• Auxiliary boxes..... 712</li> </ul> <p>Trunk features ..... 714</p> | <p>5-9. Other interior features</p> <p>Sun visors and vanity mirrors ..... 717</p> <p>Clock..... 719</p> <p>Ashtrays ..... 720</p> <p>Cigarette lighters..... 721</p> <p>Power outlets ..... 723</p> <p>Heated steering wheel..... 725</p> <p>Climate control seats/ seat heaters..... 727</p> <p>Armrest ..... 732</p> <p>Rear sunshade ..... 733</p> <p>Rear door sunshades ..... 736</p> <p>Trunk storage extension.... 739</p> <p>Coat hooks ..... 741</p> <p>Assist grips ..... 742</p> |
|--|--|

For vehicles sold outside Europe, some of the functions cannot be operated while driving.


## Remote Touch

The Remote Touch can be used to operate the Remote Touch screens.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

The illustration below is for left-hand drive vehicles without navigation system.

The button positions may differ slightly for right-hand drive vehicles.

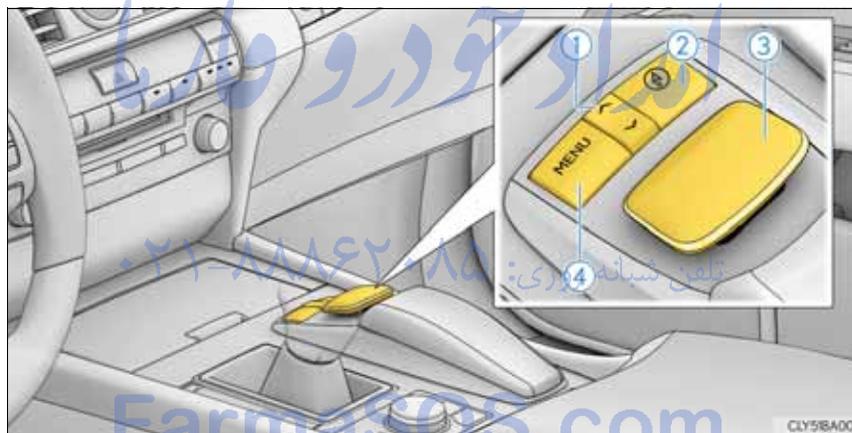

① “^•v” button

Press this button to scroll through lists.

② “COMPASS” button

Press this button to display the compass mode screen.

③ Remote Touch knob

Move in the desired direction to select a function, number and screen button.

Push the knob to enter the selected function, number and screen button.

Feedback force, pointer sound volume, on or off of selection sounds, etc. can be changed. (→P. 407)

## ④ “MENU” button

Press this button to display the “Menu” screen.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

 CAUTION

- When using the Remote Touch
  - Do not allow fingers, fingernails or hair to become caught in the Remote Touch as this may cause an injury.
  - Be careful when touching the Remote Touch in extreme temperatures as it may become very hot or cold due to the temperature inside the vehicle.

 NOTICE

- To prevent damage to the Remote Touch
  - Do not allow the Remote Touch to come into contact with food, liquid, stickers or lit cigarettes as doing so may cause it to change color, emit a strange odor or stop functioning.
  - Do not subject the Remote Touch to excessive pressure or strong impact as the knob may bend or break off.
  - Do not allow coins, contact lenses or other such items to become caught in the Remote Touch as this may cause it to stop functioning.
  - Items of clothing may rip if they become caught on the Remote Touch knob.
  - If your hand or any object is on the Remote Touch knob when the engine switch is turned to ACCESSORY mode, the Remote Touch knob may not operate properly.

FarmaSOS.com

## Remote Touch screen

By using the Remote Touch, you can control the audio system and air conditioning system, adjust the screen display, etc.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

Different information can be displayed on the left and right of the screen. The 8-inch display area on the left of the screen is called the “Main Display”, and the area to the right is called the “Side Display”. (→P. 423)

## Initial screen

When the engine switch is turned to ACCESSORY or IGNITION ON mode, the initial screen will be displayed for a few seconds as the system starts up.

Images shown on the initial screen can be changed to suit individual preferences. (→P. 411)



FarmaSOS.com

### “Menu” screen

By using the Remote Touch, you can control the audio system and air conditioning system, and adjust the screen display, etc.

To display the “Menu” screen, press the “MENU” button on the Remote Touch.

- ▶ Vehicles without navigation system
- ▶ Vehicles with a navigation system



Switch	Page
“Car”	P. 403
“Info”	Navigation System Owner’s Manual
“Setup”	P. 406
“Navi”	Navigation System Owner’s Manual
“Audio”	P. 464
“Climate”	P. 438
“Telephone”	P. 630
“Display”	P. 397

**Adjusting the display**


The contrast and brightness of the screen display and the image the camera displays can be adjusted. (For information regarding audio/video screen adjustment: →P. 510)

- 1 Press the “MENU” button on the Remote Touch and select “Display” on the “Menu” screen.
- 2 Select “Map•Menu”/“Menu” or “Camera” to display the desired screen.

► Display screen (“Map•Menu”/“Menu”)

► Display screen (“Camera”)

If the map menu adjust screen does not appear, select “Map•Menu”/“Menu”.  
 If the camera adjust screen does not appear, select “Camera”.

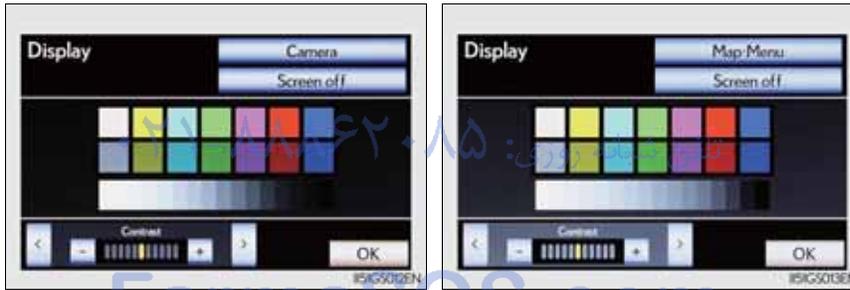


- 3 Select “<” or “>” to select the desired function (“Contrast” or “Brightness”) and then select the desired screen button to adjust contrast and brightness.

	“-”	“+”
“Contrast”	Weaker	Stronger
“Brightness”	Darker	Brighter

- 4 After adjusting the screen, select “OK”.

- When using the Remote Touch screen
  - If the screen is cold, the display may be dark, or the system may seem to be operating slightly slower than normal.
  - When the screen is viewed through polarized sunglasses, a rainbow pattern may appear on the screen due to optical characteristics of the screen. If this is disturbing, please operate the screen without polarized sunglasses.
  - Dimmed screen buttons cannot be operated.
- Changing between day mode and night mode

To display the screen in day mode, even with the headlight switch on, select “Day mode” for brightness and contrast control.

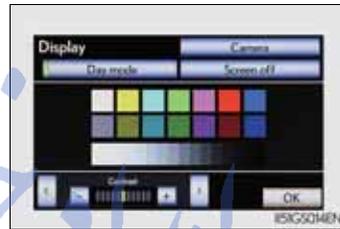

If the screen is set to day mode with the headlight switch turned on, this condition is memorized even with the engine turned off.

The display condition is not changed to night mode even if the headlight switch is turned on when the vehicle is in a bright area such as daytime.

- To turn off the display
- The display goes off when “Screen off” is selected. To turn the screen back on, press any button. The selected screen appears.

FarmaSOS.com

### Inputting letters and numbers/list screen operation

Letters and numbers can be input via the screen.

- To input letters and numbers/symbols

Select the keys directly to enter letters, numbers or symbols.

▶ Letters and numbers

▶ Symbols



: Select to erase one character. Select and hold to continue erasing characters.

: To change letters, numbers or symbols


: To display other symbols

: To enter in lower case

: To enter in upper case

- To change character and keyboard type

- 1 Select on the screen.
- 2 Select desired character and keyboard and select "OK".

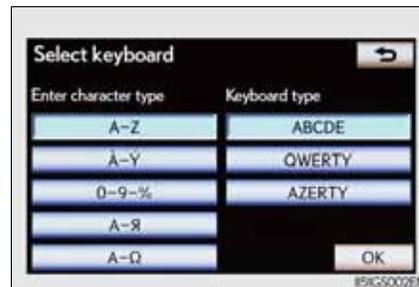

- Selecting a character type

- ▶ “A-Z” type



- ▶ А-Я type




- ▶ A-Q type



- ▶ A-Y type



- ▶ “0-9-%” type

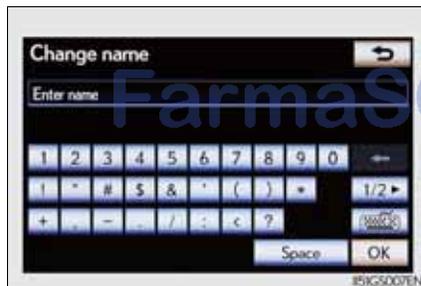

- Selecting a keyboard type

- ▶ “ABCDE” type



- ▶ “QWERTY” type



- ▶ “AZERTY” type



امداد خود روفارما  
تلفن شبانه روزی: ۰۲۱-۸۸۸۷۱۰۸۵  
FarmaSOS.com

### ■ List screen operation

When a list is displayed, use the appropriate screen button to scroll through the list.

  : Select to skip to the next or previous page. Select and hold  or  to scroll through the displayed list.

 : This indicates the displayed screen's position.

  : If  appears to the right of an item name, the complete name is too long for the display. Select  to scroll to the end of the name. Select  to move to the beginning of the name.

Turn the “TUNE•SCROLL” knob to move the cursor box to select a desired item from the list, and press the “TUNE•SCROLL” knob to play it. The track that is being played is highlighted.



### ■ If you select

The display returns to the previous screen.

### ■ “^” and “v” buttons on the Remote Touch

The “^” and “v” buttons on the Remote Touch can be used to scroll up and down on list screens.

### ■ Selecting a character type

Depending on the conditions data is being input, it may not possible to change keyboard characters.

## Fuel consumption

Fuel consumption information from recent resets will be displayed. The fuel consumption information can be displayed and operated on the “Side Display”. (→P. 423)

Press the “MENU” button on the Remote Touch, and then select “Car” on the “Menu” screen.

### ■ Past record

If the “Past record” screen does not appear, select “Past record” on the “Trip information” screen.

- ① Updating the average fuel consumption data
- ② Resetting the past record data
- ③ Best recorded fuel economy
- ④ Average fuel consumption
- ⑤ Previous fuel economy record




The average fuel consumption history is divided by color into past averages and the average fuel consumption since the last reset. Use the displayed average fuel consumption as a reference.

The image is an example only, and may vary slightly from actual conditions.

### ■ Trip information

If the “Trip information” screen does not appear, select “Trip information” on the “Past record” screen.

- ① Resetting the consumption data
- ② Current fuel consumption per minute
- ③ Previous fuel consumption per minute
- ④ Average speed
- ⑤ Elapsed time
- ⑥ Cruising range

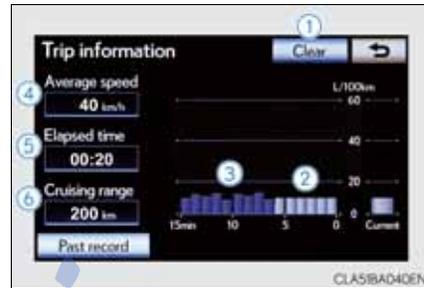

Average fuel consumption for the past 15 minutes is divided by color into past averages and averages attained since the engine switch was last turned to IGNITION ON mode. Use the displayed average fuel consumption as a reference.

The image is an example only, and may vary slightly from actual conditions.

### ■ Updating the past record data

Update the average fuel consumption by selecting “Update” to measure the current fuel consumption again.

### ■ Resetting the data

The data can be deleted by selecting “Clear”.

### ■ Cruising range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

This distance is computed based on your average fuel consumption.

As a result, the actual distance that can be driven may differ from that displayed.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Set up screen

You can change the Remote Touch screen to your desired settings. Press the “MENU” button on the Remote Touch, and then select “Setup” on the “Menu” screen.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

- ▶ Vehicles without a navigation system
- ▶ Vehicles with a navigation system



Switch	Page
“General”	P. 407/ Navigation System Owner’s Manual
“Voice”	P. 419/ Navigation System Owner’s Manual
“Navigation”	Navigation System Owner’s Manual
“Vehicle”	P. 420/ Navigation System Owner’s Manual
“Telephone”	P. 420
“Bluetooth*”	P. 421
“Audio”	P. 422
“Info”	Navigation System Owner’s Manual

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

### General settings (vehicles without navigation system)



This screen is used for language selection, on/off settings of operation sounds, etc.

Select “General” on the “Setup” screen.

- ① Clock and system time settings
- ② Selecting a language
- ③ Selecting a voice recognition language
- ④ Changing the opening image
- ⑤ Changing the screen off image
- ⑥ Selecting a button color
- ⑦ Selection sound on/off
- ⑧ Pointer sound on/off
- ⑨ Error sound on/off
- ⑩ Pointer sound volume settings
- ⑪ Setting a feedback force
- ⑫ Delete personal data
- ⑬ Software update\*

Select “OK” after changing settings.

\*: For details, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

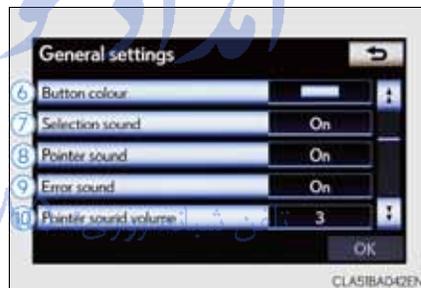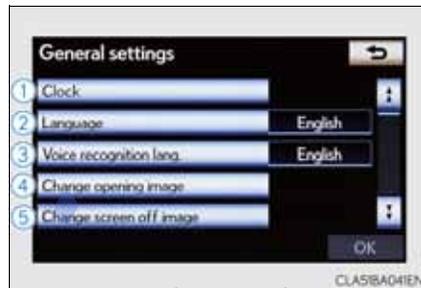


■ Clock and system time settings

Used for changing time zones, and on/off settings of daylight saving time and automatic adjustment of the clock.

1 Select “Clock” on the “General settings” screen.

2 Select the items to be set.

- ① Time zone
- ② Daylight saving time setting on/off
- ③ Auto adjust clock setting on/off

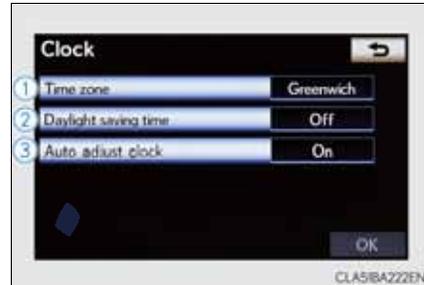


3 Select “OK”.


● Time zone

A time zone can be selected and GMT can be set.

1 Select “Time zone”.

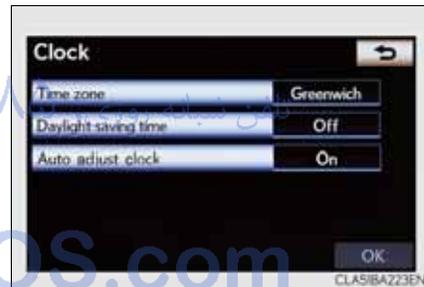

2 Select the desired time zone.

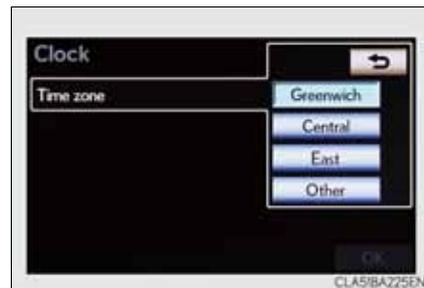

If “Other” is selected, the zone can be adjusted manually. Select “+” or “-” to adjust the time zone and then select “OK”.



- Daylight saving time

To select “On” or “Off” for daylight saving time.

- Manual clock setting

When “Auto adjust clock” is turned “Off”, the clock can be manually adjusted.

- ① Select “+” to set the time forward one hour and “-” to set the time back one hour.



- ② Select “+” to set the time forward one minute and “-” to set the time back one minute.

- ③ Select to round to the nearest hour\*.

\* e.g. 1:00 to 1:29 → 1:00  
1:30 to 1:59 → 2:00


**■ Selecting a language**

The language can be changed.

**1** Select “Language” on the “General settings” screen.

**2** Select the desired screen button.

The previous screen will be displayed.

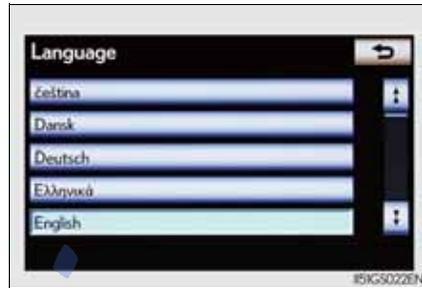

**3** Select “OK”.


**■ Selecting a voice recognition language**

The voice recognition language can be changed.

**1** Select “Voice recognition lang.” on the “General settings” screen.

**2** Select the desired screen button.

A confirmation message will be displayed. Select “Yes” to complete the settings and return to the “General setting” screen.

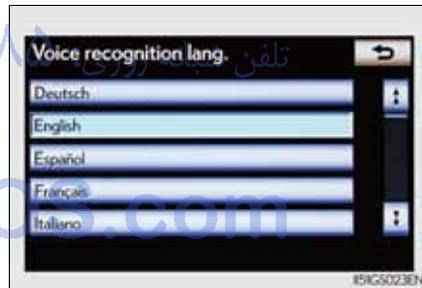

**3** Select “OK”.

- Changing the opening image

The startup image can be selected from 3 preregistered movies.

- ▶ Type A



- ▶ Type B



- ▶ Type C



Also, an image can be copied from a USB memory and used as the startup image.

When saving the images to a USB memory, name the folder that the opening image is saved to "StartupImage". If these folder names are not used, the system cannot download the images. (The folder names are case sensitive.)

● Transferring data

- 1 Open the console box, open the cover and connect a USB memory.

Turn on the power of the USB memory if it is not turned on.



- 2 Close the console box.
- 3 Select “Change opening image” on the “General settings” screen.
- 4 Select “Transfer”.



- 5 Select “Yes”.

FarmaSOS.com

- Setting the opening image

- 1 Select “Change opening image” on the “General settings” screen.

- 2 Select the desired image.




- 3 Select “OK”.

- Deleting transferred image

- 1 Select “Change opening image” on the “General settings” screen.

- 2 Select “Delete all”.

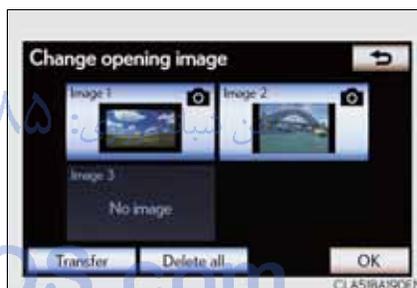

- 3 Select “Yes”.

■ Changing the screen off image

Select “Screen off” on the “Display” screen to turn off the screen. An image can be copied from a USB memory and can be set to display when “Screen off” is selected.

When saving the images to a USB memory, name the folder that the screen off image is saved to “Displayoffimage”. If these folder names are not used, the system cannot download the images. (The folder names are case sensitive.)

● Transferring data

- 1 Open the console box, open the cover and connect a USB memory.

Turn on the power of the USB memory if it is not turned on.




- 2 Close the console box.
- 3 Select “Change screen off image” on the “General settings” screen.
- 4 Select “Transfer”.



- 5 Select “Yes”.

- Setting the screen off image

- 1 Select “Change screen off image” on the “General settings” screen.
- 2 Select the desired image.

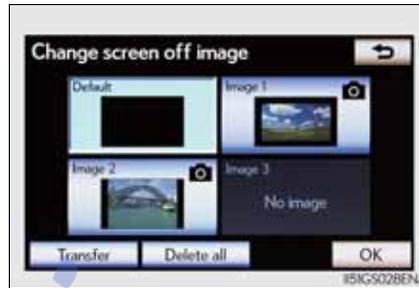

- 3 Select “OK”.

- Deleting transferred images

- 1 Select “Change screen off image” on the “General settings” screen.
- 2 Select “Delete all”.



- 3 Select “Yes”.


**■ Selecting a button color**

The color of the screen buttons can be changed.

**1** Select “Button colour” on the “General settings” screen.

**2** Select the desired screen button color.

The previous screen will be displayed.

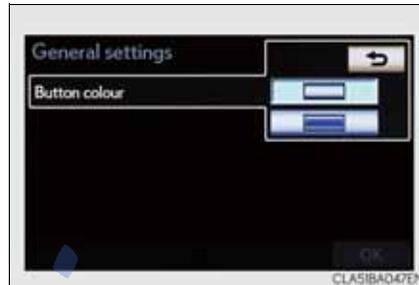

**3** Select “OK”.

**■ Pointer sound volume settings**

The pointer sound volume can be adjusted.

**1** Select “Pointer sound volume” on the “General settings” screen.

**2** Select the desired button.




**3** Select “OK”, and then “OK”.

### ■ Setting a feedback force

When the pointer moves close to a button, it will be automatically pulled onto that button. The strength of this pull can be adjusted.

- 1 Select “Feedback force” on the “General settings” screen.
- 2 Select “+” or “-”.

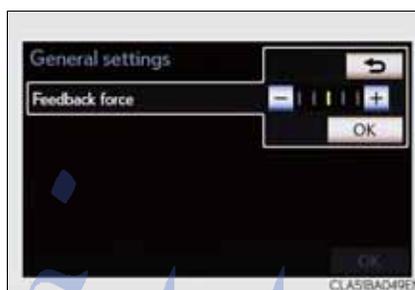

- 3 Select “OK”, and then “OK”.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

**■ Delete personal data**

This function is not available while driving.

**1** Select “Delete personal data” on the “General settings” screen.

**2** Select “Delete”.

Check carefully beforehand, as data cannot be retrieved once deleted.



**3** Select “Yes”.

The following personal data can be deleted or returned to their default settings:

- Phonebook data
- Call history data
- Speed dial data
- Bluetooth® phone data
- Phone sound settings
- Phone display settings
- Message settings
- Audio setting
- Bluetooth® audio setting
- Opening image data
- Screen off image data

**■ About startup or screen off images**

- The images file extension is JPG or JPEG.
- The images file name, including the file extension, can be up to 32 characters.
- Image files of 10 MB or less can be saved.
- Up to 3 images can be downloaded.

### Voice settings (vehicles without navigation system)

Voice guidance can be set.

Select “Voice” on the “Setup” screen.

- ① Select voice guidance volume
- ② Voice recognition guidance on/off

This setting can also be changed on the “Shortcuts” screen. (→P. 438)


- ③ Voice guidance on/off during audio system is in use
- ④ Restore default settings

Select “OK” after changing settings.


#### ■ Voice volume

The voice guidance volume can be adjusted or switched off.

- 1 Select “Voice” on the “Setup” screen.
- 2 Select the desired level.

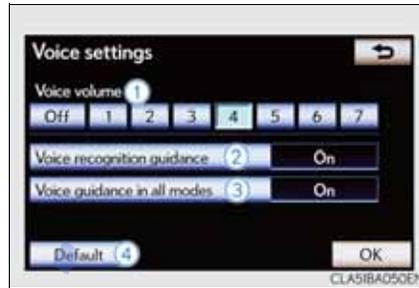

- 3 Select “OK”.

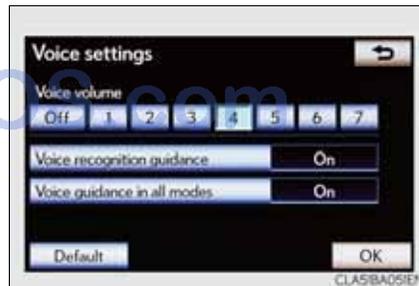

### Vehicle settings (vehicles without navigation system)


Select “Vehicle” on the “Setup” screen.

① Vehicle customization

Detailed information: →P. 904

② Setting up Lexus parking assist-sensor

Detailed information: →P. 303

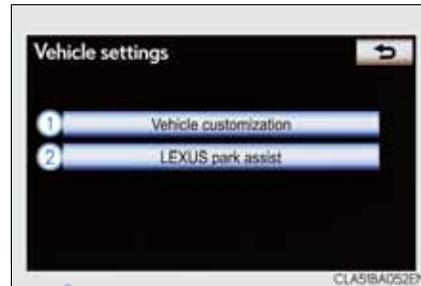

### Telephone settings

Select “Telephone” on the “Setup” screen.

① Sound settings

Detailed information: →P. 663

② Phonebook settings

Detailed information: →P. 665

③ Message settings

Detailed information: →P. 681

④ Telephone display settings


Detailed information: →P. 685



## Bluetooth® settings

Select “Bluetooth\*” on the “Setup” screen.

- ▶ Vehicles without navigation system
- ▶ Vehicles with a navigation system

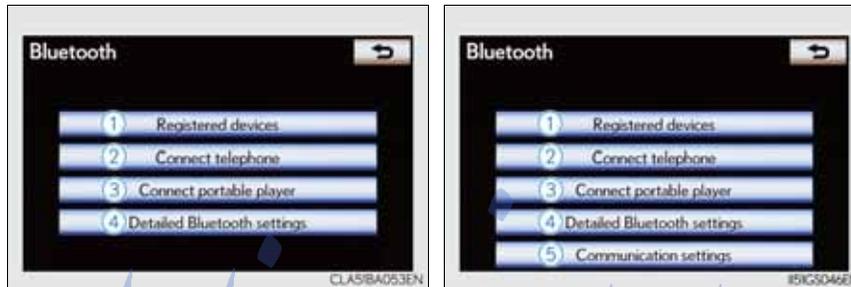

- ① Registered devices  
Detailed information: →P. 688
- ② Selecting a Bluetooth® phone  
Detailed information: →P. 694
- ③ Selecting a portable player  
Detailed information: →P. 695
- ④ Detailed Bluetooth® settings  
Detailed information: →P. 696
- ⑤ Communication settings  
Refer to “Navigation System Owner’s Manual”.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## Audio settings

Select "Audio" on the "Setup" screen.

① Sound settings


Detailed information: →P. 558

② Radio settings

Detailed information: →P. 494

③ iPod settings

Detailed information: →P. 551

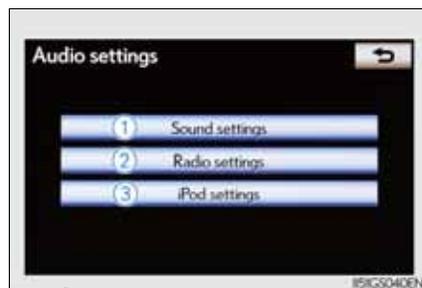

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com


## 12.3-inch display operation

The 12.3-inch display has a display area which is 1.5 times wider than that of the 8-inch display.

### 12.3-inch display-overview

- Full screen display

The initial screen and “Menu” screen fill the entirety of the display area.

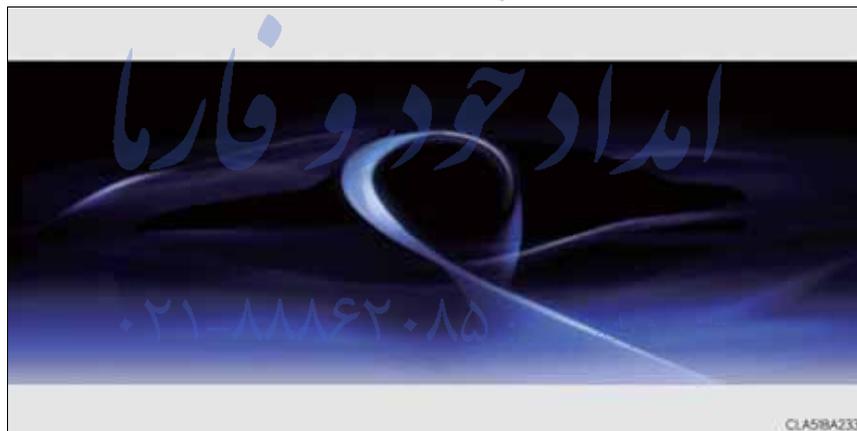

FarmaSOS.com

### ■ Split-screen display

Different information can be displayed on the left and right of the screen. For example, air conditioning system or fuel consumption information screens can be displayed and operated while the audio screen is being displayed. The large screen on the left of the display is called the “Main Display”, and the small screen to the right is called the “Side Display”.



تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### 12.3-inch display function

This section describes only the characteristics of the 12.3-inch display, paying particular attention to the “Side Display”. For details of the functions and operation of the “Main Display”, refer to the respective section.

The following functions can be displayed and operated on the “Side Display”.

- ▶ Basic screens (→P. 428)
  - Audio
  - Air conditioning system
  - Vehicle information
- ▶ Interruption screens (→P. 432)
  - Lexus parking assist-sensor
  - Phone
  - Driving mode
  - Lexus night view

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

### Using the “Side Display”

The audio control screen, air conditioning control screen or vehicle information screen can be displayed and operated on the “Side Display”.



#### ■ Selecting the operation screen

When selecting the “Side Display”, move the Remote Touch knob to the right until  is displayed at the boundary between the “Main Display” and the “Side Display”, and then move it further to the right. When selecting the “Main Display”, move the Remote Touch knob to the left until  is displayed at the boundary between the “Main Display” and the “Side Display”, and then move it further to the left.

Selecting the “Main Display” will dim the “Side Display”.

#### ■ Switching the basic screen

Select the desired tab.

- ① To display the audio control screen
- ② To display the air conditioning control screen
- ③ To display the vehicle information screen
- ④ Bluetooth® connection status



#### ■ To display on the “Main Display”

Detailed information that is not shown on the “Side Display” can be set to display on the “Main Display”. For “Main Display” operation, refer to the respective section.

Select ,  or .

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Basic screens

### ■ Audio/video system

Operations such as selecting a preset station or track are carried out on the screen.

- ① Changing the audio mode
- ② Selecting a radio station that has been registered to the preset buttons, track/file or chapter

▲ and ▼ is not displayed in some audio modes.



امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

■ Air conditioning system

▶ Without rear air conditioning system

▶ With rear air conditioning system



- ① Air flow control button
- ② Fan speed control buttons
- ③ Fan speed display
- ④ Left-hand front seat side temperature control
- ⑤ Left-hand front seat side temperature display
- ⑥ Right-hand front seat side temperature display
- ⑦ Right-hand front seat side temperature control
- ⑧ Air conditioning on/off switch
- ⑨ Automatic mode
- ⑩ Dual operation switch
- ⑪ Left-hand front seat side air outlet selector
- ⑫ Right-hand front seat side air outlet selector
- ⑬ 4-zone operation switch

### ■ Vehicle information

Vehicle information (the fuel consumption, compass, etc.) can be displayed. (For details of the information: →P. 403)

Select  or  to select the desired screen.

#### ▶ Fuel consumption

Displays the average fuel consumption for the past 10 minutes in 1 minute intervals, as well as the cruising range.



#### ▶ Past record

Displays the average fuel consumption and highest fuel consumption.



#### ▶ Trip information

Displays the cruising range, average fuel consumption and the amount of time elapsed since the engine was started.



► Compass

Displays a compass and information about the current position. The orientation of the compass can be changed from north-up to heading-up by selecting the orientation symbol.



امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### Interruption screens

Each of the following screens is displayed automatically in accordance with conditions.

- Lexus parking assist-sensor (→P. 297)
- Phone (→P. 630)
- Driving mode (→P. 340)
- Lexus night view (→P. 386)
- Switching the interruption screen

When multiple interruption screens have been opened, the individual screens can be hidden or displayed. (The driving mode screen cannot be displayed again.)

Select the desired screen to be displayed. (For example, when the Lexus parking assist-sensor is being displayed.)

- ① To display the Lexus night view screen
- ② To display the Lexus parking assist-sensor screen
- ③ To display the phone screen
- ④ To set the alert volume



## Speech command system


The speech command system enables the navigation and audio, hands-free systems to be operated using speech commands.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

### ◆ Talk switch

Press .

To cancel, press and hold the talk switch.

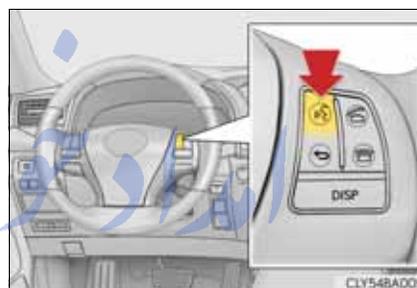


### ◆ Back switch

Press .

To return to the previous screen.



◆ Microphone

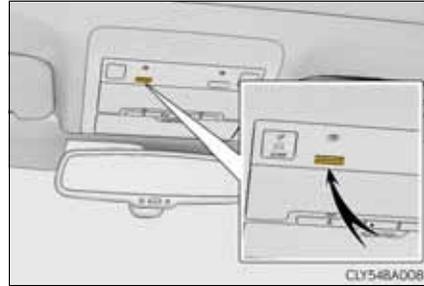

امداد خودرو فارما

تلفن شبانه روزی: ۰۸۵ ۰۸۸۶۲ ۰۲۱

FarmaSOS.com

## Speech command system operation

### ■ Speech command system operation

#### 1 Press .


After the “Shortcuts” screen has been displayed, voice guidance will commence.

Voice guidance for the speech command system can be skipped by pressing .

#### 2 After a beep sounds, say the command of your choice.

Speech commands are marked with .

Some commonly used commands are displayed on the screen.

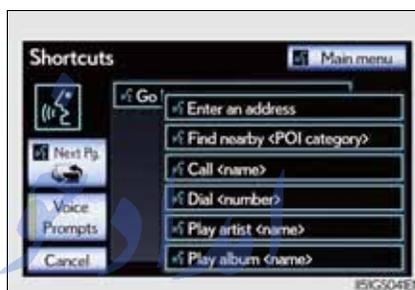

If you wish to display the commands displayed on the page in the background, perform one of the following:

- Say “Next page” or “Previous page”.
- Select “Next Pg.” or “Prev. Pg.”

If you wish to display the “Main menu” screen when the “Shortcuts” screen is displayed, perform one of the following:

- Say “Main menu”.
- Select “Main menu”.

To cancel, select “Cancel”, or press and hold .

Saying “Help” prompts voice guidance to offer examples of commands and operation methods.

- 3 Say the command displayed on the screen.

If a desired outcome is not shown, or if no selections are available, perform one of the following to return to the previous screen:

- Say “Go back”.
- Select “Go back”.
- Press .

To cancel, select “Cancel”, or press and hold .



- Speech command example (search for a track using artist name or album name)

- 1 Press .

“Play artist <name>” and “Play album <name>” are displayed in the “Shortcuts” screen.

- 2 Say “Play artist <name>” or “Play album <name>”.

Say the desired artist name or album name in the place of the “<>”.

A confirmation screen will be displayed showing the recognition results. If multiple matching items are found, a selection screen will be displayed.

When “Play artist <name>” is used to play music, the first track is selected randomly. (→P. 464)

- 3 Say “Yes” or select “Yes”.



## Command list

Recognizable speech commands and their actions are shown below.

- For devices that are not installed in the vehicle, the related commands will not be displayed in the “Shortcuts” screen. Also, according to conditions, other commands may not be displayed in the “Shortcuts” screen.
- Voice recognition language can be changed. (→P. 410)
- Commands that have a “O” in the “Shortcuts” column in the following table can be recognized from the “Shortcuts” screen.
- Calling a Telephone (→P. 646)

Command	Action	Shortcuts
“Call <name>”	Calls made by saying a name from the phonebook. For example: Say “Call John Smith”, “Call John Smith, mobile” etc.	O
“Dial <number>”	Calls made by saying the Telephone number. For example: Say “Dial 0123456789” etc.	O

- Playing a music

Command	Action	Shortcuts
“Play artist <name>”	Plays tracks by the selected artist. For example: Say “Play artist <XXXXXX>”*	O
“Play album <name>”	Plays tracks from the selected album. For example: Say “Play album <XXXXXX>”*	O

\*: Say the desired artist name or album name in the place of the “<>”.

- Speech command system
  - Commands that are not displayed in the “Shortcuts” screen can be operated from the “Main menu” screen.
  - If the system does not respond or the confirmation screen does not disappear, press  and try again.
  - Speech guidance can be canceled by setting voice prompts to off. Use this setting when it is desirable to say a command immediately after pressing  and hearing a beep.
- If a speech command cannot be recognized
  - If a speech command cannot be recognized within 6 seconds, voice guidance will say “Pardon?” (“Command not recognized.” will be displayed on the screen) and speech command reception will restart.
  - If a speech command cannot be recognized 2 consecutive times, the speech command guidance system will say “Paused. To restart voice recognition, push the talk switch. To cancel voice recognition, push and hold the talk switch.”. Voice recognition will then be suspended.
- When selecting “Voice Prompts”
  - The voice recognition prompt can be set to on or off. This setting can also be changed on the “Voice settings” screen. (→P. 419)
  - Voice recognition will be temporarily suspended. Press  again.
- When using the microphone
  - It is unnecessary to speak directly into the microphone when giving a command.
  - Wait for the confirmation beep before speaking a command.
  - Speech commands may not be recognized if:
    - Spoken too quickly.
    - Spoken at a low or high volume.
    - The roof or windows are open.
    - Passengers are talking while speech commands are spoken.
    - The air conditioning speed is set high.
    - The air conditioning vents are turned towards the microphone.
  - In the following conditions, the system may not recognize the command properly and using speech commands may not be possible:
    - The command is incorrect or unclear. Note that certain words, accents or speech patterns may be difficult for the system to recognize.
    - There is excessive background noise, such as wind noise.

- When searching for a track
  - A USB memory or iPod must be connected to enable track searching and playback. (→P. 538, 548)
  - When a USB memory or iPod is connected, recognition data is created so tracks can be searched using speech commands.
  - Recognition data is updated under the following conditions:
    - When the USB memory or iPod data has changed.
    - When the voice recognition language is changed. (→P. 410)
  - While the recognition data is being created or being updated, a track search cannot be performed using a speech command.
  - When “Play music” is dimmed in the “Shortcuts” screen, it is not possible to search for a track using a speech command. In this situation, reduce the amount of music data in the USB memory or iPod and update the recognition data to enable searching by speech command.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com


امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

**FarmaSOS.com**

## Lexus Climate Concierge

The climate control seats/seat heater\* on each seat and heated steering wheel\* are automatically controlled according to the set temperature of the air conditioning system, outside temperature, cabin temperature, etc. Lexus Climate Concierge allows a comfortable condition to be maintained without adjusting each system.

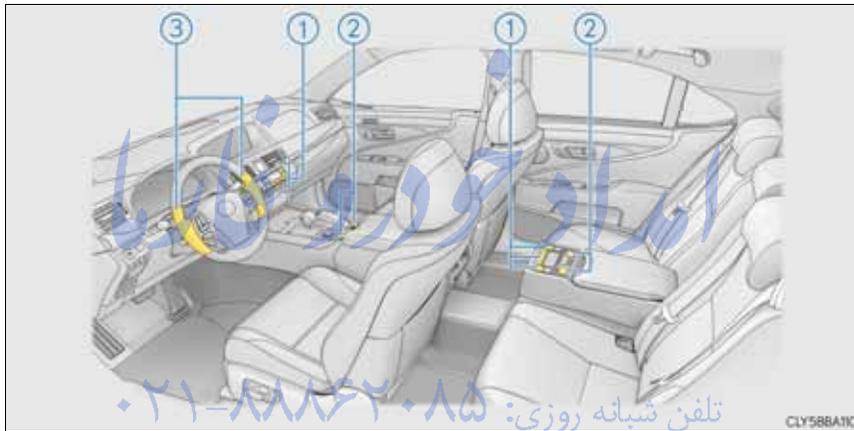

- ① Automatic air conditioning system (→P. 442, 457)  
Set the air conditioning system to automatic mode.  
The temperature for the driver's seat, front passenger's seat and both rear seats\* can be adjusted individually.
- ② Climate control seats/seat heaters\* (→P. 727, 728)  
Select "AUTO" mode on each seat.  
Seat heater, off, ventilation\* or seat cooler\* is automatically selected according to the set temperature of the air conditioning system, outside temperature, etc.
- ③ Heated steering wheel\* (→P. 725)  
Turned on automatically according to the outside temperature and cabin temperature.  
Operates for a maximum of 30 minutes.

\*: If equipped

## Front automatic air conditioning system

Air outlets and fan speed are automatically adjusted according to the temperature setting.

The air conditioning system can be displayed and operated on the “Side Display”. (→P. 423)

Press the “MENU” button on the Remote Touch, and then select “Climate” to display the air conditioning operation screen.

The illustrations below are for left-hand drive vehicles.


The button positions and shapes will differ for right-hand drive vehicles.

Also, the display and button positions will differ depending on the type of the system.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

■ Control panel

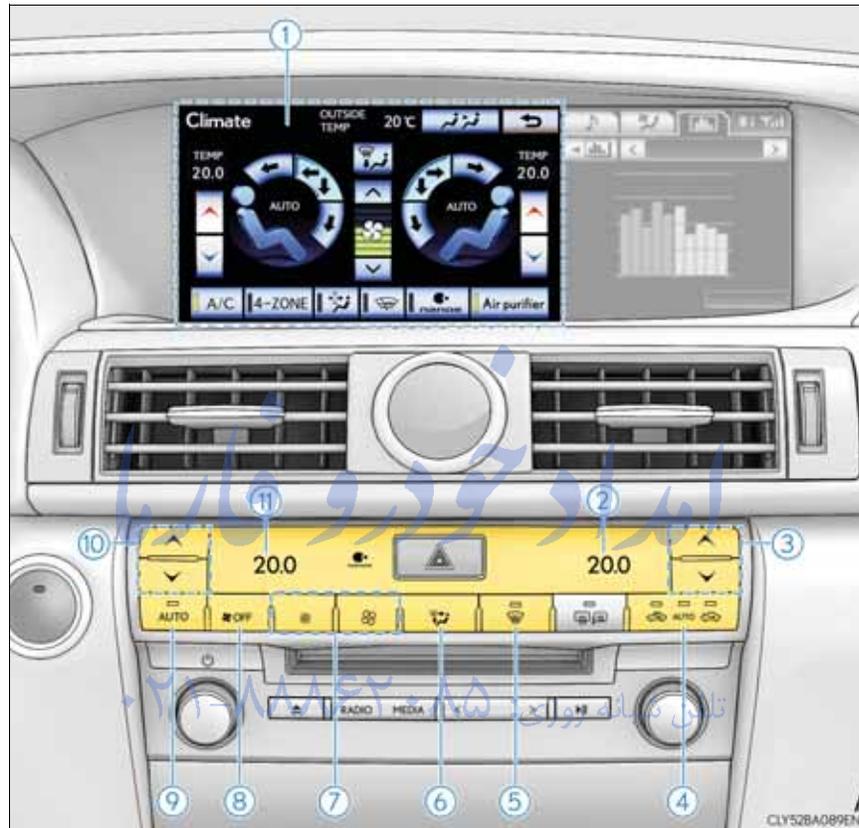

- |  |   |
|--|---|
| ① Control screen                                 | ⑥ Air outlet selector                           |
| ② Right-hand front seat side temperature display | ⑦ Fan speed control                             |
| ③ Right-hand front seat side temperature control | ⑧ Off   |
| ④ Outside air or recirculated mode               | ⑨ Automatic mode                                |
| ⑤ Windshield defogger                            | ⑩ Left-hand front seat side temperature control |
|  | ⑪ Left-hand front seat side temperature display |

5

Interior features

■ Control screen

▶ Without rear air conditioning system



▶ With rear air conditioning system



- ① Fan speed control
- ② Air flows to the feet and the windshield defogger operates
- ③ Outside temperature
- ④ Right-hand front seat side temperature display
- ⑤ Right-hand front seat side temperature control
- ⑥ Front seat air outlet selector
- ⑦ nanoe™
- ⑧ Pollen removal mode
- ⑨ DUAL/4-ZONE mode
- ⑩ Cooling and dehumidification function on/off
- ⑪ Left-hand front seat side temperature display
- ⑫ Left-hand front seat side temperature control
- ⑬ Left-hand front seat side air outlet selector
- ⑭ Rear air conditioning operation screen
- ⑮ Right-hand front seat side air outlet selector
- ⑯ Air purifier and rear air conditioning function on/off


تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

### Using the automatic air conditioning system

 - 1 Press the “AUTO” button.

The dehumidification function begins to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting and humidity.

- 2 Press  to switch to automatic air intake mode.

The air conditioning system automatically switches between outside air and recirculated air modes.

- 3 Press  or select  on the operation screen to increase the temperature and  or  to decrease the temperature.

▶ Without rear air conditioning system

When “DUAL” is selected (the indicator on “DUAL” is on) or the passenger’s side temperature control button is pressed, the temperature for the driver and passenger seats can be adjusted separately.

▶ With rear air conditioning system

When “4-ZONE” is selected (the indicator on “4-ZONE” is on) or the passenger’s side temperature control button is pressed, the temperature for the driver’s, front passenger’s and rear seats (→P. 456) can be adjusted separately.

Air outlets for the driver and passenger seats may be adjusted separately depending on the temperature setting.

When the climate control seats are set to “AUTO” mode, the system is operated automatically according to the set temperature, outside temperature, etc.

### Adjusting the settings manually

#### ► Without rear air conditioning system

- 1** To adjust the fan speed, press  to increase the fan speed and

 to decrease the fan speed or select “^” on  on the operation screen to increase the fan speed and “v” to decrease the fan speed.

Press  to turn the fan off.

- 2** To adjust the temperature setting, press  or select  on the operation screen to increase the temperature and  or  to decrease the temperature.

When “DUAL” is selected (the indicator on “DUAL” is on) or the passenger’s side temperature control button is pressed, the temperature for the driver and passenger seats can be adjusted separately.

When the climate control seats are set to “AUTO” mode, the system is operated automatically according to the set temperature, outside temperature, etc.

- 3** To change the air outlets, press  or select an air outlet switch.



► With rear air conditioning system

- 1** To adjust the fan speed, press  to increase the fan speed and  to decrease the fan speed or select “^” on  on the operation screen to increase the fan speed and “v” to decrease the fan speed.

Press  to turn the fan off.

- 2** To adjust the temperature setting, press  or select  on the operation screen to increase the temperature and  or  to decrease the temperature.

The air conditioning system switches between individual and simultaneous modes each time “4-ZONE” is selected.

When “4-ZONE” is selected (the indicator on “4-ZONE” is on) or the passenger’s side temperature control button is pressed, the temperature for the driver’s, front passenger’s and rear seats (→P. 456) can be adjusted separately.

When the climate control seats are set to “AUTO” mode, the system is operated automatically according to the set temperature, outside temperature, etc.

- 3** To change the air outlets, press  or select an air outlet switch.

- ① Left-hand front seat
- ② Right-hand front seat

Different air outlets for the driver and front passenger seats can be chosen.



### Defogging the windshield


Press .

The dehumidification function operates and fan speed increases.

Set the outside/recirculated air mode button to outside air mode if the recirculated air mode is used. (It may switch automatically.)


To defog the windshield and the side windows early, turn the air flow and temperature up.

To return to the previous mode, press  again when the windshield is defogged.

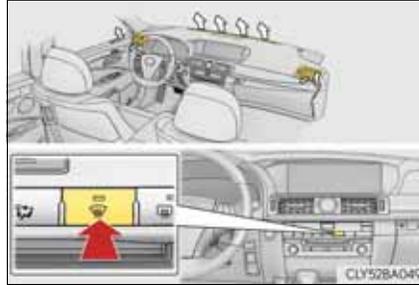


### Air outlets and air flow


Upper body

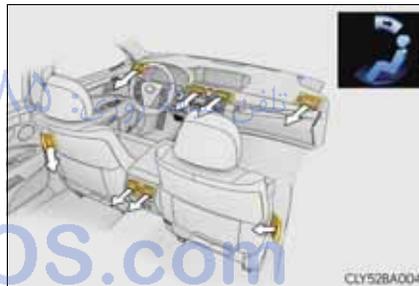


Upper body and feet

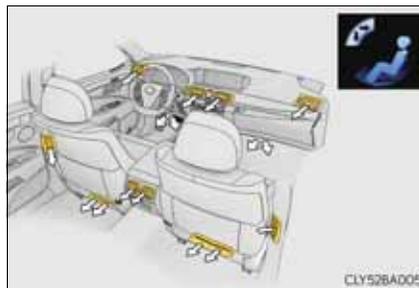

Feet

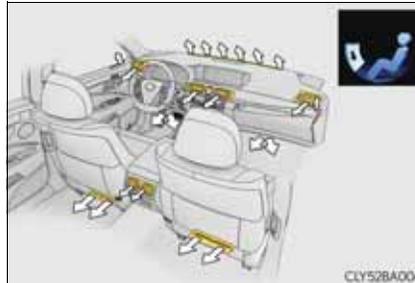

Feet and windshield

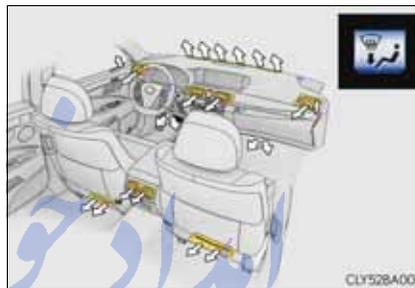

### Switching between outside air and recirculated air modes

Press .

The mode switches among  (recirculated air mode), automatic and  (outside air mode) modes each time the button is pressed.

When the system is switched to automatic mode, the air conditioning system operates automatically.

### Turning the air purifier off (with rear air conditioning system)

Select “Air purifier” on the operation screen.

The air purifier will turn off when the indicator on the switch goes off. Air will not flow from the roof vents.

To turn the air purifier on, select “Air purifier” again.

### Changing the rear seat settings (with rear air conditioning system)

#### ■ Using the automatic mode

1 Select  on the operation screen.

2 Select “REAR AUTO”.

The air conditioning system and air purifier will operate, and air outlets and speed will be set automatically.

The rear climate control seats are operated automatically according to the set temperature and the outside temperature. (→P. 727)



3 Select  to increase the temperature and  to decrease the temperature on the operation screen.

Air outlets for the right-hand and left-hand seats may be set separately depending on the temperature setting. *تلفن شبانه روزی: ۰۲۱-۸۸۶۴۰۸۵*

When the rear climate control seats are set to “AUTO” mode, the system is operated automatically according to the set temperature, outside temperature, etc.

■ Adjusting the temperature setting

1 Select  on the operation screen.

2 Select  (increase) or  (decrease). Operating the switch will enter individual mode.

① L: Left-hand rear seat

② R: Right-hand rear seat



The air conditioning system switches between individual and simultaneous modes each time “4-ZONE” is selected.

When the rear climate control seats are set to “AUTO” mode, the system is operated automatically according to the set temperature, outside temperature, etc.

■ Adjusting the fan speed (air purifier and cooler from the roof vents)

1 Select  on the operation screen.

2 To adjust the fan speed, select “^” on  on the operation

screen to increase the fan speed and “v” to decrease the fan speed.

According to the air outlets currently selected, the fan speed of either the cool air from the roof vents or air purifier will be adjusted. (→P. 459)

■ Turning the rear air conditioning system off

Select  on the operation screen.

The air purifier and the rear climate control seats also turn off.

- Disabling the switches on the rear controller

Select .

Rear climate control seats buttons are also locked.



### Pollen removal mode button

Operates pollen removal mode on/off.

Outside air mode switches to  (recirculated air) mode. Pollen is removed from the air and the air flows to the upper part of the body.


Usually the system will turn off automatically after approximately 1 to 3 minutes.



### Adjusting the position of and opening and closing the air outlets


#### ■ Front center outlets and front side outlets

- ① Direct air flow to the left or right, up or down.
- ② Turn the knob to open or close the vent.

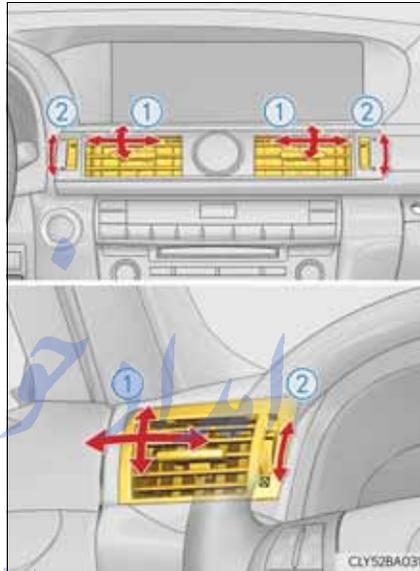

#### ■ Rear center outlets

- ① Direct air flow to the left or right, up or down.
- ② Turn the knob to open or close the vent.

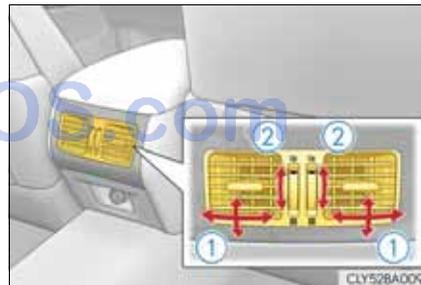


## ■ Rear side outlets

- ① Direct air flow to the left or right, up or down.
- ② Turn the knob to open or close the vent.



## ■ Roof side outlets (with rear air conditioning system)

Direct air flow to the left or right, up or down.

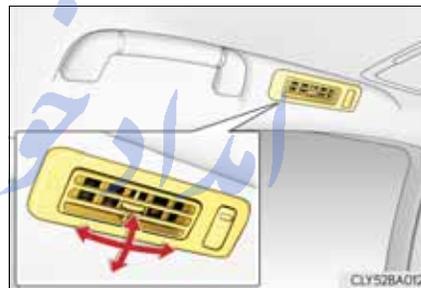

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

**■ Operation of the air conditioning system in Eco drive mode**

In Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:

- Engine speed and compressor operation controlled to restrict heating/cooling capacity
- Fan speed restricted when automatic mode is selected

To improve air conditioning performance, perform the following operations:

- Adjust the fan speed
- Turn off Eco drive mode

The air conditioning control of Eco drive mode can be changed to the same setting as that used in normal drive mode.

(Customizable features →P. 904)

**■ Using the automatic mode**

Fan speed is adjusted automatically in accordance with the temperature setting and ambient conditions. As a result, the following may occur:

- Immediately after the “AUTO” button is pressed, the fan may stop for a while until warm or cool air is ready to flow.
- Cool air may flow to the area around the upper body when the heater is on.

**■ Fogging up of the windows**

- The windows will easily fog up when the humidity in the vehicle is high. Selecting “A/C” on the operation screen will dehumidify the air from the outlets and defog the windshield effectively.
- If you “A/C” off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

■ Outside/recirculated air mode

- When driving on dusty roads such as tunnels or in heavy traffic, set the outside/recirculated air mode button to the recirculated air mode. This is effective in preventing outside air from entering the vehicle interior. During cooling operation, setting the recirculated air mode will also cool the vehicle interior effectively.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

■ Automatic mode for air intake control

In automatic mode, the system detects exhaust gas and other pollutants and automatically switches between outside air and recirculated air modes.

When the dehumidification function is off, and the fan is operating, turning automatic mode on will activate the dehumidification function.

■ Pollen removal mode

- In order to prevent the windshield from fogging up when the outside air is cold, the following may occur:
  - Outside air mode does not switch to  (recirculated air) mode.
  - The dehumidification function operates.
  - The operation cancels after approximately 1 minute.
- In rainy weather, the windows may fog up. Press .
- In extremely humid weather, the windows may fog up.
- The pollens are filtered out even if the pollen removal mode is turned off.

■ Air purifier (with rear air conditioning system)

The air purifier will turn on when turning the rear air conditioning system on.

■ When the outside temperature falls to nearly 0°C (32°F)

The dehumidification function may not operate even when “A/C” on the operation screen is selected.

#### ■ Air conditioning odors

- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
  - It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
  - The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.

#### ■ nanoe™ \*1

The air conditioning system adopts nanoe™ technology. This helps to provide clean air and moisture by emitting electrically charged ions coated with water particles through the front center vent on driver's side\*2.

- When the fan is turned on, the nanoe™ is automatically activated.
- When the fan is operated in the following conditions, system performance will be maximized. If the following conditions are not met, the nanoe™ may not operate at full capacity.
  - The ,  or  air outlets are being used.
  - The front center vent on driver's side is open.
- When nanoe™ is generated, a small amount of ozone is emitted and may be faintly smelled in some situations. However, this is approximately the same as the amount that already exists in nature, such as in forests, and it has no affect on the human body.
- A slight noise may be heard during operation. This is not a malfunction.

\*1: nanoe™ and the nanoe™ mark are trademarks of Panasonic Corporation.

\*2: According to temperature and humidity conditions, fan speed and direction of the air flow, the nanoe™ may not operate at full capacity.

#### ■ Air conditioning filter

→P. 792

#### ■ Customization

Settings (e.g. the climate control seats coordinated control, exhaust gas sensor sensitivity, etc.) can be changed. (Customizable features →P. 904)

 CAUTION

## ■ To prevent the windshield from fogging up

Do not use  during cool air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

## ■ nanoe™

Do not disassemble or repair the generator because it contains high voltage parts. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional if the generator needs repair.

 NOTICE

## ■ To prevent battery discharge

Do not leave the air conditioning system on longer than necessary when the engine is stopped.


## ■ To prevent damage to the nanoe™

Do not insert anything into the driver's side vent, attach anything to it, or use sprays around the driver's side vent. These things may cause the generator not to work properly.

FarmaSOS.com

## Rear air conditioning system\*

Air outlets and fan speed are automatically adjusted according to the temperature setting.

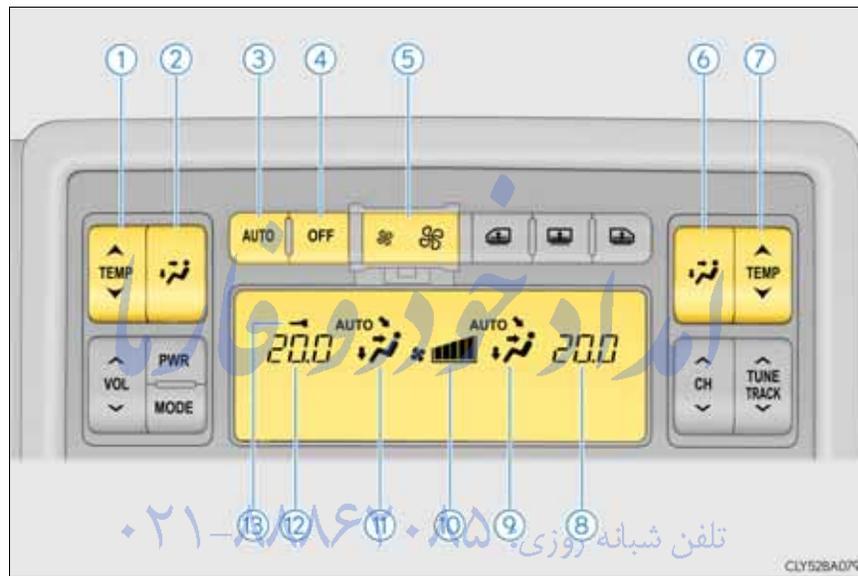

- |   |   |
|---|---|
| ① Left-hand rear seat side temperature control  | ⑧ Right-hand rear seat side temperature display |
| ② Left-hand rear seat side air outlet selector  | ⑨ Right-hand rear seat side air flow display    |
| ③ Automatic mode                                | ⑩ Fan speed display                             |
| ④ Off   | ⑪ Left-hand rear seat side air flow display     |
| ⑤ Fan speed control                             | ⑫ Left-hand rear seat side temperature display  |
| ⑥ Right-hand rear seat side air outlet selector | ⑬ Button lock display                           |
| ⑦ Right-hand rear seat side temperature control |   |

\*: If equipped

### Using automatic air conditioning system

- 1 Press the “AUTO” button.

The air conditioning system will operate, and air outlets and fan speed will be adjusted automatically.

“AUTO” will be displayed on the control panel.

- 2 Press “^” on “TEMP” to increase the temperature and “v” to decrease the temperature.

Air outlets for the right-hand and left-hand seats may be set separately depending on the temperature setting.

When the rear climate control seats are set to “AUTO” mode, the system is operated automatically according to the set temperature, outside temperature, etc.

### Adjusting the settings manually

- Adjusting the temperature setting

Press “^” on “TEMP” to increase the temperature and “v” to decrease the temperature.

When the rear climate control seats are set to “AUTO” mode, the system is operated automatically according to the set temperature, outside temperature, etc.

### ■ Changing the air outlets

Press .


The air outlets change as follows each time  is pressed.

Different air outlets for the right-hand and left-hand rear seats can be chosen.

Air flows as shown below according to the mode selected.

#### Upper body

When the indicator on “A/C”  
(on the front operation screen) is  
on

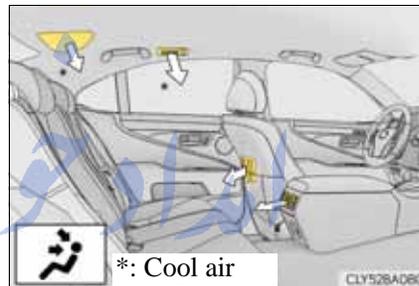

#### Upper body

When the indicator on “A/C”  
(on the front operation screen) is  
off



#### Upper body and feet



Feet



- Adjusting the air volume

The volume of cool air or air from the air purifier can be adjusted according to the mode selected.

Press (increase) or (decrease) on .

Cool air flows from roof vents.



Air purifier operation (air flows from the rear package tray.)




Press the “OFF” button to turn the fan off.

The air purifier also turn off.

**Adjusting the position of and opening and closing the air outlets****■ Rear center outlets**

- ① Direct air flow to the left or right, up or down.
- ② Turn the knob to open or close the vent.

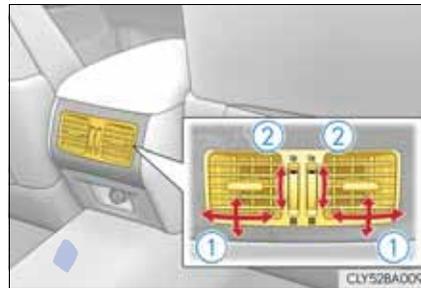**■ Rear side outlets**

- ① Direct air flow to the left or right, up or down.
- ② Turn the knob to open or close the vent.

**■ Roof side outlets**

- Direct air flow to the left or right, up or down.



#### ■ Button lock function

To prevent inadvertent operation, the buttons on the rear controller can be locked. Press and hold the “MODE” button until you hear a beep to lock the buttons. Pressing the “MODE” button again until you hear a beep will release the lock.


The indicator appears on the display when the buttons are locked.

The rear controller can be locked from the air conditioning operation screen. (→P. 449)



#### ■ Rear control panel illumination off function

Control panel illumination on the rear controller can be turned off. Press and hold the “PWR” button until you hear a beep to turn the illumination off. Pressing the “PWR” button again until you hear a beep will turn the illumination on.

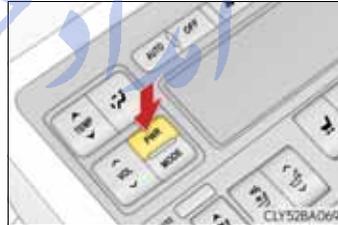

#### ■ Replacing the rear air conditioning filter

Replacing the air conditioning filter when using rear air conditioning or air purifier reduces air flow or deodorizing performance. (→P. 792)

#### ⚠ NOTICE

##### ■ To prevent battery discharge


Do not leave the air conditioning system on longer than necessary when the engine is off.

## Rear window and outside rear view mirror defoggers

These features are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

### On/off

The defoggers will automatically turn off after approximately 15 minutes.

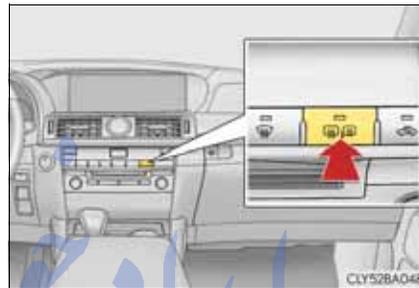

### ■ Operating conditions

The engine switch must be in the IGNITION ON mode.

### ⚠ CAUTION

- When the outside rear view mirror defoggers are on  
Do not touch the rear view mirror surfaces, as they can become very hot and burn you.


### ⚠ NOTICE

- To prevent battery discharge  
Turn the defoggers off when the engine is off.

## Windshield wiper de-icer\*

This feature is used to prevent ice from building up on the windshield and wiper blades.

- 1 Press the “MENU” button on the Remote Touch. (→P. 392)
- 2 Select “Climate” on the “Menu” screen.

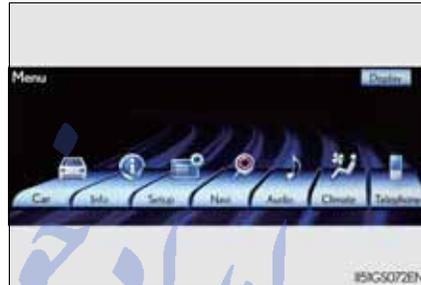

- 3 On/off

Select  to turn on the windshield wiper de-icer. The windshield wiper de-icer will automatically turn off after approximately 15 minutes. Selecting  again also turns the de-icer off.



### ■ Operating conditions

The engine switch must be in the IGNITION ON mode.

### ⚠ CAUTION

- When the windshield wiper de-icer is on  
Do not touch the glass at the lower part of the windshield or to the side of the front pillars as the surfaces can become very hot and burn you.

\*: If equipped

## Audio system type

### CD and DVD player with AM/FM/DAB radio

The audio functions can be displayed and operated on the “Side Display”. (→P. 423)

The illustration below is for left-hand drive vehicles.

The button positions and shapes will differ for right-hand drive vehicles.

Also, the display and button positions will differ depending on the type of the system.

▶ Using the instrument panel

Press the “RADIO” or “MEDIA” button to display the audio control screen.

▶ Using the Remote Touch

Press the “MENU” button on the Remote Touch, select “Audio” and select each tab to display the audio control screen.

FarmaSOS.com



5

Interior features

FarmaSOS.com

Title	Page
Using the radio	P. 491
Using the CD/DVD player	P. 498
Playing an audio CD and MP3/WMA discs	P. 500
Playing DVD video	P. 506
CD/DVD player and DVD video disc information	P. 518
Listening to Bluetooth® audio	P. 527
Listening to a USB memory	P. 538
Listening to an iPod	P. 549
Using the AUX port	P. 559
Optimal use of the audio/video system	P. 561
Using the rear seat audio controls	P. 563
Using the steering wheel audio switches	P. 566

### Using the speech command system

Press  to operate the speech command system. (→P. 433)



- Using cellular phones

Interference may be heard through the audio system's speakers if a cellular phone is being used inside or close to the vehicle while the audio system is operating.

- When using the Remote Touch screen

Dimmed screen buttons cannot be operated.

- Tab

Select  or , located either side of the screen tabs, to display tabs from the previous or next page.

- About Dolby

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

 **CAUTION**

- Certification for the disc player

This product is a Class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1 M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.

**CLASS 1 LASER PRODUCT**

**CAUTION - CLASS 1 M VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN, DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.**

**NOTICE****■ To prevent battery discharge**

Do not leave the audio system on longer than necessary when the engine is off.

**■ To avoid damaging the audio system**

Take care not to spill drinks or other fluids on the audio system.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

**FarmaSOS.com**

- Open source license

This product uses the following open source software.

- T-Kernel

This Product uses the Source Code of T-Kernel under T-License granted by the T-Engine Forum ([www.t-engine.org](http://www.t-engine.org)).

- C Library

This product includes software developed by the University of California, Berkeley and its contributors. This product includes software developed by the University of California, Lawrence Berkeley Laboratory.

Copyright © 1982, 1985, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1982, 1986, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1982, 1986, 1989, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1982, 1986, 1991, 1993, 1994 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1983, 1990, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1983, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1987, 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1987, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1988 Regents of the University of California. All rights reserved.

Copyright © 1988 University of Utah.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved. This code is derived from software contributed to Berkeley by the Systems Programming Group of the University of Utah Computer Science Department and Ralph Campbell.

Copyright © 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1988, 1993 The Regents of the University of California. All rights reserved. This code is derived from software contributed to Berkeley by Arthur David Olson of the National Cancer Institute.

Copyright © 1989 The Regents of the University of California. All rights reserved.

Copyright © 1989 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1989, 1993 The Regents of the University of California. All rights reserved. — تلفن شبانه روزی: ۰۸۵۰۸۸۸۸۸۸۸۸

Copyright © 1989, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1990, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Chris Torek.  
Copyright © 1991, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1991, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Berkeley Software Design, Inc.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Ralph Campbell.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

© UNIX System Laboratories, Inc. All or some portions of this file are derived from material licensed to the University of California by American Telephone and Telegraph Co. or Unix System Laboratories, Inc. and are reproduced herein with the permission of UNIX System Laboratories, Inc.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

This software was developed by the Computer Systems Engineering group at Lawrence Berkeley Laboratory under DARPA contract BG 91-66 and contributed to Berkeley. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Lawrence Berkeley Laboratory.

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Ralph Campbell. This file is derived from the MIPS RISC Architecture book by Gerry Kane.

Copyright © 1993 The Regents of the University of California. All rights reserved.

Copyright © 1994 The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by Andrew Hume of AT&T Bell Laboratories.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1982, 1986 Regents of the University of California. All rights reserved.

Copyright © 1983, 1990, 1993 The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Portions Copyright © 1993 by Digital Equipment Corporation.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies, and that the name of Digital Equipment Corporation not be used in advertising or publicity pertaining to distribution of the document or software without specific, written prior permission.

THE SOFTWARE IS PROVIDED “AS IS” AND DIGITAL EQUIPMENT CORP. DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL DIGITAL EQUIPMENT CORPORATION BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Copyright © 1982, 1986, 1990, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1983, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1990, 1993 The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes software developed by the NetBSD Foundation, Inc. and its contributors.

Copyright © 1996 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by J.T. Conklin.

Copyright © 1997 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus Klein.

Copyright © 1997, 1998 The NetBSD Foundation, Inc. All rights reserved.

Copyright © 1997,98 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by J.T. Conklin.

Copyright © 1997, 1998 The NetBSD Foundation, Inc. All rights reserved.

This code was contributed to The NetBSD Foundation by Klaus Klein.

Copyright © 1998 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus Klein.

Copyright © 1998, 2000 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus J. Klein.

Copyright © 1999, 2000 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Julian Coleman.

Copyright © 2000 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Dieter Baron and Thomas Klausner.

Copyright © 2000, 2001 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Jun-ichiro itojun Hagino and by Klaus Klein.

Copyright © 2001 The NetBSD Foundation, Inc. All rights reserved.

This code is derived from software contributed to The NetBSD Foundation by Klaus Klein.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
4. Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes software developed by Christos Zoulas.

Copyright © 1997 Christos Zoulas. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by Christos Zoulas.
4. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes software developed by Winning Strategies, Inc.

Copyright © 1994 Winning Strategies, Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by Winning Strategies, Inc.
4. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1995, 1996, 1997, and 1998 WIDE Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of the project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE PROJECT AND CONTRIBUTORS “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

**FarmaSOS.com**

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1995 Carnegie-Mellon University. All rights reserved.  
Author: Chris G. Demetriou

Copyright © 1995, 1996 Carnegie-Mellon University. All rights reserved.  
Author: Chris G. Demetriou

FarmaSOS.com

Permission to use, copy, modify and distribute this software and its documentation is hereby granted, provided that both the copyright notice and this permission notice appear in all copies of the software, derivative works or modified versions, and any portions thereof, and that both notices appear in supporting documentation.

CARNEGIE MELLON ALLOWS FREE USE OF THIS SOFTWARE IN ITS "AS IS" CONDITION. CARNEGIE MELLON DISCLAIMS ANY LIABILITY OF ANY KIND FOR ANY DAMAGES WHATSOEVER RESULTING FROM THE USE OF THIS SOFTWARE.

Carnegie Mellon requests users of this software to return to Software Distribution Coordinator or [Software.Distribution@CS.CMU.EDU](mailto:Software.Distribution@CS.CMU.EDU) School of Computer Science Carnegie Mellon University Pittsburgh PA 15213-3890 any improvements or extensions that they make and grant Carnegie the rights to redistribute these changes.

- TCP/IP, Socket Library

This product includes software developed by the University of California, Berkeley and its contributors.

Copyright © 1980, 1983, 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1983, 1987, 1989 The Regents of the University of California. All rights reserved.

Copyright © 1983, 1989, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1985, 1988, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1985, 1993 The Regents of the University of California. All rights reserved.

Copyright © 1989, 1993, 1995 The Regents of the University of California. All rights reserved.

---

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the University of California, Berkeley and its contributors.
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 2004 by Internet Systems Consortium, Inc. ("ISC")  
Portions Copyright © 1996-1999 by Internet Software Consortium.  
Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED “AS IS” AND ISC DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL ISC BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Portions Copyright © 1993 by Digital Equipment Corporation.

Permission to use, copy, modify, and distribute this software for any purpose with or without fee is hereby granted, provided that the above copyright notice and this permission notice appear in all copies, and that the name of Digital Equipment Corporation not be used in advertising or publicity pertaining to distribution of the document or software without specific, written prior permission.

THE SOFTWARE IS PROVIDED “AS IS” AND DIGITAL EQUIPMENT CORP. DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL DIGITAL EQUIPMENT CORPORATION BE LIABLE FOR ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

This product includes software developed by WIDE Project and its contributors.

Portions Copyright © 1995, 1996, 1997, and 1998 WIDE Project. All rights reserved.

---

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by WIDE Project and its contributors.
4. Neither the name of the project nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE PROJECT AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1988 Stephen Deering.

Copyright © 1982, 1986 Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. [rescinded 22 July 1999]
4. Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright © 1982, 1986, 1988 Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation and other materials related to such distribution and use acknowledge that the software was developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Rights, responsibilities and use of this software are controlled by the agreement found in the “LICENSE.H” file distributed with this source code. “LICENSE.H” may not be removed from this distribution, modified, enhanced nor references to it omitted.

Copyright 1983 by the Massachusetts Institute of Technology

Copyright 1984 by the Massachusetts Institute of Technology

Copyright 1984, 1985 by the Massachusetts Institute of Technology

Copyright 1990 by NetPort Software

Copyright 1990-1993 by NetPort Software.

Copyright 1990-1994 by NetPort Software.

Copyright 1990-1996 by NetPort Software.

Copyright 1990-1997 by NetPort Software.

Copyright 1993 by NetPort Software

Copyright 1986 by Carnegie Mellon

All Rights Reserved

Permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission.

- OpenSSL

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>) This product includes cryptographic software written by Eric Young ([ey@cryptsoft.com](mailto:ey@cryptsoft.com)). This product includes software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).

OpenSSL License

Copyright © 1998-2008 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: “This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit.  
(<http://www.openssl.org/>)”
4. The names “OpenSSL Toolkit” and “OpenSSL Project” must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact [openssl-core@openssl.org](mailto:openssl-core@openssl.org).
5. Products derived from this software may not be called “OpenSSL” nor may “OpenSSL” appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: “This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)”

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT “AS IS” AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young ([ey@cryptsoft.com](mailto:ey@cryptsoft.com)). This product includes software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).

Original SSLeay License

Copyright © 1995-1998 Eric Young ([ey@cryptsoft.com](mailto:ey@cryptsoft.com)) All rights reserved.

This package is an SSL implementation written by Eric Young ([ey@cryptsoft.com](mailto:ey@cryptsoft.com)). The implementation was written so as to conform with Netscapes SSL. This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)). Copyright remains Eric Young’s, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: “This product includes cryptographic software written by Eric Young ([ey@cryptsoft.com](mailto:ey@cryptsoft.com))”  
The word ‘cryptographic’ can be left out if the routines from the library being used are not cryptographic related :-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: “This product includes software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com))”


THIS SOFTWARE IS PROVIDED BY ERIC YOUNG “AS IS” AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.

## Using the radio

Press the “RADIO” button to display the radio control screen.

Select the “AM”, “FM” or “DAB” tab or press the “RADIO” button repeatedly to select the desired tab.

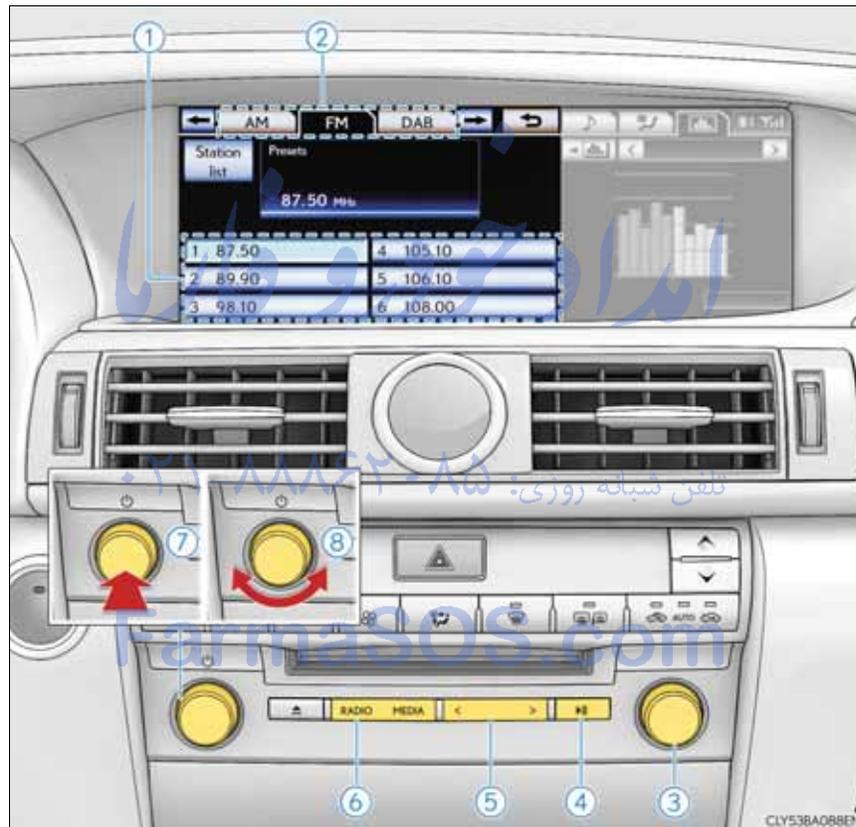

- ① Preset stations/channels
- ② AM/FM/DAB mode tabs
- ③ “TUNE•SCROLL” knob: Adjusting the frequency
- ④ Mute/unmute
- ⑤ “CH•TRACK” button: Preset tuning/seeking the frequency
- ⑥ Radio selection
- ⑦ Power
- ⑧ Volume

### Selecting a station (excluding DAB [Digital Audio Broadcast])

- Seek tuning  
Press and hold “<” or “>” on the “CH•TRACK” button.
- Manual tuning  
Turn the “TUNE•SCROLL” knob.
- Preset stations  
Select the desired preset stations (1 - 6).  
Press “<” or “>” on the “CH•TRACK” button.

### Setting station presets (excluding DAB [Digital Audio Broadcast])

- 1 Search for desired stations.
- 2 Select one of the screen buttons (1 - 6) and hold it until a beep is heard.



### Displaying the station list

Select “Station list” to display the list of FM stations available.

If there are no FM stations in the list, you will not be able to change the station. The frequency before you operate “Station list” will be kept.



### RDS (Radio Data System)

Depending on the availability of RDS infrastructure, the service may not function properly.

- Listening to stations of the same network

**FM alternative frequency:** The station among those of the same network with strong reception is selected. FM alternative frequency on/off (→P. 496)

**Regional code change:** The station among those of the same network with strong reception and broadcasting the same program is selected. Regional code change on/off (→P. 496)

- FM Traffic announcement

The system automatically switches to traffic information when a broadcast with a traffic information signal is received.

“TP” (Traffic program) will appear on the screen. The station returns to the previous one when the traffic information ends.

FM Traffic announcement on/off (→P. 496)

### DAB (Digital Audio Broadcast)

- Selecting a channel

Press “<” or “>” on “CH•TRACK” button or select  or  on the screen.

- Selecting a service

- Service list

Select the desired service by turning the “TUNE•SCROLL” knob or select one of the displayed services on the service list screen.


- Preset channels

Select the desired preset channels (1 - 6).

■ Displaying the service list

Select “Service list”.

To return to the previous screen, select “Service presets”.

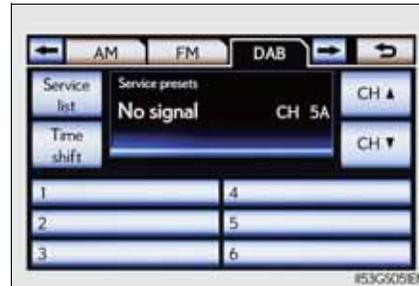


■ Setting service presets

- 1 Select the desired channel by press “<” or “>” on “CH•TRACK” button or select **CH ▲** or **CH ▼** on the screen.
- 2 Select the desired service by turn the “TUNE•SCROLL” knob or select one of the displayed services on the service list screen.

- 3 Select one of the screen buttons (1 - 6) and hold it until a beep is heard.

If the “Service presets” screen does not appear, select “Service presets” on the “Service list” screen.

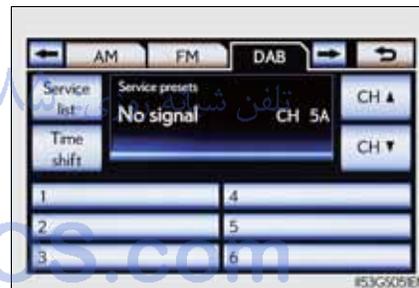


### ■ Time shift operation

The service you are currently listening to can be re-listened to at any time.

#### 1 Select “Time shift”.


“-0’00” is displayed on the screen.

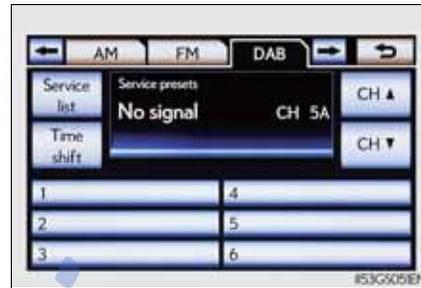

#### 2 Turn the “TUNE•SCROLL” knob to set the desired time.

The time can be set in intervals of 10 seconds.


To cancel, select “Time shift” again or the time shift display is left showing “-0’00” for 6 seconds without any operation.

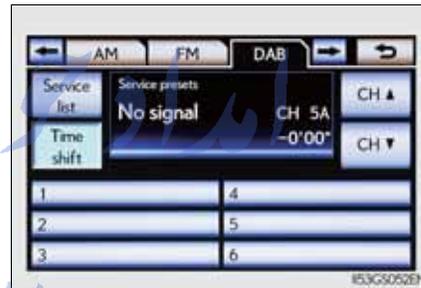

## Radio settings

Detailed radio settings can be programmed.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “Audio” on the “Setup” screen.
- 3 Select “Radio settings”.

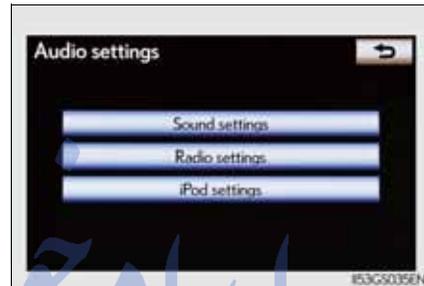


- 4 Select the item to be adjusted, and then select the screen button next to it to adjust its settings.

“FM traffic announcement”: The tuner will automatically seek a station that regularly broadcasts traffic information and the station broadcasts when the traffic information program starts.

“FM alternative frequency”: A station providing good reception is automatically selected if current reception worsens.

“Regional code change”: For switching over to a broadcasting station within the same local program network.

“DAB alternative frequency”: A station providing good reception is

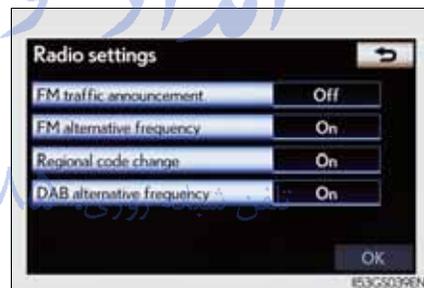

automatically selected if current reception worsens.

**5** Select “OK”.

■ If you select 

The display returns to the previous screen.

■ EON (Enhanced Other Network) system (for traffic announcement function)

If the RDS station (with EON data) you are listening to is not broadcasting a traffic information program and the audio system is in the TA (Traffic announcement) mode, the radio will be switched automatically to a station broadcasting a traffic information program in the EON AF list when traffic information begins.

■ When listening to a disc

When the traffic information program starts, the disc playback mode is interrupted and the traffic information is automatically broadcasted. When the program ends, the initial operation resumes.

■ Reception sensitivity

- Maintaining perfect radio reception at all times is difficult due to the continually changing position of the antenna, differences in signal strength and surrounding objects, such as trains, transmitters, etc.
- The radio antenna is mounted inside the rear window. To maintain clear radio reception, do not attach metallic window tinting or other metallic objects to the antenna wire mounted inside the rear window.

■ About Time shift

The times at which playback is possible depend on the bit rate of the DAB station to be recorded, the amount of DAB unit memory, and the time at which reception of the broadcast began.

## Using the CD/DVD player



- |   |                   |
|---|-------------------|
| ① Disc slot   | ⑤ Media selection |
| ② “TUNE•SCROLL” knob:<br>Track, file and chapter selection                    | ⑥ Disc eject      |
| ③ Play/pause  | ⑦ Power           |
| ④ “CH•TRACK” button:<br>Track, file and chapter selection/fast forward/rewind | ⑧ Volume          |

### Inserting a disc

Insert a disc into the disc slot.

### Ejecting a disc

Press  and remove the disc.

### Playing and pausing a track/file/chapter

To play or pause a track/file/chapter, press .

#### ■ Using the display

If a disc is inserted with the label facing down, it cannot be played.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Playing an audio CD and MP3/WMA discs

Press the “MEDIA” button if a disc has already been loaded in the disc slot.

Select the “DISC” tab or press the “MEDIA” button repeatedly until the “DISC” tab is selected.

### Control icon screen

#### ▶ Audio CD mode



#### ▶ MP3/WMA disc mode



① Random playback

② Repeat play

③ Pause

Select  to play

④ Selecting a track/file

⑤ Selecting a folder

### Selecting, fast forwarding or rewinding a track (Audio CD)

#### ■ Selecting a track

Select “<” or “>” on the screen to select the next/previous track.

Press “<” or “>” on the “CH•TRACK” button or turn the “TUNE•SCROLL” knob to select the desired track number.

#### ■ Selecting a track from the track list

**1** Select the track name on the screen to display the following track list screen.

**2** Select the desired track number.

 ,  : Select up or down by 5 track groups.

“CH•TRACK” button: Press “<” or “>” on the “CH•TRACK” button to scroll through the track list one by one.

“TUNE•SCROLL” knob: Turn the knob clockwise or counter-clockwise to quickly scroll up or down the track list.

 ,  : If  appears to the right of an item name, the complete name is too long for the screen. Select  to scroll to the end of the name. Select  to move to the beginning of the name.



#### ■ Fast forwarding or rewinding a track

Press and hold “<” or “>” on the “CH•TRACK” button to fast forward or rewind.

### Selecting a folder (MP3/WMA discs)

- Selecting a folder

Select “<” or “>” on the screen to select the next/previous folder.

- Selecting a folder from the folder list

**1** Select the folder name on the screen to display the following folder list screen.

**2** Select the desired folder number to display the folder’s file list. From the file list, select the desired file number.

, : Select to move the list up or down by 5 folder groups.

“TUNE•SCROLL” knob: Turn the knob clockwise or counter-clockwise to quickly scroll up or down the folder list.

, : If  appears to the right of an item name, the complete name is too long for the screen. Select  to scroll to the end of the name. Select  to move to the beginning of the name.



### Selecting, fast forwarding or rewinding a file (MP3/WMA discs)

#### ■ Selecting a file

Select “<” or “>” on the screen to select the next/previous file.

Press “<” or “>” on the “CH•TRACK” button or turn the “TUNE•SCROLL” knob to select the desired file number.

#### ■ Selecting a file from the file list

**1** Select the file name on the screen to display the following file list screen.

**2** Select the desired file number.

, : Select to move the list up or down by 5 file groups.

“CH•TRACK” button: Press “<” or “>” on the “CH•TRACK” button to scroll through the file list one by one.

“TUNE•SCROLL” knob: Turn the knob clockwise or counter-clockwise to quickly scroll up or down the file list.

, : If  appears to the right of an item name, the complete name is too long for the screen. Select  to scroll to the end of the name. Select  to move to the beginning of the name.



#### ■ Fast forwarding or rewinding a file

Press and hold “<” or “>” on the “CH•TRACK” button to fast forward or rewind.

## Random playback

### ■ Audio CD

Select “RAND” on the screen.

“RAND” appears on the screen.

To cancel, select “RAND” again.

### ■ MP3/WMA disc

#### ● Playing files from a particular folder in random order

Each time “RAND” is selected, the mode changes as follows:  
random (1 folder random) → folder random (1 disc random)  
→ off

#### ● Playing all the files on a disc in random order

Select “RAND” repeatedly until “FLD.RAND” appears on the screen.

To cancel, select “RAND” again.

When a file is skipped or the system is inoperative, select “RAND” to reset.

FarmaSOS.com

## Repeat play

### ■ Audio CD

Select “RPT” on the screen.

“RPT” appears on the screen.

To cancel, select “RPT” again.

### ■ MP3/WMA disc

#### ● Repeating a file

Select “RPT” on the screen.

Each time “RPT” is selected, the mode changes as follows:

- When “RAND” is off  
file repeat → folder repeat → off
- When “RAND” is on  
file repeat → repeat off

#### ● Repeating all of the files in a folder

Select “RPT” repeatedly until “FLD.RPT” appears on the screen.

To cancel, select “RPT” again.

### ■ If you select

The display returns to the previous screen.

### ■ Displaying the title and artist name (Audio CD)

If a CD-TEXT disc is inserted, the title of the disc and track will be displayed. Up to 32 characters can be displayed.

### ■ Error messages

→P. 518

## Playing DVD video

For safety reasons, you can enjoy the visual contents of discs only when the vehicle is completely stopped with the engine switch in ACCESSORY or IGNITION ON mode and the parking brake applied. While driving in DVD video mode, only the DVD's audio can be heard.

When a DVD video disc is inserted while driving, the audio contents of the main feature will automatically be played. However, some discs may not be played from the main story.

Press the "MEDIA" button if a disc has already been loaded in the disc slot.

Select the "DISC" tab or press the "MEDIA" button repeatedly until the "DISC" tab is selected.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Control icon screen

- ① ② Menu screen appears
- ③ Option screen appears  
(→P. 508)
- ④ Display menu control key  
(→P. 509)
- ⑤ Returns to the full screen (only when the vehicle is completely stopped and the parking brake is applied)
- ⑥ Rewind
- ⑦ Stop
- ⑧ Pause  
Select  to play
- ⑨ Fast forward




If  is selected, while watching a DVD, the DVD controls will appear.  
If  appears on the screen when a control is selected the operation relevant to the control is not permitted.

FarmaSOS.com

### DVD options screen

Select “Options” on “DVD” screen, the following screen appears.

- ① Returns to the full screen (only when the vehicle is completely stopped and the parking brake is applied)
- ② Search by title/group number
- ③ Change audio language
- ④ Change angle
- ⑤ Display the predetermined scene and start playing from there
- ⑥ Change subtitle language
- ⑦ Change screen size
- ⑧ Display the image quality adjustment screen
- ⑨ Change initial setting

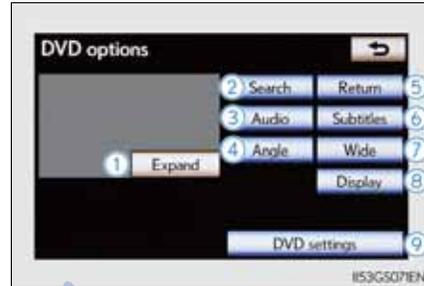

If  appears on the screen when a control is selected the operation relevant to the control is not permitted.

### Fast forwarding/rewinding a disc

Press and hold “<” or “>” on the “CH•TRACK” button to fast forward or rewind.

### Using the DVD menu

- 1 Select “Menu” or “Top menu” on the control icon screen.  
Select  if the menu control key does not appear on the menu screen.

- 2 Select the menu item using , ,  or  and select “Enter”.

: Returns to the previous screen



Note that specific items or the operating method differs from one DVD to another. Refer to the manual that comes with the DVD disc. (The above image is an example.)

### Searching for a desired screen

#### ■ Searching by title

- 1 Select “Search” on the “DVD options” screen.

- 2 Input the desired title number and then select “OK”.

: Deletes the last input number

: Returns to the previous screen



#### ■ Searching by chapter

Press “<” or “>” on the “CH•TRACK” button or turn the “TUNE•SCROLL” knob.

### Changing the subtitle language

- 1 Select “Subtitles” on the “DVD options” screen.
- 2 Each time you select “Change”, the next available language is selected.

The languages available are restricted to those available on the DVD disc.

“Hide”: Hides the subtitles

: Returns to the previous screen



### Changing the audio language

- 1 Select “Audio” on the “DVD options” screen.
- 2 Each time you select “Change”, the next available language is selected.

The languages available are restricted to those available on the DVD disc.

: Returns to the previous screen



### Changing the angle (if the angle option is available)

- 1 Select "Angle" on the "DVD options" screen.
- 2 Each time you select "Change", the next available angle is selected.

The angles available are restricted to those available on the DVD disc.

: Returns to the previous screen



### Changing screen size

- 1 Select "Wide" on the "DVD options" screen.
- 2 Select the desired display. After setting, select "OK".
  - ① Displays a 4 : 3 screen, with either side in black
  - ② Widens the 4 : 3 screen horizontally to fill the screen
  - ③ Widens the 4 : 3 screen vertically and horizontally, in the same ratio, to fill the screen

: Returns to the previous screen



**Adjusting the screen**

- 1 Select “Display” on the “DVD options” screen.
- 2 Select “<” or “>” to display the desired item to be adjusted, and then select “OK”.



The screen goes off when “Screen off” is selected. To turn the display screen back on, press any button on the audio panel or on the Remote Touch. The selected screen appears.

	R	G
Color	Red	Green
	+	-
Tone	Lighter	Darker
Contrast	Weaker	Stronger
Brightness	Darker	Brighter

FarmaSOS.com

### Initial DVD settings



#### ■ Displaying “DVD settings” screen

- 1 Select “DVD settings” on the “DVD options” screen.
- 2 Select the setting to be changed.

After you change the settings, select “OK”.

“Default”: Restores default settings

: Returns to the previous screen

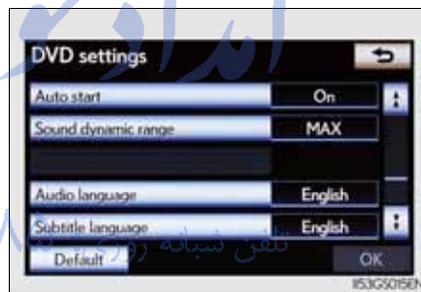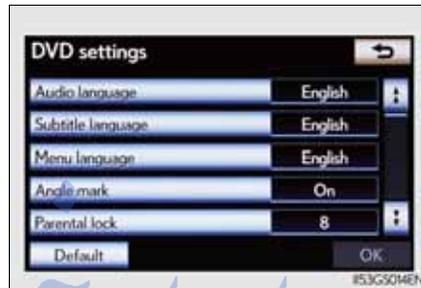

#### ■ Setting audio language

- 1 Select “Audio language” on the “DVD settings” screen.
- 2 Select the desired language to be heard on the “Audio language” screen.

If you cannot find the desired language, select “Other” and input the desired language code. (→P. 515)

#### ■ Setting subtitle language

- 1 Select “Subtitle language” on the “DVD settings” screen.
- 2 Select the desired language to be read on the “Subtitle language” screen.

If you cannot find the desired language, select “Other” and input the desired language code. (→P. 515)

**■ Setting menu language**

- 1** Select “Menu language” on the “DVD settings” screen.
- 2** Select the desired language to be read on the “Menu language” screen.

If you cannot find the desired language, select “Other” and input the desired language code. (→P. 515)

**■ Setting angle mark**

If the DVD has angle options, you can turn the angle mark on or off.

- 1** Select “Angle mark” on the “DVD settings” screen.
- 2** Select “On” or “Off”.

**■ Setting parental lock**

- 1** Select “Parental lock” on the “DVD settings” screen.
- 2** Input the 4-digit personal code on the “Key code” screen.

If you enter wrong numbers, select  to delete the numbers.

- 3** Select a parental level (1-8) on the “Select restriction level” screen. (→P. 521)

**■ Setting the auto start**

Discs that are inserted while the vehicle is in motion will automatically start playing.

- 1** Select “Auto start” on the “DVD settings” screen.
- 2** Select “On” or “Off”.

**■ Setting sound dynamic range**

The difference between the lowest volume and the highest volume can be adjusted.

- 1** Select “Sound dynamic range” on the “DVD settings” screen.
- 2** Select “MAX”, “STD” or “MIN”.


### ■ Entering a language code

If you select “Other” on the “Audio language” screen, “Subtitle language” screen or “Menu language” screen you can select a language by entering the 4-digit language code if that language is available.

Input the 4-digit language code and then select “OK”.

 : Deletes the last input digit

 : Returns to the previous screen

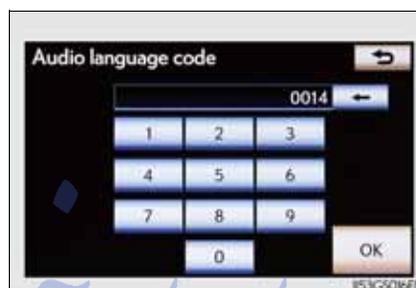

### ● Language codes

Code	Language	Code	Language	Code	Language
0514	English	0207	Bulgarian	0712	Galician
0618	French	0208	Bihari	0714	Guarani
0405	German	0209	Bislama	0721	Gujarati
0920	Italian	0214	Bengali, Bangla	0801	Hausa
0519	Spanish	0215	Tibetan	0809	Hindi
2608	Chinese	0218	Breton	0818	Croatian
1412	Dutch	0301	Catalan	0821	Hungarian
1620	Portuguese	0315	Corsican	0825	Armenian
1922	Swedish	0319	Czech	0901	Interlingua
1821	Russian	0325	Welsh	0905	Interlingue
1115	Korean	0401	Danish	0911	Inupiak
0512	Greek	0426	Bhutani	0914	Indonesian
0101	Afar	0515	Esperanto	0919	Icelandic
0102	Abkhazian	0520	Estonian	0923	Hebrew
0106	Afrikaans	0521	Basque	1001	Japanese

Code	Language	Code	Language	Code	Language
0113	Amharic	0601	Persian	1009	Yiddish
0118	Arabic	0609	Finnish	1023	Javanese
0119	Assamese	0610	Fiji	1101	Georgian
0125	Aymara	0615	Faroese	1111	Kazakh
0126	Azerbaijani	0625	Frisian	1112	Greenlandic
0201	Bashkir	0701	Irish	1113	Cambodian
0205	Byelorussian	0704	Scottish-Gaelic	1114	Kannada
1119	Kashmiri	1415	Norwegian	1914	Shona
1121	Kurdish	1503	Occitan	1915	Somali
1125	Kirghiz	1513	(Afan) Oromo	1917	Albanian
1201	Latin	1518	Oriya	1918	Serbian
1214	Lingala	1601	Panjabi	1919	Siswati
1215	Laothian	1612	Polish	1920	Sesotho
1220	Lithuanian	1619	Pashto, Pushto	1921	Sundanese
1222	Latvian, Lettish	1721	Quechua	1923	Swahili
1307	Malagasy	1813	Rhaeto-Romance	2001	Tamil
1309	Maori	1814	Kirundi	2005	Telugu
1311	Macedonian	1815	Romanian	2007	Tajik
1312	Malayalam	1823	Kinyarwanda	2008	Thai
1314	Mongolian	1901	Sanskrit	2009	Tigrinya
1315	Moldavian	1904	Sindhi	2011	Turkmen
1318	Marathi	1907	Sango	2012	Tagalog
1319	Malay	1908	Serbo-Croatian	2014	Setswana

Code	Language	Code	Language	Code	Language
1320	Maltese	1909	Sinhalese	2015	Tongan
1325	Burmese	1911	Slovak	2018	Turkish
1401	Nauru	1912	Slovenian	2019	Tsonga
1405	Nepali	1913	Samoaan	2020	Tatar
2023	Twi	2209	Vietnamese	2515	Yoruba
2111	Ukrainian	2215	Volapük	2621	Zulu
2118	Urdu	2315	Wolof		
2126	Uzbek	2408	Xhosa		

- When a rear passenger selects “Setup Menu”  
To cancel the set up operation from the rear seat, select “Play”.
- Error messages  
If “Region code error” is displayed, check if the region code printed on the DVD matches the player’s region code.  
If a different message is displayed: →P. 518

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## CD/DVD player and DVD video disc information

### Error messages

If the following error messages appear on the screen, refer to the table and take the appropriate measures. If the problem is not rectified, take the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

The error messages may differ from those shown below depending on the language selected.

Message	Cause	Correction Procedures
No disc found.	There is no disc in the player.	Insert a disc.
Check DISC	<ul style="list-style-type: none"> <li>• The disc is dirty or damaged.</li> <li>• The disc is inserted upside down.</li> <li>• The disc is not playable with the player.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean the disc.</li> <li>• Insert the disc correctly.</li> <li>• Confirm the disc is playable with the player.</li> </ul>
DISC error	<ul style="list-style-type: none"> <li>• There is a malfunction within the system.</li> <li>• Operation is stopped due to a high temperature inside the player.</li> </ul>	<ul style="list-style-type: none"> <li>• Eject the disc.</li> <li>• Eject the disc and allow the player to cool down.</li> </ul>
No music files found.	This indicates that no playable data is included in the disc.	Eject the disc.

### DVD video discs

- The DVD player conforms to PAL/NTSC color TV formats.
- Region code: Some DVD video discs have a region code indicating the region in which you can use the DVD video disc. If the DVD video disc is not labeled as “ALL” or “2”, you cannot use it on this DVD player. If you attempt to play an inappropriate DVD video disc on this player, “Region code error” appears on the screen. Even if the DVD video disc does not have a region code, you may not be able to use it.

#### ■ Symbols shown on DVD video discs

Symbol	Meaning
PAL/NTSC	Indicates PAL/NTSC format of color TV
	Indicates the number of audio tracks
	Indicates the number of language subtitles
	Indicates the number of angles
	Indicates the screen display ratios available Wide screen: 16:9 Standard: 4:3
	Indicates the disc's region code ALL: in all countries Number: region code

**■ Discs that can be used**

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



Use only discs marked as shown above. The following products may not be playable on your player:

- SACD
- dts CD
- Copy-protected CD
- DVD audio
- Video CD
- DVD-R
- DVD+R
- DVD-RW
- DVD+RW
- DVD-RAM
- CD/DVD player protection feature  
To protect the internal components, playback is automatically stopped when a problem is detected.
- If discs are left inside the CD/DVD player or in the ejected position for extended periods  
Discs may be damaged and may not play properly.
- Lens cleaners  
Do not use lens cleaners. Doing so may damage the CD/DVD player.

#### ■ DVD video disc information

##### ● DVD video discs

A DVD video disc is a Digital Versatile Disc that holds video. DVD video discs have adopted “MPEG2”, one of the world standards of digital compression technologies. The picture data is compressed by 1/40 on average and stored. Variable rate encoded technology in which the volume of data assigned to the picture is changed depending on the picture format has also been adopted. Audio data is stored using PCM and Dolby Digital, which enables higher quality of sound. Furthermore, multi-angle and multi-language features will also help you enjoy the more advanced technology of DVD video.

##### ● Viewer restrictions

This feature limits what can be viewed in conformity with the level of restrictions of the country. The level of restrictions varies depending on the DVD video disc. Some DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

Level 1: DVD video discs for children can be played.

Level 2-7: DVD video discs for children and G-rated movies can be played.

Level 8: All types of DVD video discs can be played.

##### ● Multi-angle option

You can enjoy the same scene from different angles.

##### ● Multi-language option

You can select the subtitle and audio languages.

##### ● Region codes

The region codes are provided on DVD players and DVD discs. If the DVD video disc does not have the same region code as the DVD player, you cannot play the disc on the DVD player. (→P. 519)

##### ● Audio

This DVD player can play linear PCM, Dolby Digital and MPEG audio format DVDs. Other decoded types cannot be played.

##### ● Title and chapter

Video and audio programs stored in DVD video discs are divided into parts by title and chapter.

**Title:** The largest unit of the video and audio programs stored on DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

**Chapter:** A title is comprised of one or more chapters.

**■ Sound**

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

**■ MP3 and WMA files**

MP3 (MPEG Audio LAYER 3) is a standard audio compression format.

Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.

**● MP3 file compatibility**

- Compatible standards  
MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
- Compatible sampling frequencies  
MPEG1 LAYER3: 32, 44.1, 48 (kHz)  
MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR)  
MPEG1 LAYER3: 32, 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)  
MPEG2 LSF LAYER3: 8, 32, 64, 80, 96, 112, 128, 144, 160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and monaural

**● WMA file compatibility**

- Compatible standards  
WMA Ver. 7, 8, 9
- Compatible sampling frequencies  
32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)  
Ver. 7, 8: CBR 48, 64, 80, 96, 128, 160, 192 (kbps)  
Ver. 9: CBR 48, 64, 80, 96, 128, 160, 192, 256, 320 (kbps)

- Compatible media

Media that can be used for MP3 and WMA playback are CD-Rs and CD-RWs.

Playback in some instances may not be possible if the CD-R or CD-RW is not finalized. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

- Compatible disc formats

The following disc formats can be used:

- Disc formats: CD-ROM Mode 1 and Mode 2  
CD-ROM XA Mode 2, Form 1 and Form 2
- File formats: ISO9660 Level 1, Level 2, (Romeo, Joliet)  
MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels (including the root)
- Maximum length of folder names/file names: 32 characters
- Maximum number of folders: 192 (including the root)
- Maximum number of files per disc: 255

- File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

- Discs containing multi-session recordings

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files. However, only the first session can be played.

- ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

- MP3 and WMA playback

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

Discs that contain a mixture of music data and MP3 or WMA format data cannot be played.

- Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they may be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.

- Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
- CD-R or CD-RW playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.
- Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S. and other countries.

 CAUTION

■ DVD video precaution

Conversational speech on some DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the DVD will play, you may be startled by louder sound effects or startled when you change to a different audio source.

Loud sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.

 NOTICE

■ Discs and adapters that cannot be used


Do not use the following types of discs.

Also, do not use 8 cm (3 in.) disc adapters, Dual Discs or printable discs. Doing so may damage the player and/or disc insert/eject function.

- Discs that have a diameter that is not 12 cm (4.7 in.)




- Low-quality or deformed discs

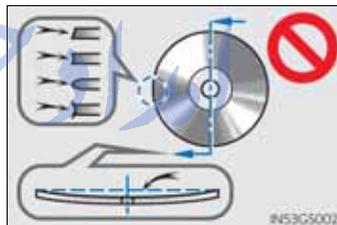

- Discs with a transparent or translucent recording area



- Discs that have tape, stickers or CD-R labels attached to them, or that have had the label peeled off

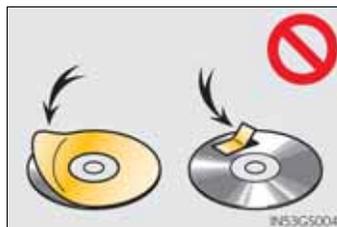

 NOTICE

## ■ Player precautions

Failure to follow the precautions below may result in damage to the discs or the player itself.

- Do not insert anything other than discs into the disc slot.
- Do not apply oil to the player.
- Store discs away from direct sunlight.
- Never try to disassemble any part of the player.

امداد خودرو فارما

تلفن شبانه روزی: ۰۸۵-۸۸۸۶۲۰۲۱

FarmaSOS.com

## Listening to Bluetooth® audio

The Bluetooth® audio system enables users to enjoy music played on a portable player from the vehicle speaker via wireless communication.


This audio system supports Bluetooth®, a wireless data system capable of playing portable audio music without cables. If your portable player does not support Bluetooth®, the Bluetooth® audio system will not function.

Press the “MEDIA” button if a Bluetooth® audio player has already been connected.

Select the “BT audio” tab or press the “MEDIA” button repeatedly until the “BT audio” tab is selected.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

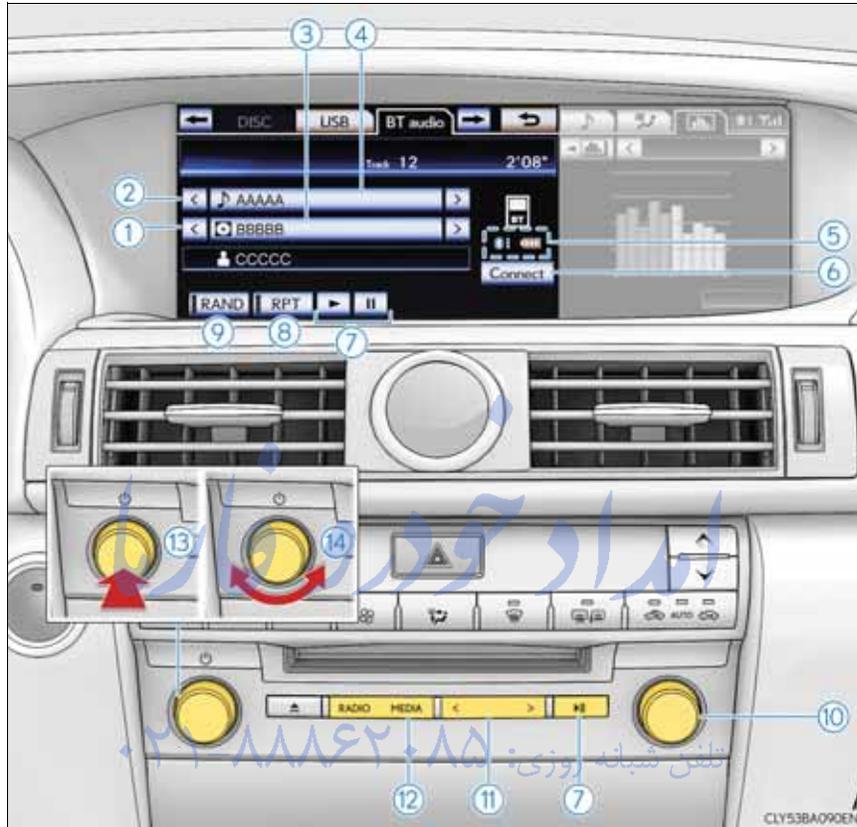

- |   |   |
|---|---|
| ① Album selection                       | ⑧ Repeat play   |
| ② Track selection                       | ⑨ Random playback   |
| ③ Displays folder/album list            | ⑩ “TUNE•SCROLL” knob:<br>Track selection                        |
| ④ Displays track list                   | ⑪ “CH•TRACK” button:<br>Track selection/fast forward/<br>rewind |
| ⑤ Connection status                     | ⑫ Media selection   |
| ⑥ Connecting Bluetooth® audio<br>player | ⑬ Power   |
| ⑦ Play/pause                            | ⑭ Volume  |

### Status display

You can check such indicators as signal strength and battery charge on the screen.

- ① Connection status
- ② Battery charge



Indicators	Conditions	
Connection status	Good 	No connection 
Battery charge	Full 	Empty 

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

### Connecting Bluetooth® audio player

To use the Bluetooth® audio system, you need to enter your portable player into the system. Once registered, you can enjoy your music on the vehicle's audio system. (→P. 695)

For the operation procedure for the portable player, consult your player's accompanying instruction manual.


- When "Bluetooth\* power" is turned on

When the portable player is on standby for the connection, it will be automatically connected whenever the engine switch is in either ACCESSORY or IGNITION ON mode.

- When "Bluetooth\* power" is turned off

Manually connect the portable player in accordance with the following procedure.

- 1 Select "Connect".

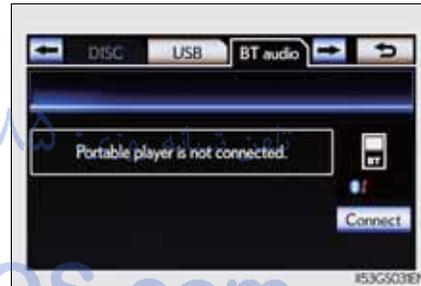

- 2 Select the desired portable player.



\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 3 When the connection is completed, this screen is displayed. It is now possible to use the portable player.



### Playing Bluetooth® audio

Select to play, select to pause or press to play/pause.

Some titles may not be displayed depending on the type of portable player.



### Selecting a folder/album

- On the audio top screen
  - Select “<” or “>” on the screen to select the next/previous folder/album.
- On the playlist screen

- 1 Select the album name on the screen to display the playlist screen.



**2** Select the desired screen button.

If the folder name on the screen is selected, the track list screen is displayed.

**3** Select the desired track name on the screen.

, : Select to move the list up or down by 5 track groups.

“CH•TRACK” button: Press “<” or “>” on the “CH•TRACK” button to scroll through the track list one by one.

“TUNE•SCROLL” knob: Turn the knob clockwise or counter-clockwise to quickly scroll up or down the track list.

, : If  appears to the right of an item name, the complete name is too long for the screen. Select  to scroll to the end of the name. Select  to move to the beginning of the name.



FarmaSOS.com

### Selecting, fast forwarding or rewinding a track

#### ■ Selecting a track

Select “<” or “>” on the screen to select the next/previous track.

Press “<” or “>” on the “CH•TRACK” button or turn the “TUNE•SCROLL” knob to select the desired track number.

#### ■ Selecting a track from the track list

**1** Select the track name on the screen to display the following track list screen.

**2** Select the desired track number.

, : Select to move the list up or down by 5 track groups.

“CH•TRACK” button: Press “<” or “>” on the “CH•TRACK” button to scroll through the track list one by one.

“TUNE•SCROLL” knob: Turn the knob clockwise or counter-clockwise to quickly scroll up or down the track list.

, : If  appears to the right of an item name, the complete name is too long for the screen. Select  to scroll to the end of the name. Select  to move to the beginning of the name.



#### ■ Fast forwarding and rewinding a track

Press and hold “<” or “>” on the “CH•TRACK” button to fast forward or rewind.

### Random playback

- Playing the tracks on the album in random order

Select “RAND” on the screen.

Each time “RAND” is selected, the mode changes as follows:  
album random → all track random → off

- Playing tracks from all the albums in random order

Select “RAND” repeatedly until “ALB.RAND” appears on the screen.

To cancel, select “RAND” again.

### Repeat play

- Repeating a track

Select “RPT” on the screen.

Each time “RPT” is selected, the mode changes as follows:  
track repeat → album repeat → off

- Repeating an album

Select “RPT” repeatedly until “ALB.RPT” appears on the screen.

To cancel, select “RPT” again.

FarmaSOS.com

- If you select 
    - The display returns to the previous screen.
  - Connecting Bluetooth® audio player
    - Selecting “Connect portable player” on the “Bluetooth\*” screen also connects a Bluetooth® audio player. (→P. 695)
    - When none of the selectable portable players have been registered, a screen confirming registration is displayed. The registration method is the same as phone registration. (→P. 688)
    - When the currently connected portable player is selected, a screen confirming the selected player’s disconnection is displayed. (→P. 688)
    - If connection fails once, a changing connection method confirmation screen is displayed. If connection fails 2 or more times, a message will be displayed. When this message is displayed, try again.
- \*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.
- When using the Bluetooth® audio system
    - In the following conditions, the system may not function.
      - The portable player is turned off
      - The portable player is not connected
      - The portable player battery is low
    - There may be a delay if phone connection is carried out during Bluetooth® audio play.
    - Depending on the type of portable player that is connected to the system, operation may differ slightly and certain functions may not be available.
  - Bluetooth® antenna
    - The antenna is built into the instrument panel. If the portable player is behind the seat or in the glove box or console box, or is touching or covered by metal objects, connection status may deteriorate.
  - Battery charge/signal status
    - This display may not correspond exactly with the portable player, and this system does not have a charging function.

#### ■ About Bluetooth®

Bluetooth is a registered trademark of Bluetooth SIG, Inc.



#### ■ Compatible models

Portable players must correspond to the following specifications:

- Bluetooth® specification
  - Ver. 1.1 or higher  
(Recommended: Ver. 2.1+EDR or higher)
- Profile
  - A2DP (Advanced Audio Distribution Profile) Ver. 1.0 or higher  
(Recommended: Ver. 1.2 or higher)
  - AVRCP (Audio/Video Remote Control Profile) Ver. 1.0 or higher  
(Recommended: Ver. 1.4 or higher)

However, please note that some functions may be limited depending on the type of portable player. Also, the different screen is displayed depending on which portable player is connecting.

#### ■ Certification

→P. 636

#### ■ Reconnecting the portable player

If the portable player is disconnected with a poor reception when the engine switch is in ACCESSORY or IGNITION ON mode, the system automatically reconnects the portable player.

If you have switched off the portable player yourself, follow the instructions below to reconnect:

- Select the portable player again
- Register the portable player

#### ■ When transferring ownership of your vehicle

Be sure to remove the registered portable player from the system. (→P. 690)

 CAUTION

## ■ While driving

Do not use the portable player or connect the Bluetooth® system.

## ■ Caution regarding interference with electronic devices

- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

 NOTICE

## ■ When leaving the vehicle

Do not leave your portable player in the vehicle. The inside of the vehicle may become hot, causing damage to the portable player.

FarmaSOS.com

## Listening to a USB memory

Connecting a USB memory enables you to enjoy music from the vehicle speakers.

Press the “MEDIA” button if a USB memory has already been connected. Select the “USB” tab or press the “MEDIA” button repeatedly until the “USB” tab is selected.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com



- |                              |  |
|------------------------------|--|
| ① Folder/album selection     | ⑧ “TUNE•SCROLL” knob:<br>File/track selection                    |
| ② File/track selection       | ⑨ “CH•TRACK” button:<br>File/track selection/fast forward/rewind |
| ③ Displays folder/album list | ⑩ Media selection  |
| ④ Displays file/track list   | ⑪ Power  |
| ⑤ Play/pause                 | ⑫ Volume   |
| ⑥ Repeat play                |  |
| ⑦ Random playback            |  |

### Connecting the USB memory

Open the console box, open the cover and connect a USB memory.

Turn on the power of the USB memory if it is not turned on.



### Playing a USB memory

■ Play/pause

Select  to play, select  to pause or press  to play/pause.

▶ Tag mode

▶ Folder mode



### Selecting a folder/album

Select “<” or “>” on the screen to select the next/previous folder/album.



### Selecting a folder, artist or album

- 1 Select the folder/album name on the screen.



- 2 Select the desired tab and select the desired folder, artist or album.

Character screen buttons, “ABC”, “DEF” etc., allow a direct jump to list entries that begin with the same letter as the character button.

Each time the same character screen button is selected, the list starting with the subsequent character is displayed.



, , : Select this screen button to change between Latin, Cyrillic and Greek characters.

, : Select to move the list up or down by 5 folder/artist/album groups.

“TUNE•SCROLL” knob: Turn the knob clockwise or counterclockwise to quickly scroll up or down the folder/artist/album list.

, : If  appears to the right of an item name, the complete name is too long for the screen. Select  to scroll to the end of the name.

Select  to move to the beginning of the name.

امداد خودرو فارما

تلفن شبانه روزی: ۰۸۵-۸۸۸۶۲۰۲۱

FarmaSOS.com

### Selecting, fast forwarding or rewinding a file/track

#### ■ Selecting a file/track

Select “<” or “>” on the screen to select the next/previous file/track.

Press “<” or “>” on the “CH•TRACK” button or turn the “TUNE•SCROLL” knob to select the desired file/track number.

#### ■ Selecting a file/track from the file/track list

**1** Select the file/track name on the screen to display the following file/track list screen.

**2** Select the desired file/track number.

 ,  : Select to move the list up or down by 5 file/track groups.

“CH•TRACK” button: Press “<” or “>” on the “CH•TRACK” button to scroll through the file/track list one by one.

“TUNE•SCROLL” knob: Turn the knob clockwise or counter-clockwise to quickly scroll up or down the file/track list.

 ,  : If  appears to the right of an item name, the complete name is too long for the screen. Select  to scroll to the end of the name. Select  to move to the beginning of the name.



#### ■ Fast forwarding or rewinding a file/track

Press and hold “<” or “>” on the “CH•TRACK” button to fast forward or rewind.

### Random playback

- Playing files/tracks from a particular folder in random order  
Select “RAND” on the screen.  
Each time “RAND” is selected, the mode changes as follows:  
random (1 folder/album random) → folder/album random (all folders/albums random) → off
- Playing the folders/albums in random order  
Select “RAND” repeatedly until “FLD.RAND”/“ALB.RAND” appears on the screen.  
To cancel, select “RAND” again.

### Repeat play

- Repeating a file/track  
Select “RPT” on the screen.  
Each time “RPT” is selected, the mode changes as follows:
  - When “RAND” is off  
file/track repeat → folder/album repeat → off
  - When “RAND” is on  
file/track repeat → off
- Repeating a folder/album  
Select “RPT” repeatedly until “FLD.RPT”/“ALB.RPT” appears on the screen.  
To cancel, select “RPT” again.  
Available except when random playback is selected

■ If you select 

The display returns to the previous screen.

■ USB memory functions

- When the USB memory is connected and the audio source is changed to USB memory mode, the USB memory will start playing the first file/track in the first folder/album. If the same device is removed and reinserted (and the contents have not been changed), the USB memory will resume playing from the same point it was last used.
- Depending on the USB memory that is connected to the system, certain functions may not be available. Disconnecting the device and reconnecting it once again may resolve some malfunctions.

■ When using a USB memory

You may be unable to use the console box power outlet if the USB memory is connected to the USB port at the same time.

■ Error messages for USB memory

- “USB Error”: This indicates a problem in the USB memory or its connection.
- “No music files found.”: This indicates that no MP3/WMA files are included in the USB memory.

■ USB memory

- Compatible devices  
USB memory that can be used for MP3 and WMA playback.
- Compatible device formats  
The following device formats can be used:
  - USB communication formats: USB2.0 HS (480 Mbps) and FS (12 Mbps)
  - File formats: FAT16/32 (Windows)
  - Correspondence class: Mass storage class
 MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows:

- Maximum directory hierarchy: 8 levels
- Maximum number of folders in a device: 3000 (including the root)
- Maximum number of files in a device: 9999
- Maximum number of files per folder: 255

- **MP3 and WMA files**

MP3 (MPEG Audio LAYER 3) is a standard audio compression format. Files can be compressed to approximately 1/10 of their original size using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format. This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards that can be used and to the media/formats on which the files are recorded.
- **MP3 file compatibility**
  - **Compatible standards**

MP3 (MPEG1 AUDIO LAYERII, III, MPEG2 AUDIO LAYERII, III, MPEG2.5)
  - **Compatible sampling frequencies**

MPEG1 AUDIO LAYERII, III: 32, 44.1, 48 (kHz)  
MPEG2 AUDIO LAYERII, III: 16, 22.05, 24 (kHz)
  - **Compatible bit rates (compatible with VBR)**

MPEG1 AUDIO LAYERII, III: 32-320 (kbps)  
MPEG2 AUDIO LAYERII, III: 8-160 (kbps)
  - **Compatible channel modes: stereo, joint stereo, dual channel and monaural**
- **WMA file compatibility**
  - **Compatible standards**

WMA Ver. 9
  - **Compatible sampling frequencies**

HIGH PROFILE 32, 44.1, 48 (kHz)
  - **Compatible bit rates**

HIGH PROFILE 48-320 (kbps, VBR)
- **File names**

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.
- **ID3 and WMA tags**

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.2, 2.3, 2.4 ID3 tags.

(The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

- MP3 and WMA playback
  - When a device containing MP3 or WMA files is connected, all files in the USB memory device are checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend that you do not include any files other than MP3 or WMA files or create any unnecessary folders.
  - When the USB device is connected and the audio source is changed to USB memory mode, the USB device will start playing the first file/track in the first folder/album. If the same device is removed and reinserted (and the contents have not been changed), the USB device will resume play from the same point in which it was last used.
- Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be skipped (not played).
- Playback
  - To play MP3 files with steady sound quality, we recommend a fixed bit rate of at least 128 kbps and a sampling frequency of 44.1 kHz.
  - There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
  - Microsoft, Windows, and Windows Media are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.

FarmaSOS.com

 CAUTION

- While driving  
Do not connect an USB memory or operate the controls.

 NOTICE

- If the armrest cannot be fully closed  
Depending on the size and shape of the USB memory that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the USB memory or the terminal, etc.
- To prevent damage to the USB memory or its terminal
  - Do not leave USB memory in the vehicle. The temperature inside of the vehicle may become high, resulting in damage to the USB memory.
  - Do not push down on or apply unnecessary pressure to the USB memory while it is connected.
  - Do not insert foreign objects into the port.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## Listening to an iPod


Connecting an iPod enables you to enjoy music from the vehicle speakers.

Press the “MEDIA” button if an iPod has already been connected. Select the “iPod” tab or press the “MEDIA” button repeatedly until the “iPod” tab is selected.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

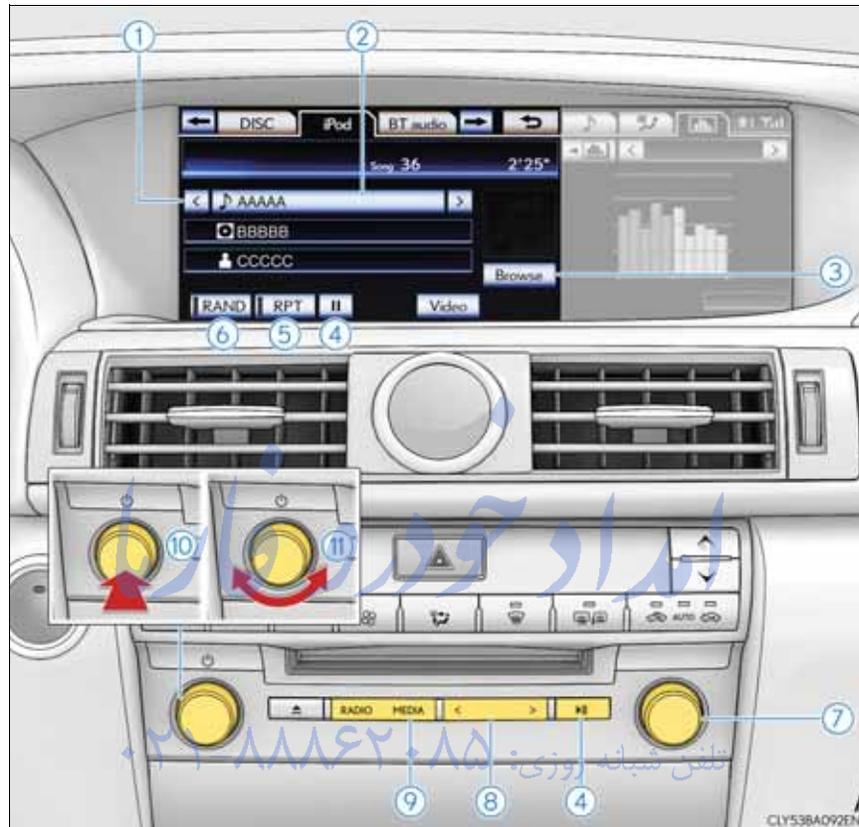


- |                         |   |
|-------------------------|---|
| ① Track selection       | ⑦ “TUNE•SCROLL” knob:<br>Track selection                        |
| ② Displays track list   | ⑧ “CH•TRACK” button:<br>Track selection/fast forward/<br>rewind |
| ③ Selecting a play mode | ⑨ Media selection   |
| ④ Play/pause            | ⑩ Power   |
| ⑤ Repeat play           | ⑪ Volume  |
| ⑥ Random playback       |   |

### Connecting an iPod

Open the console box, open the cover and connect an iPod using an iPod cable.

Turn on the power of the iPod if it is not turned on.

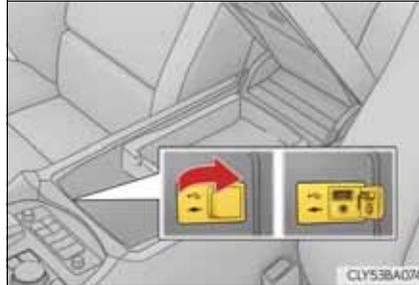

### Playing iPod

- Play/pause

Select  to play, select  to pause or press  to play/pause.




■ Selecting a play mode

1 Select "Browse".



2 Select the desired play mode.

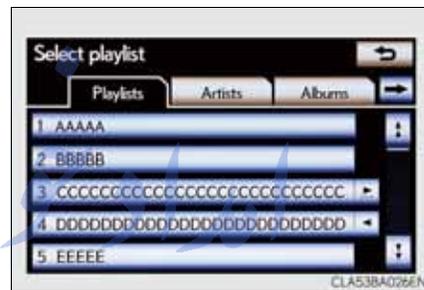

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### Selecting, fast forwarding or rewinding a track

#### ■ Selecting a track

Select “<” or “>” on the screen to select the next/previous track.

Press “<” or “>” on the “CH•TRACK” button or turn the “TUNE•SCROLL” knob to select the desired track number.

#### ■ Selecting a track from the track list

**1** Select the track name on the screen to display the following track list screen.


**2** Select the desired track number.

, : Select to move the list up or down by 5 track groups.

“CH•TRACK” button: Press “<” or “>” on the “CH•TRACK” button to scroll through the track list one by one.

“TUNE•SCROLL” knob: Turn the knob clockwise or counter-clockwise to quickly scroll up or down the track list.

, : If  appears to the right of an item name, the complete name is too long for the screen. Select  to scroll to the end of the name. Select  to move to the beginning of the name.

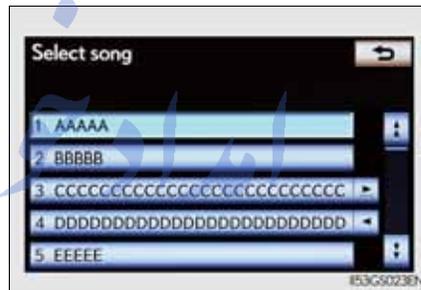

#### ■ Fast forwarding or rewinding a track

Press and hold “<” or “>” on the “CH•TRACK” button to fast forward or rewind.

### Random playback

- Playing tracks in random order

Select “RAND” on the screen.

Each time “RAND” is selected, the mode changes as follows:  
track shuffle → album shuffle → off

- Playing the albums in random order

Select “RAND” repeatedly until “ALB.RAND” appears on the screen.

To cancel, select “RAND” again.

### Repeat play

Select “RPT” on the screen.


“RPT” appears on the screen.

To cancel, select “RPT” again.


### Cover art display settings

When the track currently being played has cover art data, it can be displayed.


- 1 Press the “MENU” button on the Remote Touch and select “Setup” on the “Menu” screen.
- 2 Select “Audio” on the “Setup” screen.
- 3 Select “iPod settings”.

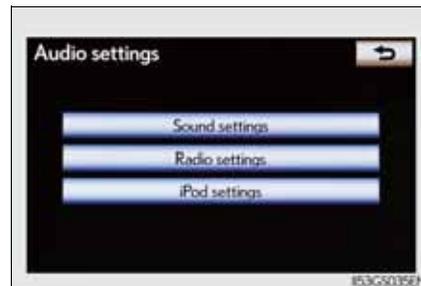

- 4 Select “Display cover art”

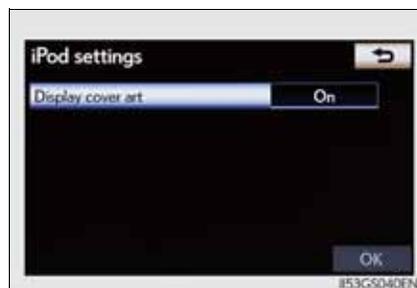

- 5 Select “On” or “Off”.

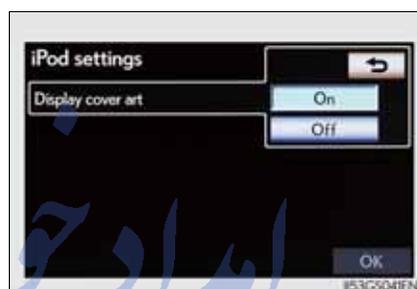

- 6 After iPod setting has been changed, select “OK”.

- If you select  The display returns to the previous screen.
- About iPod




- “Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod, or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.
- Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.
- iPhone, iPod, iPod classic, iPod nano and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

- iPod cover art
  - Depending on the iPod and the songs in the iPod, iPod cover art may be displayed. This function can be changed to “On” or “Off”. (→P. 554)
  - It may take time to display iPod cover art, and the iPod may not be operated while the cover art display is in process.
  - Only iPod cover art that is saved in JPEG format can be displayed.
- iPod functions
  - When the iPod connected to the system includes iPod video, the system can only output the sound by selecting “Video” on the “iPod” screen.
  - Depending on the iPod, the video sound may not be able to be heard.
  - When an iPod is connected and the audio source is changed to iPod mode, the iPod will resume play from the same point in which it was last used.
  - Depending on the iPod that is connected to the system, certain functions may not be available. If a function is unavailable due to a malfunction (as opposed to a system specification), disconnecting the device and reconnecting it once again may resolve the problem.
- When using an iPod

You maybe unable to use the console box power outlet if the iPod is connected to the USB port at the same time.
- Battery charge

When an iPod is connected using a genuine iPod cable, the iPod starts charging its battery.
- Routing portable audio device cables (without rear seat entertainment system)

There are grooves in the tray allowing audio devices and cellular phones to be connected to the sockets while they are on the tray in the console box.

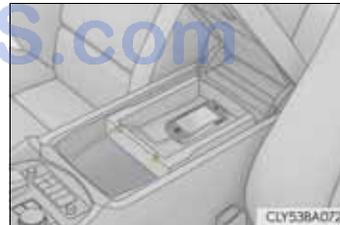

**■ Error messages for iPod**

“iPod error”:

This indicates a problem in the iPod or its connection.

“No music files found.”:

This indicates that there is no music data in the iPod.

“Please check the iPod firmware version.”:

This indicates that the software version is not compatible. Perform the iPod firmware updates and try again.

“iPod authorization failed.”:

This indicates that it failed to authorize the iPod. Please check your iPod.

**■ Compatible models**

The following iPod<sup>®</sup>, iPod nano<sup>®</sup>, iPod classic<sup>®</sup>, iPod touch<sup>®</sup> and iPhone<sup>®</sup> devices can be used with this system.

**■ Made for**

- iPod touch (4th generation)
- iPod touch (3rd generation)
- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (6th generation)
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

Depending on differences between models or software versions etc., some models might be incompatible with this system.

 CAUTION

## ■ While driving

Do not connect an iPod or operate the controls.

 NOTICE

## ■ If the armrest cannot be fully closed

Depending on the size and shape of the iPod that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the iPod or the terminal, etc.

## ■ To prevent damage to the iPod or its terminal

- Do not leave the iPod in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the iPod.
- Do not push down on or apply unnecessary pressure to the iPod while it is connected.
- Do not insert foreign objects into the port.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com


## Using the AUX port

This port can be used to connect a portable audio device and listen to it through the vehicle's speakers.

- 1 Open the console box, open the cover and connect the portable audio device.



- 2 Press the "MEDIA" button.

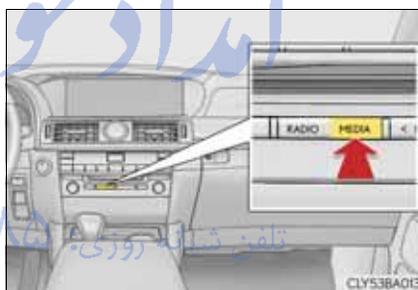

- 3 Select the "AUX" tab on the screen or press the "MEDIA" button repeatedly to change to AUX mode.

- When using a portable audio device connected to the power outlet  
Noise may occur during playback. Use the power source of the portable audio device.
- Routing portable audio device cables  
→P. 556

 CAUTION

## ■ Caution while driving

Do not connect portable audio device or operate the controls.

 NOTICE

## ■ If the armrest cannot be fully closed

Depending on the size and shape of the portable audio device that is connected to the system, the armrest may not close fully. In this case, do not forcibly close the armrest as this may damage the portable audio device or the terminal, etc.

## ■ To prevent damage to portable audio device

- Do not leave portable audio device in the vehicle. The temperature inside the vehicle may become high, resulting in damage to the player.
- Do not push down on or apply unnecessary pressure to the portable audio device while it is connected as this may damage the portable audio device or its terminal.
- Do not insert foreign objects into the port as this may damage the portable audio device or its terminal.


FarmaSOS.com

## Optimal use of the audio/video system

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “Audio”.




- 3 Select “Sound settings”.

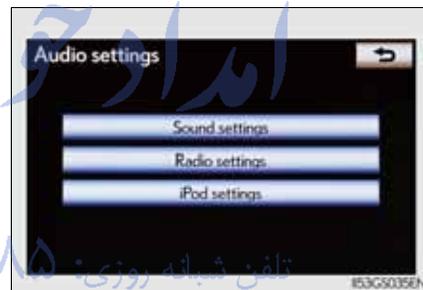


- 4 Select the “Sound” or “DSP” tab.

After sound setting has been changed, select “OK”.

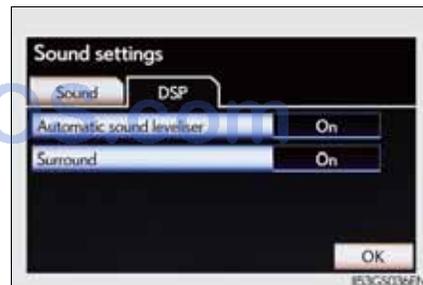

■ “Sound” tab

- ① ② ③ Select “-” or “+” to adjust the treble, mid or bass.
- ④ ⑤ Select “Front” or “Rear” to adjust the front/rear audio balance.
- ⑥ ⑦ Select “L” or “R” to adjust the left/right audio balance.

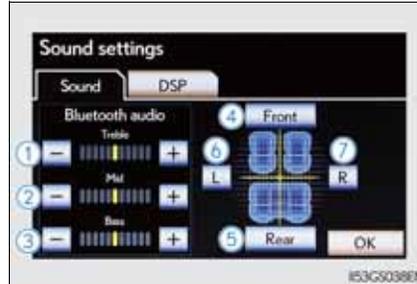

■ “DSP” tab

- ① Automatic Sound Levelizer (ASL) on/off
- ② Surround on/off



- The sound quality level is adjusted individually  
The treble, mid and bass levels can be adjusted for the each audio mode separately.
- About Automatic Sound Levelizer (ASL)  
ASL automatically adjusts the volume and tone quality according to the vehicle speed, wind noise or other noise.

## Using the rear seat audio controls\*

Some front audio features can be controlled from the rear seats.



- ① Selecting a track or file etc.
- ② Selecting a preset station or folder etc.
- ③ Display
- ④ Power on/off
- ⑤ Selecting an audio source
- ⑥ Volume up/down

### Turning the power on/off

Press the “PWR” switch to turn the front audio system on.

Pressing the button again turns the system off.

### Changing the audio source

Press the “MODE” switch to change the audio source.

Each press changes the mode sequentially if the desired mode is ready to use.

\*: If equipped

### Adjusting the volume

Press “^” on the “VOL” switch to increase the volume and “v” to decrease the volume.

Press and hold the button to continue increasing or decreasing the volume.

### Selecting a radio station/channel

- Select a radio station/channel

- 1 Press the “MODE” switch to select a frequency band.
- 2 Press “^” or “v” on the “TUNE/TRACK” switch to adjust the frequency.

To seek for receivable stations/channels, press and hold the “TUNE/TRACK” switch until you hear a beep.

- Select a preset station/channel

- 1 Press the “MODE” switch to select a frequency band.
- 2 Press “^” or “v” on the “CH” switch to select a preset station/channel.

### Selecting a track/file or chapter

- 1 Press the “MODE” switch to select the audio CD, MP3/WMA disc, DVD, Bluetooth® audio, iPod, or USB memory mode.
- 2 Press “^” or “v” on the “TUNE/TRACK” switch to select a file/track/chapter.

To return to the beginning of the current track, file or chapter, press “v” on the “TUNE/TRACK” switch once quickly.

### Selecting a folder/album

- 1 Press the “MODE” switch to select the MP3/WMA disc, Bluetooth<sup>®</sup> audio or USB memory mode.
- 2 Press “^” or “v” on the “CH” switch to select a folder/album.

- Fast forwarding or rewinding a chapter or track/file  
Press and hold “^” or “v” on the “TUNE/TRACK” switch.
- Button lock function  
To prevent inadvertent operation, some buttons on the rear armrest can be locked. (→P. 461)
- Rear control panel illumination off function  
Control panel illumination on the rear armrest can be turned off. (→P. 461)
- When “ERROR”, “WAIT” or “NO MUSIC” is shown on the display  
Refer to the following and take the appropriate measures. If the problem is not rectified, take the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
  - “ERROR”: This indicates a trouble either in the disc or inside the player. The disc may be dirty, damaged, or inserted up-side down.
  - “WAIT”: Operation is stopped due to a high temperature inside the player. Eject the disc and allow the player to cool down.
  - “NO MUSIC”: This indicates that an MP3/WMA file is not included in the disc.

## Using the steering wheel audio switches

Some audio features can be controlled using the switches on the steering wheel.

### ① Volume

### ② Radio mode: Selects a radio station

DAB mode: Selects a service and channel

Audio CD mode: Selects a track

MP3/WMA disc mode: Selects a file and folder


DVD mode: Selects a chapter

Bluetooth® audio mode: Selects a track and album

iPod mode: Selects a track

USB memory mode: Selects a file/ track and folder/ album

### ③ Turns the power on, selects audio source

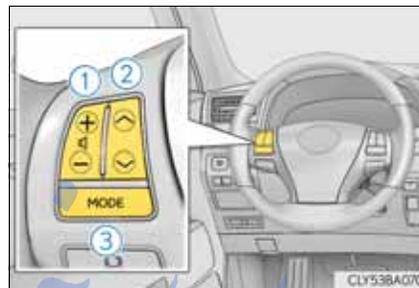

### Turning the audio system on

To turn the audio system on, press the “MODE” switch.

### Changing the audio source

Press the “MODE” switch to select an audio mode.

Each press changes the mode sequentially if the desired mode is ready to use.

### Adjusting the volume

Press the “+” switch to increase the volume and the “-” switch to decrease the volume.

### Silencing a sound or pause the current operation

Press and hold the “MODE” switch.

To cancel, press and hold the “MODE” switch again.

### Selecting the preset station/channel

- 1 Press the “MODE” switch to select the radio or DAB mode.
- 2 Press the “^” switch or the “v” switch to select.

### Seeking a radio station/channel

- 1 Press the “MODE” switch to select the radio or DAB mode.
- 2 Press and hold the “^” switch or the “v” switch until you hear a beep.

To cancel, press either switch.

**Selecting a track/file or chapter**

**1** Press the “MODE” switch to select the audio CD, MP3/WMA disc, DVD, Bluetooth® audio, iPod, or USB memory mode.

**2** Press the “^” switch or the “v” switch to select.

To return to the beginning of the current track, file or chapter, press the “v” switch once quickly.

**Selecting a folder/album**

**1** Press the “MODE” switch to select the MP3/WMA disc, Bluetooth® audio or USB memory mode.

**2** Press and hold the “^” switch or the “v” switch until a beep is heard to select.


**⚠ CAUTION**

■ To reduce the risk of an accident  
Exercise care when operating the audio switches on the steering wheel.

FarmaSOS.com

## Rear seat entertainment system features\*

The rear seat entertainment system is designed for the rear passengers to enjoy video such as Blu-ray Disc™ (BD) and DVD disc separately from the front audio system.

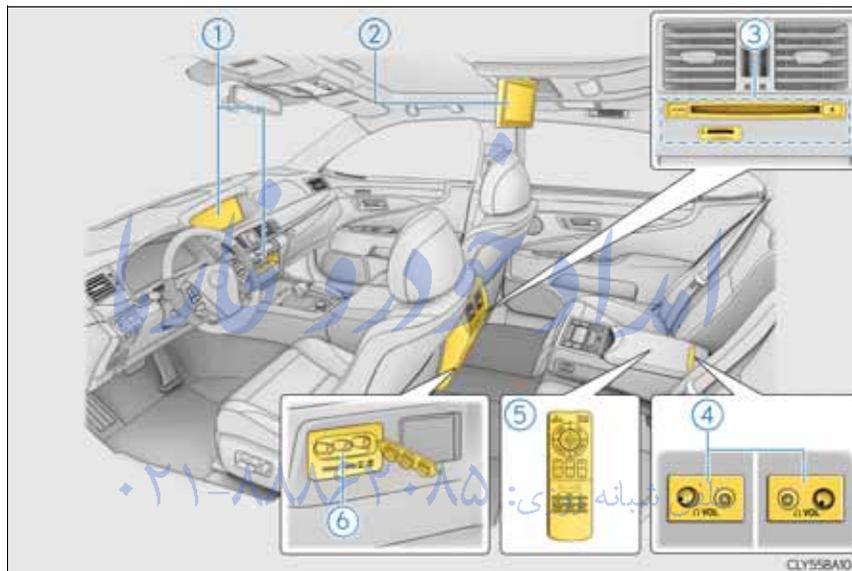


- ① Front audio system
- ② Display
- ③ BD/DVD player
- ④ Headphone volume control dials and headphone jacks
- ⑤ Remote controller
- ⑥ A/V input port

\*: If equipped

## Remote controller


The rear seat entertainment system can be operated with the remote controller. The system cannot be operated by touching the switches on the screen directly.

To use the buttons under the cover, slide the cover down.

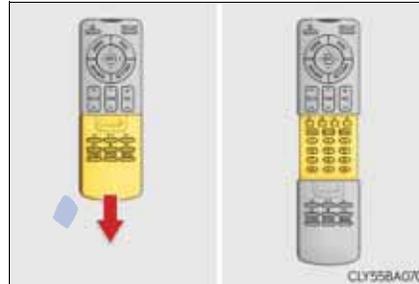

### ■ Basic operation

- ① Turning on/off the rear seat entertainment system
- ② Selecting a control icon
- ③ Displaying the source screen
- ④ Opening or closing the display
- ⑤ Inputting the selected control icon
- ⑥ Displaying the setting screen
- ⑦ Adjusting the volume

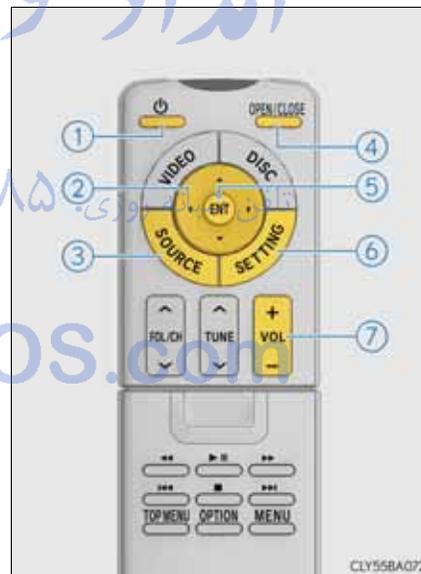

### ■ Selecting a control icon

Press “▲”, “▼”, “▶” or “◀” on  to select the control icon on the screen and then press “ENT” to enter.

## Opening or closing the display

### ■ Opening or closing the display

#### ● Open

Press “OPEN/CLOSE”, , “DISC”, “VIDEO” or “SOURCE”.


#### ● Close

Press “OPEN/CLOSE” or .

If the display is closed with an image shown, the image will automatically turn off. When you press “OPEN/CLOSE”, the sound will not be turned off.

Opening and closing operations can be performed from the front seat. (→P. 573)

Opening and closing operation can be set to auto. (→P. 629)

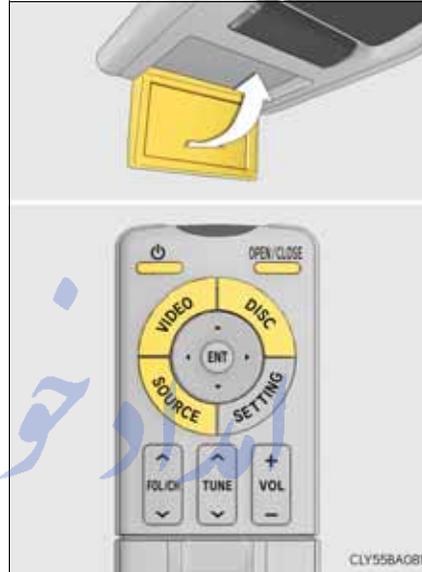


FarmaSOS.com

### Loading and ejecting a disc

Insert the disc into the slot with the label side up.

The “DISC” indicator light turns on when the disc is loaded.


The player will start to play the disc automatically.

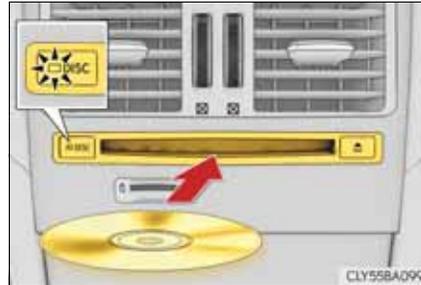

Press  and remove the disc.

If a disc cannot be ejected, do not forcibly take out the disc. Keep pressing  for approximately 10 seconds and release it.

If the ejected disc remains in the slot for 15 seconds, the player will automatically reload the disc.

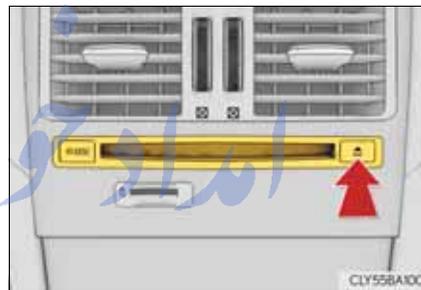

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵


FarmaSOS.com

### Inserting and ejecting an SD card

Insert the SD card with the label side up, positioning the cut off corner to the right. When it is inserted, push it straight in until you hear a click.



To eject the SD card, push on the center of the SD card. When it is ejected slightly, pull it straight out.

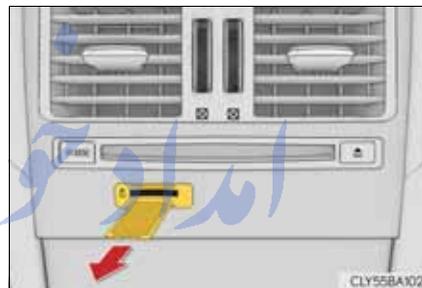

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### Changing the source

- 1 Press “SOURCE” to display the source screen.



- 2 Select the desired source.



اندرود فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵


FarmaSOS.com

### Headphone jacks

To listen to the rear seat entertainment system, use headphone.

- ① To use the headphone  
Connect it to the jack.

- ② To adjust the volume  
Push and turn it clockwise to increase the volume. Turn it counterclockwise to decrease the volume.

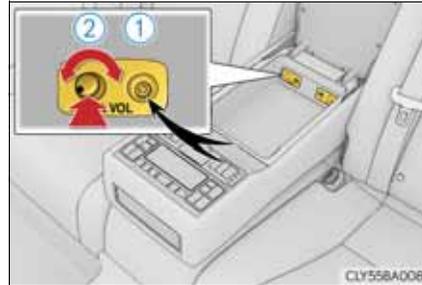

### Changing the speaker output

To play the rear seat entertainment system over the speakers in the vehicle, turn “Speaker Output” on.



FarmaSOS.com

### Operating from the front seats

The rear seat entertainment system can be operated from the front seats.

- 1 Display the audio control screen. (→P. 464)

- 2 Select the “Rear” tab.
  - 1 Turns the rear seat entertainment system on/off.
  - 2 Locks the system so passengers in the rear seats cannot operate the rear seat entertainment system.
  - 3 To play the rear seat entertainment system over the speakers in the vehicle, turn “Speaker output” on.




- 3 Select the desired button. The selected button indicator is highlighted.

- The rear seat entertainment system can be used when  
The engine switch is in ACCESSORY or IGNITION ON mode.
- Jam protection function  
The display will stop closing and return to its previous position if something gets in the way of it closing.
- Caution screen  
Caution screen appears for a few seconds when the rear display turns on.  
During this time, only “OPEN/CLOSE” can be operated.
- When  appears on the screen  
It indicates that the selected icon cannot be used at this time.


■ Before using the remote controller (for new vehicle owners)

An insulating sheet is set to prevent the batteries from being depleted. Remove the insulating sheet before using the remote controller.

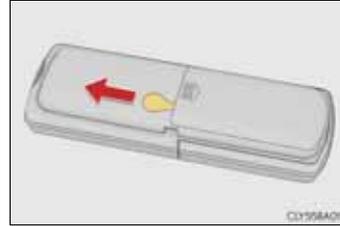

■ When the remote controller batteries are fully depleted

Remove the depleted batteries and install new batteries.

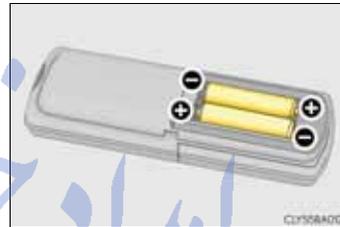

■ If the remote controller batteries are discharged

The following symptoms may occur.

- The remote controller will not function properly.
- The operational range is reduced.

■ Use two AA batteries

- Batteries can be purchased at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, electric appliance shop, or camera stores.
- Replace only with the same or equivalent type recommended by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Dispose of used batteries according to the local laws.

■ Headphones

Infrared wireless headphones can also be used. However, with some headphones generally available in the market, it may be difficult to catch signals properly. Lexus recommends the use of Lexus genuine wireless headphones.

Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for further details.

### ■ Volume

- Adjust the volume when you connect the headphone to the jack. Loud sounds may have a significant impact on the human body.
- Conversational speech on some BD/DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the BD/DVD will play, you may be startled by louder sound effects or when you change to a different audio source. Be sure to adjust the volume with this in mind.

### ■ Discs that can be used

Discs with the marks shown below can be used.

Playback may not be possible depending on recording format or disc features, or due to scratches, dirt or deterioration.



The following discs cannot be used on this system: تلفن شبانه روزی ۰۲۱ ۸۸۶۲۰۸۸

- BDXL™ disc
- BD-RE with the cartridge
- HD DVD
- DVD audio
- Video CD
- SACD

### ■ SD cards that can be used

- Memory cards are restricted to the following conditions based on SD standards.
  - SD memory card (from 512 MB to 2 GB)
  - SDHC memory card (from 4 GB to 32 GB)
  - SDXC memory card (from 48 GB to 128 GB)
- Mini SD cards and Micro SD cards can be used, but must be used with an adaptor card.
- MultiMedia Card (MMC) cannot be used.

**■ SD card functions**

- This system can play JPEG pictures and AVCHD video images that are stored in an SD card. It does not support music playback.
- Local storage
  - Some BD videos have a feature to memorize disc information, such as a resume point, in a local storage. The rear seat entertainment system uses an SD card as a local storage device. To use this function, insert an SD card into the SD card slot.
  - The SD card memory function may differ depending on the BD videos played.
  - When an SD card that contains any kind of data is inserted, BD video disc information will not be stored into the SD card to protect the existing data in the card. To use an SD card as a local storage, use another SD card that does not contain any data.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

■ Copyrights and trademarks

- Blu-ray Disc™, Blu-ray™, BD-Live™, BDXL™, and the logos are trademarks of the Blu-ray Disc Association.



- Java is a registered trademark of Oracle and/or its affiliates.



- “AVCHD”, “AVCHD Progressive” and the “AVCHD Progressive” logo are trademarks of Panasonic Corporation and Sony Corporation.



- “DVD Logo” is a trademark of DVD Format/Logo Licensing Corporation.



- SDXC Logo is a trademark of SD-3C, LLC: تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵



- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



- Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio | Essential is a trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.



- HDMI, the HDMI Logo, and High - Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

## HDMI

- This product is licensed under the AVC patent portfolio license and the VC-1 patent portfolio license for the personal use of a consumer or other uses in which it does not receive remuneration to (i) encode video in compliance with the AVC Standard and the VC-1 Standard (“AVC/VC-1 Video”) and/or (ii) decode AVC/VC-1 Video that was encoded by a consumer engaged in a personal activity and/or was obtained from a video provider licensed to provide AVC/VC-1 Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

- Cinavia Notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

- This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

- WMA (Windows Media Audio), Microsoft, Windows, and Windows Media are the registered trademarks of Microsoft Corporation in the U.S. and other countries.

This product is protected by certain intellectual property rights of Microsoft Corporation and third parties. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary and third parties.

- This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.
- This product incorporates the following software:
  - (1) the software developed independently by or for Panasonic Corporation,
  - (2) the software owned by third party and licensed to Panasonic Corporation,
  - (3) the software licensed under the GNU General Public License, Version 2 (GPL V2),
  - (4) the software licensed under the GNU LESSER General Public License, Version 2.1 (LGPL v2.1) and/or,
  - (5) open sourced software other than the software licensed under the GPL v2 and/or LGPL v2.1

For the software categorized as (3) and (4), please refer to the terms and conditions of GPL v2 and LGPL v2.1, as the case may be at <http://www.gnu.org/licenses/old-licenses/gpl-2.0.html> and <http://www.gnu.org/licenses/old-licenses/lgpl-2.1.html>.

In addition, the software categorized as (3) and (4) are copyrighted by several individuals. Please refer to the copyright notice of those individuals at <http://car.panasonic.jp/oss/VpqKvt4e/>

The GPL/LGPL software is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

At least three (3) years from delivery of products, we will give to any third party who contacts us at the contact information provided below, for a charge no more than our cost of physically performing source code distribution, a complete machine-readable copy of the corresponding source code covered under GPL v2/LGPL v2.1.

[Contact address]

GPL Manager Panasonic Corporation 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama City 224-8520, Japan

Source code is also freely available to you and any other member of the public via our website below.

<http://car.panasonic.jp/oss/VpqKvt4e/>

For the software categorized as (5) includes as follows.

1. This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)
2. This product includes software developed by the University of California, Berkeley and its contributors.
3. Free Type code.
4. The Independent JPEG Group's JPEG software.
5. Vera Fonts. (<http://www.gnome.org/fonts/>)

 CAUTION

- When the rear seat entertainment system is not used  
Keep the display closed. In the event of an accident or sudden braking, the opened display may hit an occupant's body, resulting in injury.
- To prevent accidents and electric shock  
Do not disassemble or modify the remote controller.
- When the remote controller is not used  
Stow the remote controller.  
Injuries may result in the event of an accident or sudden braking.
- Closing the display  
Never use any part of your body to intentionally activate the jam protection function.
- Removed battery and other parts  
These parts are small and if swallowed by a child they can cause choking. Keep away from children. Failure to do so could result in death or serious injury.

 NOTICE

## ■ Cleaning the display

Wipe the display with a dry soft cloth. If the screen is wiped with a rough cloth, the surface of the screen may be scratched.

## ■ To prevent damage to the remote controller

- Keep the remote controller away from direct sunlight, heat and high humidity.
- Do not drop or strike the remote controller against hard objects.
- Do not sit on or place heavy objects on the remote controller.

## ■ BD/DVD player

Never try to disassemble or oil any part of the BD/DVD player. Do not insert anything other than a disc into the slot.

## ■ Closing the display

Do not close the display using your hand. Doing so may result in a malfunction.

## ■ For normal operation after replacing the battery

Observe the following precautions to prevent accidents.

- Always work with dry hands.  
Moisture may cause the battery to rust.
- Do not touch or move any other components inside the remote controller.
- Do not bend either of the battery terminals.

## Playing a Blu-ray Disc™ (BD) and DVD disc

This system can play Blu-ray Disc™ (BD) videos with digital sound.

In addition to commercial BD and DVD titles, AVCHD and BDAV videos can be played on this system, so digital TV recorded by home digital video recorders and BD/DVD home videos recorded by home digital video cameras can also be played on this system.

- Switching to BD/DVD mode

Select “Rr-DISC” on the source screen or press “DISC” if a disc has already been loaded in the disc slot.

امداد خودرو فارما


تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com


### ■ Remote controller

- ① Inputting the selected control icon
- ② Turning on the BD/DVD mode
- ③ Selecting a control icon
- ④ Volume up/down
- ⑤ Fast-forward/rewind
- ⑥ Stop
- ⑦ Displaying the menu screen
- ⑧ Displaying the option screen
- ⑨ Displaying the top menu screen
- ⑩ Selecting a chapter
- ⑪ Play/pause
- ⑫ Color buttons (→P. 594)
- ⑬ 10 key buttons (→P. 594)

► The cover is closed

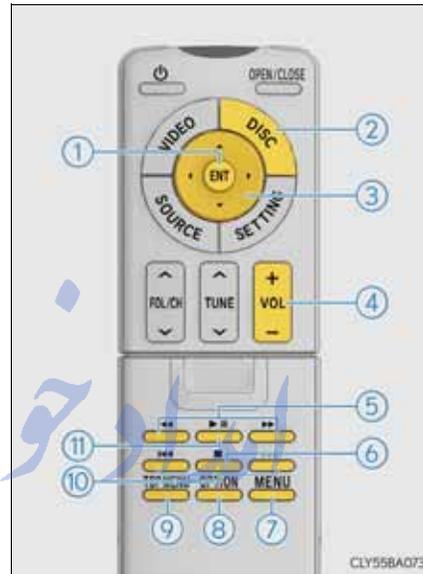

► The cover is opened

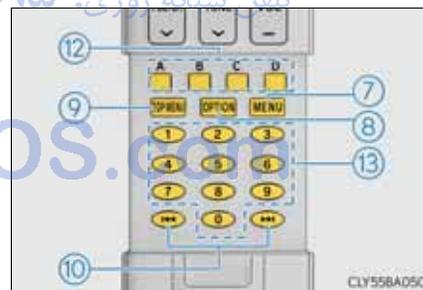

### ■ Option screen

Press “OPTION” while watching a BD/DVD video, the following screen appears.

#### ● BD video

- ① Turning off the option screen ▶ Top page

- ② Displaying the third page

- ③ Displaying the second page

- ④ Fast-forward

- ⑤ Play/pause

- ⑥ Stop

- ⑦ Rewind

- ⑧ Displaying the pop-up menu

- ⑨ Displaying the top menu screen

- ⑩ Displaying the initial setup screen

- ⑪ Displaying the top page ▶ Third page

- ⑫ Changing the angle


- ⑬ Changing the subtitle language

- ⑭ Changing the audio language

- ⑮ Returning to the predetermined scene

- ⑯ Searching for a chapter

- ⑰ Searching for a title

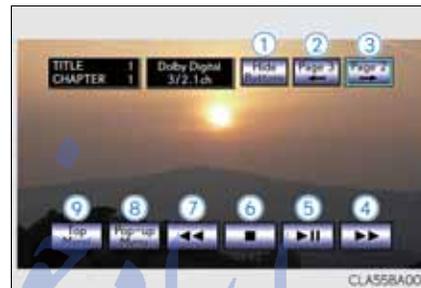

- ▶ Second page



- ▶ Third page



- ⑱ Changing the secondary audio
- ⑲ Displaying the secondary video (Picture-in-picture)
- ⑳ Displaying the 10 key pad
- ㉑ Displaying the color key buttons

- BDAV

- ① Turning off the option screen ▶ Top page

- ② Displaying the second page

- ③ Fast-forward

- ④ Play/pause

- ⑤ Stop

- ⑥ Rewind

- ⑦ Displaying the initial setup screen ▶ Second page

- ⑧ Changing the audio channel

- ⑨ Changing the angle

- ⑩ Changing the audio language

- ⑪ Changing the playback mode

- ⑫ Searching for a chapter

- ⑬ Searching for a title



▶ Second page



- AVCHD

① Turning off the option screen ▶ Top page

② Displaying the second

③ Fast-forward

④ Play/pause

⑤ Stop

⑥ Rewind

⑦ Displaying the top menu screen ▶ Second page

⑧ Displaying the initial setup screen

⑨ Changing the subtitle language

⑩ Changing the audio language

⑪ Returning to the predetermined scene

⑫ Searching for a chapter

⑬ Searching for a title



▶ Second page



- DVD video

- ① Turning off the option screen ▶ Top page

- ② Displaying the second page

- ③ Fast-forward

- ④ Play/pause

- ⑤ Stop

- ⑥ Rewind

- ⑦ Displaying the menu screen

- ⑧ Displaying the top menu screen

- ⑨ Displaying the initial setup screen

- ⑩ Changing the angle

- ⑪ Changing the subtitle language

- ⑫ Changing the audio language

- ⑬ Returning to the predetermined scene

- ⑭ Searching for a title



- ▶ Second page



### Turning on the BD/DVD mode

Insert a disc or Press “DISC” with a disc inserted.

The player will start to play the disc automatically.

### Playing/pausing a disc

Press  to play/pause.

Press and hold  while pausing, the video is played slowly.

### Selecting a chapter

Press  or  until the desired chapter appears.

### Fast forwarding/rewinding a disc

Press and hold  or .

### Operating the disc menu

1 Press “TOP MENU” or “MENU”.

2 Select the menu item using the “▲”, “▼”, “▶” or “◀” on



, and press “ENT” to enter.



## Option screen

### ■ Displaying the option screen

- 1 Press “OPTION”.
- 2 The option screen is displayed.

Press “OPTION” once again or select “Hide Buttons” to turn off the option screen.



### ■ Displaying the pop-up menu (BD video)

Some BD video discs have a pop-up navigation menu that can be called up and be operated on the screen without interrupting playback.

- 1 Select “Pop-up Menu”.
- 2 Select the menu item using the “▲”, “▼”, “▶” or “◀” on , and press “ENT” to enter.



■ Searching for a title or chapter

- 1 Select “Page 2” or “Settings”.
- 2 Select “Title Search” or “Chapter Search”.
- 3 Input the title number or chapter number, and select “OK”.



■ Changing the angle (BD video/DVD video/BDAV)

The angle can be changed for discs that are multi-angle compatible when the angle mark appears on the screen.

- 1 Select “Page 2” or “Settings”.
- 2 Select “Angle”.
- 3 Each time “Angle” is selected, the angle changes.



- Changing the subtitle language (BD video/DVD video/AVCHD)

The subtitle language can be changed for discs with multiple subtitle languages.

1 Select “Page 2” or “Settings”.

2 Select “Subtitle”.

3 Each time “Subtitle” is selected, another language available on the disc is selected.

“Hide”: Subtitle can be hidden

“Style” (BD video only): Subtitle style can be changed



- Changing the audio language

The audio language can be changed for discs with multiple audio languages.

1 Select “Page 2” or “Settings”.

2 Select “Audio”.

3 Each time “Audio” is selected, another language available on the disc is selected.



■ Changing the audio channel (BDAV)

The audio channel can be changed for discs with multiple audio channels.

- 1 Select “Settings”.
- 2 Each time “MAIN/SUB” is selected, the mode changes in the following order:

“MAIN”: Main audio channel



“SUB”: Sub audio channel



“MAIN/SUB”: Both the main and sub audio channels



■ Changing the playback mode (BDAV)

The playback mode can be changed to program mode or playlist mode. Playlist mode cannot be selected if a playlist is not stored on the disc. تلفن شبانه روزی: ۰۸۵-۸۸۶۲۰۸۵

- 1 Select “Settings”.
- 2 Select “Playback Mode”.
- 3 Each time “Playback Mode” is selected, the mode changes.

Program mode: Playback the disc in order of program number

Playlist mode: Playback the disc in order of playlist number



- Displaying the secondary video (Picture-in-picture) (BD video)

Picture-in-picture is a secondary video that plays embedded in the primary video. The secondary video can be played from a disc compatible with the picture-in-picture function.

- 1 Select "Page 3".
- 2 Select "PinP".
- 3 The secondary video is displayed on the screen.

Each time "PinP" is selected, another secondary video available on the disc is selected.

"Hide": Secondary video can be hidden



- Changing the secondary audio (BD video)

The secondary audio that for the secondary video can be changed.

- 1 Select "Page 3".
- 2 Select "PinP Audio".
- 3 Each time "PinP Audio" is selected, another secondary audio stored on the disc is selected.

"OFF": Secondary audio can be turned off



■ Displaying the color key buttons (BD video)

The color button is used for various uses according to directions of contents.

- 1 Select "Page 3".
- 2 Select "Color Keys".
- 3 The color key buttons are displayed on the screen.

You can also use the color buttons (A-D) on the remote controller.




■ Displaying the 10 key pad (BD video)

The 10 key pad is used when inputting numbers according to directions of contents.

- 1 Select "Page 3".
- 2 Select "Key Pad".
- 3 The 10 key pad is displayed on the screen.

You can also use the 10 key buttons (1-0) on the remote controller.

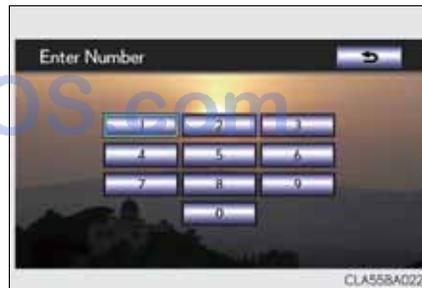

### ■ Initial setup

#### ● Displaying the initial setup screen

- 1 Select “Page 2” or “Settings”.
- 2 Select “Setup”.
- 3 Select the settings to be changed.

#### ▶ Page 1

“Page 2”: Goes to next page

“Default”: Restores default settings

“Clear BD History”: BD history data such as bookmarks and resume point can be deleted.



#### ▶ Page 2



After the settings are changed, select “OK”.

- Changing the initial audio language

- 1 Select “Audio Language”.
- 2 Select the desired language.

If you cannot find the desired language, select “Other” and input the desired language code. (→P. 604)



- Changing the initial subtitle language

- 1 Select “Subtitle Language”.
- 2 Select the desired language.

If you cannot find the desired language, select “Other” and input the desired language code. (→P. 604)



- Changing the initial language of the disc menu

- 1 Select “Disc Menu Language”.
- 2 Select the desired language.

If you cannot find the desired language, select “Other” and input the desired language code. (→P. 604)



- Setting the angle mark

If the BD/DVD disc has angle options, you can turn the angle mark on/off.

Each time “Angle Mark” is selected, “ON” or “OFF” can be selected.



- Setting the DVD parental lock

The level of viewer restrictions can be set.


**1** Select “DVD Parental Lock”.

**2** Input the 4-digit personal code and then select “OK”.

Select  10 times to reset the personal code in case the code was forgotten.



**3** Select a restriction level (1-8) and then select “OK”.

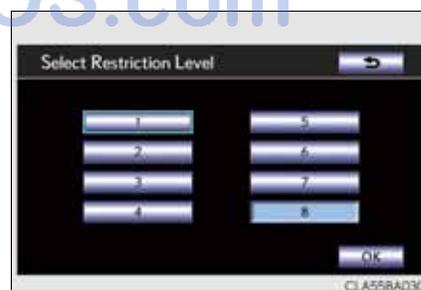

- Setting the BD parental lock

The age of viewer restrictions can be set.

**1** Select “BD Parental Lock”.

**2** Input the 4-digit personal code and then select “OK”.

Select  10 times to reset the personal code in case the code was forgotten.



**3** Input a restriction age (0-255) and then select “OK”.



- Setting a quick playback (BD video)

After inserting a BD disc you can skip over to the first playback point and can immediately playback the main story.

Each time “Quick Playback” is selected, “ON” or “OFF” can be selected.



- Setting a sound dynamic range

The difference between the lowest and highest sound volumes can be adjusted.

Each time “Sound Dynamic Range” is selected, the setting changes in the following order:

“MAX”: Maximum dynamic range



“STD”: Standard dynamic range



“MIN”: Minimum dynamic range




“TrueHD”: TrueHD dynamic range

- BD Video secondary audio

BD Video secondary audio can be set.

Each time “BD-Video Secondary Audio” is selected, “ON” or “OFF” can be selected.

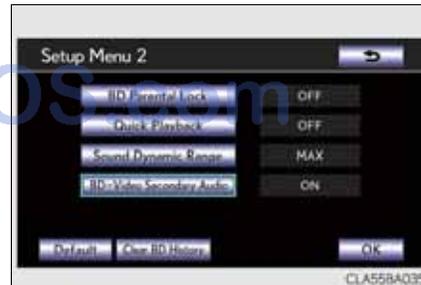

---

- Discs that can be used (→P. 575)

- Sound dynamic range

“Sound Dynamic Range” can be set only when Dolby Digital or Dolby TrueHD is selected.

When Dolby TrueHD is selected, the sound dynamic range is the same as “MAX” even when set to “MIN”.

- BD Video secondary audio

If BD Video secondary audio is set to on, secondary audio is output during sections that have secondary audio recorded. During these sections, HD sounds, such as 7.1 ch, will not be output.

However, if you are playing sections that meet all of the following conditions, HD sounds can be output:

- There is no interactive audio
- There is no secondary audio
- There are no BD-J titles

If BD Video secondary audio is set to off, HD sounds can be output. However, for sections that have secondary audio recorded, secondary audio will not be output.

- BD/DVD video discs

- Compatible media

Media that can be used for playback are BD-ROMs, BD-Rs, BD-REs, DVD-ROMs, DVD-Rs and DVD-RWs.

- Compatible disc formats

Disc formats that can be used for playback are BD video formats, BDAV formats, AVCHD formats, and DVD video formats

- This player conforms to NTSC/PAL color TV formats.


- Region codes

Some BD/DVD video discs have a region code indicating the region in which you can use the BD/DVD video disc.

If the BD video disc is not labeled “B” or “ABC” or if the DVD video disc is not labeled “2” or “ALL”, you cannot use it on this player.

If you attempt to play BD/DVD video discs with incompatible region codes on this player, an error message appears on the screen. Even if the BD/DVD video disc does not have a region code, in some cases it cannot be used.

- When storing content on BD-R, BD-RE, DVD-R or DVD-RW discs, they must be finalized using a recorder. Discs that are not finalized cannot be played by this system.
  - Discs that are recorded with multi session cannot be played by this system.
  - BD-Live™ is not supported.
- Symbols shown on BD/DVD video discs

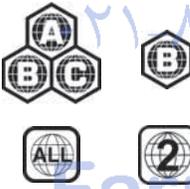Symbol	Meaning
	Indicates PAL/NTSC format
	Indicates the number of audio tracks
	Indicates the number of language subtitles
	Indicates the number of angles
	Indicates the screen display ratios available Wide screen: 16:9 Standard: 4:3
	Indicates the disc's region code <ul style="list-style-type: none"> <li>• BD video <ul style="list-style-type: none"> <li>“ABC”: all regions</li> <li>Alphabet: region code</li> </ul> </li> <li>• DVD video <ul style="list-style-type: none"> <li>“ALL”: all regions</li> <li>Number: region code</li> </ul> </li> </ul>

**■ BD/DVD video disc information****● Parental controls**

This feature limits what can be viewed in conformity with the level of restrictions of the country. The level of restrictions varies depending on the BD/DVD video disc. Some BD/DVD video discs cannot be played at all, or violent scenes are skipped or replaced with other scenes.

**• DVD video**

Level 1: DVD video discs for children can be played.

Level 2 - 7: DVD video discs for children and G-rated movies can be played.

Level 8: All types of DVD video discs can be played.

**• BD video**

Parental controls of BD videos can be set up by inputting an age. If the target age of BD video exceeds the age restriction that was set up, then playback will not be possible.

**● Multi-angle feature**

You can enjoy the same scene from different angles.

**● Multi-language option**

You can select the subtitle and audio languages.

**● Region codes**

The region codes are provided on BD/DVD players and BD/DVD discs. If the BD/DVD disc does not have the same region code as the BD/DVD player, you cannot play the disc on the player.

**● Title and chapter**

Video and audio programs stored in BD/DVD video discs are divided into parts by title and chapter.

**Title:** The largest unit of the video and audio programs stored on BD/DVD video discs. Usually, one movie, one album, or one audio program is assigned as a title.

**Chapter:** A title comprises of one or more chapters.

- AVCHD

AVCHD is a new format (standard) for high definition video cameras that can record and play high-resolution HD images.

DVDs and SD cards with videos recorded in AVCHD format can playback on this system.

- BDAV (Blu-ray Disc™ Audio/Visual)

BDAV is one of the audio/video recording formats for Blu-ray Disc™, has been made primarily for the purpose of broadcasting the recording.

It is used when recording to BD-R and BD-RE by Blu-ray™ recorder.

- BD-J

Some BD video discs contain Java applications, and these applications are called BD-J. You can enjoy various interactive features in addition to playing normal video.

- Pop-up menu

Some BD video discs have a pop-up navigation menu that can be called up and be operated on the screen without interrupting playback.

- Picture-in-picture

This is a function of BD video that plays the primary video and secondary video simultaneously. For instance, the function is capable of playing the original movie as the primary video while playing video commentary from the film director on a small screen as a secondary video.

- DUBA (Disc Unbound BD-J Application)

For BD videos that come as a 2 disc set or more, after finishing and ejecting one of the discs, continuation of the video can be seen shortly after replacing the disc with the proper disc.

- Playlist (BDAV only)

A playlist of favorite scenes by Blu-ray™ recorder can be created and the scenes can playback via playlist.

- Audio

This player can play liner PCM, Dolby digital, DTS and MPEG audio format.

Other decoded types cannot be played.

## ■ Language codes list

Code	Language	Code	Language
0514	English	0215	Tibetan
0618	French	0218	Breton
0405	German	0301	Catalan
0920	Italian	0315	Corsican
0519	Spanish	0319	Czech
2608	Chinese	0325	Welsh
1412	Dutch	0401	Danish
1620	Portuguese	0426	Bhutani
1922	Swedish	0515	Esperanto
1821	Russian	0520	Estonian
1115	Korean	0521	Basque
0512	Greek	0601	Persian
0101	Afar	0609	Finnish
0102	Abkhazian	0610	Fiji تلفن شجر
0106	Afrikaans	0615	Faroese
0113	Amharic	0625	Frisian
0118	Arabic	0701	Irish
0119	Assamese	0704	Scots-Gaelic
0125	Aymara	0712	Galician
0126	Azerbaijani	0714	Guarani
0201	Bashkir	0721	Gujarati
0205	Byelorussian	0801	Hausa
0207	Bulgarian	0809	Hindi
0208	Bihari	0818	Croatian
0209	Bislama	0821	Hungarian
0214	Bengali	0825	Armenian

Code	Language	Code	Language
0901	Interlingua	1312	Malayalam
0905	Interlingue	1314	Mongolian
0911	Inupiak	1315	Moldavian
0914	Indonesian	1318	Marathi
0919	Icelandic	1319	Malay
0921	Inuktitut	1320	Maltese
0923	Hebrew	1325	Burmese
1001	Japanese	1401	Nauru
1009	Yiddish	1405	Nepali
1023	Javanese	1415	Norwegian
1101	Georgian	1503	Occitan
1111	Kazakh	1513	(Afan) Oromo
1112	Greenlandic	1518	Oriya
1113	Cambodian	1601	Punjabi
1114	Kannada	1612	Polish
1119	Kashmiri	1619	Pashto, Pushto
1121	Kurdish	1721	Quechua
1125	Kirghiz	1813	Rhaeto-Romance
1201	Latin	1814	Kirundi
1214	Lingala	1815	Romanian
1215	Laothian	1823	Kinyarwanda
1220	Lithuanian	1901	Sanskrit
1222	Latvian	1904	Sindhi
1307	Malagasy	1907	Sangho
1309	Maori	1908	Serbo-Croatian
1311	Macedonian	1909	Sinhalese

Code	Language	Code	Language
1911	Slovak	2014	Setswana
1912	Slovenian	2015	Tonga
1913	Samoan	2018	Turkish
1914	Shona	2019	Tsonga
1915	Somali	2020	Tatar
1917	Albanian	2023	Twi
1918	Serbian	2107	Uighur
1919	Siswati	2111	Ukrainian
1920	Sesotho	2118	Urdu
1921	Sundanese	2126	Uzbek
1923	Swahili	2209	Vietnamese
2001	Tamil	2215	Volapük
2005	Telugu	2315	Wolof
2007	Tajik	2408	Xhosa
2008	Thai	2515	Yoruba
2009	Tigrinya	2601	Zhuang
2011	Turkmen	2621	Zulu
2012	Tagalog		

**⚠ CAUTION****■ Certification for the player**

This product is a class I laser product.

- A laser beam leak may result in hazardous radiation exposure.
- Do not open the cover of the player or attempt to repair the unit yourself. Refer servicing to qualified personnel.
- Laser power: No hazardous

**■ BD/DVD video precaution**

Conversational speech on some BDs/DVDs is recorded at a low volume to emphasize the impact of sound effects. If you adjust the volume assuming that the conversations represent the maximum volume level that the BD/DVD will play, you may be startled by louder sound effects or startled when you change to a different audio source.

Loud sounds may have a significant impact on the human body or pose a driving hazard. Keep this in mind when you adjust the volume.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com


 NOTICE

## ■ Discs and adapters that cannot be used


Do not use the following types of discs.

Also, do not use 8 cm (3 in.) disc adapters, Dual Discs or printable discs. Doing so may damage the player and/or disc insert/eject function.

- Discs that have a diameter that is not 12 cm (4.7 in.).

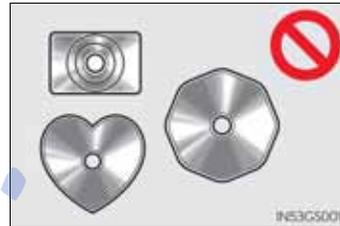

- Low-quality or deformed discs.

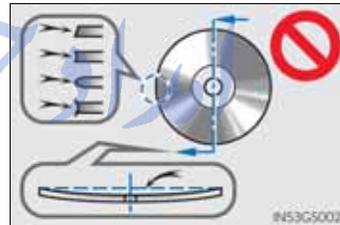

- Discs with a transparent or translucent recording area.



- Discs that have tape, stickers or labels attached to them, or that have had the label peeled off.



 NOTICE

## ■ Player precautions

Failure to follow the precautions below may result in damage to the discs or the player itself.

- Do not insert anything other than discs into the disc slot.
- Do not apply oil to the player.
- Store discs away from direct sunlight.
- Never try to disassemble any part of the player.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Playing an audio CD and MP3/WMA discs


Audio CD and MP3/WMA discs can be played on this system.

### ■ Switching to the audio CD and MP3/WMA mode

Select “Rr-DISC” on the source screen or press “DISC” if a disc has already been loaded in the disc slot. The player will start to play the disc automatically.

### ■ Remote controller

- ① Inputting the selected control icon
- ② Turning on the audio CD and MP3/WMA mode
- ③ Selecting a control icon
- ④ Volume up/down
- ⑤ Fast-forward/rewind
- ⑥ Selecting a track/file
- ⑦ Play/pause
- ⑧ Selecting a folder

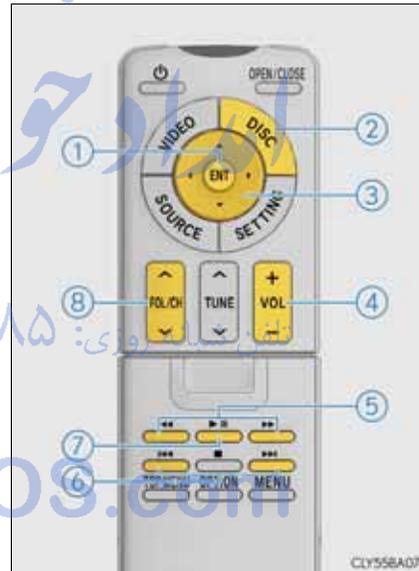

**Turning on the audio CD and MP3/WMA mode**

Insert a disc or Press “DISC” with a disc inserted.

The player will start to play the disc automatically.

**Playing/pausing a disc**

Press  to play/pause.

**Selecting a track/file**

Press  or  until the desired track/file number appears.

**Fast forwarding or rewinding a track/file**

Press and hold  or .

**Selecting a folder (MP3/WMA)**

Press “^” or “v” of “FOL/CH” until the desired folder number appears.

Press and hold “v”, the top file stored in the top folder in the disc will be selected.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

- Discs that can be used (→P. 575)

- Displaying the title and artist name

If a CD-TEXT disc is inserted, the titles of the disc and track will be displayed.

- MP3 and WMA files

MP3 (MPEG Audio LAYER3) is a standard audio compression format. Files can be compressed to approximately 1/10 of their original size by using MP3 compression.

WMA (Windows Media Audio) is a Microsoft audio compression format.

This format compresses audio data to a size smaller than that of the MP3 format.

There is a limit to the MP3 and WMA file standards and to the media/formats recorded by them that can be used.

- MP3 file compatibility

- Compatible standards  
MP3 (MPEG1 LAYER3, MPEG2 LSF LAYER3)
- Compatible sampling frequencies  
MPEG1 LAYER3: 32, 44.1, 48 (kHz)  
MPEG2 LSF LAYER3: 16, 22.05, 24 (kHz)
- Compatible bit rates (compatible with VBR)  
MPEG1 LAYER3: 64, 80, 96, 112, 128, 160, 192, 224, 256, 320 (kbps)  
MPEG2 LSF LAYER3: 64, 80, 96, 112, 128, 144, 160 (kbps)
- Compatible channel modes: stereo, joint stereo, dual channel and mono

- WMA file compatibility

- Compatible standards  
WMA Ver. 7, 8, 9
- Compatible sampling frequencies  
32, 44.1, 48 (kHz)
- Compatible bit rates (only compatible with 2-channel playback)  
Ver. 7, 8, 9: CBR 48, 64, 80, 96, 128, 160, 192 (kbps)

- Compatible media

Media that can be used for MP3 and WMA playback:

- CD-ROM/R/RW
- DVD-ROM/R/RW

Playback in some instances may not be possible, depending on the status of the disc. Playback may not be possible or the audio may jump if the disc is scratched or marked with fingerprints.

- Compatible disc formats

The following disc formats can be used.

- Disc formats: CD-ROM Mode 1  
CD-ROM XA Mode 2 Form 1
- File formats: ISO9660 Level 1, Level 2 (Romeo, Joliet)  
UDF (2.01 or lower)

MP3 and WMA files written in any format other than those listed above may not play correctly, and their file names and folder names may not be displayed correctly.

Items related to standards and limitations are as follows.

- Maximum directory hierarchy: 8 levels
- Maximum length of folder names/file names: 20 characters
- Maximum number of folders: 255 (including the root)
- Maximum number of files per disc: 512

- File names

The only files that can be recognized as MP3/WMA and played are those with the extension .mp3 or .wma.

- Multi-sessions

As the audio system is compatible with multi-sessions, it is possible to play discs that contain MP3 and WMA files.

- ID3 and WMA tags

ID3 tags can be added to MP3 files, making it possible to record the track title, artist name, etc.

The system is compatible with ID3 Ver. 1.0, 1.1, and Ver. 2.3 ID3 tags. (The number of characters is based on ID3 Ver. 1.0 and 1.1.)

WMA tags can be added to WMA files, making it possible to record the track title and artist name in the same way as with ID3 tags.

- MP3 and WMA playback

When a disc containing MP3 or WMA files is inserted, all files on the disc are first checked. Once the file check is finished, the first MP3 or WMA file is played. To make the file check finish more quickly, we recommend you do not write in any files other than MP3 or WMA files or create any unnecessary folders.

If the discs contain a mixture of music data and MP3 or WMA format data, only music data can be played.

- Extensions

If the file extensions .mp3 and .wma are used for files other than MP3 and WMA files, they will be mistakenly recognized and played as MP3 and WMA files. This may result in large amounts of interference and damage to the speakers.

- Playback

- To play MP3 files with steady sound quality, we recommend a fixed bit rate of 128 kbps and a sampling frequency of 44.1 kHz.
- Playback may not be possible in some instances, depending on the characteristics of the disc.
- There is a wide variety of freeware and other encoding software for MP3 and WMA files on the market, and depending on the status of the encoding and the file format, poor sound quality or noise at the start of playback may result. In some cases, playback may not be possible at all.
- When files other than MP3 or WMA files are recorded on a disc, it may take more time to recognize the disc and in some cases, playback may not be possible at all.

**NOTICE**

- Discs and adapters that cannot be used (→P. 608)
- Player precautions (→P. 609)

## Playing an SD card


This system can play still pictures and AVCHD video that are stored in an SD card. It does not support music playback.

### ■ Switching to SD card mode

Select “Rr-SD” on the source screen if an SD card has already been inserted in the SD card slot.


### ■ Remote controller

- ① Inputting the selected control icon
- ② Selecting a control icon
- ③ Volume up/down
- ④ Fast-forward/rewind
- ⑤ Stop
- ⑥ Displaying the option screen
- ⑦ Selecting a chapter
- ⑧ Play/pause

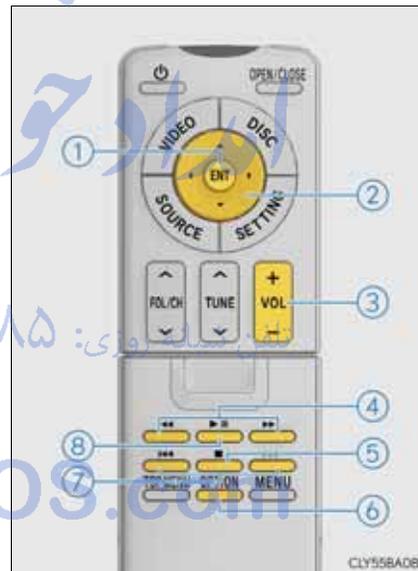

### ■ Main menu

- ① Playing still pictures
- ② Playing AVCHD video
- ③ Deleting the BD history data
- ④ Formatting the SD card

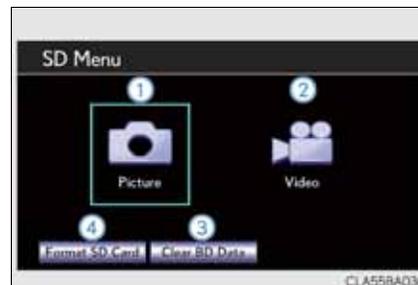

### Playing still pictures

- Displaying the still pictures


You can display still pictures that are stored in an SD card.

- 1 Select "Picture".



- 2 Select the desired still picture to show.

Select  or  to show the next or previous page.

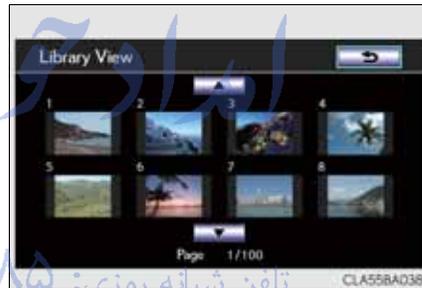

- 3 Selected picture is displayed on the screen.

Press " or "" on  to display the next or previous still picture.

To return to the "Library View" screen, press "ENT".



### ■ Option screen

#### ● Displaying the option screen

- 1 Press "OPTION".
- 2 The option screen is displayed.

Press "OPTION" once again or select "Hide Buttons" to turn off the option screen.  
 "Library View": Return to "Library View" screen



#### ● Starting slideshow

You can display still pictures one by one at a constant interval. Select "Slideshow" to start slideshow.

When pressing "◀" or "▶" on  during slideshow, the previous or next still picture will be shown, and the slideshow will continue from that picture.

Press "ENT" or "OPTION" to stop slideshow.

#### ● Rotating the still pictures

Select  or  to rotate a still picture.

The rotate information will be maintained until the system is turned off or the SD card is removed.

#### ● Zooming the still pictures

This function is only available for small-sized still pictures.

Select  to zoom in the still pictures.

Select  again to cancel zoom in.

● Slideshow settings

- 1 Select “Setup”.
- 2 The slideshow settings can be changed. After the settings are changed, select “OK”.

- ① Selects slideshow interval time

“5s” → “10s” → “15s” → “30s” → “60s”

- ② Selects slideshow effect

“Fade” → “Slide” → “Wipe1” → “Wipe2” → “Dissolve” → “Zoom” → “OFF”

- ③ Selects on/off to repeat slideshow

- ④ Restores default settings



Playing AVCHD video

You can play AVCHD videos that are stored in an SD card.

- 1 Select “Video”.



- 2 AVCHD video will start playing.

Controls for AVCHD video  
(→P. 582)

To return to the “SD Menu” screen, press “SOURCE” and then select “Rr-SD”.



### Formatting the SD card

- 1 Select “Format SD Card” on the “SD Menu” screen.
- 2 Select “Yes” to format the SD card.

If the SD card is formatted, all data on the card will be erased.

### Deleting the BD history data

The BD history data such as bookmarks and resume information can be deleted.

- 1 Select “Clear BD Data” on the “SD Menu” screen.
- 2 Select “Yes” to delete the BD history data.

■ SD cards that can be used (→P. 575)

■ Compatible files

The following files can be displayed.

- Picture file format: JPEG
  - Picture resolution: between 34×34 and 8192×8192 pixels
  - Gray scale JPEG is not supported
- Video file format: AVCHD

**■ SD cards**

- An SD card is not provided with the rear seat entertainment system and needs to be purchased separately.
- Compatible formats  
This system is compatible with SD memory cards that meet SD card specifications FAT16 formats, SDHC memory cards in FAT32 format, and SDXC memory cards in exFAT format.
- The Panasonic SD memory card format software version 3.1 or higher is recommended.
- Data stored in an SD card may be lost. Before playing back pictures and videos stored in an SD card, make certain to back up the data.
- Before an SD card that contains any kind of data is played, slide the lock switch on the SD card to “LOCK” in order to prevent any data from being accidentally deleted or overwritten.
- When discarding or transferring ownership of an SD card  
When using format or delete functions on this system or a personal computer, file management data changes but the data on the SD card is not completely erased.  
Destroying the body of the SD card or using commercial computer software that erases data is recommended when discarding or transferring ownership of an SD card to completely erase the data stored on the card. The management of data stored on an SD card is the customer’s responsibility.

**CAUTION****■ SD cards**

Keep away from children.  
These are small and if swallowed by a child they can cause choking.

 NOTICE

## ■ SD card precautions

Failure to follow the precautions below may result in damage to the SD cards or the SD card slot.

- Do not insert anything other than an SD card into the SD card slot.
- Do not stick labels or stickers on SD card. There is a possibility that it may become impossible to eject the SD card from inside the slot.
- Do not handle an SD card with wet hands. Doing so may cause electric shock or a malfunction.
- Do not allow hands or metal objects to contact the interface pins of SD cards.
- Do not place SD cards on the instrument panel, on any place with direct sunlight or in areas with a lot of moisture.
- Do not use SD cards in any place where static electricity or electric noise adversely affects SD cards. This may cause data corruption or data loss.
- Always place the SD card in its storage case when not in use.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## Using the front audio system

Front audio system can be controlled from the rear seat entertainment system.


For details of the DVD video operation: →P. 582

### Selecting a source

Select the desired source on the source screen.

### Remote controller

- ① Inputting the selected control icon
- ② Selecting a control icon
- ③ Volume up/down
- ④ Seeking a radio station/channel
- ⑤ Fast-forward/rewind
- ⑥ Stop
- ⑦ Selecting a track/file
- ⑧ Play/pause
- ⑨ Selecting a station/channel or folder/album
- ⑩ Displaying the source screen

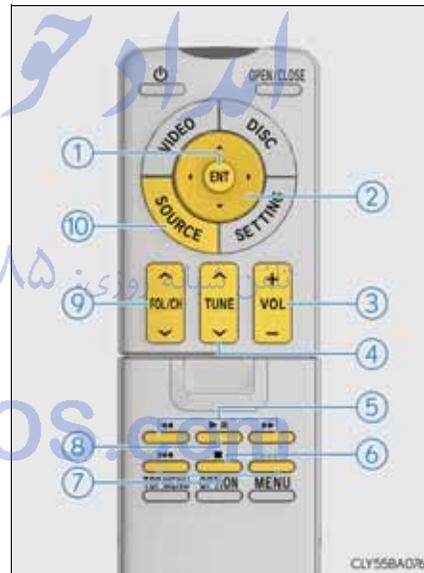

### Selecting a radio station/channel

#### ■ Select a radio station/channel

- 1 Select “AM”, “FM” or “DAB” on the source screen.
- 2 Press “^” or “v” on the “TUNE” to adjust the frequency.

To seek for receivable stations/channels, press and hold the “TUNE” switch until you hear a beep.

#### ■ Select a preset station/channel

- 1 Select “AM”, “FM” or “DAB” on the source screen.
- 2 Press “^” or “v” on the “FOL/CH” to select a preset station/channel.

### Selecting a track/file

- 1 Select “DISC”, “iPod”, “USB” or “BT-A” on the source screen.
- 2 Press “^” or “v” on the “TUNE” to select a file/track.  
To return to the beginning of the current track, file, press “v” on the “TUNE” once quickly.

### Selecting a folder/album


- 1 Select “DISC”, “USB” or “BT-A” on the source screen.
- 2 Press “^” or “v” on the “FOL/CH” switch to select a folder/album.

## Using the video mode

The rear seat entertainment system plays videos and sound when audio-video equipment is connected to the A/V input port. Select “Rr-A/V” on the source screen or press “VIDEO” to turn on the video mode.

### ■ Remote controller

- ① Turning on the video mode
- ② Volume up/down

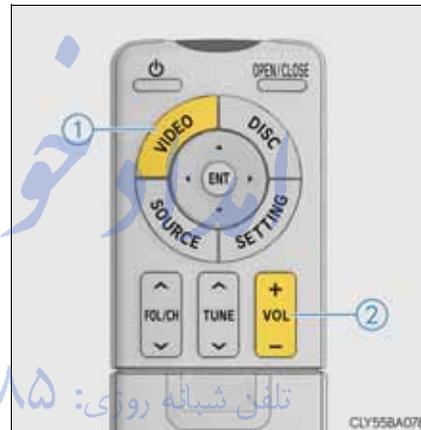

FarmaSOS.com

■ Using the A/V input port

- 1** Open the cover and connect audio-video equipment to the A/V input port.

The A/V input port is composed of 3 input jacks.

Yellow: Video input

White: Left channel audio input

Red: Right channel audio input

- 2** Turn on the power of the audio-video equipment
- 3** Press “VIDEO” to turn on the video mode.



■ Operating the audio-video equipment connected to the system

The volume can be adjusted using the vehicle’s audio controls. All other operations must be made on the audio-video equipment itself. For details about operation of audio-video equipment, refer to the manufacturer’s instructions.

**!** NOTICE

- When the A/V input port is not in use  
Keep the A/V input port cover closed.  
Inserting anything other than an appropriate plug may cause electrical failure or a short circuit.

## Changing other setting

### Switching to setting mode

Press “SETTING” to display the setting screen.

- ① Adjusting the screen (→P. 626)
- ② Changing the screen size (→P. 628)
- ③ Tilting the display (→P. 629)




### Adjusting the screen settings

You can adjust the color, contrast, tone and brightness of the screen. The screen setting levels can be adjusted for day mode and night mode individually.

- 1 Press “SETTING”.
- 2 Select “Display” tab on the screen.
- 3 The screen settings can be adjusted. After adjustments, select “OK”.

- ▶ “DISC”/“Rr-DISC”/“Rr-SD” mode
- ▶ “Rr-A/V” mode

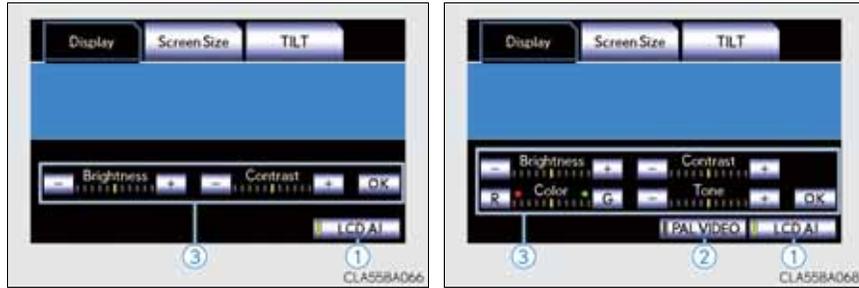

① Turning on/off the “LCD AI”

The “LCD AI” automatically determines the tone of the video image and sets the contrast to an optimum level, displaying a sharp image.

② PAL VIDEO on/off (video mode)

③ Adjusting the screen settings


	Screen button	Function
“Color”	“R”	Strengthens the red color
	“G”	Strengthens the green color
“Tone”	“-”	Weakens the tone
	“+”	Strengthens the tone
“Contrast”	“-”	Weakens the contrast
	“+”	Strengthens the contrast
“Brightness”	“-”	Darkens the screen
	“+”	Brightens the screen

### Changing the screen size

- 1 Press "SETTING".
- 2 Select "Screen Size" tab on the screen.
- 3 Select the desired screen size.

- ① Displays the screen at the original ratio
- ② Widens the 4:3 aspect screen horizontally to fill the screen
- ③ Widens the screen vertically and horizontally, at the same ratio, to fill the entire screen
- ④ Zooms in the screen

Select  again to cancel zoom in.

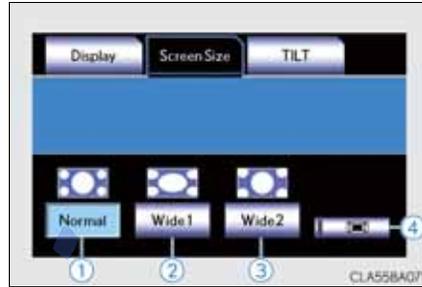

The screen size can be changed for each media mode individually

FarmaSOS.com


### Tilting the display

- 1 Press "SETTING".
- 2 Select "TILT" tab on the screen.

- ① Automatic closing of the display on/off

If "Auto Close" is on, the display will automatically close when the engine switch is turned OFF.

The display will automatically open when the engine switch is turned to ACCESSORY or IGNITION ON mode.

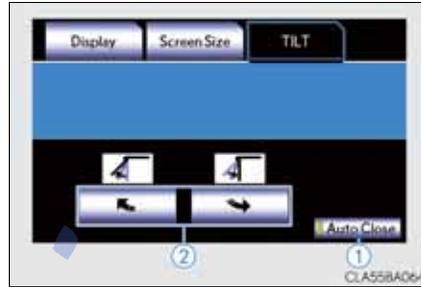

- ② Adjusting the display angle

The display angle is memorized and will be recalled when the engine switch is turned to ACCESSORY or IGNITION ON mode again.

## Hands-free system (for cellular phone)

The hands-free system is a function that allows you to use your cellular phone without touching it.

This system supports Bluetooth® cellular phones. Bluetooth® is a wireless data system that allows a cellular phone to wirelessly connect to the hands-free system and outgoing/incoming calls.

To use the hands-free system, you must register your Bluetooth® phone in the system. (→P. 641)

The illustrations of the hands-free system screens shown here may slightly vary depending on the type of the system.

The hands-free system function can be displayed and operated on the “Side Display”. (→P. 423)

### Telephone switch


- ① Off hook switch
  - Sending
  - Receiving
  - “Telephone” screen display
- ② On hook switch
  - End call
  - Refuse call



### Microphone

You can use the microphone when talking on the phone.

The person you are speaking to can be heard from the front speakers.

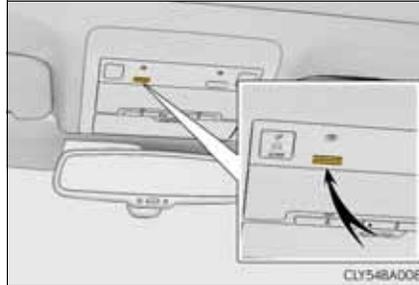


### Steering switch

#### ① Adjusting the volume

Press the “+” switch to increase the volume and the “-” switch to decrease the volume.

Hold the switch in that position to continue increasing or decreasing the volume.

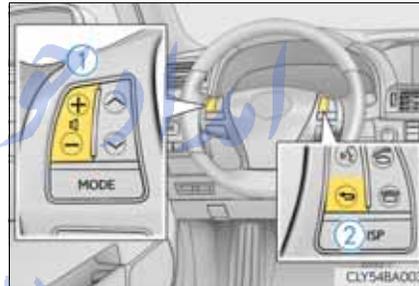

#### ② Back switch

Press .

To return to the previous screen.

**Status display**

You can check indicators such as signal strength and battery charge on the “Telephone” screen.

- ① Connection status
- ② Battery charge
- ③ Call area
- ④ Signal strength



Indicators	Conditions	
Connection status	Good 	No connection 
Battery charge	Full 	Empty 
Call area	"Rm": Roaming area تلفن شماره روزی: ۳۸۰۲۳۸۸-۲۱	
Signal strength	Excellent 	Poor 

FarmaSOS.com

- When using the hands-free system
  - The audio system is muted when making a call.
  - If both parties speak at the same time, it may be difficult to hear.
  - If the incoming call volume is overly loud, an echo may be heard.
  - Try to face toward the microphone as much as possible when speaking.
  - In the following circumstances, it may be difficult to hear the other party:
    - When driving on unpaved roads
    - When driving at high speeds
    - If a window is open
    - If the air conditioning is blowing directly on the microphone
    - If the air conditioning is set to high
    - There is an effect from the network of the cellular phone
- Conditions under which the system will not operate
  - If using a cellular phone that does not support Bluetooth®
  - If the cellular phone is turned off
  - If you are outside service range
  - If the cellular phone is not connected
  - If the cellular phone's battery is low
  - When the cellular phone is not connected, "No connect" is displayed.
- Bluetooth® antenna
 

The antenna is built into the instrument panel. If the cellular phone is behind the seat or in the console box, or touching or covered by metal objects, connection status may deteriorate.
- Battery charge/Signal status
  - This display may not correspond exactly with the cellular phone itself.
  - This system does not have a charging function.
  - The Bluetooth® phone battery will burn quickly when it is connected to Bluetooth®.
  - When the cellular phone is out of the service area or in a place inaccessible by radio waves, "No service" is displayed.
- When using Bluetooth® audio and hands-free system at the same time
 

The following problems may occur.

  - The Bluetooth® connection may be cut.
  - Noise may be heard on the Bluetooth® audio playback.

■ About the phonebook in this system

The following data is stored for every registered phone. When another phone is connecting, you cannot read the registered data.

- Phonebook data
- Call history data
- Speed dial data
- Image data
- All phone settings
- Messages
- Quick reply messages

When you delete the phone, the above-mentioned data is also deleted.

■ When you release your car

Be sure to initialize your data. (→P. 418)

■ About Bluetooth®

Bluetooth is a registered trademark of Bluetooth SIG, Inc.



FarmaSOS.com

**■ Compatible models**

This system supports the following service.

- Bluetooth® Specification Ver. 1.1 or higher (Recommended: Ver. 2.1+EDR or higher)
- Profiles
  - HFP (Hands Free Profile) Ver. 1.0 or higher (Recommended: Ver. 1.5 or higher)
  - OPP (Object Push Profile) Ver. 1.1 or higher
  - PBAP (Phone Book Access Profile) Ver. 1.0 or higher
  - MAP (Message Access Profile) Ver. 1.0 or higher
  - DUN (Dial-Up Networking Profile) Ver.1.1 or higher\*

\*: This profile is necessary when using connected services. For details, refer to the “Navigation System Owner’s Manual”.

If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone, and take OPP, PBAP, MAP or DUN service individually.

If the connected Bluetooth® phone version is older than recommended or incompatible, this function may not be used.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## ■ Certification




### EC Declaration of Conformity

**Manufacturer:** Pioneer Corporation  
1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,  
Kanagawa 212-0031, JAPAN

**EU Representative:** Pioneer Europe NV  
Haven 1087, Keetberglaan 1  
9120 MELSELE, BELGIUM

**The EU Directives covered by this Declaration**

1999/5/EC Radio & Telecommunication Terminal Equipment Directive

**The product covered by this declaration**

Receiver Assy

model **NXH-0528**

**The basis on which conformity is being declared**

The product identified above complies with the requirements of the above specified Directive by meeting following standards:  
EN300328 V1.7.1, EN300440-2 V1.4.1, EN301489-1 V1.8.1,  
EN301489-3 V1.4.1, EN301489-17 V2.1.1, ISO7637-2:2004,  
EN62479 : 2010 and EN60065 : 2002 + A1 : 2006 + A11 : 2008 + A2 : 2010 + A12 : 2011

The technical documentation required to demonstrate that the product meets the requirements of the above specified Directive has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities.

A sample of the product has been tested by the manufacturer.

Technical File No: KCE12-002

The CE mark was first applied in: 2012

Done at Melsele

12/03/2012



Ivan Vlietinck

Manager Public Affairs

PIONEER EUROPE NV  
Haven 1087 - Keetberglaan 1 - 9120 Melsele - Belgium  
Telefoon +32 (0)3 570 05 11 - Fax +32 (0)3 570 08 86 - URL <http://www.pioneer.eu> - BTW BE 406.999.132 - RPR Dendermonde




### EC Declaration of Conformity

**Manufacturer:** Pioneer Corporation  
1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,  
Kanagawa 212-0031, JAPAN

**EU Representative:** Pioneer Europe NV  
Haven 1087, Keetberglaan 1  
9120 MELSELE, BELGIUM

#### The EU Directives covered by this Declaration

1999/5/EC Radio & Telecommunication Terminal Equipment Directive

#### The product covered by this declaration

Receiver Assy

model **NXH-0728**

#### The basis on which conformity is being declared

The product identified above complies with the requirements of the above specified Directive by meeting following standards:

EN300328 V1.7.1, EN300440-2 V1.4.1, EN301489-1 V1.8.1,  
EN301489-3 V1.4.1, EN301489-17 V2.1.1, ISO7637-2:2004,  
EN62479 : 2010 and EN60065 : 2002 + A1 : 2006 + A11 : 2008 + A2 : 2010 + A12 : 2011

The technical documentation required to demonstrate that the product meets the requirements of the above specified Directive has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities.

 
A sample of the product has been tested by the manufacturer.

Technical File No: KCE12-002

The CE mark was first applied in: 2012

Done at Melsele

12/03/2012



Ivan Vlietinck

Manager Public Affairs

PIONEER EUROPE NV  
Haven 1087 - Keetberglaan 1 - 9120 Melsele - Belgium  
Telefoon +32 (0)3 570 05 11 - Fax +32 (0)3 570 08 86 - URL <http://www.pioneer.eu> - BTW BE 406.999.132 - RPR Genderraonde




### EC Declaration of Conformity

**Manufacturer:** Pioneer Corporation  
1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,  
Kanagawa 212-0031, JAPAN

**EU Representative:** Pioneer Europe NV  
Haven 1087, Keetberglaan 1  
9120 MELSELE, BELGIUM

#### The EU Directives covered by this Declaration

1999/5/EC Radio & Telecommunication Terminal Equipment Directive

#### The product covered by this declaration

Receiver Assy

model **NXH-0628**

#### The basis on which conformity is being declared

The product identified above complies with the requirements of the above specified Directive by meeting following standards:

EN300328 V1.7.1, EN300440-2 V1.4.1, EN301489-1 V1.8.1,  
EN301489-3 V1.4.1, EN301489-17 V2.1.1, ISO7637-2:2004,  
EN62479 : 2010 and EN60065 : 2002 + A1 : 2006 + A11 : 2008 + A2 : 2010 + A12 : 2011

The technical documentation required to demonstrate that the product meets the requirements of the above specified Directive has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities.

A sample of the product has been tested by the manufacturer.

Technical File No: KCE12-002

The CE mark was first applied in: 2012

Done at Melsele

12/03/2012



Ivan Vlietinck

Manager Public Affairs

PIONEER EUROPE NV  
Haven 1087 - Keetberglaan 1 - 9120 Melsele - Belgium  
Telephone +32 (0)3 570 05 11 - Fax +32 (0)3 570 08 86 - URL <http://www.pioneer.eu> - BTW BE 406.999.132 - RPR Genderraonde

Ovim PIONEER, izjavljuje da je NXH-0628 u skladu s bitnim zahtjevima drugim relevantnim odredbama Direktive 1999/5/EC i Pravilnika o RiTT opremi (NN 25/2012).




### EC Declaration of Conformity

**Manufacturer:** Pioneer Corporation  
1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,  
Kanagawa 212-0031, JAPAN

**EU Representative:** Pioneer Europe NV  
Haven 1087, Keetberglaan 1  
9120 MELSELE, BELGIUM

#### The EU Directives covered by this Declaration

1999/5/EC Radio & Telecommunication Terminal Equipment Directive

#### The product covered by this declaration

Receiver Assy

model **NXH-0828**

#### The basis on which conformity is being declared

The product identified above complies with the requirements of the above specified Directive by meeting following standards:

EN300328 V1.7.1, EN300440-2 V1.4.1, EN301489-1 V1.8.1,  
EN301489-3 V1.4.1, EN301489-17 V2.1.1, ISO7637-2:2004,  
EN62479 : 2010 and EN60065 : 2002 + A1 : 2006 + A11 : 2008 + A2 : 2010 + A12 : 2011

The technical documentation required to demonstrate that the product meets the requirements of the above specified Directive has been compiled by the signatory below and is available for inspection by the relevant enforcement authorities.

A sample of the product has been tested by the manufacturer.

Technical File No: KCE12-002

The CE mark was first applied in: 2012

Done at Melsele

12/03/2012



Ivan Vlietinck

Manager Public Affairs

PIONEER EUROPE NV  
Haven 1087 - Keetberglaan 1 - 9120 Melsele - Belgium  
Telephone +32 (0)3 570 05 11 - Fax +32 (0)3 570 08 86 - URL <http://www.pioneer.eu> - BTW BE 406.999.132 - RPR Genderraande

5

Interior features

Ovim PIONEER, izjavljuje da je NXH-0828 u skladu s bitnim zahtjevima drugim relevantnim odredbama Direktive 1999/5/EC i Pravilnika o RiTT opremi (NN 25/2012).

 CAUTION

## ■ Caution while driving

Use a cellular phone or connect the Bluetooth® phone only when safe and legal to do so.

## ■ Caution regarding interference with electronic devices

- Your audio unit is fitted with Bluetooth® antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth® antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth® devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

 NOTICE

## ■ When leaving the vehicle

Do not leave your cellular phone in the vehicle. The inside of the vehicle may become hot, causing damage to the phone.

FarmaSOS.com

## Using a Bluetooth® phone

- ① Device name
- ② Bluetooth® connection status
- ③ Character deletion
- ④ Make a call



To display the screen shown above, press the “MENU” button on the Remote Touch, then select “Telephone” or press  on the steering wheel.

## Registering a Bluetooth® phone

You can register up to 5 phones in the system.

- 1 Display the “Telephone” screen. (→P. 641)
- 2 Select “Yes”.

If 5 Bluetooth® devices have already been registered, a registered device needs to be deleted. (→P. 645)



- 3** When this screen is displayed, operate the Bluetooth® device.

Search for the system displayed on the system's screen using your Bluetooth® device, and register the Bluetooth® device.

For details about operating the Bluetooth® device, see the manual that comes with it.

A passcode is not required for SSP (Secure Simple Pairing) compatible Bluetooth® phones. Depending on the type of Bluetooth® phone being connected, a message confirming registration may be displayed on the Bluetooth® phone's screen. Respond and operate the Bluetooth® phone according to the confirmation message.

If you want to cancel it, select "Cancel".

If a completion message is displayed, registration is complete.

If an error message is displayed, follow the guidance on the screen to try again.




## Bluetooth® phone connection

There are two connection methods available — automatic and manual.

### ■ Automatic

When you register your phone, auto connection will be activated. Always set it to this mode and leave the Bluetooth® phone on the place where connection can be established.

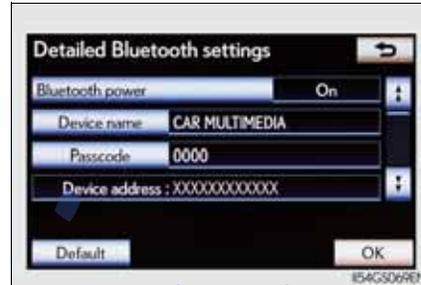

When the engine switch is turned to ACCESSORY or IGNITION ON mode, the system will search for a nearby cellular phone you have registered. The system will connect with the phone that was last connected, if it is nearby.

When “Display telephone status” is set to “On”, the connection status is displayed. (→P. 700)

Depending on the type of mobile phone, mobile phone operations may be necessary.

■ Manual

When the auto connection has failed or “Bluetooth\* power” is turned off, you must connect Bluetooth® manually.

1 Display the “Telephone” screen. (→P. 641)

2 Select “Connect telephone”.



3 Select the screen button corresponding to the desired phone connection.

When the cellular phone's device name has not been able to be obtained, “Device 1” to “Device 5” will be displayed in the order the phones were registered.



4 This screen is displayed.

If a completion message is displayed, connection is complete.



\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

**■ Reconnecting to the Bluetooth® phone**

If the system cannot connect due to poor signal strength with the engine switch in ACCESSORY or IGNITION ON mode, the system will automatically attempt to reconnect.

If the phone is turned off, the system will not attempt to reconnect. In this case, it must be connected manually, or the phone must be re-selected or re-entered.

**■ Connecting the phone while Bluetooth® audio is playing**

- Bluetooth® audio will stop temporarily.
- It may take time to connect.

**■ Connecting the phone while another Bluetooth® device is connected**

When another Bluetooth® device is currently connected, a confirmation message will be displayed. To disconnect the Bluetooth® device, select “Yes”.

**■ Connecting the phone while 5 Bluetooth® devices have already been registered**

When 5 Bluetooth® devices have already been registered, a registered device needs to be deleted. Select “Yes” to delete one or more. Select the device to be deleted, then select “Remove”, and “Yes”.

**■ If the Bluetooth® phone has a Bluetooth® audio function**

When the Bluetooth® phone to be registered has a Bluetooth® audio function, this audio function will be registered automatically at the same time and confirmation message may be displayed. If this screen is displayed, select “Yes” to connect the audio function or select “No” to cancel the connection.

FarmaSOS.com

## Making a call

Once the Bluetooth® phone is registered, you can make a call using the following procedure:

### ■ “Side Display”

A calling screen will be shown on the “Side Display” when the following operations are carried out on the “Main Display”.

- When  on the phone screen is selected.
- When the desired number is selected on the “Speed dial” screen.
- When  on the mail screen is selected.



### ■ Dialing تلفن شبانه روزی: ۰۸۵-۸۸۶۲۰۲۱

**1** Display the “Telephone” screen. (→P. 641)

**2** Input the phone number.

To delete the inputted phone number, select .



**3** Select  or press  on the steering wheel.

Depending on the type of mobile phone, mobile phone operations may be necessary.

■ Dialing from the phonebook

You can dial a number from the phonebook data imported from your cellular phone. The system has one phonebook for each telephone. Up to 1000 entries may be stored in each phonebook. (→P. 667)

- 1 Display the “Telephone” screen. (→P. 641)
- 2 Select “Contacts” on the “Telephone” screen.
- 3 Choose the desired data to call from the list.

, , : Select this screen button to change between Latin, Cyrillic and Greek characters.



- 4 Choose the number and then select  or press  on the steering wheel.



■ When the phonebook is empty

If your cellular phone is neither PBAP nor OPP compatible, the phonebook cannot be transferred.

- 1 Display the “Telephone” screen. (→P. 641)
- 2 Select “Contacts” on the “Telephone” screen.
  - ▶ For PBAP compatible models
- 3 Select “Yes”.



- ▶ For PBAP incompatible but OPP compatible models

- 3 Select “Transfer”.



- 4** Transfer the phonebook data to the system using the Bluetooth® phone.

This screen appears while transferring. To cancel this function, select “Cancel”.

This operation may be unnecessary depending on the cellular phone model.

Depending on the type of mobile phone:

- OBEX authentication may be required when transferring phonebook data. Enter “1234” into the Bluetooth® phone.
- It may be necessary to perform additional steps on the phone when transferring phonebook data.
- The registered image on the phonebook may not appear when phonebook data is transferred.


- 5** When the data transfer from a PBAP incompatible but OPP compatible model is complete, “Done” will appear on the screen. Select “Done”.



**■ Calling using speed dial**

You can make a call using numbers registered from the phone-book. (→P. 667)

- 1** Display the “Telephone” screen. (→P. 641)
- 2** Select “Speed dials” on the “Telephone” screen.
- 3** Select the desired tab and choose the desired number to make a call.

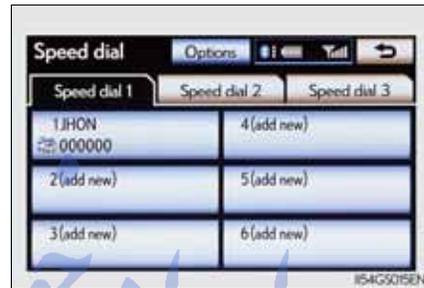

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### ■ Dialing from history

You can call using the call history which has the 4 functions below.

“All”: All the numbers below which were memorized

“Missed”: Calls which you missed

“Incoming”: Calls which you received

“Outgoing”: Numbers which you called

- 1 Display the “Telephone” screen. (→P. 641)
- 2 Select “Call history” on the “Telephone” screen.
- 3 Select the desired tab and choose the desired data from the list.



- 4 Select  or press  on the steering wheel.



■ Calling using voice recognition

You can call by giving a speech command. (→P. 433)

Press .



The “Call <name>” and “Dial <number>” operating procedures are explained here. Other operating procedures are also similar.

● Calling by name

You can call by giving a name registered in the phonebook. (→P. 667)

1 Press .

2 Following the system guidance, wait for the beep and then after saying “Call” say the desired name, or the name and type of phone.



3 Following the system guidance, wait for the beep and then say “Dial”. (You can also call by pressing  on the steering wheel.)

- Calling by dial number

You can call by giving a phone number.

- 1 Press .
- 2 Following the system guidance, wait for the beep and then after saying “Dial” say the phone number.



- 3 Following the system guidance, wait for the beep and then say “Dial”. (You can also call by pressing  on the steering wheel.)

- Calling using SMS/MMS message

You can call using the SMS (Short Message Service)/MMS (Multimedia Messaging Service) message sender’s phone number. *تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵*

- 1 Display the “Telephone” screen. (→P. 641)
- 2 Select “Messages”.

When “Message transfer” is set to “Off”, a confirmation screen will be displayed. Select “Yes”.



- 3 Select the “SMS/MMS” tab and then select the desired received message from the list.

The tab display may vary depending on the type of cellular phone.

- 4 Select  or press  on the steering wheel.

- Calling using POI (vehicles with the navigation system)

---

You can make a call using a Point Of Interest.

امداد خودرو فارما

تلفن شبانه روزی: ۰۸۵-۸۸۸۶۲-۰۲۱

**FarmaSOS.com**

- Call history list
  - If you make a call to or receive a call from a number registered in the phone book, the name is displayed in the call history.
  - If you make multiple calls to the same number, only the last call made is displayed in the call history.
  - Number-withheld calls are also memorized in the system.
- When calling by registered name in the phonebook
  - When “Call <name>” on the “Shortcuts” screen is dimmed, the phonebook’s speech command recognition cannot be used. Check the Bluetooth® connection and if the contacts have been transferred to the system.
  - Short or abbreviated names in the phonebook may not be recognized. Change names in the phonebook to full names.
  - Sometimes a voice recognition result confirmation screen will be displayed. After confirming the result, say “Yes” or “No”.
  - When the system recognizes multiple names from the phonebook, a name candidate list will be displayed on the screen. If the desired name is not displayed on the top of the screen, say the number of the name from the candidate list (1st and 2nd) to select a name from the candidate list.
  - When a contact has multiple phone numbers registered in the phonebook, a candidate list will be displayed. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list (1st and 2nd) to select a phone number from the candidate list.

FarmaSOS.com

- When calling by phone number
  - Say the phone number one digit at a time. For example, if the phone number is 2345678, say “two three four five six seven eight”.
  - As the system cannot recognize additional numbers, say the complete number without stopping.
  - When the system recognizes multiple phone numbers, a phone number candidate list will be displayed on the screen. If the desired phone number is not displayed on the top of the screen, say the number of the desired phone number from the candidate list (1st and 2nd) to select a phone number from the candidate list.
- Calling by using the latest call history item
  - 1 Press  on the steering wheel to display the “Telephone” screen.
  - 2 Press  on the steering wheel to display the “Call history” screen.
  - 3 Press  on the steering wheel to select the most recent number in the history.
  - 4 Select  or press  on the steering wheel.
- To cancel voice recognition
  - Press and hold .
  - Press  on the steering wheel.
  - Select “Cancel”.
- When using voice recognition

Use correct commands and speak clearly, otherwise the system may not correctly recognize the command. Wind or other noises may also cause the system not to recognize the desired command.

## Receiving a call

When a call is received, the following screen is displayed together with a sound.

▶ “Main Display”

▶ “Side Display”



Select  or press  on the steering wheel.

■ To refuse a call

Select  or press  on the steering wheel.

■ To adjust the incoming call volume

Select “-” or “+”, turn the “PWR•VOL” knob, or use the volume switch on the steering wheel.

■ International calls

Received international calls may not be displayed correctly depending on the cellular phone in use.

■ Ring tone

The ring tone that has been set in the “Sound settings” screen sounds when there is an incoming call. Depending on the type of Bluetooth® phone, both the system and Bluetooth® phone may sound simultaneously when there is an incoming call.

(→P. 666)

### Speaking on the phone

The following screen is displayed when speaking on the phone.

► “Main Display”

► “Side Display”



- To adjust the receiver volume  
Select “-” or “+”, turn the “PWR•VOL” knob, or use the volume switch on the steering wheel.
- To adjust your voice volume that the other party hears from their speaker  
Select “Transmit volume” and select “-” or “+” to adjust the transmit volume. Select “OK”.
- To prevent the other party from hearing your voice  
Select “Mute”.

FarmaSOS.com

- Inputting tones (“Main Display”)

When using phone services such as an answering service or a bank, you can store phone numbers and code numbers in the phonebook.

**1** Select “0-9” on the “Call” screen.

**2** Input the number.

If repeated tone symbols\* are stored in the phonebook, “Send” and “Clear” are displayed on the right side of the screen.

\*: Repeated tone symbols are symbols or numbers displayed as p or w, that come after the phone number.  
(e.g. 056133w0123p#1\*)



**3** Confirm the number displayed on the screen, and select “Send”.

If you select “Clear”, this function will end.

- To transfer a call

Select “Handset mode” to change from hands-free call to cellular phone call. Select “Handsfree mode” to change from cellular phone call to hands-free call.

- To hang up

Select  or press  on the steering wheel.

### ■ Call waiting

When a connected call is interrupted by the third party, the incoming call message will be displayed.

- To talk with the other party: Select  or press  on the steering wheel.
- To refuse the call: Select  or press  on the steering wheel.

Every time you select  or press  on the steering wheel after a call is interrupted, you will be switched to the other party.

If your cellular phone is not accepted in HFP Ver. 1.5, this function cannot be used.

The ring tone that has been set in the “Sound settings” screen sounds when there is an incoming call. Depending on the type of Bluetooth® phone, both the system and Bluetooth® phone may sound simultaneously when there is an incoming call. (→P. 666)

### ■ Transferring calls

- It is not possible to transfer from hands-free to a cellular phone while driving.
- If you transfer from a cellular phone to hands-free, the hands-free screen will be displayed, and you can operate the system using the screen.
- Transfer method and operation may vary according to the cellular phone used.
- For operation of the cellular phone in use, see the phone’s manual.

### ■ Repeated tone symbols

When the “p” pause tone is used, after waiting 2 seconds the tone data up until the next pause tone will be automatically sent. When the “w” pause tone is used, the tone data up until the next pause tone will be automatically sent after user operation.

### ■ While driving

Key input is unavailable.

Calls can be made by giving a speech command.

### ■ Interrupt call operation

Interrupt call operation may differ from depending on your phone company and the cellular phone.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### Using a Bluetooth® phone message

Received messages can be forwarded from the connected Bluetooth® phone, enabling checking and replying (Quick reply).

#### ■ Checking a message

- 1 Display the “Telephone” screen. (→P. 641)
- 2 Select “Messages” on the “Telephone” screen.

When “Message transfer” is set to “Off”, a confirmation screen will be displayed. Select “Yes”.

- 3 Select the desired message to check.

The text of the message is not displayed while driving. Selecting “Previous” or “Next” displays the previous or next message.



- 4 Select “Play” to start reading out of the message. Select “Stop” to stop the function.

#### ■ To adjust the message reading out volume

Select “-” or “+”, turn the “PWR•VOL” knob, or use the volume switch on the steering wheel.

#### ■ Replying a message (Quick reply)

- 1 Select “Reply” on the desired message screen.



- 2** Select the desired message.  
Select “Send”.

While the message is being sent, a sending message screen is displayed.



- To check the message
  - Messages are displayed in the appropriate connected Bluetooth® phone's registered mail address folder. Select the tab of the desired folder to be displayed.
  - Only received messages on the connected Bluetooth® phone can be displayed.
  - When the received message is an e-mail and “Update read status on telephone” is set to “On”, “Mark as unread” or “Mark as read” can be selected. Select “Mark as unread” to mark mails that have been read on the Bluetooth® phone as unread. Conversely, select “Mark as read” to mark mails that have not been read on the Bluetooth® phone as read. (→P. 683)
- Calling using SMS/MMS message
 

تلفن شبانه روزی: +۸۵

You can call using the SMS (Short Message Service)/MMS (Multimedia Messaging Service) message sender's phone number. (→P. 653)
- If the message delivery failed
 

If message delivery has failed, a notification will be displayed on the screen. Select “Retry” to attempt to send the message again or select “Cancel” to cancel.
- Editing a quick reply message
 


You can edit the “Quick Reply Messages”. (→P. 685)
- New message notification
 

If “New message pop-up” and “New message voice notification” are set to “On”, a notification appears on the screen and a voice notification will be heard when a new message arrives, select “Read” to check the message, also to check the message later, select “Ignore”. When “Automatic message read-out” is set to “On”, the message will be automatically read out. (→P. 683)

## Setting the hands-free system (for cellular phone)

You can set the hands-free system to your desired settings.

- ① Phone sound settings
- ② Phonebook settings
- ③ Message settings
- ④ Phone display settings

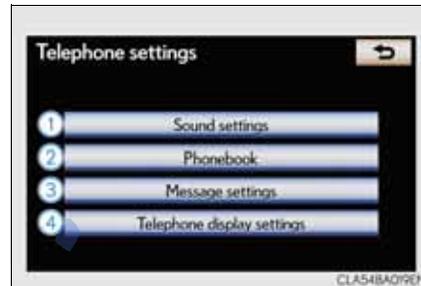

To display the screen shown above, press the “MENU” button on the Remote Touch, then select “Setup”, and select “Telephone” on the “Setup” screen.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Phone sound settings

### ■ Setting the volume


- 1 Display the “Telephone settings” screen. (→P. 664)
- 2 Select “Sound settings” on the “Telephone settings” screen.
- 3 Choose the volume setting switch.

“Call volume”: Changes the speaker volume.

“Transmit volume”: Changes the transmit volume.

“Ring tone volume”: Changes the ring tone volume.

- 4 Select “-” or “+” to lower or raise the volume, and then select “OK”.

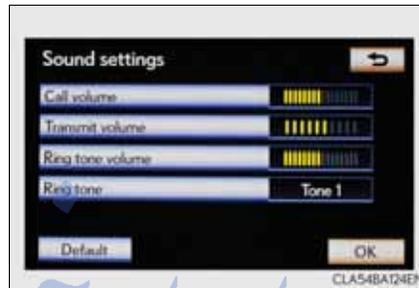

- 5 When you complete all settings, select “OK”.

**■ Setting the ring tone**

- 1** Display the “Telephone settings” screen. (→P. 664)
- 2** Select “Sound settings” on the “Telephone settings” screen.
- 3** Select “Ring tone” on the “Sound settings” screen.
- 4** Select the screen button corresponding to the desired ring tone.

Ring tones can be heard by selecting the screen buttons, and then “OK”.



- 5** When you complete setting, select “OK”.

**■ Adaptive volume control**

When traveling at 80 km/h (50 mph) or more, the system automatically raises the volume one level.

**■ Transmit volume setting**

The sound quality of the voice heard from the other party's speaker may be negatively impacted.


**■ To return to the default phone sound settings**

Select “Default”, and then “Yes”.

## Phonebook settings

The phonebook manages a maximum of 5 phonebooks in total. The data for 1000 contacts (up to 3 numbers per contact) can be registered in each phonebook.

- ① Setting the phonebook
- ② Setting the speed dials
- ③ Deleting the call history

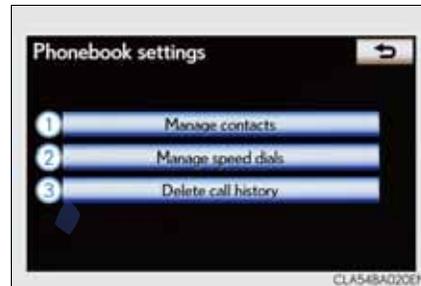

To display the screen above, follow the steps below.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”, and select “Telephone” on the “Setup” screen.
- 2 Select “Phonebook” on the “Telephone settings” screen.
  - Setting the phonebook
    - Transferring a phone number


You can transfer the phone numbers in your Bluetooth® phone to the system. Operation methods differ between PBAP compatible and PBAP incompatible but OPP compatible Bluetooth® phones. If your cellular phone is neither PBAP nor OPP compatible, the phonebook cannot be transferred.

► For PBAP compatible models

- 1 Display the “Phonebook settings” screen. (→P. 667)
- 2 Select “Manage contacts” on the “Phonebook settings” screen.
- 3 Select “Transfer contacts”.



- 4 Select “Update phonebook”.  
Depending on the type of mobile phone, mobile phone operations may be necessary.

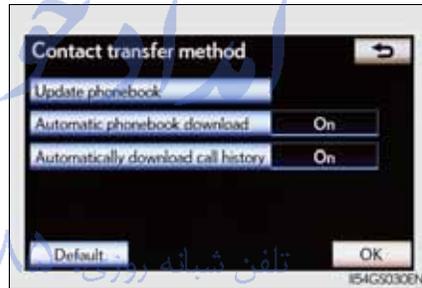

FarmaSOS.com

- 5** Transfer the phonebook data to the system using the Bluetooth® phone.

This operation may be unnecessary depending on the cellular phone model.

Depending on the type of mobile phone:

- OBEX authentication may be required when transferring phonebook data. Enter “1234” into the Bluetooth® phone.
- It may be necessary to perform additional steps on the phone when transferring phonebook data.
- The registered image on the phonebook may not appear when phonebook data is transferred.

If you wish to cancel the transfer before it finishes, select “Cancel”.




FarmaSOS.com

► PBAP compatible models automatic data transfer setting

- 1 Display the “Phonebook settings” screen. (→P. 667)
- 2 Select “Manage contacts” on the “Phonebook settings” screen.
- 3 Select “Transfer contacts” on the “Contacts” screen.
- 4 Select the item to be set.


“Automatic phonebook download”: Transfer the phonebook from a connected cellular phone.

“Automatically download call history”: Transfer the call history from a connected cellular phone.

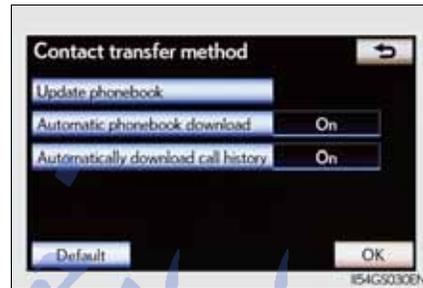

- 5 Select “On”, and then “OK”.

Depending on the type of Bluetooth® phone, the registered image on the phonebook may not appear when phonebook data is transferred.

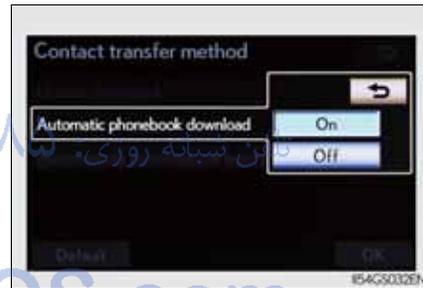


► For PBAP incompatible but OPP compatible models

- 1 Display the “Phonebook settings” screen. (→P. 667)
- 2 Select “Manage contacts” on the “Phonebook settings” screen.
- 3 Select “Transfer contacts”.



- 4 Select “Replace contacts” or “Add contacts”.  
In the case that the phonebook contains phonebook data, this screen is displayed.

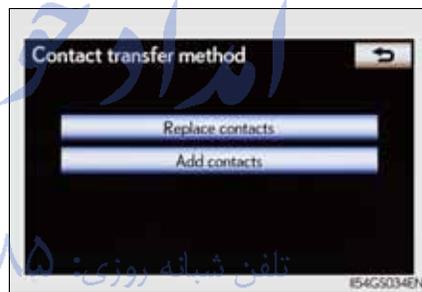

- 5** Transfer the phonebook data to the system using the Bluetooth® phone.

Depending on the type of mobile phone:

- OBEX authentication may be required when transferring phonebook data. Enter “1234” into the Bluetooth® phone.
- It may be necessary to perform additional steps on the phone when transferring phonebook data.
- The registered image on the phonebook may not appear when phonebook data is transferred.

If you wish to cancel the transfer before it finishes, select “Cancel”.

If “Add contacts” is selected and there is an interruption during the transfer of data, the phonebook data transferred until then will be stored in the system. Please note, this is not the case when “Cancel” is selected.

- 6** When the transfer is complete, “Done” will appear on the screen. Select “Done”.



- Registering the phonebook data

You can register the phonebook data. Up to 3 numbers per person can be registered. New phonebook data cannot be added for PBAP compatible Bluetooth® phones.

- 1 Display the “Phonebook settings” screen. (→P. 667)
- 2 Select “Manage contacts” on the “Phonebook settings” screen.
- 3 Select “New contact” on the “Contacts” screen.
- 4 Input the name, and select “OK”.



- 5 Input the phone number, and select “OK”.

If you want to use the tone signal after the phone number, input the tone signal too.



- 6 Select the desired phone type.



- 7 When two or less numbers in total are registered to this contact, a confirmation screen is displayed. When you want to add a number to this contact, select “Yes”.

- Editing the phonebook data

You can register the phone number separately. Phonebooks cannot be edited for PBAP compatible Bluetooth® phones.

- 1 Display the “Phonebook settings” screen. (→P. 667)
- 2 Select “Manage contacts” on the “Phonebook settings” screen.
- 3 Select “Edit contacts” on the “Contacts” screen.
- 4 Choose the data to edit.

, , : Select this screen button to change between Latin, Cyrillic and Greek characters.



- 5 Select the desired name or number.



- 6 Edit the name or number. After editing, select “OK”.

- Deleting the phonebook data

- 1 Display the “Phonebook settings” screen. (→P. 667)
- 2 Select “Manage contacts” on the “Phonebook settings” screen.
- 3 Select “Delete contacts” on the “Contacts” screen.
- 4 Choose the data to delete.

You can select multiple data and delete them at the same time.

To delete all data, select “Select all”.



- 5 Select “OK”. A confirmation message will be displayed. If everything is correct, select “Yes”.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

---

**■ Phonebook data**

Phonebook data is managed for every registered phone. When another phone is connecting, you cannot read the registered data.

When selling or disposing of the vehicle, delete all your data on the system. For PBAP compatible models, delete the phonebook data after setting “Automatic phonebook download” to “Off”. (→P. 670)

**■ Setting the phonebook in a different way (To display the “Contacts” screen)**

- 1 Display the “Telephone” screen. (→P. 641)
- 2 Select “Contacts” on the “Telephone” screen.
- 3 Select “Options” on the “Contacts” screen.
- 4 Select “Manage contacts” on the “Contacts” screen.

**■ When another Bluetooth® device is connected during transferring a phonebook****● For PBAP compatible models**

If another Bluetooth® device is connected when transferring phonebook data, depending on the phone, the connected Bluetooth® device may need to be disconnected.

**● For PBAP incompatible but OPP compatible models**

When another Bluetooth® device is connected, a confirmation message will be displayed. If you want to disconnect it, select “Yes”.

**■ Transferring the phone number data in a different way (PBAP incompatible but OPP compatible models)**

- 1 Display the “Telephone” screen. (→P. 641)
- 2 Select “Contacts” on the “Telephone” screen.
- 3 Select “Transfer” on the “Contacts” screen.
- 4 The “Contact transfer method” screen is displayed. The following operations are performed in the same manner as when they are performed from the “Setup” screen. (→P. 667)

- Editing the phonebook data in a different way
  - From “Contact data” screen
    - 1 Display the “Telephone” screen. (→P. 641)
    - 2 Select “Contacts” on the “Telephone” screen.
    - 3 Choose the desired data from the list.
    - 4 Select “Options” on the “Contact data” screen.
    - 5 Select “Edit contact” on the “Contact data” screen.
    - 6 Follow the steps “Editing the phonebook data” from step 5. (→P. 674)
  - From “Call history” screen
    - 1 Display the “Telephone” screen. (→P. 641)
    - 2 Select “Call history” on the “Telephone” screen.
    - 3 Choose the desired data from the list.
    - 4 Select “Add contact” or “Update contact” on the “Call history” screen.
    - 5 If you select “Add contact”, follow the steps “Editing the phonebook data” from step 5. (→P. 674)  
If you select “Update contact”, follow the steps “Editing the phonebook data” from step 4. (→P. 674)
- Deleting the phonebook data in a different way (PBAP incompatible but OPP compatible models)
  - 1 Display the “Telephone” screen. (→P. 641)
  - 2 Select “Contacts” on the “Telephone” screen.
  - 3 Choose the desired data from the list.
  - 4 Select “Options” on the “Contact data” screen.
  - 5 Select “Delete contact” on the “Contact data” screen.
  - 6 A confirmation message will be displayed. If everything is correct, select “Yes”.
- When a Bluetooth® phone is deleted
 

The phonebook data will be deleted at the same time.

## Setting the speed dials

### ■ Registering the speed dial

You can register the desired phone number from the phonebook.  
Up to 18 numbers per phone can be registered.


- 1 Display the “Phonebook settings” screen. (→P. 667)
- 2 Select “Manage speed dials” on the “Phonebook settings” screen.
- 3 Select “New speed dial”.




- 4 Choose the data to register.  
 ,  ,  : Select this screen button to change between Latin, Cyrillic and Greek characters.



- 5 Select the desired phone number.

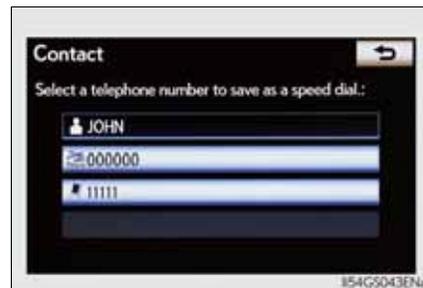

- 6 Select the switch you want to register the number in.

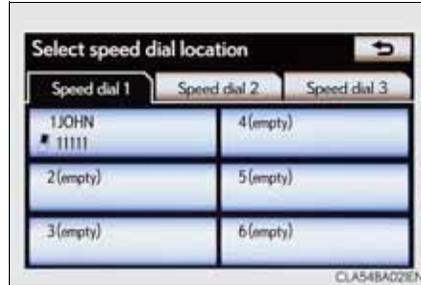


- 7 If you select a switch you registered before, a confirmation message will be displayed. If you want to replace it, select “Yes”.

■ Deleting the speed dial

- 1 Display the “Phonebook settings” screen. (→P. 667)
- 2 Select “Manage speed dials” on the “Phonebook settings” screen.
- 3 Select “Delete speed dials” on the “Speed dials” screen.
- 4 Choose the data to delete.

You can select multiple data and delete them at the same time.

To delete all data, select “Select all”.

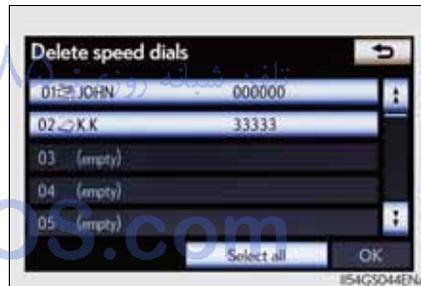

- 5 Select “OK”. A confirmation message will be displayed. If everything is correct, select “Yes”.

- Setting the speed dials in a different way
  - To display the “Speed dials” screen
    - 1 Display the “Telephone” screen. (→P. 641)
    - 2 Select “Speed dials” on the “Telephone” screen.
    - 3 Select “Options” on the “Speed dial” screen.
  - To display the “Contacts” screen
    - 1 Display the “Telephone” screen. (→P. 641)
    - 2 Select “Contacts” on the “Telephone” screen.
    - 3 Select “Options” on the “Contacts” screen.
    - 4 Select “Manage speed dials” on the “Contacts” screen.
- Registering the speed dial in a different way
  - From “Speed dial” screen
    - 1 Display the “Telephone” screen. (→P. 641)
    - 2 Select “Speed dials” on the “Telephone” screen.
    - 3 Select “(add new)” on the “Speed dial” screen.
    - 4 Select “Yes” to set new speed dial.
    - 5 Choose the desired data from the list.
    - 6 Select the desired phone number.
  - From “Contact data” screen
    - 1 Display the “Telephone” screen. (→P. 641)
    - 2 Select “Contacts” on the “Telephone” screen.
    - 3 Choose the desired data from the list.
    - 4 Select “Options” on the “Contact data” screen.
    - 5 Select “Set speed dial” on the “Contact data” screen.
    - 6 Select the desired phone number.
    - 7 Follow the steps “Registering the speed dial” from step 6. (→P. 678)

### Deleting call history

The call history can be deleted. For PBAP compatible models, delete the call history after setting “Automatically download call history” to “Off”. (→P. 670)


- 1 Display the “Phonebook settings” screen. (→P. 667)
- 2 Select “Delete call history” on the “Phonebook settings” screen.
- 3 Choose the desired history to delete.



- 4 Choose the data to delete.

You can select multiple data and delete them at the same time.

To delete all data, select “Select all”.

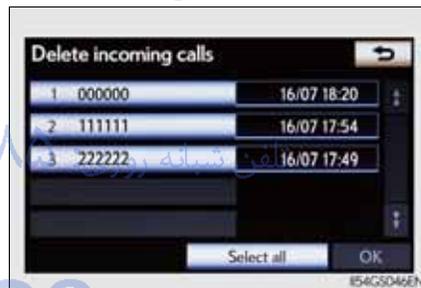

- 5 Select “OK”. A confirmation message will be displayed. If everything is correct, select “Yes”.

- Deleting call history in a different way
  - 1 Display the “Telephone” screen. (→P. 641)
  - 2 Select “Call history” on the “Telephone” screen.
  - 3 Select “Delete” on the “Call history” screen.
  - 4 Follow the steps “Deleting call history” from step 4. (→P. 681)
- Deleting after call history has been displayed
  - 1 Display the “Telephone” screen. (→P. 641)
  - 2 Select “Call history” on the “Telephone” screen.
  - 3 Select the desired history to delete.
  - 4 Select “Delete” on the “Call history” screen. A confirmation message will be displayed. If everything is correct, select “Yes”.

امداد خودرو فارما

تلفن شبانه روزی: ۰۸۵-۸۸۸۶۲-۲۱

FarmaSOS.com

## Message settings

You can change the message settings.

► Page 1

► Page 2



- ① Message forwarding from cellular phone on/off
- ② New message notification display on/off
- ③ New message voice notification on/off
- ④ Changing new message notification volume
- ⑤ Changing new message voice notification tone
- ⑥ Automatic message read out function on/off
- ⑦ Changing a message read out volume
- ⑧ Cellular phone's message read and unread status update function on/off
- ⑨ Editing the quick reply messages

To display the screen above, follow the steps below.

- 1** Press the “MENU” button on the Remote Touch, then select “Setup”, and select “Telephone” on the “Setup” screen.
- 2** Select “Message settings” on the “Telephone settings” screen.

■ Changing the new message notification volume

- 1 Display the “Message settings” screen. (→P. 683)
- 2 Select “New message notification volume” on the “Message settings” screen.
- 3 Select “-” or “+” to lower or raise the volume, and then “OK”.



- 4 When you complete setting, select “OK”.

■ Changing the new message notification tone

- 1 Display the “Message settings” screen. (→P. 683)
- 2 Select “New message voice notification tone” on the “Message Settings” screen.
- 3 Select the desired new message notification tone.


New message notification tones can be heard by selecting the screen buttons, and then “OK”.



- 4 When you complete setting, select “OK”.

- Changing the message read out volume

- 1 Display the “Message settings” screen. (→P. 683)
- 2 Select “Message readout volume” on the “Message settings” screen.
- 3 Select “-” or “+” to lower or raise the volume, and then “OK”.

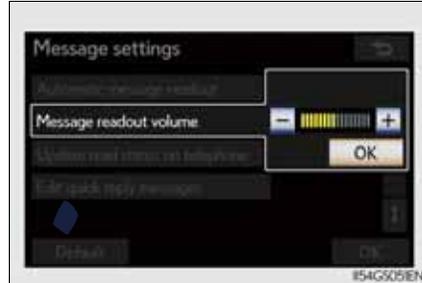

- 4 When you complete setting, select “OK”.

- Editing the quick reply messages

Quick reply messages can be edited. 15 messages have already been stored.

- 1 Display the “Message settings” screen. (→P. 683)
- 2 Select “Edit quick reply messages” on the “Message settings” screen.
- 3 Select the screen button corresponding to the desired message.



- 4 Edit the message. After editing, select “OK” and then “OK”.

- To display the “Message settings” screen in a different way
  - 1 Display the “Telephone” screen. (→P. 641)
  - 2 Select “Messages” on the “Telephone” screen.
  - 3 Select “Options” on the “Messages” screen.
- Editing the quick reply messages in a different way
  - 1 Display the desired message on “Messages” screen. (→P. 662)
  - 2 Select “Reply” on the desired message screen.
  - 3 Select “Edit” on the “Quick reply message”.
  - 4 Select the screen button corresponding to the desired message.
  - 5 When you complete editing, select “OK” and then  on the “Edit quick replay messages” screen.
- Adaptive volume control

When traveling at 80 km/h (50 mph) or more, the system automatically raises the volume.
- To return to the default message settings

Select “Default”, and then “Yes”.


تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### Telephone display settings

Depending on the phone, this function may not be available even if the phone is PBAP compatible.

- ① Changing the incoming call display mode
- ② Changing the display phonebook transfer status on/off
- ③ Changing the display call history transfer status on/off\*
- ④ Changing the contact image during incoming call on/off\*
- ⑤ Changing the rotate contact image\*

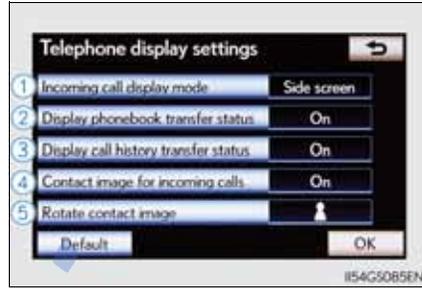

\*: For PBAP compatible models

To display the screen above, follow the steps below.

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”, and select “Telephone” on the “Setup” screen.
- 2 Select “Telephone display settings” on the “Telephone settings” screen.

FarmaSOS.com

- Changing the incoming call display mode

You can select the method of the incoming call display.

- 1 Display the “Telephone display settings” screen. (→P. 687)
- 2 Select “Incoming call display mode” on the “Telephone display settings” screen.
- 3 Select “Main screen” or “Side screen”, and select “OK”.



“Main screen”: The hands-free screen is displayed when a call is received, and you can operate the system from that screen.

“Side screen”: A message is displayed at the side screen, and you can only operate the system with the steering switches.

- Changing the rotating contact images

For PBAP compatible models, when “Contact image for incoming calls” is set to “On”, images stored together with phone numbers in the cellular phone’s phonebook will be transferred and displayed during the incoming call. The orientation of the image can be set.

- 1 Display the “Telephone display settings” screen. (→P. 687)
- 2 Select “Rotate contact image” on the “Telephone display settings” screen.
- 3 Choose the desired orientation of the image to be displayed, and then “OK”.

---


- To return to the default detailed phone settings

Select “Default”, and then “Yes”.

## Setting the Bluetooth®

You can confirm and change the Bluetooth® settings.

- ① Registered devices
- ② Connect telephone
- ③ Connect portable player
- ④ Detailed Bluetooth® settings
- ⑤ Communication settings

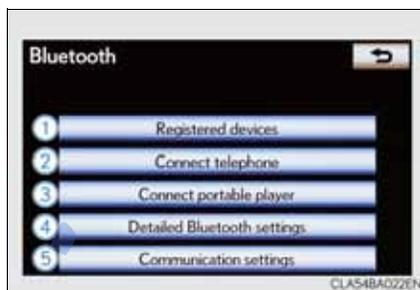

To display the screen shown above, press the “MENU” button on the Remote Touch, then select “Setup”, select “Bluetooth\*” on the “Setup” screen.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## Registered devices

### ■ Registering a Bluetooth® devices

Bluetooth® devices compatible with phones (HFP) and portable players (AVP) can be registered simultaneously. Phones (HFP) and portable players (AVP) (maximum of 5) can be registered.

- 1 Display the “Bluetooth\*” screen. (→P. 689)
- 2 Select “Registered devices” on the “Bluetooth\*” screen.
- 3 Select “Add new” to register a Bluetooth® device to the system.

When 5 Bluetooth® devices have already been registered, a registered device needs to be deleted.

Select “Yes” to delete one or more.

Select the device to be deleted, then select “Remove”, and then “Yes”.



\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

FarmaSOS.com

- 4 When this screen is displayed, operate the Bluetooth® device.

Search for the system displayed on the system's screen using your Bluetooth® device, and register the Bluetooth® device.

For details about operating the Bluetooth® device, see the manual that comes with it.

A passcode is not required for SSP (Secure Simple Pairing) compatible Bluetooth® phones. Depending on the type of Bluetooth® phone being connected, a message confirming registration may be displayed on the Bluetooth® phone's screen. Respond and operate the Bluetooth® phone according to the confirmation message.

If you want to cancel it, select "Cancel".

If a completion message is displayed, registration is complete.

If an error message is displayed, follow the guidance on the screen to try again.




■ Removing a Bluetooth® device

- 1 Display the “Bluetooth\*” screen. (→P. 689)
- 2 Select “Registered devices” on the “Bluetooth\*” screen.
- 3 Select “Remove” on the “Registered devices” screen.
- 4 Choose the desired device.

You can select multiple device and delete them at the same time.

To remove all devices, select “Select all”.

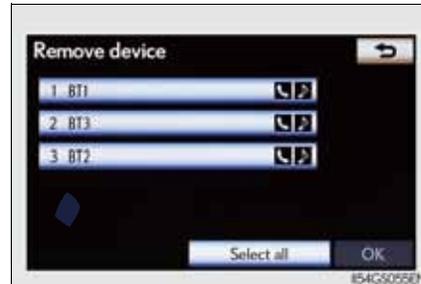

- 5 Select “OK”. A confirmation message will be displayed. If everything is correct, select “Yes”.

■ Editing a Bluetooth® device

You can see the information of the Bluetooth® device on the system or edit.

● Changing a device name

- 1 Display the “Bluetooth\*” screen. (→P. 689)
- 2 Select “Registered devices” on the “Bluetooth\*” screen.
- 3 Select “Details”.



\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 4 Select the device to be edited.



- 5 Select "Device name".



- 6 Input the device name, and select "OK".



- 7 Confirm the device name and select "OK".

- Setting portable player connection method

- 1 Display the “Bluetooth\*” screen. (→P. 689)
- 2 Select “Registered devices” on the “Bluetooth\*” screen.
- 3 Select “Details” on the “Registered devices” screen.
- 4 Select the device to be edited.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- 5 Select “Connect portable player from”.



- 6 Select the desired connection method, and select “OK”.

“Vehicle”:- Select to connect the audio system to the portable player.

“Portable player”:- Select to connect the portable player to the audio system.



Depending on the portable player, the “Vehicle” or “Portable player” connection method may be best. As such, refer to the manual that comes with the portable player.

---

- Editing the “Device name”

If you change a device name, the name registered in your cellular phone is not changed.

- About “Device address”

The address peculiar to the system. It cannot be changed. If you have registered two Bluetooth® phones with the same device name and you cannot distinguish one from the other, refer to this address.

- “My telephone no.”

The phone number of the Bluetooth® phone is displayed on the screen. Depending on the type of phone, the phone number may not be displayed.

- “Profiles”

The compatibility profile of the Bluetooth® device is displayed on the screen.

- “Connect portable player from”

There are 2 portable player connection settings available; “Vehicle” and “Portable player”.

- When you delete a Bluetooth® phone

The phonebook data will be deleted at the same time.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com


### Selecting a Bluetooth® phone

If multiple Bluetooth® phones are registered, follow the procedure below to select the Bluetooth® phone to be used. You can only use one phone at a time.

- 1 Display the “Bluetooth\*” screen. (→P. 689)
- 2 Select “Connect telephone” on the “Bluetooth\*” screen.
- 3 Choose the phone to be connected.

The Bluetooth® mark is displayed when you connect the phone.

If a completion message is displayed, connection is complete.

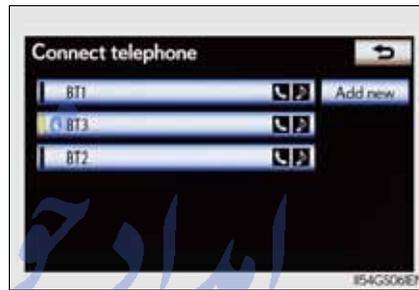

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- When another Bluetooth® device is connected during registering or selecting a phone
  - When another Bluetooth® device is connected, a confirmation message will be displayed. If you want to disconnect it, select “Yes”.
  - The currently connected Bluetooth® phone’s screen button will have a Bluetooth® mark displayed on it. If the currently connected Bluetooth® phone’s screen button is selected, the Bluetooth® phone can be disconnected. Select “Yes” to disconnect.
- Connecting the phone while Bluetooth® audio is playing  
Bluetooth® audio will stop temporarily.

### Selecting a portable player

If multiple portable players are registered, follow the procedure below to select the portable player to be used. You can only use one portable player at a time.

- 1 Display the “Bluetooth\*” screen. (→P. 689)
- 2 Select “Connect portable player” on the “Bluetooth\*” screen.
- 3 Choose the portable player to be used.

The Bluetooth® mark is displayed when you connect the portable player.

If a completion message is displayed, connection is complete.



\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.


- When another Bluetooth® device is connected during registering or selecting a portable player
  - When another Bluetooth® device is connected, a confirmation message will be displayed. If you want to disconnect it, select “Yes”.
  - The currently connected portable player’s screen button will have a Bluetooth® mark displayed on it. If the currently connected portable player’s screen button is selected, the portable player can be disconnected. Select “Yes” to disconnect.

### Detailed Bluetooth® settings

You can confirm and change the Bluetooth® settings.

► Page 1

► Page 2

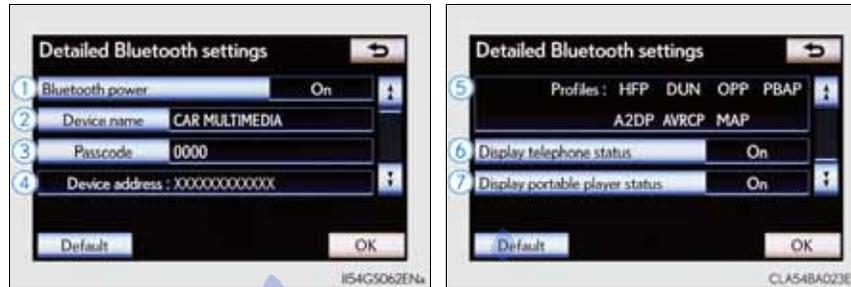

- ① Changing the device connection status
- ② Changing the system name
- ③ Changing the passcode required to connect your Bluetooth® device
- ④ The address peculiar to the system  
You cannot change this address. If the same device name is displayed on the screen of your device, refer to it.
- ⑤ The compatibility profile of the system
- ⑥ Setting Bluetooth® device connection status display
- ⑦ Setting Bluetooth® device connection status display

To display the screen above, follow the steps below.


- 1 Display the “Bluetooth\*” screen. (→P. 689)
- 2 Select “Detailed Bluetooth\* settings” on the “Bluetooth\*” screen.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

### ■ Changing Bluetooth® power

The Bluetooth® device is automatically connected when you turn the engine switch to ACCESSORY or IGNITION ON mode. You can change between “On” or “Off”.

- 1 Display the “Detailed Bluetooth\* settings” screen. (→P. 698)
- 2 Select “Bluetooth\* power” on the “Detailed Bluetooth\* settings” screen.
- 3 Select “On” or “Off”, and then “OK”.

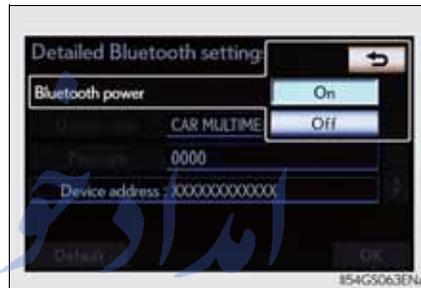

### ■ Editing the system name

- 1 Display the “Detailed Bluetooth\* settings” screen. (→P. 698)
- 2 Select “Device name” on the “Detailed Bluetooth\* settings” screen.
- 3 Input the system name, and select “OK”.
- 4 Select “OK” on the “Detailed Bluetooth\* settings” screen.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- Editing the passcode

- 1 Display the “Detailed Bluetooth\* settings” screen. (→P. 698)
- 2 Select “Passcode” on the “Detailed Bluetooth\* settings” screen.
- 3 Input a passcode, and select “OK”.



- 4 Select “OK” on the “Detailed Bluetooth\* settings” screen.

- Bluetooth® device connection status display settings

When “Bluetooth\* power” is “On” and the engine switch is in ACCESSORY or IGNITION ON mode, the Bluetooth® phone and portable player’s connection status can be displayed. (→P. 699)

- 1 Display the “Detailed Bluetooth\* settings” screen. (→P. 698)
- 2 Select “Display telephone status” or “Display portable player status” on the “Detailed Bluetooth\* settings” screen.
- 3 Select “On”, and then “OK”.



\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

- While driving

You cannot change the state of “Bluetooth\* power” from “On” to “Off” while driving, but it can be changed from “Off” to “On”.

- To return to the default Bluetooth® settings

Select “Default”, and then “Yes”.

If the state of “Bluetooth\* power” is changed from “Off” to “On”, Bluetooth® connection will begin.


\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Interior lights list

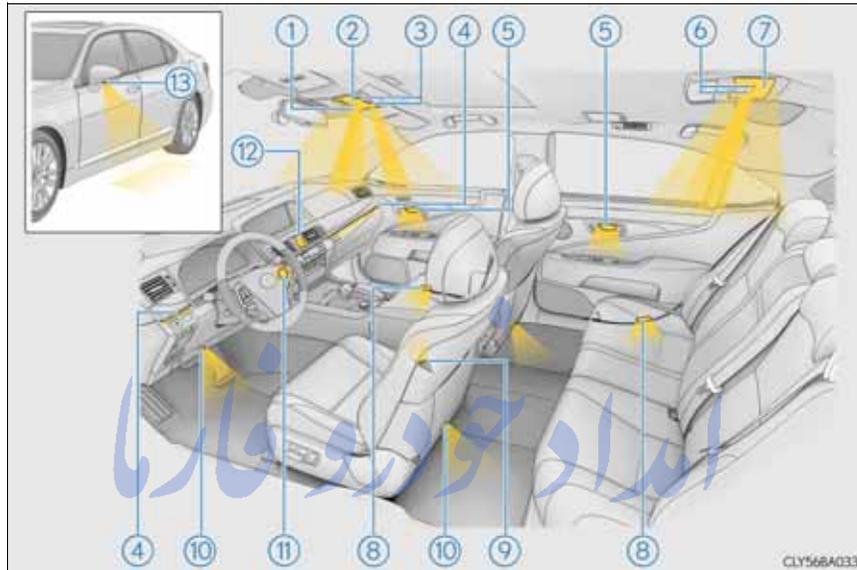


- |                                    |                                 |
|------------------------------------|---------------------------------|
| ① Front interior lights(→P. 701)   | ⑦ Rear interior light (→P. 701) |
| ② Shift lever lights               | ⑧ Door courtesy lights          |
| ③ Front personal lights(→P. 702)   | ⑨ Seat belt buckle lights       |
| ④ Instrument panel ornament lights | ⑩ Footwell lights               |
| ⑤ Inside door handle lights        | ⑪ Engine switch light           |
| ⑥ Rear personal lights(→P. 702)    | ⑫ Clock light                   |
|                                    | ⑬ Outer foot lights             |

## Interior lights

### ► Front


- ① “OFF”
- ② Door position on/off
- ③ “ON”

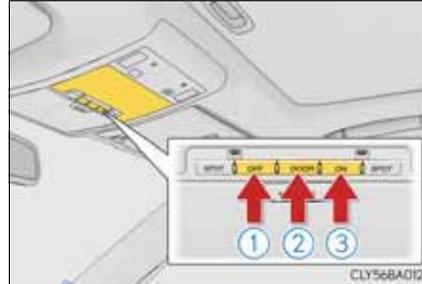

### ► Rear

#### On/off


If door position on is selected for the front interior light, the rear interior light is also turned on/off by the opening and closing of a door.

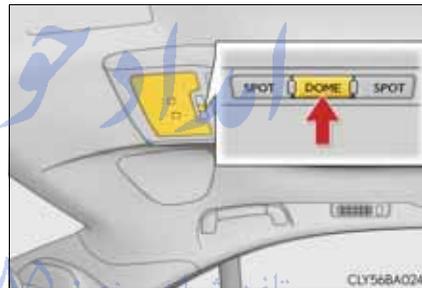

### Personal lights


► Front

On/off

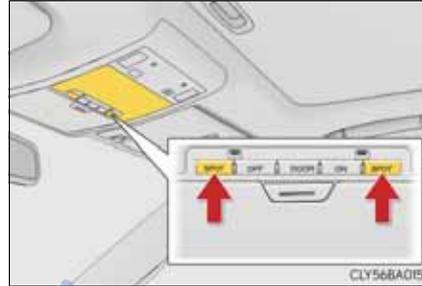

► Rear (vehicles without rear seat entertainment system)

On/off

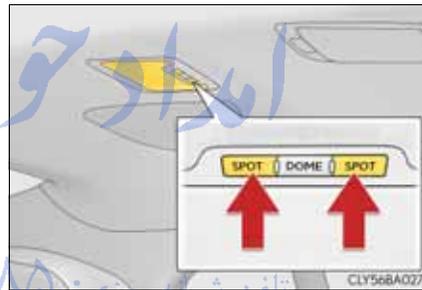


► Rear (vehicles with rear seat entertainment system)

① On/off

② Press the knob to release it, and turn the knob to the desired brightness.

③ Darker

④ Brighter

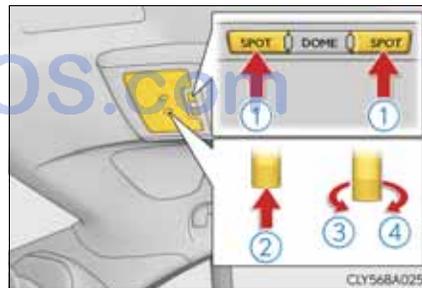

■ Illuminated entry system

The lights automatically turn on/off according to engine switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are opened/closed.

■ To prevent the battery from being discharged

If the following lights remain on when the engine switch is turned off, the lights will go off automatically after 20 minutes:

- Interior lights
- Door courtesy lights
- Personal lights
- Inside door handle lights
- Seat belt buckle lights
- Footwell lights
- Engine switch light

■ Customization

Settings (e.g. The time elapsed before lights turn off) can be changed. (Customizable features →P. 904)




**NOTICE**

■ To prevent battery discharge

Do not leave the lights on longer than necessary when the engine is not running.

## List of storage features

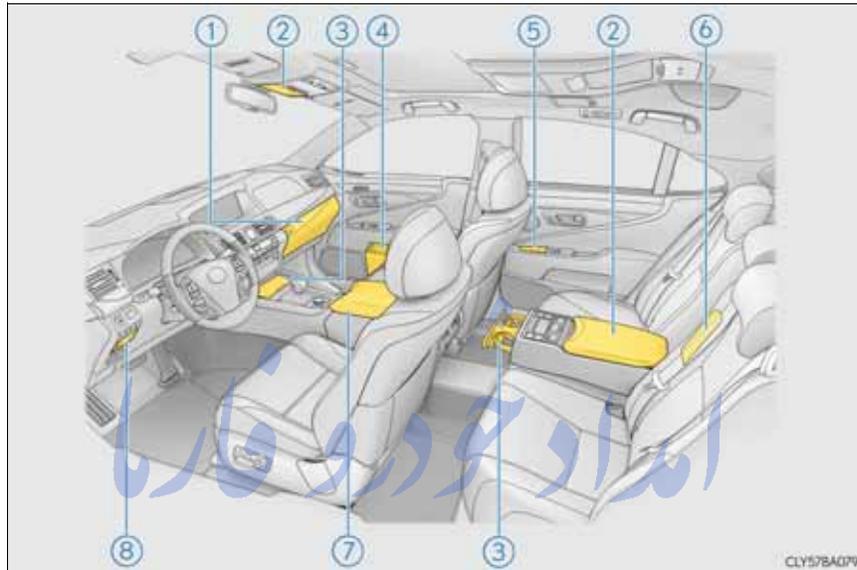

- |                                 |           |                          |           |
|---------------------------------|-----------|--------------------------|-----------|
| ① Glove box                     | (→P. 705) | ⑥ Cool box/auxiliary box |           |
| ② Auxiliary boxes               | (→P. 712) | (if equipped)            | (→P. 710) |
| ③ Cup holders                   | (→P. 707) | ⑦ Console box            | (→P. 709) |
| ④ Door pockets                  | (→P. 706) | ⑧ Coin holder            | (→P. 706) |
| ⑤ Auxiliary boxes (if equipped) | (→P. 712) |                          |           |
| Ashtrays (if equipped)          | (→P. 720) |                          |           |

### ⚠ CAUTION


#### ■ Items that should not be left in the storage spaces

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

- Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.

### Glove box

- ① Open (push button)
- ② Unlock with the mechanical key
- ③ Lock with the mechanical key

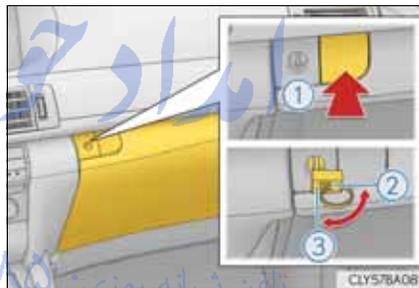

#### ■ Glove box light

The glove box light turns on when the tail lights are on.

#### ■ Trunk opener main switch

The trunk opener main switch is located in the glove box. (→P. 153)


### ⚠ CAUTION

#### ■ Caution while driving

Keep the glove box closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open glove box or the items stored inside.

**Coin holder**

Press in the button.

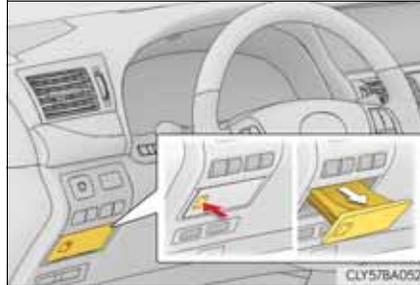**⚠ CAUTION****■ Caution while driving**

Keep the coin holder closed.  
Injuries may result in the event of an accident or sudden braking.

**Door pockets (front)**

The front door pockets can be opened and closed.


**⚠ CAUTION****■ Caution while driving**

Keep the door pockets closed.  
Injuries may result in the event of an accident or sudden braking.

## Cup holders


### ► Front

Press in and release the button.

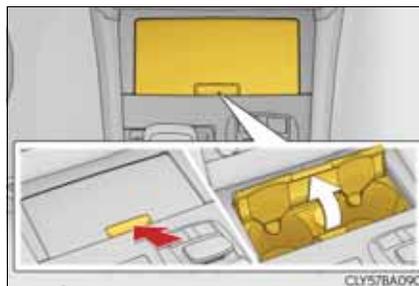

### ► Rear

Press in and release the cup holder.

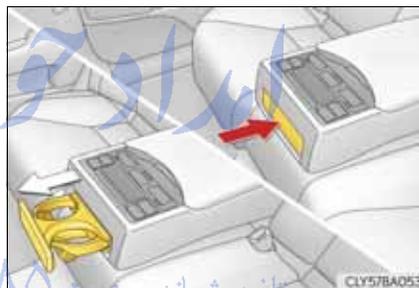

### ■ When stowing the rear cup holders

Stow the cup holder with the armrest down. The cup holder cannot be stowed if the armrest is not down.

 CAUTION**■ Items unsuitable for the cup holder**

Do not place anything other than cups or aluminum cans in the cup holders. Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury. If possible, cover hot drinks to prevent burns.

**■ To avoid burns or fires (vehicles with a cigarette lighter)**

- Do not touch the metal parts of the cigarette lighter in the front cup holder.
- Do not hold the cigarette lighter in the front cup holder down. It could overheat and cause a fire.

**■ When not in use**

Keep the cup holders closed.

Injuries may result in the event of an accident or sudden braking.

 NOTICE**■ To prevent damage to the rear cup holder**

Stow the cup holder before stowing the armrest.

**■ To avoid damaging the power outlet (vehicles with a power outlet)**


Close the lid of the power outlet in the front cup holder when the power outlet is not in use. Foreign objects or liquids that enter the power outlet may cause a short circuit.

FarmaSOS.com

## Console box


### ► Vehicles without rear seat entertainment system

- ① Slide the armrest while pressing the button.
- ② Lift the armrest.

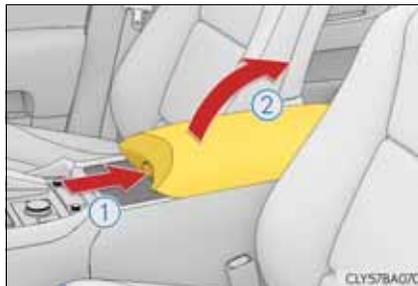


### ► Vehicles with rear seat entertainment system

- ① Press the button.
- ② Lift the armrest.

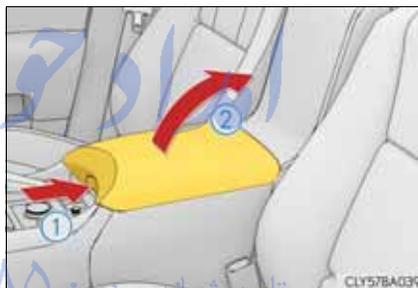

### ■ Tray in the console box (vehicles without rear seat entertainment system)

The tray can be raised backward.

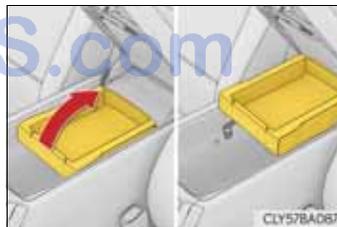

### ■ Opening and closing assist function (vehicles without rear seat entertainment system)

When the console box is opened or closed partway, this function will apply force in the appropriate direction, helping open or close the console box.

### ■ Console box light

The console box light turns on when the tail lights are on.

**⚠ CAUTION**

■ **Caution while driving**

Keep the console box closed.  
Injuries may result in the event of an accident or sudden braking.

**⚠ NOTICE**

■ **Tray**

Do not insert items exceeding the height of the tray. Doing so may prevent opening and closing of the lid.

**Cool box/auxiliary box (if equipped)**

- 1 Pull down the armrest. (→P. 732)
- 2 Pull the lever.




- 3 Open the cool air intake lid.



■ Cool box operating conditions

- The rear air conditioning system is on.
-  is displayed on the rear control panel.

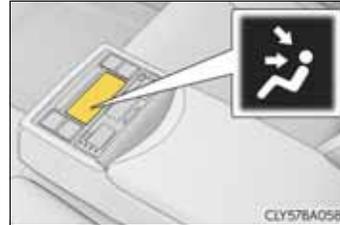

■ Items unsuitable for the cool box

- Drinks in unsealed containers
- Fragile items, perishables or anything with strong odor

■ Using a cool box as an auxiliary box

Close the cool air intake lid to turn off the cool box system.



 CAUTION

■ Caution while driving


Always keep the cool box/auxiliary box closed to reduce the chance of injury in case of an accident or sudden stop.

### Auxiliary boxes

► Overhead


Press in the button.

This box is useful for temporarily storing sunglasses and similar small items.

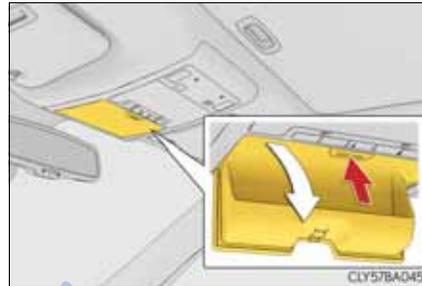

► Rear door (if equipped)

Open the lid.

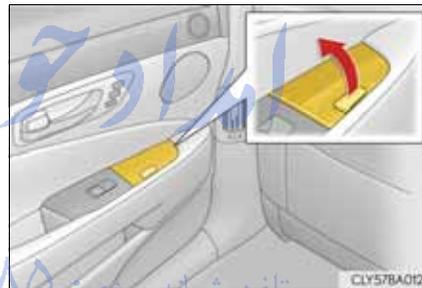

► Rear seat

**1** Pull down the armrest. (→P. 732)

**2** Press the button and lift the lid.



**⚠ CAUTION**

- Using the auxiliary boxes (rear door)  
Do not use the auxiliary boxes as an ashtray.  
Doing so may cause a fire.
- Caution while driving  
Do not leave the auxiliary box open while driving.  
Items may fall out and cause death or serious injury in case of an accident or sudden stop.
- Items unsuitable for storing (overhead)  
Do not store items heavier than 0.2 kg (0.4 lb.).  
Doing so may cause the auxiliary box to open and the items inside may fall out, resulting in an accident.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵



FarmaSOS.com

## Trunk features


### Cargo net

The cargo net is provided for securing loose items on the floor or items inside the trunk.

Raise the cargo hooks on the floor.  
Hook the net on the cargo hooks.

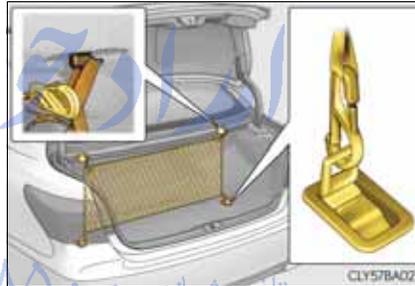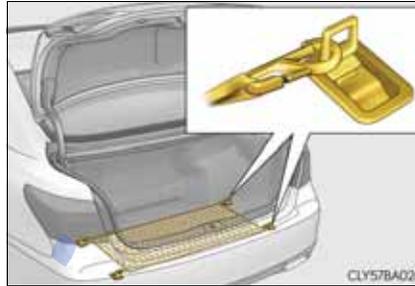


### Shopping bag hooks

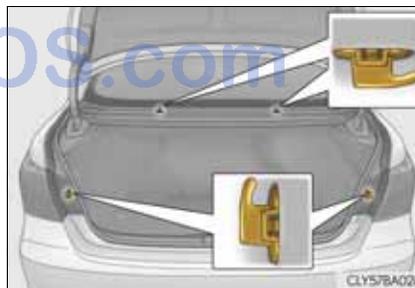

### Luggage mat


- ▶ Vehicles with an emergency tire puncture repair kit

Lift up the handle and fold the luggage mat.

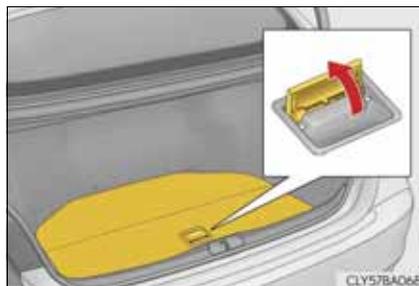


- ▶ Vehicles with a spare tire

- 1 Hold the hook and lift up the luggage mat.

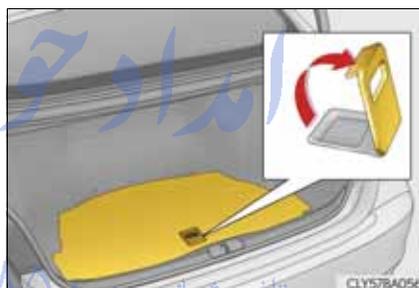


- 2 Secure the luggage mat using the hook.

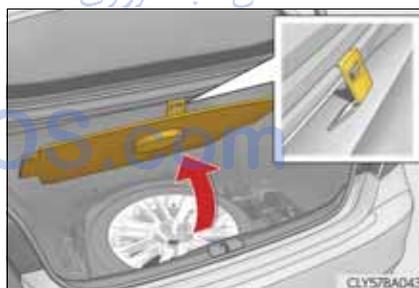

First-aid kit storage belt

- ① Loosen
- ② Tighten

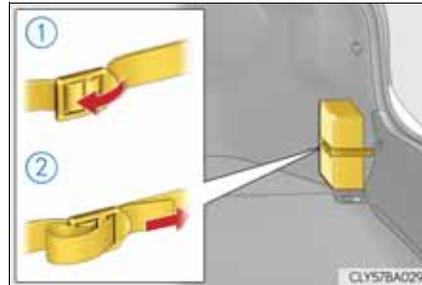

**⚠ CAUTION**

- When the cargo net is not in use  
To avoid injury, always return the cargo hooks on the floor to their stowed positions.


تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Sun visors and vanity mirrors

### Sun visors

- ① To set the visor in the forward position, flip it down.
- ② To set the visor in the side position, flip down, unhook, and swing it to the side.
- ③ To use the side extender, place the visor in the side position, then slide it backward.

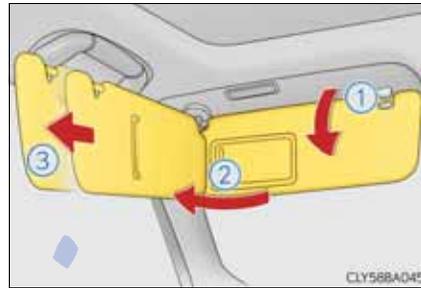


### Vanity mirrors

#### ► Front

Slide the cover to open.


The vanity light turns on.

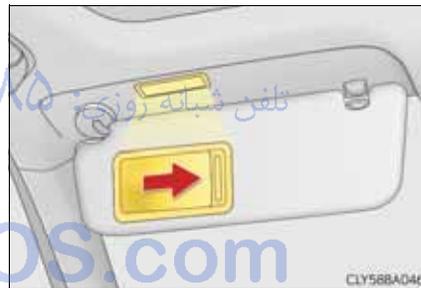

#### ► Rear

Press the button to open.

The vanity light turns on.

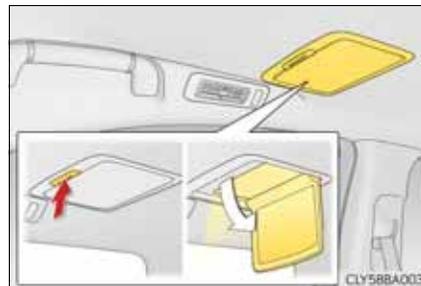

■ To prevent battery discharge

If the vanity lights remain on when the engine switch is turned off, the lights will go off automatically after 20 minutes.

 NOTICE

■ When not in use

Keep the rear vanity mirror closed.

■ To prevent the battery from being discharged

Do not leave the vanity lights on for extended periods while the engine is stopped.


امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Clock

The GPS clock's time is automatically adjusted by utilizing GPS time information. (→P. 408)

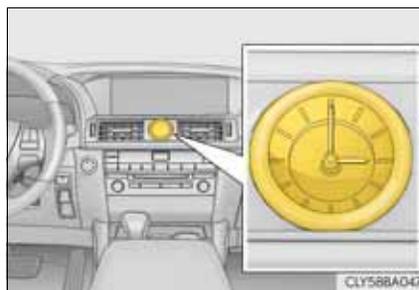

امداد خودرو فارما


تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Ashtrays\*

Open the ashtray lid.

To remove the ashtray, pull the ashtray lid upwards.

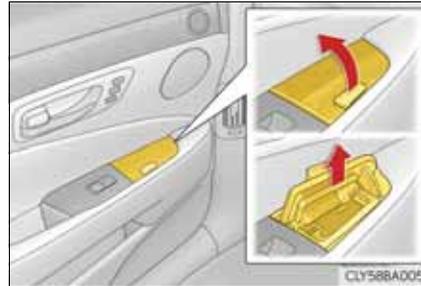

### ⚠ CAUTION

■ When not in use

Keep the ashtray closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open ashtray or ash flying out.

■ To prevent fire

- Fully extinguish matches and cigarettes before putting them in the ashtray, then make sure the ashtray is fully closed.
- Do not place paper or any other type of flammable object in the ashtray.

FarmaSOS.com


\*: If equipped

## Cigarette lighters\*

### ► Front

Push the back part of the lid to open, and push the cigarette lighter down.

The cigarette lighter will pop up when it is ready for use.

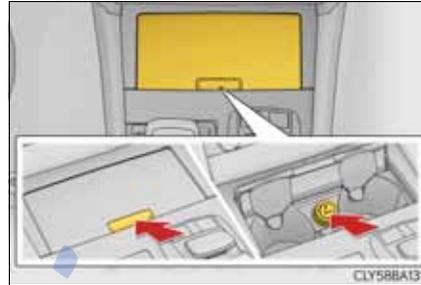

### ► Rear (vehicles without rear seat entertainment system)

Push the cigarette lighter.

The cigarette lighter will pop out when it is ready for use.



### ► Rear (vehicles with rear seat entertainment system)

Push the cigarette lighter.

The cigarette lighter will pop out when it is ready for use.



\*: If equipped

- The cigarette lighter can be used when  
The engine switch is in ACCESSORY or IGNITION ON mode.

**⚠ CAUTION**

- To avoid burns or fires
  - Do not touch the metal parts of the cigarette lighter.
  - Do not hold the cigarette lighter down. It could overheat and cause a fire.
  - Do not insert anything other than the cigarette lighter into the outlet.
- When not in use
  - Keep the ashtray closed.
  - Injuries may result in the event of an accident or sudden braking.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵


FarmaSOS.com

## Power outlets

The power outlet can be used for 12 V accessories that run on less than 10 A.


### ► Front\*

Push the back part of the lid to open, and open the lid.

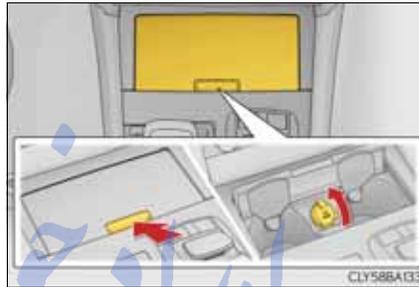


### ► Console box

Open the console box and open the lid.

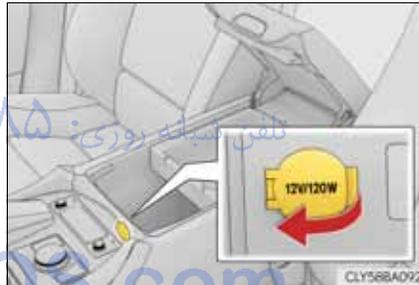


### ► Rear (Vehicles without rear seat entertainment system)\*

Open the lid.

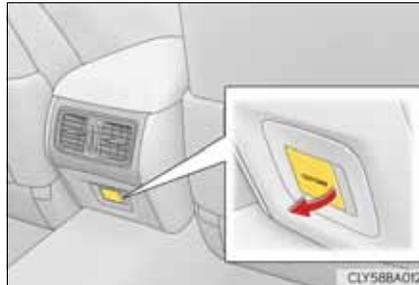

► Rear (Vehicles with rear seat entertainment system)\*

Open the lid.

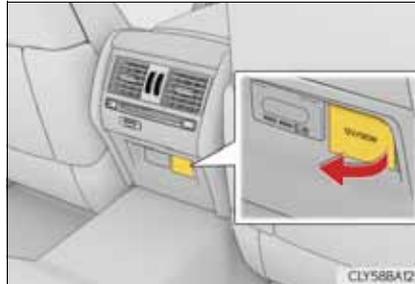

\*: If equipped

- The power outlet can be used when  
The engine switch is in ACCESSORY or IGNITION ON mode.

 NOTICE

- To avoid damaging the power outlet  
Close the power outlet lid when the power outlet is not in use.  
Foreign objects or liquids that enter the power outlet may cause a short circuit.
- To prevent the fuse from being blown  
Do not use an accessory that uses more than 12 V 10 A.
- To prevent the battery from being discharged  
Do not use the power outlet longer than necessary when the engine is not running.

## Heated steering wheel\*

The left and right grip portions of the steering wheel can be heated.

### ▶ Automatic operation

Operates automatically according to the outside and cabin temperature when the engine switch is turned to IGNITION ON mode. Automatic operation can be turned off using the switch.

The indicator light comes on when the heater is operating.



### ▶ Manual operation

Turns the heated steering wheel on/off.

The indicator light comes on when the heater is operating.

### ■ Operating condition

The engine switch is in IGNITION ON mode.

### ■ Timer function

Manual operation: Turns off after approximately 30 minutes.

Automatic operation: Operates for a maximum of 30 minutes. (Turns off according to outside and cabin temperature.)

### ■ If the indicator light does not come on

If the indicator light does not come on when the switch is pressed, a malfunction may have occurred in the system. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

\*: If equipped

**■ Customization**

The automatic turning on/off of the heated steering wheel can be customized.  
(Customizable features →P. 904)

**⚠ CAUTION****■ Burns**

Only appropriately qualified and capable non-impaired persons should operate the vehicle. However, care should be taken to prevent injury if anyone in the following categories comes into contact with the steering wheel when the heated steering wheel is on:

- Babies, small children, the elderly, the sick and the disabled
- Persons with sensitive skin
- Persons who are fatigued
- Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)

**⚠ NOTICE****■ To prevent the battery from being discharged**

Turn the switch off when the engine is not running. تلفن شبانه ۰۲۱-۸۸۶۲۰۸۸

FarmaSOS.com


## Climate control seats/seat heaters\*

The seats can be heated or cooled. When set to “AUTO” mode, the climate control seats/seat heaters are linked to the air conditioning settings and automatically adjusted.

### Front climate control seats

- 1 Press the knob to release the lock.


Press the knob to lock it when not in use.

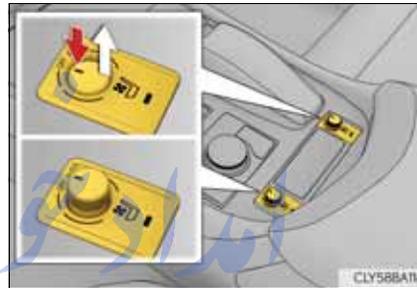

#### ► AUTO setting

- 2 Turn the knob to the “AUTO” position.

When set to “AUTO” mode, seat heater, off, ventilation or seat cooler is automatically selected according to the set temperature of the air conditioning system, outside temperature, etc.

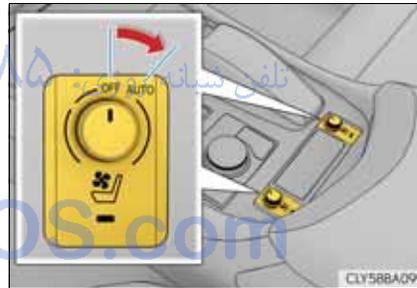


\*: If equipped


► Manual setting

- 2 Set the temperature by turning the knob to the left or right.

- ① Off
- ② Seat heater
- ③ Ventilation
- ④ Seat cooler

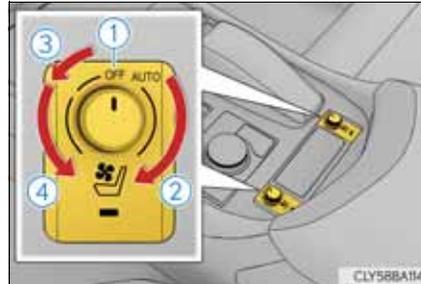

Rear climate control seats (if equipped)/seat heaters (if equipped)

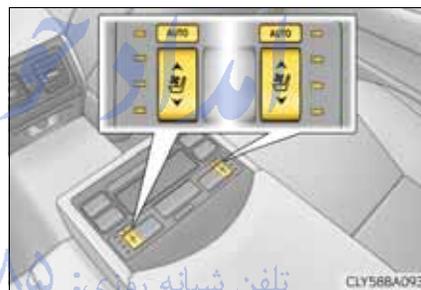

■ AUTO setting

The switch turned on/off.

When set to “AUTO” mode, the indicator illuminates.

When set to “AUTO” mode, seat heater, off, ventilation\* or seat cooler\* is automatically selected according to the set temperature of the air conditioning system, outside temperature, etc.



\*: Vehicles with climate control seats.

### ■ Manual setting

The strength of the seat heater and seat cooler can be adjusted to 3 levels each.

Seat heater\*<sup>1</sup>: When the system is off, pressing “▲” turns the seat heater on.

Pressing “▲” increases the level and pressing “▼” lowers the level.

Seat cooler\*<sup>2, 3</sup>: When the system is off, pressing “▼” turns the seat cooler on.

Pressing “▼” increases the level and pressing “▲” lowers the level.



Seat heater\*<sup>1</sup>

- ① Low
- ② Mid
- ③ Hi

Seat cooler\*<sup>2, 3</sup>

- ④ Low
- ⑤ Mid
- ⑥ Hi

\*<sup>1</sup>: The indicator illuminates in amber.

\*<sup>2</sup>: The indicator illuminates in blue.

\*<sup>3</sup>: Vehicles with climate control seats.

**■ Operating condition**

The engine switch is in IGNITION ON mode.

**■ Climate control seat/seat heater operation**

Depending on the outside temperature and the temperature of the seat surface, there are cases when heating operation is stronger than usual.

**■ Operating the rear climate control seats from the front seats.**

→P. 447

**■ Disabling the switches on the rear controller**

→P. 449

**■ Replacing the air filters**

Filters are installed in the climate control seats. For replacement of the filters, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**■ Customization**

Automatic operation settings can be customized. (Customizable features →P. 904)

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

 CAUTION

## ■ Burns/excessive cooling


- Use caution when seating the following persons in a seat to avoid the possibility of burns or excessive cooling:
  - Babies, small children, elderly persons, sick persons and persons with a physical disability
  - Persons who have sensitive skin
  - Persons who are fatigued
  - Persons who have taken alcohol or drugs which induce sleep, such as sleeping drugs and cold remedies
- Do not cover the seat with anything when using the climate control seat or seat heater. Using the climate control seat or seat heater with a blanket or cushion may increase or decrease the temperature of the seat, resulting in overheating or overcooling.
- Do not use the climate control seat or seat heater more than necessary. Doing so may cool the occupants excessively or may cause minor burns or overheating.

 NOTICE

- To prevent damage to the climate control seat and seat heater  
Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects, such as needles and nails, into the seat.
- To prevent the battery from being discharged  
Do not leave the system on longer than necessary when the engine is off.

## Armrest

Pull the armrest down for use.

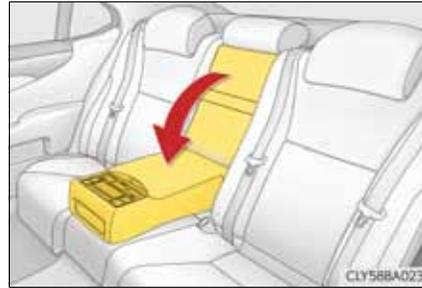

### NOTICE

- To prevent damage to the armrest  
Do not place too much strain on the armrest.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵


FarmaSOS.com

## Rear sunshade

The rear sunshade can be raised and lowered by operating any of the buttons shown below.


- From front seat
  - ▶ Vehicles without power rear seat

Extend/retract

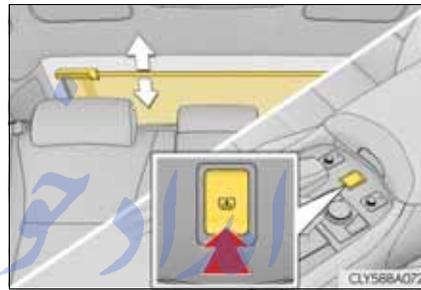

- ▶ Vehicles with power rear seat

Extend/retract

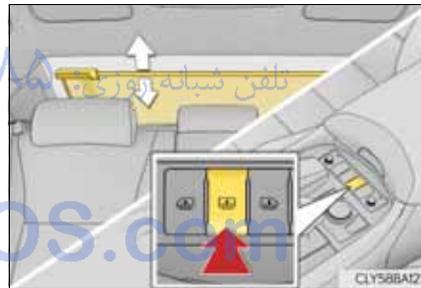


- From rear seat
  - ▶ Vehicles without power rear seat

Extend/retract



## ▶ Vehicles with power rear seat

## Extend/retract

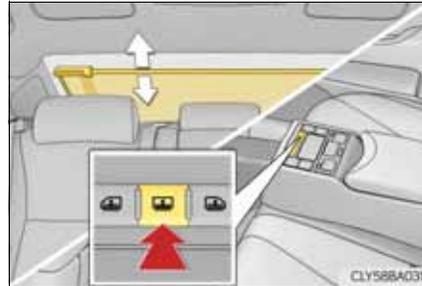

- The rear sunshade can be used when
  - The engine switch is in **IGNITION ON** mode.
- Operating the rear sunshade after turning the engine switch off
  - The rear sunshade can be operated for approximately 60 seconds even after the engine switch is switched to **ACCESSORY** mode or turned off.
- Reverse operation feature
  - To ensure adequate rear visibility, the rear sunshade automatically lowers when the shift lever is shifted to **R**.
  - However, the rear sunshade is raised again if any of the following occurs:
    - The button is pressed again.
    - The shift lever is shifted to **P**.
    - The shift lever is shifted out of **P** and **R**, and the vehicle reaches a speed of 15 km/h (9 mph).
  - If the engine is turned off when the rear sunshade has been lowered due to the reverse operation feature, it will not be raised even when the engine is turned on again and the vehicle reaches a speed of 15 km/h (9 mph). To raise the sunshade again, press the button.
- Button lock function
  - To prevent inadvertent operation, some buttons on the rear armrest can be locked. (→P. 461)

 CAUTION

- When the rear sunshade is being raised or lowered  
Do not place fingers or other objects in the shade mechanism or in the opening as injury may result.

 NOTICE

- To prevent the battery from being discharged  
Do not operate the rear sunshade when the engine is not running.
- To ensure normal operation of the sunshade  
Observe the following precautions:
  - Do not place excessive load on the motor or other components.
  - Do not place objects where they may hinder opening and closing operations.
  - Do not attach items to the rear sunshade.
  - Keep the opening clean and clear of obstructions.
  - Do not operate the rear sunshade continuously for long periods of time.

تلفن شبانه روزی: ۰۸۵-۸۸۸۶۲۰۲۱


FarmaSOS.com

## Rear door sunshades\*

The rear door sunshades can be extended and retracted by operating any of the buttons shown below.


- From front seat

Extend/retract

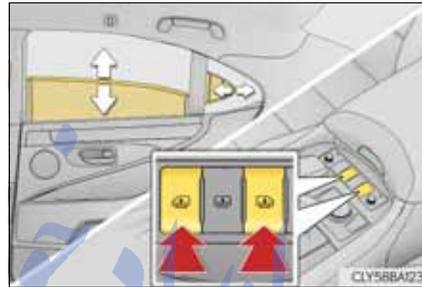

- From rear seat

Extend/retract

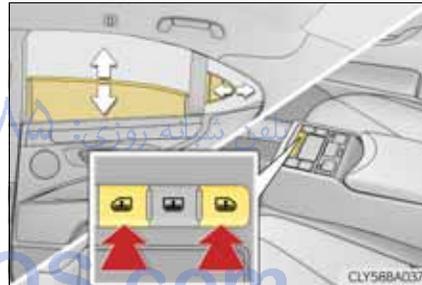

\*: If equipped

**■ Operating conditions**

- The engine switch is in IGNITION ON mode.
- The rear windows are fully closed.  
The rear door sunshades automatically retract when the rear windows are opened.

**■ Operating the rear door sunshades after turning the engine switch off**

The rear door sunshades can be operated for approximately 60 seconds even after the engine switch is switched to ACCESSORY mode or turned off.

**■ Jam protection function**

If an object becomes caught between a rear door sunshade and the window frame, the jam protection function will cause the sunshade to detach from its drive mechanism and retract.

- ▶ If the jam protection function operates when extending the rear door sunshades

Pressing the button will reconnect the sunshade.

Pressing the button again will allow the sunshades to be operated.

If the sunshade does not operate after the button is pressed, press the button again.

- ▶ If the jam protection function operates when retracting the rear door sunshades

Press and hold the button to re-extend the rear door sunshades, and continue pressing for more than 5 seconds after the sunshades have fully extended and stopped.

**■ Button lock function**

To prevent inadvertent operation, some buttons on the rear armrest can be locked. (→P. 461)

**■ When reconnecting the battery**

The rear door sunshades will always be retracted the first time the button is pressed.

 CAUTION

- When the rear door sunshades are being extended or retracted  
Do not place fingers or other objects in the shade mechanism or in the opening as injury may result.
- Jam protection function  
Never use any part of your body to intentionally activate the jam protection function.

 NOTICE

- To prevent the battery from being discharged  
Do not operate the rear door sunshades when the engine is not running.
- To ensure normal operation of the sunshades  
Observe the following precautions:
  - Do not place excessive load on the motor or other components.
  - Do not place objects where they may hinder opening and closing operations.
  - Do not attach items to the rear door sunshades.
  - Keep the opening clean and clear of obstructions.
  - Do not operate the rear door sunshades continuously for long periods of time.

FarmaSOS.com

## Trunk storage extension\*

Long objects can be loaded in the vehicle by utilizing the trunk space and rear seat area.


**1** Pull down the armrest. (→P. 732)

**2** Open the armrest door.

The armrest door can be locked and unlocked using the mechanical key.

① Unlock

② Lock

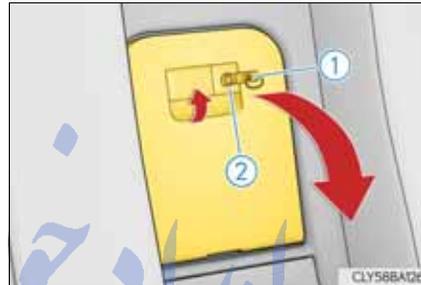

► Opening from the cabin

**3** Open the inside trunk door from the cabin, and load baggage or other items.



► Opening from the trunk

**3** Open the inside trunk door from the trunk, and load baggage or other items.



5

Interior features

\*: If equipped

 CAUTION

## ■ When not in use

Ensure that the inside trunk door is closed.

In the event of sudden braking, items stored in the trunk may be thrown forward into the cabin, resulting in injury.

امداد خودرو فارما


تلفن شبانه روزی: ۰۸۵-۸۸۸۶۲۰۲۱

FarmaSOS.com

## Coat hooks


- ▶ Vehicles without rear air conditioning system

To use the coat hook, push it on.

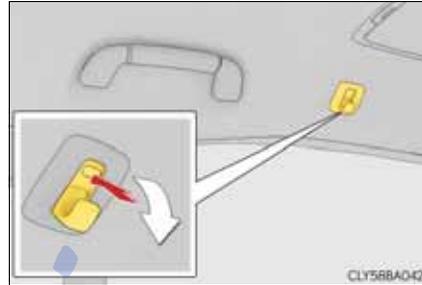

- ▶ Vehicles with rear air conditioning system

To use the coat hook, push it on.

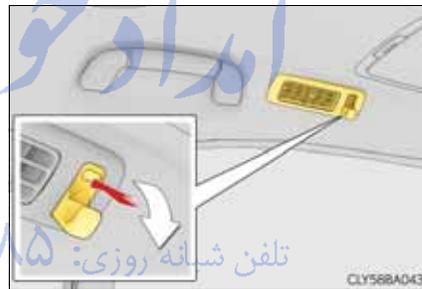


### ⚠ CAUTION

- Items that must not be hung on the hook

Do not hang a coat hanger or other hard or sharp object on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles that cause death or serious injury.

## Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

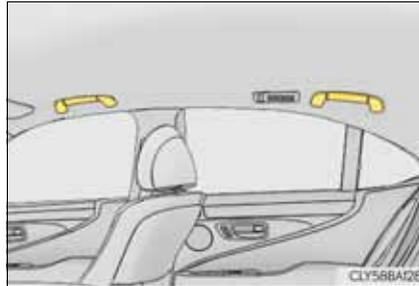

### ⚠ CAUTION

#### ■ Assist grip

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.  
Doing so could damage the assist grip, or could cause you to injure yourself by falling over.

### ⚠ NOTICE

#### ■ To prevent damage to the assist grip

Do not hang any heavy object or put a heavy load on the assist grip.

## Maintenance and care

## 6

6-1. Maintenance and care	
Cleaning and protecting the vehicle exterior .....	744
Cleaning and protecting the vehicle interior .....	748
6-2. Maintenance	
Maintenance requirements .....	751
6-3. Do-it-yourself maintenance	
Do-it-yourself service precautions .....	754
Hood .....	757
Positioning a floor jack .....	758
Engine compartment .....	760
Tires .....	775
Tire inflation pressure .....	788
Wheels .....	790
Air conditioning filter .....	792
Electronic key battery .....	795
Checking and replacing fuses .....	798
Light bulbs .....	803

## Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition:

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

### ■ Automatic car washes

- Fold the mirrors before washing the vehicle. Start washing from the front of the vehicle. Make sure to extend the mirrors before driving.
- Brushes used in automatic car washes may scratch the vehicle surface and harm your vehicle's paint.

### ■ High pressure car washes

- Do not allow the nozzles of the car wash to come within close proximity of the windows and the air suspension unit.
- Before using the car wash, check that the fuel filler door on your vehicle is closed properly.

- Aluminum wheels
  - Remove any dirt immediately by using a neutral detergent. Do not use hard brushes or abrasive cleaners. Do not use strong or harsh chemical cleaners. Use the same mild detergent and wax as used on the paint.
  - Do not use detergent on the wheels when they are hot, for example after driving for long distance in the hot weather.
  - Wash detergent from the wheels immediately after use.
- Bumpers and side moldings

Do not scrub with abrasive cleaners.
- Front side windows water-repellent coating
  - The following precautions can extend the effectiveness of the water-repellent coating.
    - Remove any dirt, etc. from the front side windows regularly.
    - Do not allow dirt and dust to accumulate on the windows for a long period.  
Clean the windows with a soft, damp cloth as soon as possible.
    - Do not use wax or glass cleaners that contain abrasives when cleaning the windows.
    - Do not use any metallic objects to remove condensation build up.
  - When the water-repellent performance has become insufficient, the coating can be repaired. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

FarmaSOS.com

**⚠ CAUTION**


■ When washing the vehicle

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components etc. to catch fire.

■ When cleaning the windshield

Set the wiper switch to off.

If the wiper switch is in “AUTO”, the wipers may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

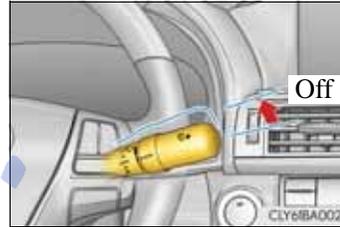

- When the upper part of the windshield where the raindrop sensor is located is touched by hand
- When a wet rag or similar is held close to the raindrop sensor
- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor

■ Precautions regarding the exhaust pipes and rear bumper diffusers

Exhaust gases cause the exhaust pipes and rear bumper diffusers to become quite hot.

When washing the vehicle, be careful not to touch the pipes and diffusers until they have cooled sufficiently, as touching hot exhaust pipes and rear bumper diffusers can cause burns.

■ Precaution regarding the rear bumper with rear pre-crash safety system (if equipped)

If the paint of the rear bumper is chipped or scratched, consult with any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

■ Precaution regarding the rear bumper with Blind Spot Monitor (if equipped)

If the paint of the rear bumper is chipped or scratched, the system may malfunction. If this occurs, consult any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

**NOTICE**

- To prevent paint deterioration and corrosion on the body and components (aluminum wheels etc.)
  - Wash the vehicle immediately in the following cases:
    - After driving near the sea coast
    - After driving on salted roads
    - If coal tar or tree sap is present on the paint surface
    - If dead insects, insect droppings or bird droppings are present on the paint surface
    - After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
    - If the vehicle becomes heavily soiled with dust or mud
    - If liquids such as benzene and gasoline are spilled on the paint surface
  - If the paint is chipped or scratched, have it repaired immediately.
  - To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.
- Cleaning the exterior lights
  - Wash carefully. Do not use organic substances or scrub with a hard brush. This may damage the surfaces of the lights.
  - Do not apply wax to the surfaces of the lights. Wax may cause damage to the lenses.
- When using an automatic car wash

Set the wiper switch to the off position.  
If the wiper switch is in “AUTO”, the wipers may operate and the wiper blades may be damaged.

## Cleaning and protecting the vehicle interior

The following procedures will help protect your vehicle's interior and keep it in top condition:

### Protecting the vehicle interior

Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.

### Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted detergent.  
Use a diluted water solution of approximately 5% neutral wool detergent.
- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

### Cleaning the synthetic leather areas

- Remove loose dirt using a vacuum cleaner.
- Apply a mild soap solution to the synthetic leather using a sponge or soft cloth.
- Allow the solution to soak in for a few minutes. Remove the dirt and wipe off the solution with a clean, damp cloth.

■ Caring for leather areas

Lexus recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

■ Shampooing the carpets

There are several commercial foaming-type cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

■ Seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

**⚠ CAUTION**

■ Water in the vehicle

- Do not splash or spill liquid in the vehicle.  
Doing so may cause electrical components etc. to malfunction or catch fire.
- Do not get any of the SRS components or wiring in the vehicle interior wet.  
(→P. 49) تلفن شبانه روزی: ۰۸۵-۸۸۶۲۰۲۱  
An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.

■ Cleaning the interior (especially instrument panel)

Do not use polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

■ Cleaning the leather areas of the instrument panel

Do not use any protective agents (coatings etc). Doing so may cause the instrument panel to reflect onto the windshield, obstructing the front view and possibly causing an accident.

 NOTICE

## ■ Cleaning detergents

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
  - Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, and bleach
  - Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol
- Do not use polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

## ■ Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

## ■ Water on the floor

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

## ■ When cleaning the inside of the windshield (vehicles with LKA [Lane-Keeping Assist])

Be careful not to touch the camera sensor (→P. 287).

If the camera is accidentally scratched or hit, LKA may not operate properly or may cause a malfunction.

## ■ Cleaning the inside of the rear window

- Do not use glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires or antenna. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires or antenna.
- Be careful not to scratch or damage the heater wires or antenna.

## Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Lexus recommends the following maintenance:

### Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For details about maintenance items and schedules, refer to the “Lexus Service Booklet” or “Lexus Warranty Booklet”.

### Do-it-yourself maintenance

What about do-it-yourself maintenance?

Many of the maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools.

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you're an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. Any authorized Lexus dealer or repairer will keep a record of maintenance, which could be useful should you ever require Warranty Service. Should you choose to select a qualified and equipped professional other than an authorized Lexus repairer to service or maintain your vehicle, we recommend that you request that a record of maintenance be kept.

■ Where to go for maintenance service?

In order to maintain your vehicle in the best possible condition, Lexus recommends that all repairs and service operations be carried out by authorized Lexus dealers or repairers or other duly qualified and equipped professionals. For repairs and services covered by your warranty, please visit an authorized Lexus dealer or repairer, who will use genuine Lexus parts in repairing any difficulties you may encounter. There can also be advantages in utilizing authorized Lexus dealers or repairers for non-warranty repairs and services, as members of the Lexus network will be able to expertly assist you with any difficulties you may encounter.

Your Lexus dealer or repairer, or another duly qualified and equipped professional will perform all of the scheduled maintenance on your vehicle reliably and economically due to their experience with Lexus vehicles.

■ Does your vehicle need repairs?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning system after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driven straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floor, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal (→P. 102)

If you notice any of these clues, take your vehicle to any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible. Your vehicle may need adjustment or repair.

**⚠ CAUTION****■ If your vehicle is not properly maintained**

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

**■ Handling of the battery**

Battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling.

(→P. 770)

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure as given in these sections.

Items	Parts and tools
Battery condition (→P. 771)	<ul style="list-style-type: none"> <li>• Warm water</li> <li>• Baking soda</li> <li>• Grease</li> <li>• Conventional wrench (for terminal clamp bolts)</li> <li>• Distilled water</li> </ul>
Engine coolant level (→P. 769)	<ul style="list-style-type: none"> <li>• “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol-based non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology</li> <li>• “Toyota Super Long Life Coolant” is pre-mixed with 50% coolant and 50% deionized water.</li> <li>• Funnel (used only for adding coolant)</li> </ul>
Engine oil level (→P. 766)	<ul style="list-style-type: none"> <li>• “Toyota Genuine Motor Oil” or equivalent</li> <li>• Rag or paper towel</li> <li>• Funnel (used only for adding engine oil)</li> </ul>
Fuses (→P. 799)	<ul style="list-style-type: none"> <li>• Fuse with same amperage rating as original</li> </ul>
Light bulbs (→P. 804)	<ul style="list-style-type: none"> <li>• Bulb with same number and wattage rating as original</li> <li>• Phillips-head screwdriver</li> <li>• Flathead screwdriver</li> <li>• Wrench</li> </ul>
Radiator and condenser (→P. 771)	—

Items	Parts and tools
Tire inflation pressure (→P. 789)	<ul style="list-style-type: none"> <li>• Tire pressure gauge</li> <li>• Compressed air source</li> </ul>
Washer fluid (→P. 775)	<ul style="list-style-type: none"> <li>• Water or washer fluid containing antifreeze (for winter use)</li> <li>• Funnel (used only for adding water or washer fluid)</li> </ul>

**⚠ CAUTION**

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions.

- When working on the engine compartment
  - Keep hands, clothing and tools away from the moving fan and engine drive belt.
  - Be careful not to touch the engine, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
  - Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
  - Do not smoke, cause sparks or expose an open flame to fuel or the battery. Fuel and battery fumes are flammable.
  - Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.
  - Take care because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately.  
If you still experience discomfort, consult a doctor.
- When working near the electric cooling fans or radiator grille
 

Be sure the engine switch is off.  
With the engine switch in IGNITION ON mode, the electric cooling fans may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P. 771)
- Safety glasses
 

Wear safety glasses to prevent flying or falling material, fluid spray, etc. from getting in your eyes.

**NOTICE****■ If you remove the air cleaner filter**

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.

**■ If the fluid level is low or high**

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.

If the reservoir needs frequent refilling, it may indicate a serious problem.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵


FarmaSOS.com

## Hood

Release the lock from the inside of the vehicle to open the hood.

- 1 Pull the hood lock release lever.

The hood will pop up slightly.

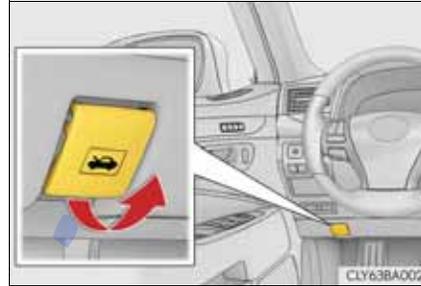

- 2 Pull up the auxiliary catch lever and lift the hood.



### ⚠ CAUTION

#### ■ Pre-driving check

Check that the hood is fully closed and locked.

If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

## Positioning a floor jack

When raising your vehicle with a floor jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

### ◆ Front


#### ▶ 2WD models



#### ▶ AWD models



### ◆ Rear

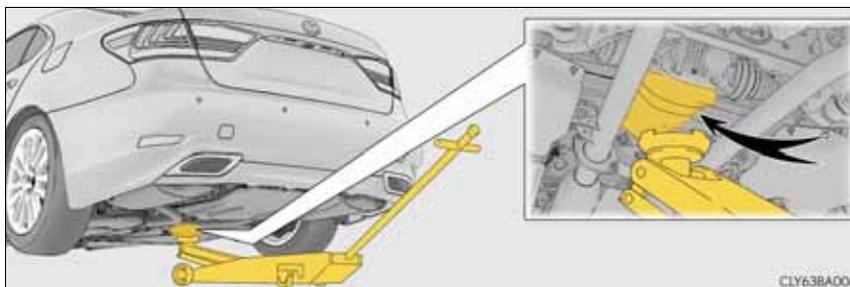

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

6


Maintenance and care

**⚠ CAUTION**

■ When raising your vehicle

Make sure to observe the following precautions to reduce the possibility of death or serious injury:


- Lift up the vehicle using a floor jack such as the one shown in the illustration.

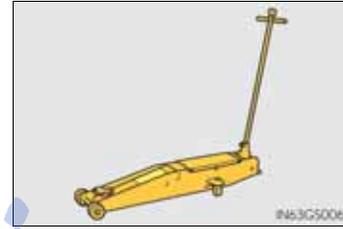

- When using a floor jack, follow the instructions of the manual provided with the jack.
- Do not use the jack that was supplied with your vehicle.
- Do not put any part of your body underneath the vehicle when it is supported only by the floor jack.
- Always use floor jack and/or automotive jack stands on a solid, flat, level surface.
- Do not start the engine while the vehicle is supported by the floor jack.
- Stop the vehicle on level, firm ground, firmly set the parking brake and shift the shift lever to P.
- Make sure to set the floor jack properly at the jack point.  
Raising the vehicle with an improperly positioned floor jack will damage the vehicle and may cause the vehicle to fall off the floor jack.
- Do not raise the vehicle while someone is in the vehicle.
- When raising the vehicle, do not place any object on top of or underneath the floor jack.
- Be sure to turn off the height control and stop the engine. Otherwise, the vehicle height may change in the automatic leveling function. (→P. 344)

## Engine compartment

### ► 2WD models

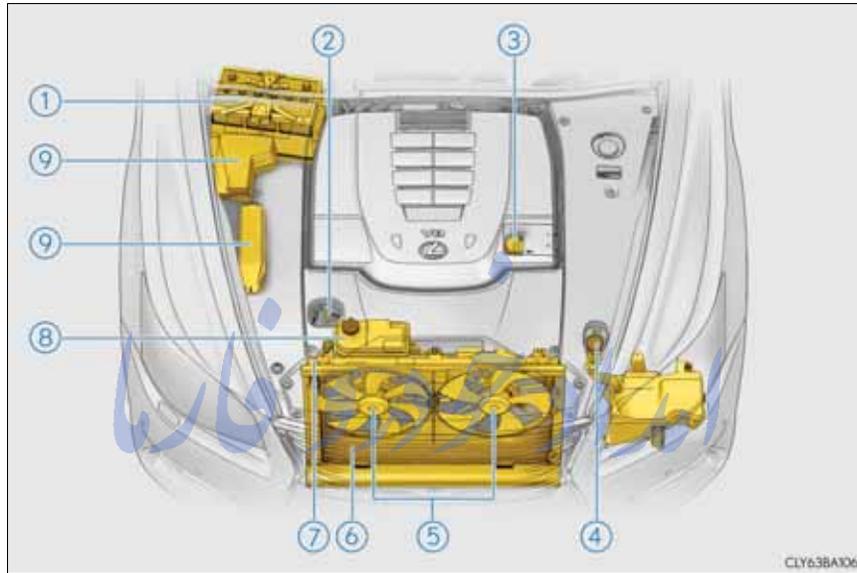

- |                                       |                                      |
|---------------------------------------|--------------------------------------|
| ① Battery (→P. 771)                   | ⑤ Electric cooling fans              |
| ② Engine oil level dipstick (→P. 766) | ⑥ Condenser (→P. 771)                |
| ③ Engine oil filler cap (→P. 767)     | ⑦ Radiator (→P. 771)                 |
| ④ Washer fluid tank (→P. 775)         | ⑧ Engine coolant reservoir (→P. 769) |
|                                       | ⑨ Fuse boxes (→P. 799)               |

For right-hand drive vehicles:

The battery and the fuse box in front of the battery are located on the opposite side of the engine compartment.

► AWD models




- |                                       |                                      |
|---------------------------------------|--------------------------------------|
| ① Battery (→P. 771)                   | ⑤ Electric cooling fans              |
| ② Engine oil level dipstick (→P. 766) | ⑥ Condenser (→P. 771)                |
| ③ Engine oil filler cap (→P. 767)     | ⑦ Radiator (→P. 771)                 |
| ④ Washer fluid tank (→P. 775)         | ⑧ Engine coolant reservoir (→P. 769) |
|                                       | ⑨ Fuse boxes (→P. 799)               |


## Engine compartment cover

### ■ Removing the engine compartment cover

#### ▶ Outside

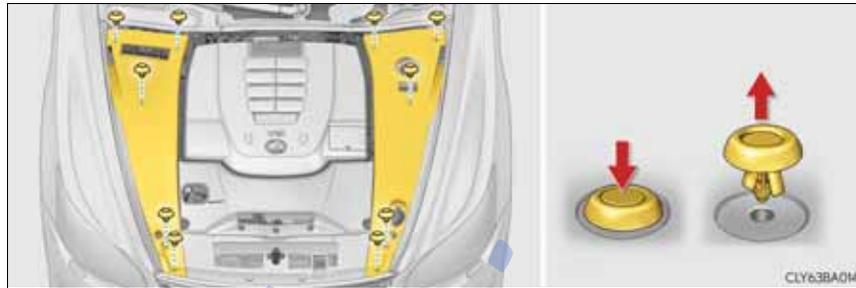

#### ▶ Front (type A)

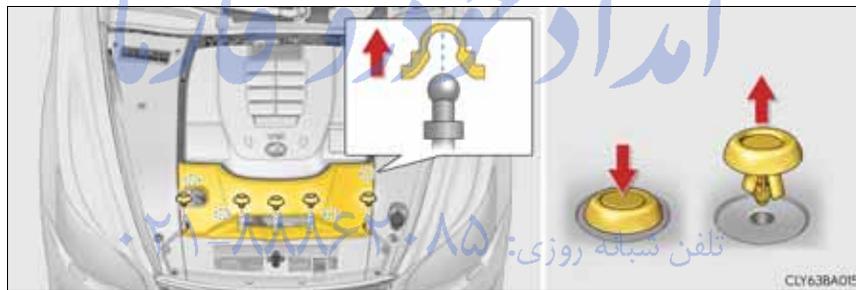


#### ▶ Front (type B)



## ■ Installing the clips

- ① Push up center portion
- ② Insert
- ③ Press

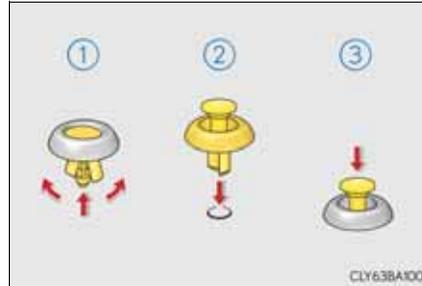 NOTICE

## ■ Checking the engine compartment cover after installation


Make sure that the cover is securely installed in its original position.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Battery cover

### ■ Removing the battery cover

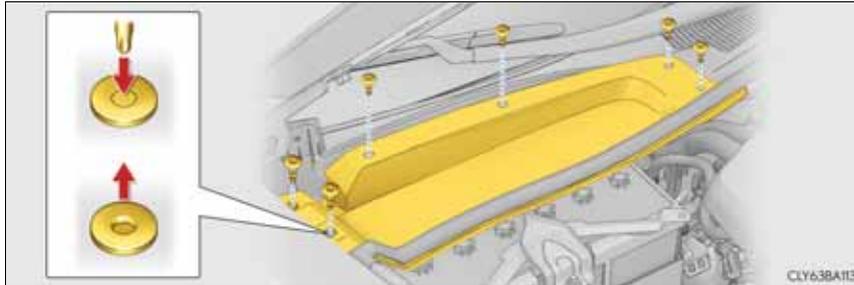


### ■ Installing the clips

- ① Push up center portion
- ② Insert
- ③ Press

#### ▶ Type A

#### ▶ Type B

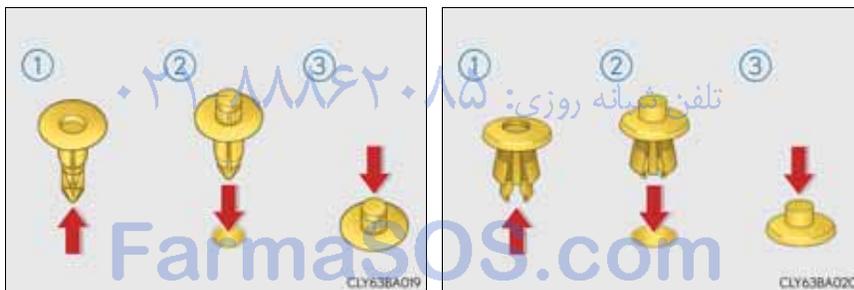

### ⚠ NOTICE

#### ■ When installing the battery cover

Securely install the cover over the battery. Failure to do so may cause water to enter the engine compartment when it rains or the vehicle is washed, resulting in a malfunction

## Engine oil

With the engine at operating temperature and turned off, check the oil level on the dipstick.



### ■ Checking the engine oil

- 1 Park the vehicle on level ground. After warming up the engine and turning it off, wait more than 5 minutes for the oil to drain back into the bottom of the engine.

- 2 Holding a rag under the end, pull the dipstick out.

▶ 2WD models


▶ AWD models

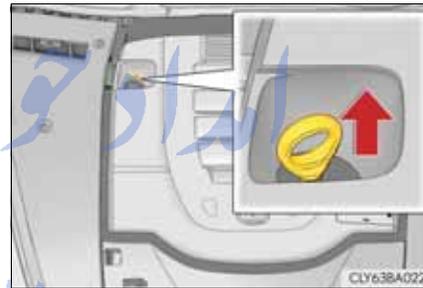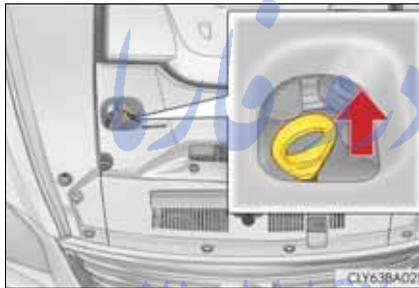

- 3 Wipe the dipstick clean.
- 4 Reinsert the dipstick fully.
- 5 Holding a rag under the end, pull the dipstick out and check the oil level.

- ① Low
- ② Normal
- ③ Excessive


The shape of the dipstick may differ depending on the type of vehicle or engine.

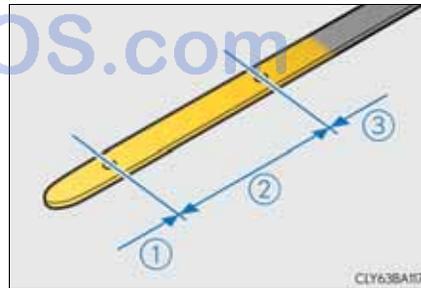

- 6 Wipe the dipstick and reinsert it fully.

### ■ Adding engine oil

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

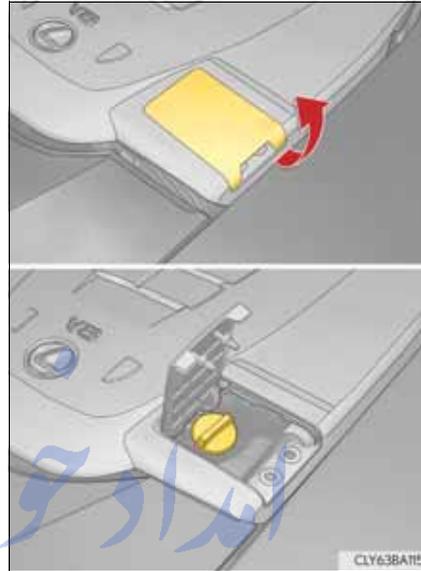

Make sure to check the oil type and prepare the items needed before adding oil.

Engine oil selection	→P. 892
Oil quantity (Low → Full)	1.5 L (1.6 qt., 1.3 Imp. qt.)
Items	Clean funnel

- 1 Remove the oil filler cap by turning it counterclockwise.
- 2 Add engine oil slowly, checking the dipstick.
- 3 Install the oil filler cap by turning it clockwise.

#### ■ Engine oil consumption

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic

#### CAUTION

##### ■ Used engine oil

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground.  
Call any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

#### NOTICE


- To prevent serious engine damage  
Check the oil level on a regular basis.
- When replacing the engine oil
  - Be careful not to spill engine oil on the vehicle components.
  - Avoid overfilling, or the engine could be damaged.
  - Check the oil level on the dipstick every time you refill the vehicle.
  - Be sure the engine oil filler cap is properly tightened.

## Engine coolant

The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir when the engine is cold.

- ① Reservoir cap
- ② “FULL” line
- ③ “LOW” line

If the level is on or below the “LOW” line, add coolant up to the “FULL” line. (→P. 881)

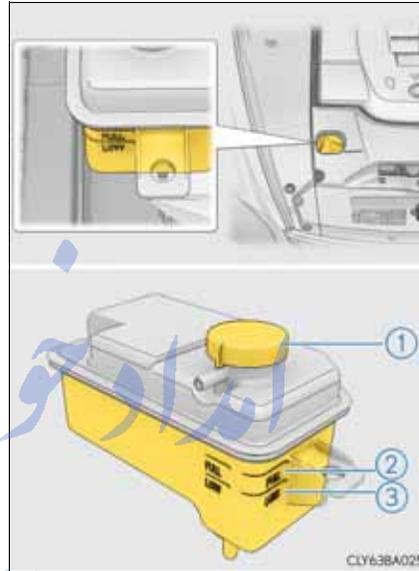

تلفن شماره روزی: ۰۲۱-۸۸۶۲۰۸۵

### ■ Coolant selection

Only use “Toyota Super Long Life Coolant” or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology.

“Toyota Super Long Life Coolant” is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: -35°C [-31°F])

For more details about engine coolant, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

### ■ If the coolant level drops within a short time of replenishing

Visually check the radiator, hoses, engine coolant reservoir caps, drain cock and water pump.

If you cannot find a leak, have any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, test the cap and check for leaks in the cooling system.

 CAUTION

## ■ When the engine is hot

Do not remove the engine coolant reservoir cap.  
The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.

 NOTICE

## ■ When adding coolant

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

## ■ If you spill coolant

Be sure to wash it off with water to prevent it from damaging parts or paint.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

### Radiator and condenser

Check the radiator and condenser and clear away any foreign objects.

If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

#### CAUTION

- When the engine is hot  
Do not touch the radiator or condenser as they may be hot and cause serious injuries, such as burns.

### Battery

Check the battery as follows.

- Removing the battery cover

→P. 765

- Caution symbols


The meanings of each caution symbol on the top of the battery are as follows:

	No smoking, no naked flames, no sparks		Battery acid
	Shield eyes		Note operating instructions
	Keep away from children		Explosive gas

### ■ Battery exterior

Make sure that the battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

- ① Terminals
- ② Hold-down clamp

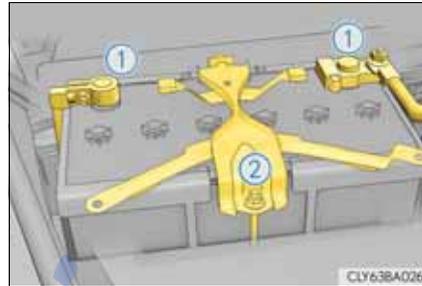


### ■ Checking battery fluid

Check that the level is between the “UPPER LEVEL” and “LOWER LEVEL” lines.

- ① “UPPER LEVEL” line
- ② “LOWER LEVEL” line


If the fluid level is at or below the “LOWER LEVEL” line, add distilled water.

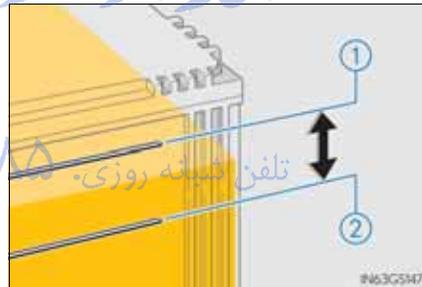

### ■ Adding distilled water

- 1 Remove the vent plug.
- 2 Add distilled water.

If the “UPPER LEVEL” line cannot be seen, check the fluid level by looking directly at the cell.

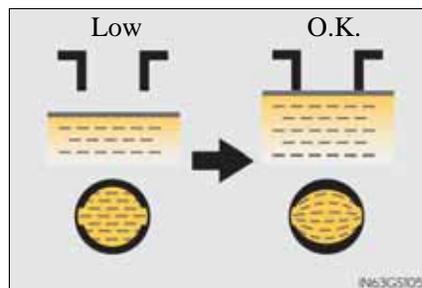

- 3 Put the vent plug back on and close it securely.

#### ■ Before recharging

When recharging, the battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following before recharging:

- If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the battery.

#### ■ After recharging/reconnecting the battery

The engine may not start. Follow the procedure below to initialize the system.

- 1 Shift the shift lever to P.
- 2 Open and close any of the doors.
- 3 Restart the engine. (If the engine does not start first time, repeat the procedure.)

If the engine will not start even after multiple attempts at the above method, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

#### ⚠ CAUTION

##### ■ Chemicals in the battery

Batteries contain poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the battery:

- Do not cause sparks by touching the battery terminals with tools.
- Do not smoke or light a match near the battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the battery.
- Keep children away from the battery.

##### ■ Where to safely charge the battery

Always charge the battery in an open area. Do not charge the battery in a garage or closed room where there is insufficient ventilation.

 CAUTION

## ■ Emergency measures regarding electrolyte

- If electrolyte gets in your eyes  
Flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the nearest medical facility.
- If electrolyte gets on your skin  
Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes  
It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte  
Drink a large quantity of water or milk. Get emergency medical attention immediately.

 NOTICE

## ■ When recharging the battery

Never recharge the battery while the engine is operating. Also, be sure all accessories are turned off.

## ■ When adding distilled water

Avoid overfilling. Water spilled during battery recharging may cause corrosion.

## ■ When replacing the battery

Replace the battery with a battery of the same size.

Installing a battery of a different size will prevent the cover from being properly installed over the battery. This may cause water to enter the engine compartment when it rains or the vehicle is washed, resulting in a malfunction.

For more information about replacing the battery, contact with any authorized Lexus dealer or repairer, or another duly qualified professional.

### Washer fluid

If any washer does not work or the warning message appears on the multi-information display, the washer tank may be empty. Add washer fluid.



#### ⚠ CAUTION

■ When adding washer fluid

Do not add washer fluid when the engine is hot or running as washer fluid contains alcohol and may catch fire if spilled on the engine etc.

#### ⚠ NOTICE

■ Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces.

■ Diluting washer fluid

Dilute washer fluid with water as necessary. Refer to the freezing temperatures listed on the label of the washer fluid bottle.

## Tires


Replace or rotate tires in accordance with maintenance schedules and treadwear.

### Checking tires

- ① New tread
- ② Treadwear indicator
- ③ Worn tread

The location of treadwear indicators is shown by the “TWI” or “Δ” marks, etc., molded on the sidewall of each tire.

Vehicles with a spare tire: Check spare tire condition and pressure if not rotated.

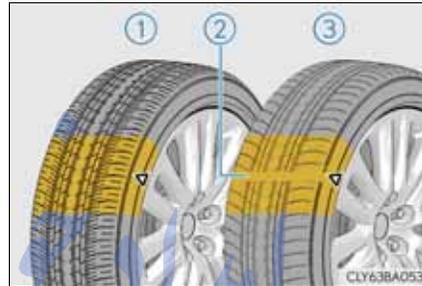

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵



FarmaSOS.com

## Tire rotation

Rotate the tires in the order shown.

▶ Vehicles with a spare tire

▶ Vehicles with an emergency  
tire puncture repair kit

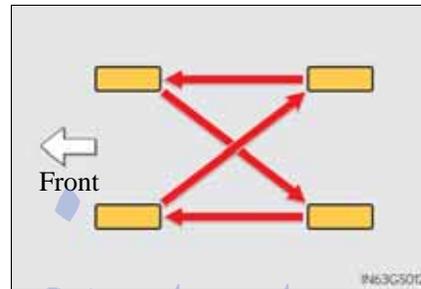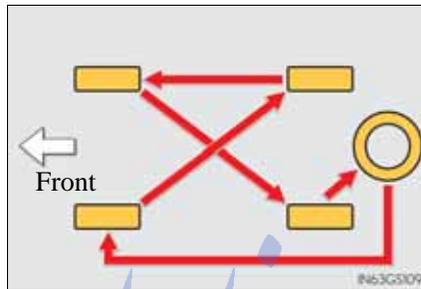

To equalize tire wear and help extend tire life, Lexus recommends that tire rotation is carried out approximately every 10000 km (6000 miles) for 2WD models or 5000 km (3000 miles) for AWD models.

Do not fail to initialize the tire pressure warning system after tire rotation. \*۲۱-۸۸۸۶۲۰۸۵ تلفن شبانه روزی:

### Tire pressure warning system

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

- If the tire pressure drops below a predetermined level, the driver is warned by a screen display and a warning light. (→P. 828, 832)
- The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display. (→P. 111)



#### ◆ Installing tire pressure warning valves and transmitters

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are installed, new ID codes must be registered in the tire pressure warning computer and the tire pressure warning system must be initialized. Have tire pressure warning valve and transmitter ID codes registered by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. (→P. 780)

#### ◆ Initializing the tire pressure warning system

- The tire pressure warning system must be initialized in the following circumstances:
  - When rotating the tires.
  - When the tire inflation pressure is changed such as when changing traveling speed.
  - When changing the tire size.

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the benchmark pressure.

**■ How to initialize the tire pressure warning system**

- 1** Park the vehicle in a safe place and turn the engine switch off.

Initialization cannot be performed while the vehicle is moving.

- 2** Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P. 899)

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.

- 3** Turn the engine switch to IGNITION ON mode.

- 4** Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.



- 5** Wait for a few minutes with the engine switch in IGNITION ON mode and then turn the engine switch off.

### ◆ Registering ID codes

---

The tire pressure warning valve and transmitter is equipped with a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code. Have the ID code registered by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

---

#### ■ When to replace your vehicle's tires

Tires should be replaced if:

- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage

If you are not sure, consult with any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

#### ■ Replacing tires and wheels

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 10 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.

#### ■ Tire life

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

#### ■ Routine tire inflation pressure checks

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

#### ■ When rotating the tires

Make sure that the engine switch is off. If the tires are rotated while the engine switch is in IGNITION ON mode, the tire position information will not be updated.

If this accidentally occurs, either turn the engine switch to off and then to IGNITION ON mode, or initialize the system after checking that the tire pressure is properly adjusted.

- If the tread on snow tires wears down below 4 mm (0.16 in.)  
The effectiveness of the tires as snow tires is lost.
- Situations in which the tire pressure warning system may not operate properly
  - In the following cases, the tire pressure warning system may not operate properly.
    - If non-genuine Lexus wheels are used.
    - A tire has been replaced with a tire that is not an OE (Original Equipment) tire.
    - A tire has been replaced with a tire that is not of the specified size.
    - Tire chains etc. are equipped.
    - Lock nuts are equipped.
    - An auxiliary-supported run-flat tire is equipped.
    - If a window tint that affects the radio wave signals is installed.
    - If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings.
    - If the tire inflation pressure is extremely higher than the specified level.
    - If the spare tire is in a location subject to poor radio wave signal reception.\*
    - If a large metallic object which can interfere with signal reception is put in the trunk.\*
    - If tires not equipped with tire pressure warning valves and transmitters are used.
    - If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer.
  - \*: Vehicles with a spare tire
- Performance may be affected in the following situations.
  - Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
  - When carrying a portable radio, cellular phone, cordless phone or other wireless communication device

If tire position information is not correctly displayed due to the radio wave conditions, the display may be corrected by driving and changing the radio wave conditions.
- When the vehicle is parked, the time taken for the warning to start or go off could be extended.
- When tire inflation pressure declines rapidly for example when a tire has burst, the warning may not function.

**■ The initialization operation**

- Make sure to carry out initialization after adjusting the tire inflation pressure.  
Also, make sure the tires are cold before carrying out initialization or tire inflation pressure adjustment.
- If you have accidentally turned the engine switch off during initialization, it is not necessary to press the reset switch again as initialization will restart automatically when the engine switch has been turned to IGNITION ON mode for the next time.
- If you accidentally press the reset switch when initialization is not necessary, adjust the tire inflation pressure to the specified level when the tires are cold, and conduct initialization again.

**■ Warning performance of the tire pressure warning system**

The warning of the tire pressure warning system will change in accordance with driving conditions. For this reason, the system may give a warning even if the tire pressure does not reach a low enough level, or if the pressure is higher than the pressure that was adjusted to when the system was initialized.

**■ When initialization of the tire pressure warning system has failed**

Initialization can be completed in a few minutes. However, in the following cases, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- When operating the tire pressure warning reset switch, the tire pressure warning light does not blink 3 times.
- After carrying out the initialization procedure, the tire pressure warning light blinks for 1 minute then stays on after driving for 20 minutes.

## ■ Certification for tire pressure warning system

### ► Receiver



The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:  
<http://www.globaldenso.com/en/products/oem/index.html>

Hereby, DENSO CORPORATION declares that this 13BDT is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

DENSO CORPORATION vakuuttaa täten että 13BDT tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Hierbij verklaart DENSO CORPORATION dat het toestel 13BDT in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Par la présente DENSO CORPORATION déclare que l'appareil 13BDT est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Härmed intygar DENSO CORPORATION att denna 13BDT står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Undertegnede DENSO CORPORATION erklærer herved, at følgende udstyr 13BDT overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Hiermit erklärt DENSO CORPORATION, dass sich das Gerät 13BDT in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ DENSO CORPORATION ΔΗΛΩΝΕΙ ΟΤΙ 13BDT ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

Con la presente DENSO CORPORATION dichiara che questo 13BDT è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Por medio de la presente DENSO CORPORATION declara que el 13BDT cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

DENSO CORPORATION declara que este 13BDT está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Hawmhakk, DENSO CORPORATION, jiddikjara li dan 13BDT jikkonforma mal-htigijiet essenzjali u ma provvedimentu oħrajn relevanti li hemm fid-Direttiva 1999/5/EC.

Käesolevaga kinnitab DENSO CORPORATION seadme 13BDT vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Aluliroott, DENSO CORPORATION nyilatkozom, hogy a 13BDT megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

DENSO CORPORATION týmto vyhlasuje, že 13BDT spĺňa základné požiadavky a všetky prísušné ustanovenia Smernice 1999/5/ES.

DENSO CORPORATION tímto prohlašuje, že tento 13BDT je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.

DENSO CORPORATION izjavlja, da je ta 13BDT v skladu s bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Šiuo DENSO CORPORATION deklaruoja, kad šis 13BDT atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Ar šo DENSO CORPORATION deklarē, ka 13BDT atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Niniejszym DENSO CORPORATION oświadcza, że 13BDT jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.

Hér með lýsir DENSO CORPORATION yfir því að 13BDT er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.

DENSO CORPORATION erklærer herved at udstyret 13BDT er i samsvar med de grundlæggende krav og øvrige relevante krav i direktiv 1999/5/EF.

С настоящето, DENSO CORPORATION, декларира, че 13BDT е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 1999/5/EC.

Prin prezenta, DENSO CORPORATION, declară că aparatul 13BDT este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 1999/5/CE.

Ovim, DENSO CORPORATION, izjavjuje da ovaj 13BDT je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.

Ovim, DENSO CORPORATION, deklarirše da je 13BDT u skladu sa osnovnim zahtevima i ostalim relevantnim odredbama Direktive 1999/5/EC.

## ► Initiator



The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address:  
<http://www.globaldenso.com/en/products/oem/index.html>

Hereby, DENSO CORPORATION declares that this 22AAA is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

DENSO CORPORATION vakuuttaa täten että 22AAA tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Hierbij verklaart DENSO CORPORATION dat het toestel 22AAA in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Par la présente DENSO CORPORATION déclare que l'appareil 22AAA est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Härmed intygar DENSO CORPORATION att denna 22AAA står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Undertegnede DENSO CORPORATION erklærer herved, at følgende udstyr 22AAA overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Hiermit erklärt DENSO CORPORATION, dass sich das Gerät 22AAA in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.

ΜΕ ΤΗΝ ΠΑΡΟΥΣΙΑ DENSO CORPORATION ΔΗΛΩΝΕΙ ΟΤΙ 22AAA ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

Con la presente DENSO CORPORATION dichiara che questo 22AAA è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Por medio de la presente DENSO CORPORATION declara que el 22AAA cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

DENSO CORPORATION declara que este 22AAA está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Härmed, DENSO CORPORATION, jiddikjara li dan 22AAA jikkonforma mal-htigijiet essenzjali u ma provvedimentli oħrajn relevanti li hemm fid-Direttiva 1999/5/EC.

Käesolevaga kinnitab DENSO CORPORATION seadme 22AAA vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Alulirõtt, DENSO CORPORATION nyilatkozom, hogy a 22AAA megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

DENSO CORPORATION tímto vyhlasuje, že 22AAA spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

DENSO CORPORATION tímto prohlašuje, že tento 22AAA je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.

DENSO CORPORATION izjavlja, da je ta 22AAA v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Šiuo DENSO CORPORATION deklaruoja, kad šis 22AAA atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Ar šo DENSO CORPORATION deklarē, ka 22AAA atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.

Niniejszym DENSO CORPORATION oświadcza, że 22AAA jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.

Hér með lýsir DENSO CORPORATION yfir því að 22AAA er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.

DENSO CORPORATION erklærer herved at udstyret 22AAA er i samsvær med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

С настоящето, DENSO CORPORATION, декларира, че 22AAA е в съответствие със съществените изисквания и другите приложими разпоредби на Директива 1999/5/EC.

Prin prezenta, DENSO CORPORATION, declară că aparatul 22AAA este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 1999/5/CE.

Ovim, DENSO CORPORATION, izjavljuje da ovaj 22AAA je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.

## ► Transmitter

The latest "DECLARATION of CONFORMITY "(DoC) is available at the following:  
DoC address : <http://www.pacific-ind.co.jp/eng/products/car/tpms/doc/>

**CE 0891**

Hereby, PACIFIC INDUSTRIAL CO.,LTD., declares that this PMV-C210 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

PACIFIC INDUSTRIAL CO.,LTD. vakuuttaa täten että PMV-C210 tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Hierbij verklaart PACIFIC INDUSTRIAL CO.,LTD. dat het toestel PMV-C210 in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Par la présente PACIFIC INDUSTRIAL CO.,LTD. déclare que l'appareil PMV-C210 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Härmed intygar PACIFIC INDUSTRIAL CO.,LTD. att denna PMV-C210 står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Undertegnede PACIFIC INDUSTRIAL CO.,LTD. erklærer herved, at følgende udstyr PMV-C210 overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Hiermit erklärt PACIFIC INDUSTRIAL CO.,LTD., dass sich das Gerät PMV-C210 in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.

ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ PACIFIC INDUSTRIAL CO.,LTD. ΔΗΛΩΝΕΙ ΟΤΙ PMV-C210 ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΑΣ ΔΕΙΞΕ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

Con la presente PACIFIC INDUSTRIAL CO.,LTD. dichiara che questo PMV-C210 è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Por medio de la presente PACIFIC INDUSTRIAL CO.,LTD. declara que el PMV-C210 cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

PACIFIC INDUSTRIAL CO.,LTD. declara que este PMV-C210 está conforme con os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

Hewnhekk, PACIFIC INDUSTRIAL CO.,LTD., jiddikjara li dan PMV-C210 jikkonforma mal-ħtiġijiet essenzjali u ma provvedimentu oħrajn relevanti li hemm fid-Direttiva 1999/5/EC.

Käesolevaga kinnitab PACIFIC INDUSTRIAL CO.,LTD. seadme PMV-C210 vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Aulirott, PACIFIC INDUSTRIAL CO.,LTD. nyilatkozom, hogy a PMV-C210 megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

PACIFIC INDUSTRIAL CO.,LTD. týmto vyhlasuje, že PMV-C210 spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

PACIFIC INDUSTRIAL CO.,LTD. tímto prohlašuje, že tento PMV-C210 je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.

PACIFIC INDUSTRIAL CO.,LTD. izjavlja, da je ta PMV-C210 v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Šiuo PACIFIC INDUSTRIAL CO.,LTD. deklaruoja, kad šis PMV-C210 atūnka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Ar šio PACIFIC INDUSTRIAL CO.,LTD. deklarė, ka PMV-C210 atbilst Direktivas 1999/5/EK būtiskajam prasibam un citiem ar to saistitajiem noteikumiem.

Niniejszym PACIFIC INDUSTRIAL CO.,LTD. oświadcza, że PMV-C210 jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.

Hér með lýsir PACIFIC INDUSTRIAL CO.,LTD. yfir því að PMV-C210 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.

PACIFIC INDUSTRIAL CO.,LTD. erklærer herved at utstyret PMV-C210 er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

С настоящето, PACIFIC INDUSTRIAL CO.,LTD., декларира, че PMV-C210 е в съответствие със съществените и зисквания и другите приложими разпоредби на Директива 1999/5/EC.

Prin prezenta, PACIFIC INDUSTRIAL CO.,LTD., declară că aparatul PMV-C210 este în conformitate cu cerințele esențiale și cu alte prevederi pertinente ale Directivei 1999/5/CE.

Ovim, PACIFIC INDUSTRIAL CO.,LTD., izjavljuje da ovaj PMV-C210 je usklađen sa bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC.

Ovim PACIFIC INDUSTRIAL CO.,LTD., izjavljuje da je PMV-C210 u skladu s bitnim zahtjevima i drugim relevantnim odredbama Direktive 1999/5/EC i Pravilnika o RfTT opremi (NN 25/2012).

Me anð té kėsaj, PACIFIC INDUSTRIAL CO., LTD., Deklaron se ky PMV-C210 əshtə nə pərupthje me kėrkesat themelore dhe dispozitat e tjera pėrkatese tē direktivės 1999/5/EC.

**⚠ CAUTION****■ When inspecting or replacing tires**

Observe the following precautions to prevent accidents.

Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

- Do not mix tires of different makes, models or tread patterns.  
Also, do not mix tires of remarkably different treadwear.
- Do not use tire sizes other than those recommended by Lexus.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.  
Do not use tires if you do not know how they were used previously.

**■ Using tires of a different size**

Do not use tires of a different size from those equipped when the vehicle was new, as the front tire steering angle setting is designed for the original tire size. It is dangerous to use an incorrect wheel and tire combination as this may result in reduced vehicle stability.


**■ When initializing the tire pressure warning system**

Do not operate the tire pressure warning reset switch without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

**⚠ CAUTION**

■ Caution regarding interference with electronic devices

- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should not come within 450 mm (17.7 in.) of the tire pressure warning system initiators. The radio waves may affect the operation of such devices.

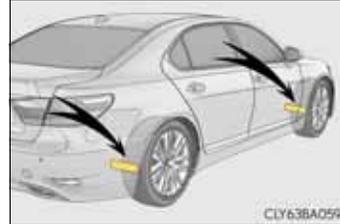

- Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

 NOTICE

- Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps
  - When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as the tire pressure warning valves and transmitters may be damaged if not handled correctly.
  - Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves and the tire pressure warning valves could be bound.
  - When replacing tire valve caps, do not use tire valve caps other than those specified. The cap may become stuck.
- To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P. 778)
- Driving on rough roads

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.
- If tire inflation pressure of each tire becomes low while driving

Do not continue driving, or your tires and/or wheels may be ruined.

## Tire inflation pressure

Make sure to maintain proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Lexus recommends that tire inflation pressure be checked once every two weeks. (→P. 899)

### ■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel efficiency
- Reduced driving comfort and tire life
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

### ■ Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold.  
If your vehicle has been parked for at least 3 hours or has not been driven for more than 1.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge.  
The appearance of the tire can be misleading. In addition, tire inflation pressure that is even just a few pounds off can affect ride quality and handling.
- Do not reduce tire inflation pressure after driving. It is normal for tire inflation pressure to be higher after driving.
- Never exceed the vehicle capacity weight.  
Passengers and luggage weight should be placed so that the vehicle is balanced.

**⚠ CAUTION****■ Proper inflation is critical to save tire performance**

Keep your tires properly inflated. Otherwise, the following conditions may occur and result in an accident causing death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Poor sealing of the tire bead
- Wheel deformation and/or tire separation
- A greater possibility of tire damage from road hazards

**⚠ NOTICE****■ When inspecting and adjusting tire inflation pressure**

Be sure to put the tire valve caps back on.

Without the valve caps, dirt or moisture could get into the valve and cause air leakage, which could result in an accident. If the caps are lost, replace them as soon as possible.

FarmaSOS.com

## Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control.

### Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset\*.

Replacement wheels are available at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

\*: Conventionally referred to as “off-set”.

Lexus does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

### Aluminum wheel precautions

- Use only Lexus wheel nuts and wheel nut wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Lexus genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.

**■ When replacing wheels**

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, tire pressure warning valves and transmitters must be installed. (→P. 778)

**⚠ CAUTION****■ When replacing wheels**

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

**⚠ NOTICE****■ Replacing tire pressure warning valves and transmitters**

- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Ensure that only genuine Lexus wheels are used on your vehicle. Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

## Air conditioning filter

The air conditioning filter must be changed regularly to maintain air conditioning efficiency.

### Removal method

#### ■ Front air conditioning filter


- 1 Set the air conditioning system to recirculated air mode. (→P. 446)

The air conditioning filter case cannot be removed with the system in outside air mode.


- 2 Turn the engine switch off.
- 3 Open the glove box. Lift and remove the partition.



- 4 Remove the filter cover.

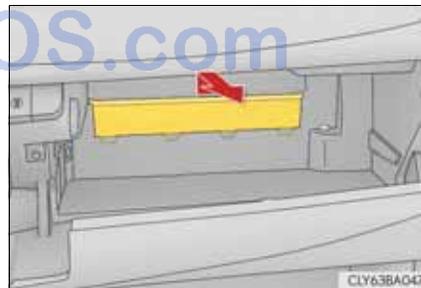

- 5** Remove the filter case.

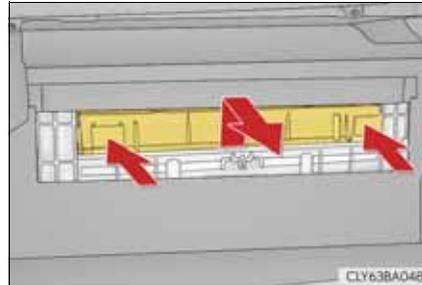

- 6** Remove the air conditioning filter from the filter case and replace it with a new one.

The “↑UP” marks shown on the filter and the filter case should be pointing up.



- 7** Reset the air conditioning filter maintenance data. (→P. 795)

■ Rear air conditioning filter (if equipped)

- 1** Turn the engine switch off.  
**2** Open the trunk lid. Remove the filter cover.



- 3** Remove the air conditioning filter and replace it with a new one.

The “↑UP” mark shown on the filter should be pointing up.



- **Checking interval**

Inspect and replace the air conditioning filter when a message is appeared on the multi-information display. In dusty areas or areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the “Lexus Service Booklet” or “Lexus Warranty Booklet”.)

- **If air flow from the vents decreases dramatically**

The filter may be clogged. Check the filter and replace if necessary.

- **After changing the air conditioning filter**

The air conditioning filter maintenance data should be reset. Perform the following procedures:

- 1 Turn the engine switch to IGNITION ON mode.

- 2 Press and hold  (on the air conditioning panel) for 4 seconds or more.

A buzzer will sound to indicate that the maintenance data has been successfully reset.

- **Rear air conditioning filter (if equipped)**

If it is necessary to clean or replace the filter, contact with any authorized Lexus dealer or repairer, or another duly qualified professional.

- **Climate control seat filter (if equipped)**

Filters are installed in the seats. When it is necessary to clean or replace the filters, contact with any authorized Lexus dealer or repairer, or another duly qualified professional.

 **NOTICE**

- **When using the air conditioning system**

Make sure that a filter is always installed.

Using the air conditioning system without a filter may cause damage to the system.

## Electronic key battery

Replace the battery with a new one if it is depleted.

You will need the following items:

- Small Phillips-head screwdriver
- Small flathead screwdriver
- Lithium battery CR1632

### Replacing the battery


- 1 Take out the mechanical key.



- 2 Remove the cover.



- 3** Remove the battery cover bolts and remove the battery cover.

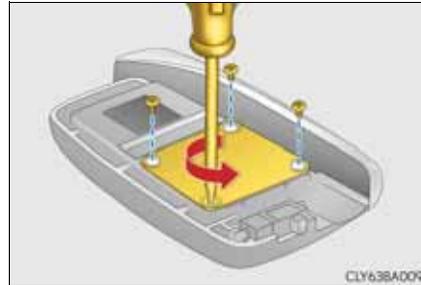

- 4** Remove the depleted battery.  
Insert a new battery with the “+” terminal facing up.



- Use a CR1632 lithium battery
  - Batteries can be purchased at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional, local electrical appliance shops or camera stores.
  - Replace only with the same or equivalent type recommended by the manufacturer.
  - Dispose of used batteries according to local laws.
- When the card key battery needs to be replaced (if equipped)
 

The battery for the card key is available only at Lexus dealers. Your Lexus dealer can replace the battery for you.
- If the electronic key battery is depleted
 

The following symptoms may occur:

  - The smart entry & start system and wireless remote control will not function properly.
  - The operational range will be reduced.

**⚠ CAUTION****■ Removed battery and other parts**

These parts are small and if swallowed by a child, they can cause choking. Keep away from children. Failure to do so could result in death or serious injury.

**■ Lithium battery precautions**

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**

**⚠ NOTICE****■ For normal operation after replacing the battery**

Observe the following precautions to prevent accidents:

- Always work with dry hands.  
Moisture may cause the battery to rust.
- Do not touch or move any other component inside the remote control.
- Do not bend either of the battery terminals.

FarmaSOS.com

## Checking and replacing fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.

- 1 Turn the engine switch off.
- 2 Open the fuse box cover.
  - ▶ Engine compartment: type A fuse box (left-hand drive vehicles)

Remove the engine compartment cover (→P. 763) and push the tabs in and lift the lid off.




- ▶ Engine compartment: type A fuse box (right-hand drive vehicles)

Remove the engine compartment cover (→P. 763) and push the tabs in and lift the lid off.




► Engine compartment (type B fuse box)

Remove the engine compartment cover (→P. 763) and push the tab in and lift the lid off.

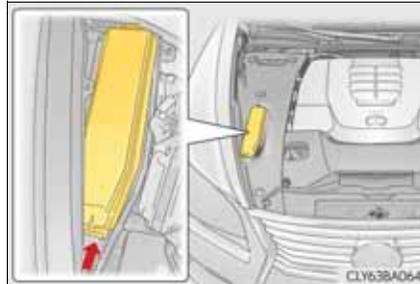

► Driver's side instrument panel

Remove the lid.

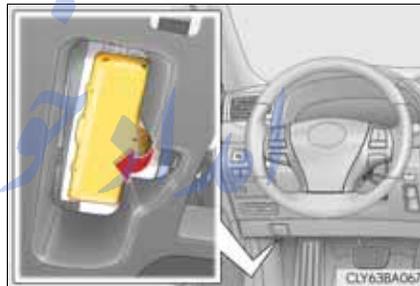


► Passenger's side instrument panel

Remove the lid.




## ► Trunk

Remove the lid.

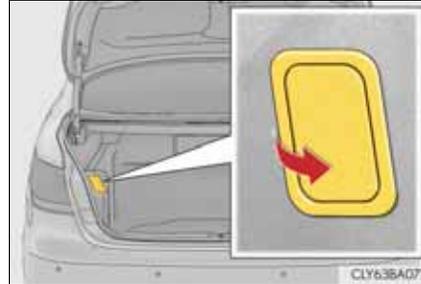

- 3** Remove the fuse with the pull-out tool.

Only type A fuse can be removed using the pullout tool.

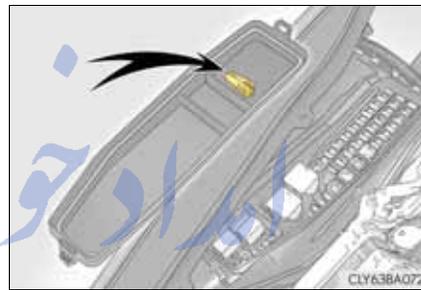

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

**4** Check if the fuse is blown.

- ① Normal fuse
- ② Blown fuse


Type A and B:

Replace the blown fuse with a new fuse of an appropriate amperage rating.  
The amperage rating can be found on the fuse box lid.


Type C and D:

Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

► Type A

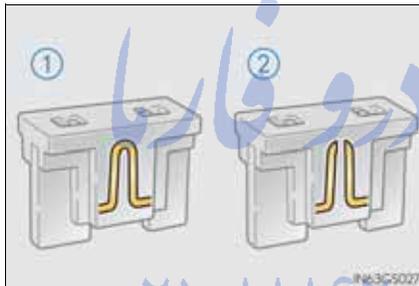

► Type B

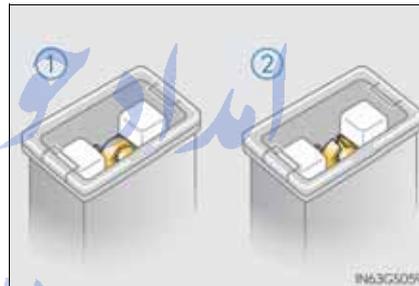

► Type C



► Type D تلفن شبانه



- After a fuse is replaced
  - If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P. 804)
  - If the replaced fuse blows again, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- If there is an overload in a circuit
 

The fuses are designed to blow, protecting the wiring harness from damage.

 CAUTION

- To prevent system breakdowns and vehicle fire
 

Observe the following precautions.  
Failure to do so may cause damage to the vehicle, and possibly a fire or injury.

  - Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
  - Always use a genuine Lexus fuse or equivalent.  
Never replace a fuse with a wire, even as a temporary fix.
  - Do not modify the fuses or fuse boxes.

 NOTICE

- Before replacing fuses
 

Have the cause of electrical overload determined and repaired by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.

## Light bulbs

You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. As there is a danger that components may be damaged, we recommend that replacement is carried out by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

### Preparing for light bulb replacement

Check the wattage of the light bulb to be replaced. (→P. 901)

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Bulb locations

- ▶ Vehicles with discharge headlights



- ① Headlight high beams or high beam/near-infrared ray transmitters

- ② Rear fog lights

- ▶ Vehicles with LED headlights

Rear fog lights



## Replacing light bulbs


- Headlight high beams or high beam/near-infrared ray transmitters (vehicles with discharge headlights)

**1** Remove the engine compartment covers. (→P. 763)

**2** Before replacing the bulbs:


▶ Left side

Remove the securing bolt, and remove the washer fluid filler opening.

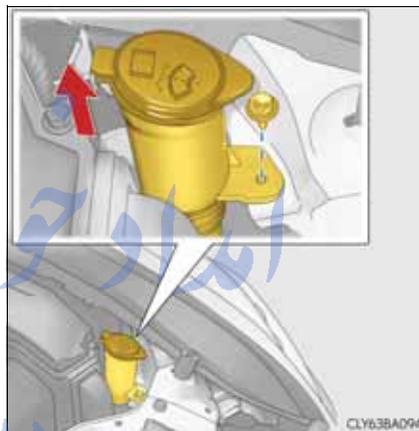


▶ Right side


Remove the securing bolts and nut, and move the fuse block.

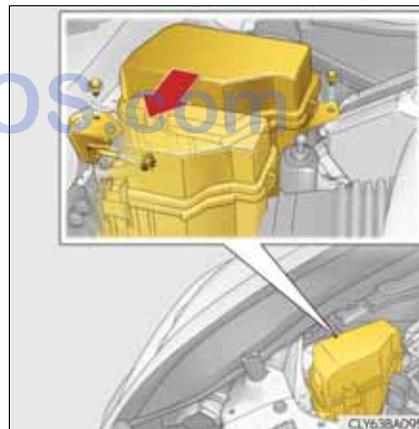

- 3 Turn the cover counter-clockwise and remove it.

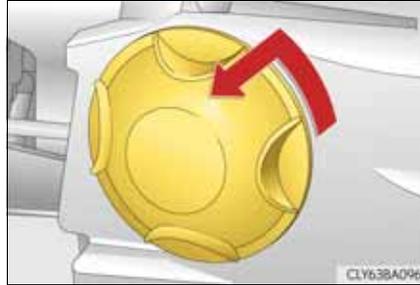

- 4 Turn the bulb base counter-clockwise.

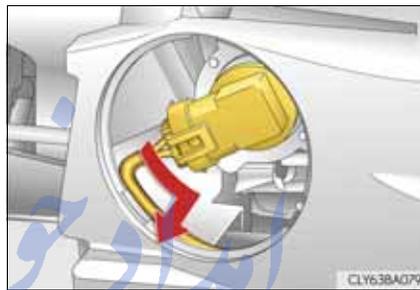

- 5 Remove the light bulb.




- 6** Replace the light bulb, and install the bulb base.

Align the 3 tabs on the light bulb with the mounting, and insert.



- 7** Turn and secure the bulb base.

Shake the bulb base gently to check that it is not loose, turn the headlights on once and visually confirm that no light is leaking through the mounting.

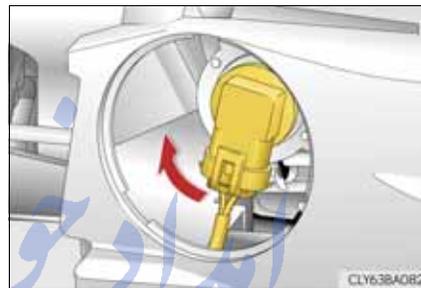

- 8** Install the cover and turn it clockwise.




- 9** Install by performing the reverse of **2**.
- 10** Install the engine compartment covers.

## ■ Rear fog lights

- 1 Open the trunk lid and remove the cover.



- 2 Turn the bulb base counter-clockwise.

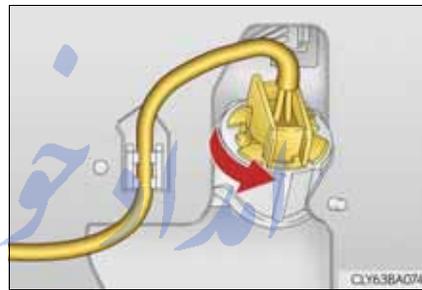

- 3 Remove the light bulb.



- 4 When installing, reverse the steps listed.

**■ Replacing the following bulbs**

If any of the lights listed below has burnt out, have it replaced by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- Front position lights and daytime running lights
- Front turn signal lights
- Front fog lights
- Side turn signal lights
- Outer foot lights
- Tail lights
- Stop lights
- Back-up lights
- Rear turn signal lights
- High mounted stoplight
- License plate lights
- ▶ Vehicles with discharge headlights: تلفن شبانه روزی: ۰۲۱ ۸۸۶۲۰۸۸
- Headlight low/high beams
- ▶ Vehicles with LED headlights
- Headlight low beams
- Headlight low/high beams
- Headlight high beams (vehicles without near-infrared ray transmitters)

---

**■ Discharge headlights (if equipped)**

If voltage to the discharge bulbs is insufficient, the bulbs may not come on, or may go out temporarily. The discharge bulbs will come on when normal power is restored.

■ LED light bulbs

The lights other than the headlight low/high beams (vehicles with discharge headlights), high beams or high beam/near-infrared ray transmitters (vehicles with discharge headlights), and rear fog lights each consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to any authorized Lexus dealer or repairer, or another duly qualified and equipped professional to have the light replaced.

■ Condensation build-up on the inside of the lens

Temporary condensation build-up on the inside of the headlight lens does not indicate a malfunction. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for more information in the following situations:

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the headlight.

**⚠ CAUTION**

■ Replacing light bulbs

- Turn off the lights. Do not attempt to replace the bulb immediately after turning off the lights.  
The bulbs become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture and oils on the bulb.  
Also, if the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulbs and any parts used to secure them. Failure to do so may result in heat damage, fire, or water entering the headlight unit. This may damage the headlights or cause condensation to build up on the lens.

**⚠ CAUTION**

- Discharge headlights (if equipped)
  - Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional before replacing the discharge headlights (including light bulbs).
  - Do not touch the discharge headlight's high voltage socket when the headlights are turned on.  
An extremely high voltage of 30000 V will be discharged and could result in death or serious injury by electric shock.
  - Do not attempt to take apart or repair the headlight bulbs, connectors, power supply circuits, or related components.  
Doing so could result in electric shock and death or serious injury.
- To prevent damage or fire
  - Make sure bulbs are fully seated and locked.
  - Check the wattage of the bulb before installing to prevent heat damage.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

امداد خودرو فارما

تلفن شبانه روزی: ۰۸۵-۸۸۸۶۲۰۲۱

FarmaSOS.com

6

Maintenance and care

## When trouble arises

## 7

7-1. Essential information	7-2. Steps to take in an emergency
Emergency flashers ..... 814	If your vehicle needs to be towed ..... 816
If your vehicle has to be stopped in an emergency ..... 815	If you think something is wrong ..... 822
	Fuel pump shut off system 823
	If a warning light turns on or a warning buzzer sounds ..... 824
	If a warning message is displayed ..... 832
	If you have a flat tire (vehicles with a spare tire) ..... 836
	If you have a flat tire (vehicles without a spare tire) ..... 847
	If the engine will not start. 865
	If the shift lever cannot be shifted from P ..... 867
	If the parking brake cannot be released ..... 869
	If the electronic key does not operate properly ..... 874
	If the vehicle battery is discharged ..... 877
	If your vehicle overheats .. 881
	If the vehicle becomes stuck ..... 885


## Emergency flashers

The emergency flashers are used to warn other drivers when the vehicle has to be stopped in the road due to a breakdown, etc.

Press the switch.

All the turn signals will flash.

To turn them off, press the switch once again.

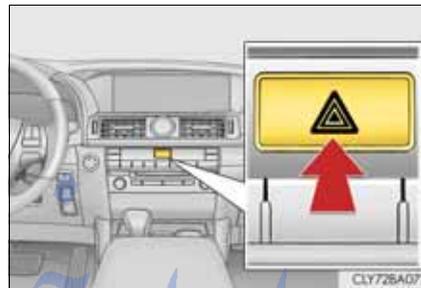

### ■ Emergency flashers

If the emergency flashers are used for a long time while the engine is not operating, the battery may discharge.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1 Steadily step on the brake pedal with both feet and firmly depress it.

Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.

- 2 Shift the shift lever to N.

► If the shift lever is shifted to N

- 3 After slowing down, stop the vehicle in a safe place by the road.

- 4 Stop the engine.

► If the shift lever cannot be shifted to N

- 3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

- 4 To stop the engine, press and hold the engine switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.



- 5 Stop the vehicle in a safe place by the road.

 CAUTION**■ If the engine has to be turned off while driving**

Power assist for the steering wheel will be lost, making the steering wheel heavier to turn. Decelerate as much as possible before turning off the engine.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional or a commercial towing service, using a lift-type truck or flatbed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.

### Before towing

The following may indicate a problem with your transmission. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional before towing.

- The engine is running but the vehicle will not move.
- The vehicle makes an abnormal sound.

### Emergency towing

If a tow truck is not available in an emergency, your vehicle may be temporarily towed using a cable or chain secured to the emergency towing eyelet. This should only be attempted on hard surfaced roads for short distances at low speeds.

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.




### Installing towing eyelet


**1** Take out the towing eyelet. (→P. 838, 849)

**2** Remove the eyelet cover using a flathead screwdriver.


To protect the bodywork, place a rag between the screwdriver and the vehicle body as shown in the illustration.

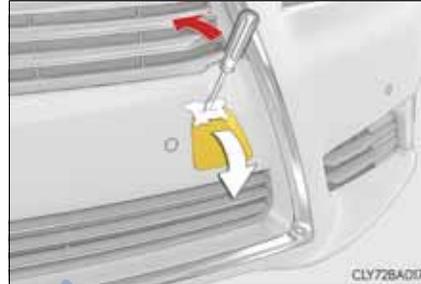

**3** Insert the towing eyelet into the hole and tighten partially by hand.

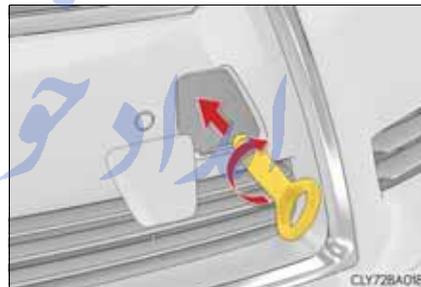

**4** Tighten down the towing eyelet securely using a wheel nut wrench.

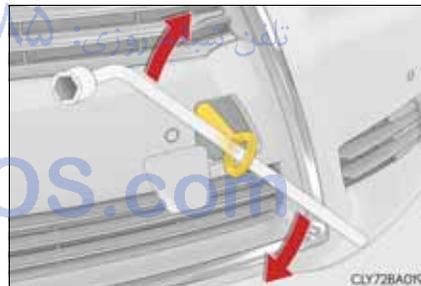


7

When trouble arises

### Towing with a sling-type truck


Do not tow with a sling-type truck to prevent body damage.

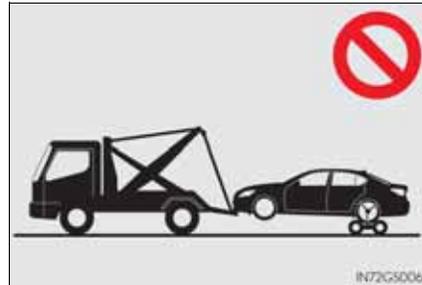

### Towing with a wheel-lift type truck

► From the front

Use a towing dolly under the rear wheels.

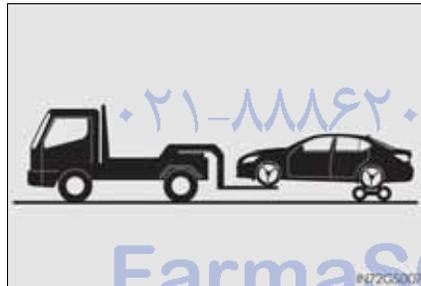


► From the rear (2WD models)

Turn the engine switch to ACCESSORY mode so that the steering wheel is unlocked.




► From the rear (AWD models)

Use a towing dolly under the front wheels.

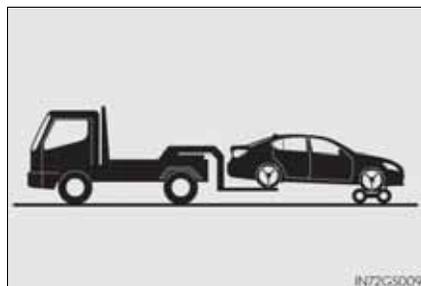


### Using a flat bed truck

If your Lexus is transported by a flat bed truck, it should be tied down at the locations shown in the illustration.

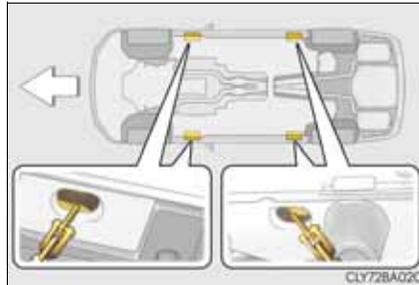

If you use chains or cables to tie down your vehicle, the angles shaded in black must be 45°.

Do not overly tighten the tie downs or the vehicle may be damaged.

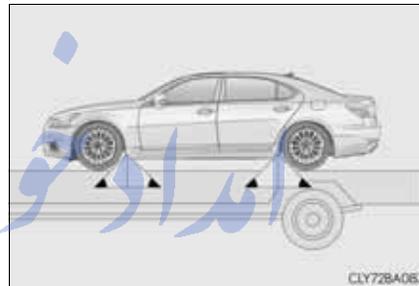

#### ■ Before emergency towing

- 1 Release the parking brake.
- 2 Shift the shift lever to N.
- 3 Turn the engine switch to ACCESSORY (engine off) or IGNITION ON (engine running) mode.

**⚠ CAUTION**

Observe the following precautions.

Failure to do so may result in death or serious injury.

**■ Caution while towing**

- Use extreme caution when towing the vehicle.

Avoid sudden starts or erratic driving maneuvers which place excessive stress on the emergency towing eyelet and the cables or chains. Always be cautious of the surroundings and other vehicles while towing.

- If the engine is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.

**■ Installing a towing eyelet to the vehicle**

Make sure that the towing eyelet is installed securely.

If not securely installed, the towing eyelet may come loose during towing.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

 NOTICE

- To prevent causing serious damage to the transmission and transfer (AWD models) when towing using a wheel-lift type truck

2WD models:

Never tow this vehicle from the front with the rear wheels on the ground.

AWD models:

Never tow this vehicle with any of the wheels in contact with the ground.

- To prevent damage to the vehicle when towing using a wheel-lift type truck

2WD models:

- Do not tow the vehicle from the rear with the engine switch off. The steering lock mechanism is not strong enough to hold the front wheels straight.

- When raising the vehicle from the rear, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed from the rear.

AWD models:

When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.

- To prevent body damage when towing with a sling-type truck

Do not tow with a sling-type truck, either from the front or rear.

- To prevent causing serious damage to the transmission and transfer (AWD models) in emergency towing

Never tow a vehicle from the rear with four wheels on the ground. This may cause serious damage to the transmission and transfer.

## If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.

### Visible symptoms

- Fluid leaks under the vehicle.  
(Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire wear
- Engine coolant temperature gauge needle continually points higher than normal.

### Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering: تلفن شبانه روزی: ۰۲۱ ۸۸۴۲۰۸۸
- Strange noises related to the suspension system
- Pinging or other noises related to the engine

### Operational symptoms

- Engine missing, stumbling or running roughly
- Appreciable loss of power
- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

## Fuel pump shut off system

To minimize the risk of fuel leakage when the engine stalls or when an airbag inflates upon collision, the fuel pump shut off system stops the supply of fuel to the engine.

Follow the procedure below to restart the engine after the system is activated.

- 1 Turn the engine switch to ACCESSORY mode or turn it off.
- 2 Restart the engine.

### NOTICE

- Before starting the engine  
Inspect the ground under the vehicle.  
If you find that fuel has leaked onto the ground, the fuel system has been damaged and is in need of repair. Do not restart the engine.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## If a warning light turns on or a warning buzzer sounds

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

The following warning indicates a possible problem in the brake system. Immediately stop the vehicle in a safe place and contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

Warning light	Warning light/Details
	Brake system warning light (warning buzzer) <ul style="list-style-type: none"> <li>• Low brake fluid</li> <li>• Malfunction in the electronically controlled brake system</li> </ul>

### Stop the vehicle immediately.

The following warning indicates the possibility of damage to the vehicle that may lead to an accident. Immediately stop the vehicle in a safe place and contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

Warning light	Warning light/Details
	Charging system warning light Indicates a malfunction in the vehicle's charging system

### Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.

Failure to investigate the cause of the following warnings may lead to the system operating abnormally and possibly cause an accident. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.

Warning light	Warning light/Details
	Malfunction indicator lamp Indicates a malfunction in: <ul style="list-style-type: none"> <li>• The electronic engine control system;</li> <li>• The electronic throttle control system; or</li> <li>• The electronic automatic transmission control system</li> </ul>
	SRS warning light Indicates a malfunction in: <ul style="list-style-type: none"> <li>• The SRS airbag system;</li> <li>• The seat belt pretensioner system; or</li> <li>• The active head restraints system (if equipped)</li> </ul>

Warning light	Warning light/Details
	ABS warning light Indicates a malfunction in: <ul style="list-style-type: none"><li>• The ABS; or</li><li>• The brake assist system</li></ul>

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

Warning light	Warning light/Details
	<p>Electric power steering system warning light Indicates a malfunction in the EPS (Electric Power Steering) system</p>
 (Flashes) (If equipped)	<p>Pre-crash safety system warning light Indicates a malfunction in the pre-crash safety system The warning light will operate as follows, even when the system is not malfunctioning:</p> <ul style="list-style-type: none"> <li>• The light will flash quickly when the system is operating. (→P. 355)</li> <li>• The light will turn on when the pre-crash braking is disabled. (→P. 349, 357)</li> <li>• The light will turn on when the system cannot temporarily be used.</li> </ul>
	<p>Slip indicator Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The VSC system;</li> <li>• The TRC system;</li> <li>• The ABS; or</li> <li>• The hill-start assist control system</li> </ul> <p>The light will flash when the VSC, the TRC, the ABS or the hill-start assist control system is operating. (→P. 348)</p>
 (Flashes)	<p>Brake hold operated indicator Indicates a malfunction in the brake hold system</p>
 (Flashes)	<p>Parking brake indicator Indicates a malfunction in the electric parking brake</p>
	<p>Brake system warning light Indicates a malfunction in:</p> <ul style="list-style-type: none"> <li>• The electronically controlled brake system; or</li> <li>• The electric parking brake</li> </ul>

### Follow the correction procedures.

After taking the specified steps to correct the suspected problem, check that the warning light goes off.

Warning light	Warning light/Details	Correction procedure
	Open door warning light (warning buzzer)* <sup>1</sup> Indicates that a door or the trunk is not fully closed	Check that all the doors and the trunk are closed.
 In the fuel gauge	Low fuel level warning light Indicates remaining fuel is approximately 13 L (3.4 gal., 2.8 Imp. gal.) or less	Refuel the vehicle.
	Seat belt reminder light (warning buzzer)* <sup>2</sup> Warns the driver and/or front passenger to fasten their seat belts	Fasten the seat belt. If the front passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) turn off.
	Master warning light A buzzer sounds and the warning light comes on and flashes to indicate that the master warning system has detected a malfunction.	→P. 833

Warning light	Warning light/Details	Correction procedure
	Tire pressure warning light	
	When the light comes on: Low tire inflation pressure such as <ul style="list-style-type: none"> <li>• Natural causes (→P. 830)</li> <li>• Flat tire (→P. 837, 848)</li> </ul>	Adjust the tire inflation pressure (including the spare tire) to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
	When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system (→P. 831)	Have the system checked by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

\*1: Open door warning buzzer: تلفن شبانه روزی: ۰۲۱-۸۸۶۲-۸۵

The open door warning buzzer sounds to alert one or more of the doors is not fully closed (with the vehicle having reached a speed of 5 km/h [3 mph]).

\*2: Driver's and front passenger's seat belt buzzer:

The driver's and front passenger's seat belt buzzer sounds to alert the driver and front passenger that his or her seat belt is not fastened. The buzzer sounds intermittently for 30 seconds after the vehicle reaches a speed of 20 km/h (12 mph). Then, if the seat belt is still unfastened, the buzzer will sound in a different tone for 90 more seconds.

- Front passenger detection sensor, seat belt reminder and warning buzzer
  - If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.
  - If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.
- Electric power steering system warning light

When the battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on.
- If the malfunction indicator lamp comes on while driving

The malfunction indicator lamp will come on if the fuel tank becomes completely empty. If the fuel tank is empty, refuel the vehicle immediately. The malfunction indicator lamp will go off after several trips.

If the malfunction indicator lamp does not go off, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.
- When the tire pressure warning light comes on

Carry out the following procedure after the tire temperature has lowered sufficiently.

  - Check the tire inflation pressure and adjust it to the appropriate level.
  - If the warning light does not go out after several minutes, check that the tire inflation pressure is at the specified level and carry out initialization.

The warning light may come on again if the above operations are conducted without first allowing the tire temperature to lower sufficiently.
- The tire pressure warning light may come on due to natural causes

The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

- When a tire is replaced with a spare tire (vehicles with a spare tire)

The spare tire is also equipped with a tire pressure warning valve and transmitter. The tire pressure warning light will turn on if the tire inflation pressure of the spare tire is low. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire.

- Conditions that the tire pressure warning system may not function properly

→P. 781

- If the tire pressure warning light frequently comes on after blinking for 1 minute

If the tire pressure warning light frequently comes on after blinking for 1 minute when the engine switch is turned to IGNITION ON mode, have it checked by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- Warning buzzer

In some cases, the buzzer may not be heard due to ambient noise or sounds from the audio system.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

 CAUTION

- If both the ABS and the brake system warning lights remain on  
Stop your vehicle in a safe place immediately and contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. The vehicle will become extremely unstable during braking, and the ABS system may fail, which could cause an accident resulting in death or serious injury.
- When the electric power steering system warning light comes on  
The steering wheel may become extremely heavy.  
If the steering wheel becomes heavier than usual when operating, hold firmly and operate using more force than usual.
- If the tire pressure warning light comes on  
Be sure to observe the following precautions. Failure to do so could cause a loss of vehicle control and result in death or serious injury.
  - Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
  - If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, change it with the spare tire and have the flat tire repaired by the nearest any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
  - Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.
- If a blowout or sudden air leakage should occur  
The tire pressure warning system may not activate immediately.

 NOTICE

- Precaution when installing a different tire  
When differently constructed tires or tires of different makers, models or tread patterns are installed, the tire pressure warning system may not operate properly.

## If a warning message is displayed

The multi-information display shows warnings for system malfunctions, incorrectly performed operations, and messages that indicate a need for maintenance. When a message is shown, perform the correction procedure appropriate to the message.

### ① Master warning light

The master warning light also comes on or flashes in order to indicate that a message is currently being displayed on the multi-information display.



### ② Multi-information display

If any of the warning messages is shown again after the following actions have been performed, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

### Messages and warnings

The warning lights and warning buzzers operate as follows depending on the content of the message. If a message indicates the need for inspection by a dealer, have the vehicle inspected immediately by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

	System warning light	Warning buzzer*	Warning
Remains on	—	Sounds	Indicates an important situation such as the malfunction of the system related to driving that may result in danger
—	Remains on or flashes	Sounds	Indicates an important situation such as the malfunction of the system shown on the multi-information display
Flashes	—	Sounds	Indicates a situation such as damage to the vehicle that may result in danger
Remains on	—	Does not sound	Indicates a condition such as a malfunction of electrical components and the need for maintenance
Flashes	—	Does not sound	Indicates a situation such as the incorrect performance of an operation and how to perform the operation correctly

\*: A buzzer sounds the first time a message is shown on the multi-information display.

■ Warning message in radar cruise mode (if equipped)

In the following cases, the warning message may not be displayed even if vehicle-to-vehicle distance decreases:

- When your vehicle and the vehicle ahead are traveling at the same speed or the vehicle ahead is traveling more quickly than your vehicle
- When the vehicle ahead is traveling at a very low speed
- Immediately after cruise control speed is set
- At the instant the accelerator pedal is depressed

■ The LKA (Lane-Keeping Assist) lane departure warning function (if equipped)

In the following cases, the warning message will not be displayed even if a lane line is crossed.

- When the vehicle speed deviates from the operating range of the LKA system functions
- When the lane lines cannot be recognized
- When the steering wheel is turned as far as necessary to cause the vehicle to change lanes

■ System warning lights

The master warning light does not come on or flash in the following cases. Instead, a separate system warning light will come on or flash along with the message shown on the multi-information display.

- Malfunction of the brake system  
The brake system warning light (red indicator) comes on. (→P. 824)
- Malfunction of the electronically controlled brake system or electric parking brake  
The brake system warning light (yellow indicator) comes on. (→P. 827)
- Malfunction of the ABS  
The ABS warning light comes on. (→P. 826)
- Malfunction of the charging system  
The charging system warning light comes on. (→P. 825)
- Indicates that a door or the trunk is not fully closed  
The open door warning light comes on. (→P. 828)
- High engine coolant temperature  
The needle of the engine coolant temperature gauge enters the red zone. (→P. 885)

■ When “Electrical equipment operation is limited” is shown

This message indicates that the battery is low. When the message is shown, operation of electrical equipment that uses a large amount of electric power, such as the air conditioning system, may be limited temporarily. This does not indicate a malfunction. Operation of electrical equipment will be restored after the battery is charged.

■ Warning buzzer

In some cases, the buzzer may not be heard due to ambient noise or sounds from the audio system.

امداد خودرو فارما

تلفن شبانه روزی: ۰۸۵-۸۸۸۶۲۰۲۱

FarmaSOS.com

## If you have a flat tire (vehicles with a spare tire)

Remove the flat tire and replace it with the spare tire provided.

For details about tires: →P. 776

### CAUTION

#### ■ If you have a flat tire

Do not continue driving with a flat tire.


Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

## Before jacking up the vehicle

- Stop the vehicle on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Stop the engine.
- Turn on the emergency flashers. (→P. 814)

FarmaSOS.com

### Location of the spare tire, jack and tools

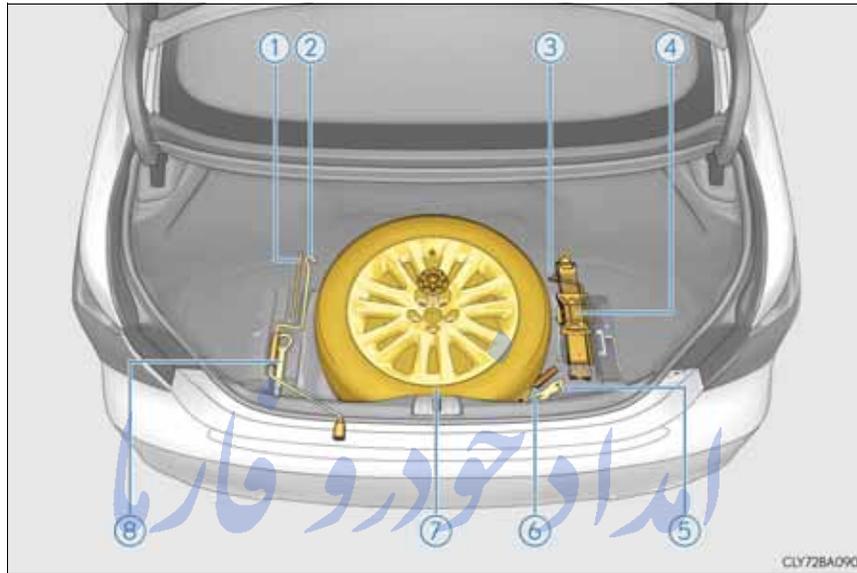

- |                              |                 |
|------------------------------|-----------------|
| ① Parking brake release tool | ⑤ Tools         |
| ② Jack handle                | ⑥ Screwdriver   |
| ③ Wheel nut wrench           | ⑦ Spare tire    |
| ④ Jack                       | ⑧ Towing eyelet |

FarmaSOS.com

**⚠ CAUTION****■ Using the tire jack**


Observe the following precautions.

Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.


- Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.
- Only use the tire jack that comes with this vehicle for replacing a flat tire. Do not use it on other vehicles, and do not use other tire jacks for replacing tires on this vehicle.
- Put the jack properly in its jack point.
- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start the engine or drive the vehicle while the vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- Be sure to turn off the height control and stop the engine.
- When lowering the vehicle, make sure that there is no-one near the vehicle. If there are people nearby, warn them vocally before lowering.

**Taking out the jack and jack handle**

- 1** Lift up the luggage mat and secure it by using the hook provided.  
(→P. 715)
- 2** Remove the tool tray.

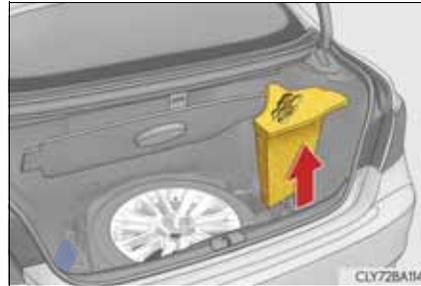

- 3** Remove the jack after removing the hook.

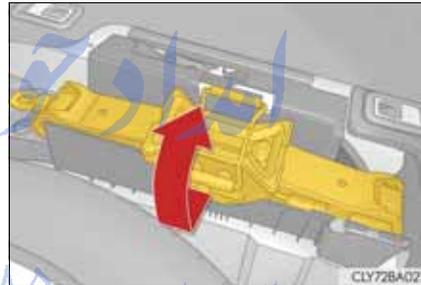


فارما سوس درو فارما  
تلفن شبانه روزی: ۰۸۵-۸۸۶۲۰۸۱-۲۱  
FarmaSOS.com

### Taking out the spare tire

1 Lift up the luggage mat and secure it by using the hook provided.  
(→P. 715)

2 Loosen the center fastener that secures the spare tire.

If the center fastener cannot be turned by hand, use the wheel nut wrench that is stored in the trunk.  
(To secure the tire, tighten the center fastener by hand. Do not use the wrench or other tools.)

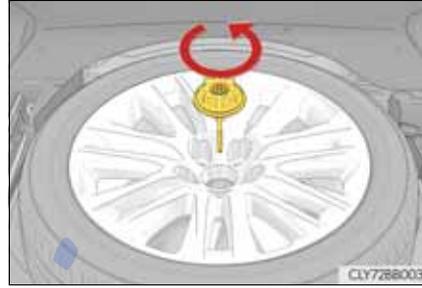

### ⚠ CAUTION

■ When storing the spare tire

Be careful not to catch fingers or other body parts between the spare tire and the body of the vehicle.


### Replacing a flat tire

1 Chock the tires.




Flat tire		Wheel chock positions
Front	Left-hand side	Behind the rear right-hand side tire
	Right-hand side	Behind the rear left-hand side tire
Rear	Left-hand side	In front of the front right-hand side tire
	Right-hand side	In front of the front left-hand side tire

- 2** Slightly loosen the wheel nuts (one turn).

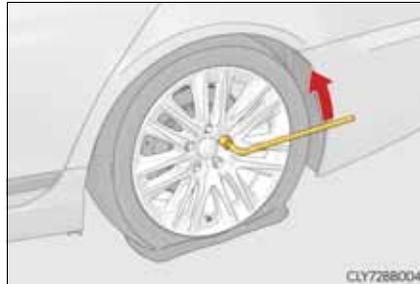

- 3** Turn the tire jack portion “A” by hand until the notch of the jack is in contact with the jack point.

The jack point guides are located under the rocker panel. They indicate the jack point positions.

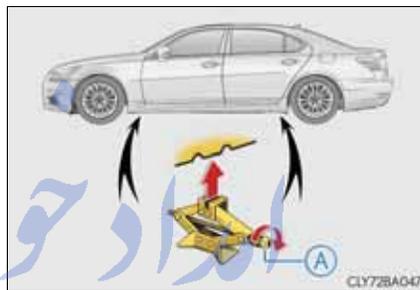

- 4** Raise the vehicle until the tire is slightly raised off the ground.




- 5** Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.



- 6 Remove the wheel ornament by pushing from the reverse side.

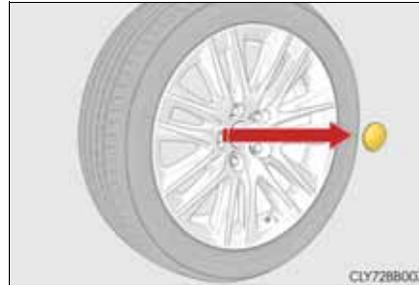

**⚠ CAUTION**

■ Replacing a flat tire

- Observe the following precautions.  
Failure to do so may result in serious injury:
  - Do not try to remove the wheel ornament by hand. Take due care in handling the ornament to avoid unexpected personal injury.
  - Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.  
After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.
- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
  - Never use oil or grease on the wheel bolts or wheel nuts.  
Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing a serious accident. Remove any oil or grease from the wheel bolts or wheel nuts.
  - Have the wheel nuts tightened with a torque wrench to 140 N•m (14.3 kgf•m, 103 ft•lbf) as soon as possible after changing wheels.
  - Do not attach a heavily damaged wheel ornament, as it may fly off the wheel while the vehicle is moving.
  - When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
  - If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

### Installing the spare tire


- 1 Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.



- 2 Install the spare tire and loosely tighten each wheel nut by hand by approximately the same amount.

Turn the wheel nuts until the washers come into contact with the disc wheel.

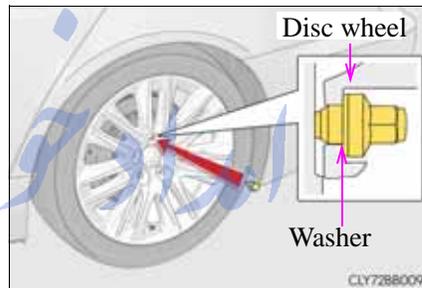

- 3 Lower the vehicle.



- 4 Firmly tighten each wheel nut two or three times in the order shown in the illustration.

Tightening torque:  
140 N•m (14.3 kgf•m, 103 ft•lbf)



- 5 Reinstall the wheel ornament.



- 6 Stow the flat tire, tire jack and all tools.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

■ Certification for the jack



**Manufacturer's Declaration of Conformity**

**Manufacturer:**

Kawasaki Industrial Co., Ltd.  
4618 Mukaijima Shimada, Shizuoka, Japan

**The EU Directives covered by this Declaration**

2006/42/EC Machinery Directive

**The product covered by this declaration**

JACK SUB-ASSY,PANTOGRAPH  
model  
0.8ton , 1.1ton , 1.35ton , 1.5ton

**The basis on which conformity is being declared**

The product identified above complies with the requirements of  
the Machinery Directive  
Directive above by meeting following standards

JIS D 8103  
تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

The technical documentation required to demonstrate that the product  
meets the requirement the Machinery Directive has been compiled by  
the signatory below and is available for inspection by the relevant  
enforcement authorities.

A sample of the product has been tested by the manufacturer

Technical File No: KSF-201-00-01

The CE mark was first applied in:2010

Done at Shizuoka, Japan

Signature:

Koji Kawasaki  
PRESIDENT ,Kawasaki Industrial Co., Ltd.

Date of Issue: 25 December,2009

 CAUTION

## ■ After using the tools and jack

Before driving, make sure all the tools and jack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

 NOTICE

## ■ When replacing the tires

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

## ■ To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P. 778)

FarmaSOS.com

7

When trouble arises

### If you have a flat tire (vehicles without a spare tire)

Your vehicle is equipped with an emergency tire puncture repair kit.

A puncture caused by a nail or screw passing through the tire tread can be repaired temporarily with the emergency tire puncture repair kit.

#### CAUTION

##### ■ If you have a flat tire


Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair. Driving with a flat tire may cause a circumferential groove on the side wall. In such a case, the tire may explode when using the emergency tire puncture repair kit, resulting in death or serious injury.

### Before repairing the vehicle

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Stop the engine.
- Turn on the emergency flashers. (→P. 814)

### Location of the emergency tire puncture repair kit, jack and tools

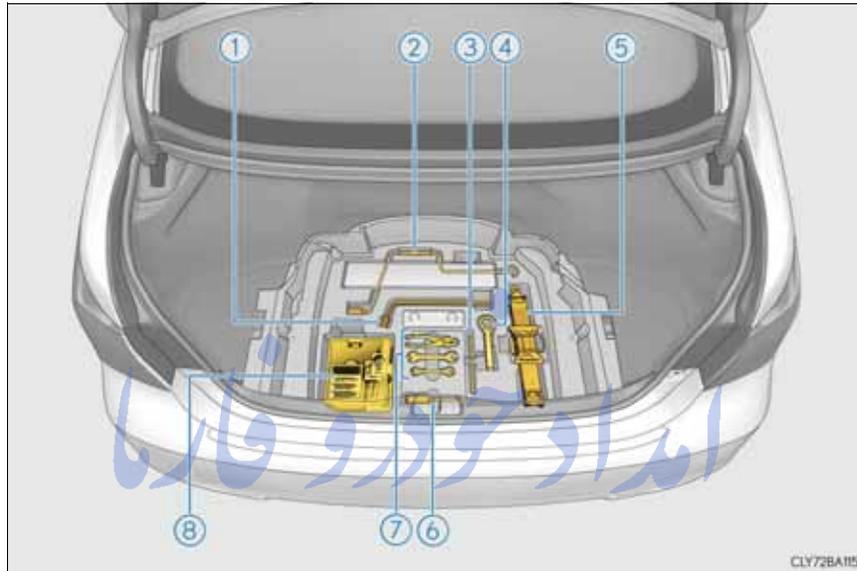

- |                              |                                      |
|------------------------------|--------------------------------------|
| ① Wheel nut wrench           | ⑤ Jack*                              |
| ② Jack handle                | ⑥ Screwdriver                        |
| ③ Parking brake release tool | ⑦ Tools                              |
| ④ Towing eyelet              | ⑧ Emergency tire puncture repair kit |


\*: Use of the jack (→P. 841)

7

When trouble arises

### Emergency tire puncture repair kit components

#### ■ Bottle

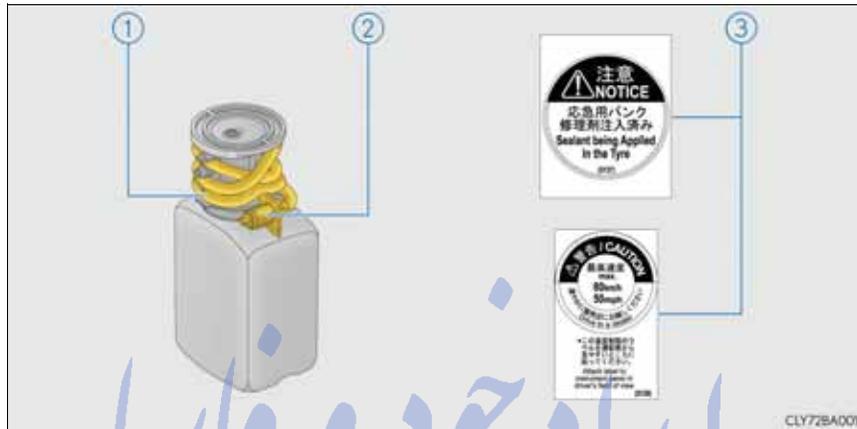

① Hose

② Air release cap

③ Stickers

#### ■ Compressor



① Compressor switch

② Air pressure gauge


③ Power plug

**Taking out the emergency tire puncture repair kit**

- 1** Lift up the handle and fold the trunk floor back. (→P. 715)
- 2** Remove the tool tray cover.



- 3** Take out the emergency tire puncture repair kit.

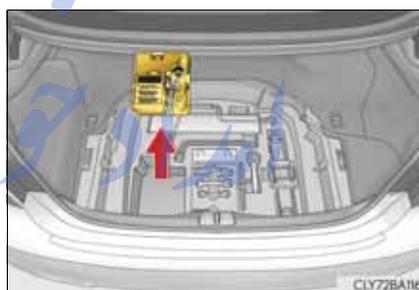


تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵


FarmaSOS.com

### Taking out the jack

- 1 Lift up the handle and fold the trunk floor back. (→P. 715)
- 2 Remove the tool tray cover.

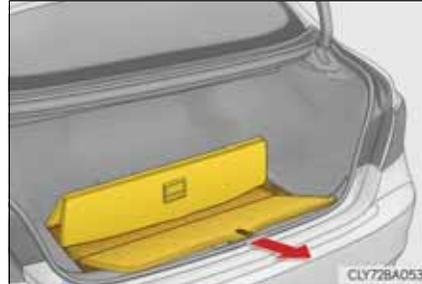

- 3 Remove the jack after removing the hook.

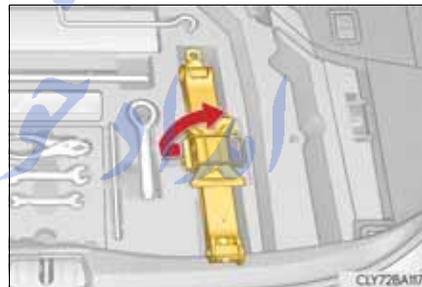

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### Before performing emergency repair

Check the degree of the tire damage.

A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a nail or screw passing through the tire tread.

- Do not remove the nail or screw from the tire. Removing the object may widen the opening and disable emergency repair with the kit.
- To avoid sealant leakage, move the vehicle until the area of the puncture, if known, is positioned at the top of the tire.



تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com


**Emergency repair method**

- 1** Remove the valve cap from the valve of the punctured tire.



- 2** Extend the hose. Remove the air release cap from the hose.

You will use the air release cap again. Therefore keep it in a safe place.

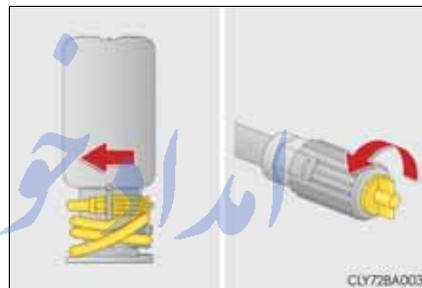


- 3** Connect the hose to the valve.


Screw the end of the hose clockwise as far as possible.




- 4** Make sure that the compressor switch is off.

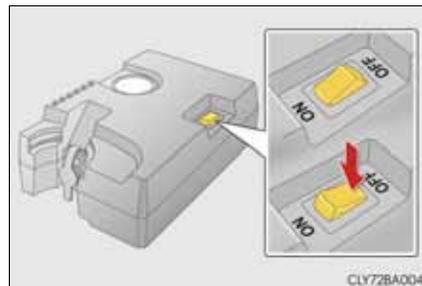

- 5** Lift the rubber stopper on the compressor.

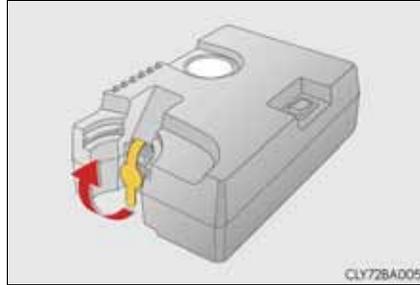

- 6** Remove the power plug from the compressor.

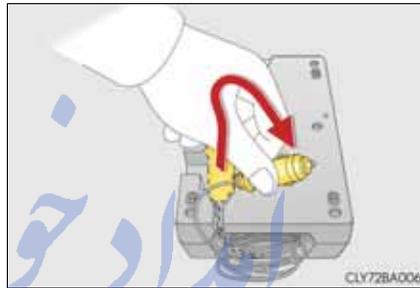


- 7** Connect the power plug to the power outlet socket. (→P. 723)

- 8** Connect the bottle to the compressor.  
Make sure that the bottle is securely connected.




- 9** Attach the 2 stickers as shown.

Remove any dirt and moisture from the wheel before attaching the label. If it is impossible to attach the label, make sure to tell any authorized Lexus dealer or repairer, or another duly qualified and equipped professional when you have them repair and replace the tire that sealant is injected.

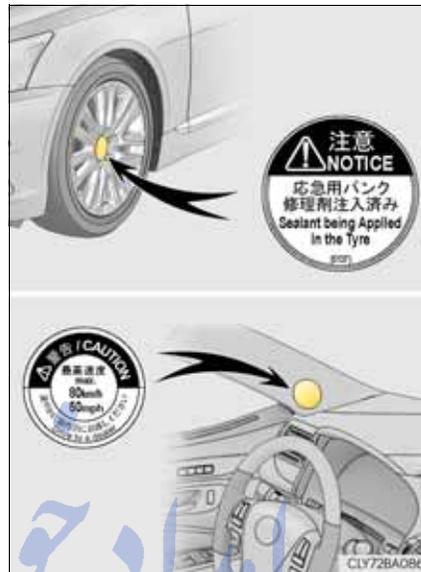


- 10** Check the specified tire inflation pressure.

Tire inflation pressure is specified on the label as shown. (→P. 899)

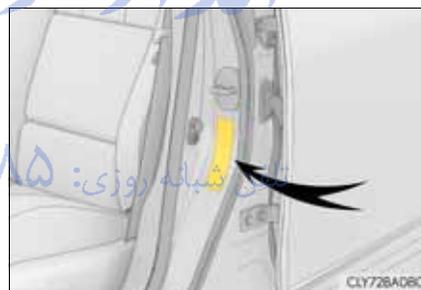

- 11** Start the engine. (→P. 207)

- 12** To inject the sealant and inflate the tire, turn the compressor switch on.

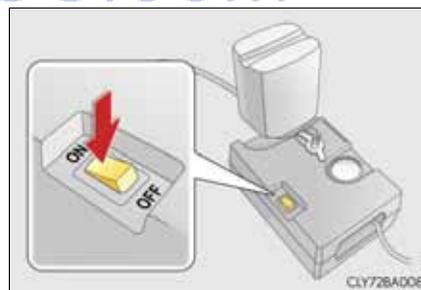


**13** Inflate the tire until the recommended pressure is reached.

① The sealant will be injected and the pressure will spike to 300 kPa (3.0 kgf/cm<sup>2</sup> or bar, 44 psi) or 400 kPa (4.0 kgf/cm<sup>2</sup> or bar, 58 psi), then gradually decrease.

② The air pressure gauge will display the actual tire inflation pressure about 1 minute (15 minutes at low temperature) after the switch is turned on.

- Turn the compressor switch off and then check the tire inflation pressure. Being careful not to over inflate, check and repeat the inflation procedure until the recommended tire inflation pressure is reached.
- If the tire inflation pressure is still lower than the recommended level after inflation for 10 minutes (35 minutes at low temperature) with the switch on, the tire is too damaged to be repaired. Turn the compressor switch off and contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- If the tire inflation pressure exceeds the recommended level, let out some air to adjust the tire inflation pressure.

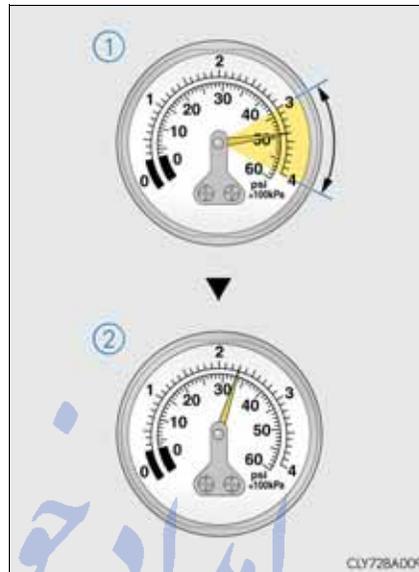

(→P. 862, 899)

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com


- 14** With the compressor switch off, disconnect the hose from the valve on the tire and then pull out the power plug from the power outlet socket.

Some sealant may leak when the hose is removed.

- 15** Install the valve cap onto the valve of the emergency repaired tire.

- 16** Attach the air release cap to the end of the hose.


If the air release cap is not attached, the sealant may leak and the vehicle may get dirty.

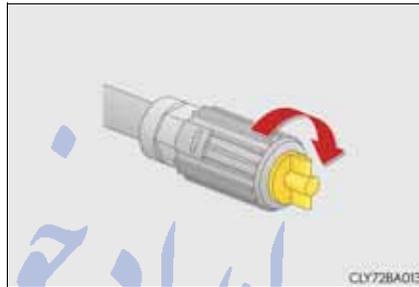

- 17** Temporarily store the bottle in the trunk while it is connected to the compressor.

- 18** To spread the liquid sealant evenly within the tire, immediately drive safely for about 5 km (3 miles) below 80 km/h (50 mph).

- 19** After driving, stop your vehicle in a safe place on a hard, flat surface and reconnect the compressor.

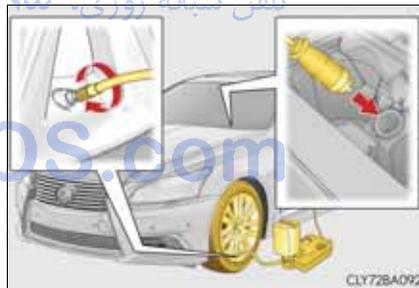

**20** Turn the compressor switch on and wait for several seconds, then turn it off. Check the tire inflation pressure.



① If the tire inflation pressure is below 130 kPa (1.3 kgf/cm<sup>2</sup> or bar, 19 psi): The puncture cannot be repaired. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.


② If the tire inflation pressure is between 130 kPa (1.3 kgf/cm<sup>2</sup> or bar, 19 psi) and a point below the recommended level: The tire can be repaired. Proceed to step **21**.

③ If the tire inflation pressure is at the recommended level: Proceed to step **22**.

**21** Turn the compressor switch on to inflate the tire until the recommended tire inflation pressure is reached. Drive for about 5 km (3 miles) and then perform step **19**.

**22** Attach the air release cap to the end of the hose.


If the air release cap is not attached, the sealant may leak and the vehicle may get dirty.

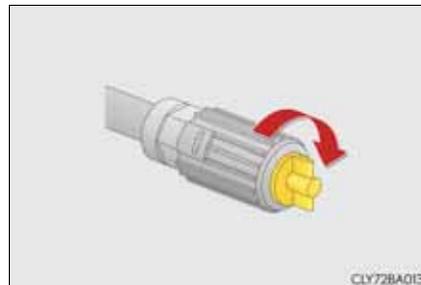

- 23** Store the bottle in the trunk while it is connected to the compressor.
- 24** Taking precautions to avoid sudden braking, sudden acceleration and sharp turns, drive carefully at under 80 km/h (50 mph) to any authorized Lexus dealer or repairer, or another duly qualified and equipped professional that is less than 100 km (62 miles) away for tire repair or replacement.

- 
- In the following cases, the tire cannot be repaired with the emergency tire puncture repair kit. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
    - When the tire is damaged due to driving without sufficient air pressure
    - When the tire lost air pressure due to a crack or damage in the tire sidewall
    - When the tire is visibly separated from the wheel
    - When the cut or damage to the tread is 4 mm (0.16 in.) long or more
    - When the wheel is damaged
    - When 2 or more sharp objects, such as nails or screws, have passed through the tread on a single tire
    - When there is more than one hole or cut in the damaged tire
    - When the sealant has expired

FarmaSOS.com

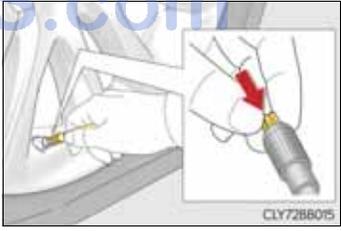- Emergency tire puncture repair kit
  - The sealant has a limited lifespan. The expiry date is marked on the bottle. The sealant should be replaced before the expiry date. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for replacement.
  - The sealant stored in the emergency tire puncture repair kit can be used only once to temporarily repair a single tire. If the sealant has been used and needs to be purchased, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. The compressor is reusable.
  - The sealant can be used when the outside temperature is from  $-40^{\circ}\text{C}$  ( $-40^{\circ}\text{F}$ ) to  $60^{\circ}\text{C}$  ( $140^{\circ}\text{F}$ ).
  - The kit is exclusively designed for size and type of tires originally installed on your vehicle. Do not use it for tires that a different size than the original ones, or for any other purposes.
  - If the sealant gets on your clothes, it may stain.
  - If the sealant adheres to a wheel or the surface of the vehicle body, the stain may not be removable if it is not cleaned at once. Immediately wipe away the sealant with a wet cloth.
  - During operation of the kit, a loud operation noise is produced. This does not indicate a malfunction.
  - Do not use the emergency tire puncture repair kit to check or to adjust the tire pressure.
- If the tire is inflated to more than the recommended level
  - 1 Disconnect the hose from the valve.
  - 2 Install the air release to the end of the hose and push the protrusion on the air release cap into the valve to let some air out.  
CLY72B8015
  - 3 Disconnect the hose from the valve, remove the air release cap from the hose and then reconnect the hose.
  - 4 Turn the compressor switch on and wait for several seconds, then turn it off. Check that the air pressure indicator shows the recommended level. (→P. 899)  
If the air pressure is lower than the recommended level, turn the compres-

switch on again and repeat the inflation procedure until the recommended pressure is reached.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

7

When trouble arises

- The valve of a tire that has been repaired
  - After a tire is repaired with the emergency tire puncture repair kit, the valve should be replaced.
  - After a tire is repaired with the emergency tire puncture repair kit, even if the tire inflation pressure is at the recommended level, the tire pressure warning light may come on/flash.
- Note for checking the emergency tire puncture repair kit

Check the sealant expiry date occasionally.

The expiry date is shown on the bottle. Do not use sealant whose expiry date has already passed. Otherwise, repairs conducted using the emergency tire puncture repair kit may not be performed properly.

 CAUTION

- Caution while driving

Observe the following precautions.  
Failure to do so may cause an accident.

  - The emergency tire puncture repair kit is made exclusively for your vehicle. Do not use it on other vehicles.
  - Do not use the emergency tire puncture repair kit for tires that are a different size than the specified ones or for any other purpose. Doing so may cause the tires to not be repaired properly. تلفن شبانه روزی: ۰۲۱-۸۸۸۰۰۰۰۰
- Precautions for use of the sealant
  - Ingesting the sealant is hazardous to your health. If you ingest sealant, consume as much water as possible, then immediately consult a doctor.
  - If sealant gets in eyes or adheres to skin, immediately wash it off with water. If discomfort persists, consult a doctor.

 CAUTION

## ■ When fixing the flat tire

- Stop your vehicle in a safe and flat area.
- Do not touch the wheels or the area around the brakes immediately after the vehicle has been driven.  
After the vehicle has been driven, the wheels and the area around the brakes may be extremely hot. Touching these areas with hands, feet or other body parts may result in burns.
- Connect the valve and hose securely with the tire installed on the vehicle.
- If the hose is not properly connected to the valve, air leakage may occur or sealant may be sprayed out.
- If the hose comes off the valve while inflating the tire, there is a risk that the hose will move abruptly due to air pressure.
- After inflation of the tire has completed, the sealant may splatter when the hose is disconnected or some air is let out of the tire.
- Follow the operation procedure to repair the tire. If the procedure is not followed, the sealant may spray out.
- Keep back from the tire while it is being repaired, as there is a chance of it bursting while the repair operation is being performed. If you notice any cracks or deformation of the tire, turn off the compressor switch and stop the repair operation immediately.
- The kit may overheat if operated for a long period of time. Do not operate the compressor continuously for more than 35 minutes.
- Parts of the kit become hot during operation. Be careful handling the kit during and after operation. Do not touch the metal part around the connecting area between the bottle and compressor. It will be extremely hot.
- Do not attach the vehicle speed warning sticker to an area other than the one indicated. If the sticker is attached to an area where an SRS airbag is located, such as the pad of the steering wheel, it may prevent the SRS air bag from operating properly.

**⚠ CAUTION**

- Driving to spread the liquid sealant evenly
  - Drive the vehicle carefully at a low speed. Be especially careful when turning and cornering.
  - If the vehicle does not drive straight or you feel a pull through the steering wheel, stop the vehicle and check the following:
    - Tire condition. The tire may have separated from the wheel.
    - Tire inflation pressure. If tire inflation pressure is 130 kPa (1.3 kgf/cm<sup>2</sup> or bar, 19 psi) or below, this may indicate severe tire damage.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

 NOTICE

- When performing an emergency repair
  - Perform the emergency repair without removing the nail or screw that has punctured the tread of the tire. If the object that has punctured the tire is removed, repair by the emergency tire puncture repair kit may not be possible.
  - The kit is not waterproof. Make sure that the kit is not exposed to water, such as when it is being used in the rain.
  - Do not put the kit directly onto dusty ground such as sand at the side of the road. If the kit vacuums up dust etc., a malfunction may occur.
- Handling the emergency tire puncture repair kit
  - The compressor power source should be 12 V DC suitable for vehicle use. Do not connect the compressor to any other source.
  - If gasoline splatters on the kit, the kit may deteriorate. Take care not to allow gasoline to contact it.
  - Store the emergency tire puncture repair kit in the trunk. The kit may be thrown around during sudden braking and so forth, damaging the kit.
  - Store the kit in its assigned place out of reach of children.
  - Do not disassemble or modify the kit. Do not subject parts such as the air pressure indicator to impacts. This may cause a malfunction.
- To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when replacing the tire. (→P. 778)

## If the engine will not start

If the engine will not start even though correct starting procedures are being followed (→P. 207), consider each of the following points:

The engine will not start even though the starter motor operates normally.

One of the following may be the cause of the problem:

- There may not be sufficient fuel in the vehicle's tank.  
Refuel the vehicle.
- The engine may be flooded.  
Try to restart the engine again following correct starting procedures. (→P. 207)
- There may be a malfunction in the engine immobilizer system.  
(→P. 82)

The starter motor turns over slowly, the interior lights and headlights are dim, or the horn does not sound or sounds at a low volume.

One of the following may be the cause of the problem:

- The battery may be discharged. (→P. 880)
- The battery terminal connections may be loose or corroded.

The starter motor does not turn over

The engine starting system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse. However, an interim measure is available to start the engine. (→P. 869)

The starter motor does not turn over, the interior lights and headlights do not turn on, or the horn does not sound.

One of the following may be the cause of the problem:

- One or both of the battery terminals may be disconnected.
- The battery may be discharged. (→P. 880)
- There may be a malfunction in the steering lock system.

Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional if the problem cannot be repaired, or if repair procedures are unknown.

### Emergency start function

When the engine does not start, the following steps can be used as an interim measure to start the engine if the engine switch is functioning normally:

- 1 Turn the engine switch to IGNITION ON mode (→P. 208) and check that the parking brake is set.
- 2 Shift the shift lever to P.
- 3 Turn the engine switch to ACCESSORY mode.
- 4 Press and hold the engine switch for about 15 seconds while depressing the brake pedal firmly.

Even if the engine can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

## If the shift lever cannot be shifted from P

If the shift lever cannot be shifted with your foot on the brake pedal, there may be a problem with the shift lock system (a system to prevent accidental operation of the shift lever). Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted:

- 1 Turn the engine switch to IGNITION ON mode (→P. 208) and check that the parking brake is set.
- 2 Turn the engine switch to ACCESSORY mode.
- 3 Depress the brake pedal.

► Left-hand drive vehicles

- 4 Pry the cover up with a flat-head screwdriver or equivalent tool.

To prevent damage to the cover, cover the tip of the screwdriver with a rag.



- 5 Press the shift lock override button.


The shift lever can be shifted while the button is pressed.



► Right-hand drive vehicles


- 4** Pry the cover up with a flat-head screwdriver or equivalent tool.

To prevent damage to the cover, cover the tip of the screwdriver with a rag.

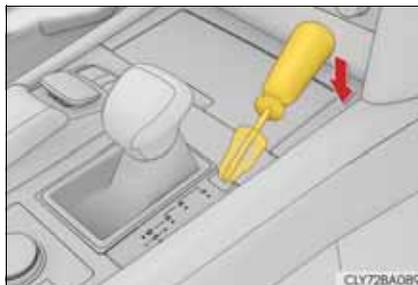

- 5** Press the shift lock override button.

The shift lever can be shifted while the button is pressed.

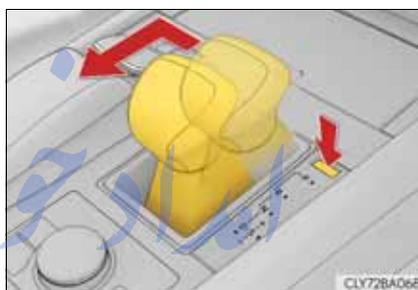

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## If the parking brake cannot be released

In the event that the battery is discharged or switch operation does not release the parking brake, the parking brake can be released manually using the procedure below. This procedure should be performed only if necessary, such as in an emergency.

If the switch cannot be operated even when the battery is normal, the parking brake system may be malfunctioning. Have the vehicle inspected by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately.


### Before releasing the parking brake manually

- Shift the shift lever to P.
- Turn the engine switch off.
- Check that the parking brake indicator is off.
- Chock the tires.

### Releasing the parking brake manually


► Vehicles with a spare tire

- 1 Take out the parking brake release tool and the screwdriver from the trunk. (→P. 838)
- 2 Replace the screwdriver head with the parking brake release tool.

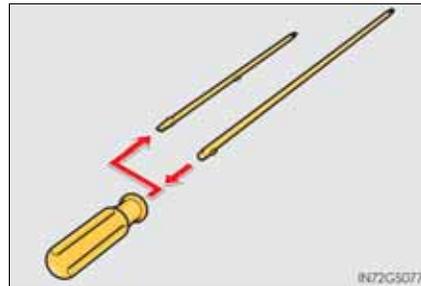


- 3 Take out the spare tire. (→P. 841)

- 4** Remove the plug.

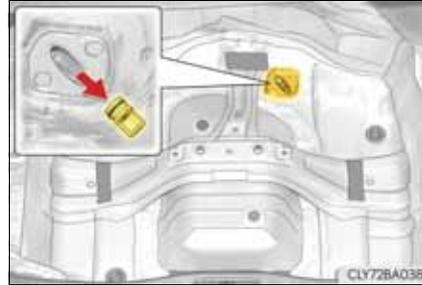


- 5** Insert the tool and press it down firmly while turning it counterclockwise until it stops.

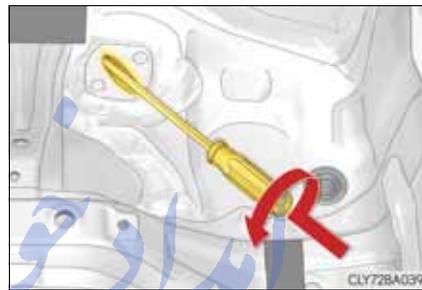


► Vehicles without a spare tire

- 1** Take out the parking brake release tool and the screwdriver from the trunk. (→P. 849)
- 2** Check that the flathead end of the screwdriver is exposed.


If the Phillips end is exposed, reinsert the screwdriver shaft so the flathead end is exposed.

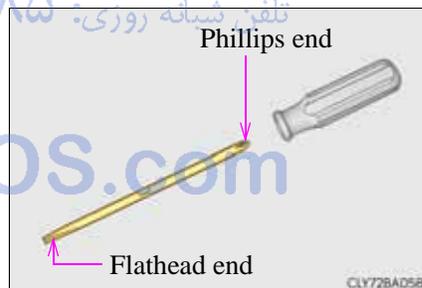

- 3 Using the flathead end of the screwdriver, remove the clips.  
When installing the tool tray clips:  
→P. 875

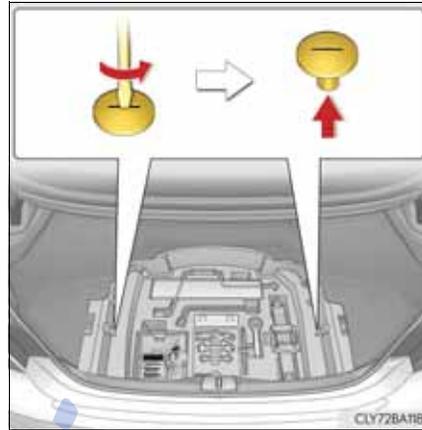


- 4 While lifting the inner corners of the right and left side deck boards, pull out the tool tray.

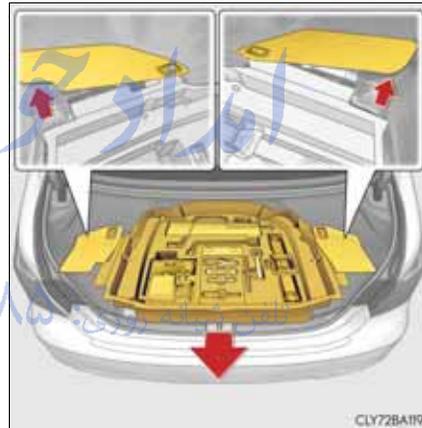


- 5 Take out the tool tray guard.



- 6 Remove the plug.

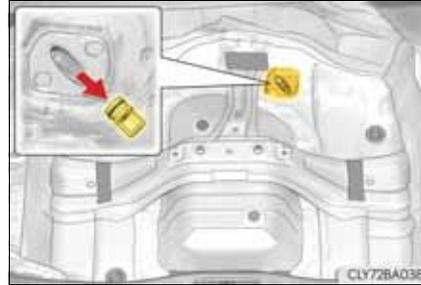

- 7 Replace the screwdriver head with the parking brake release tool.

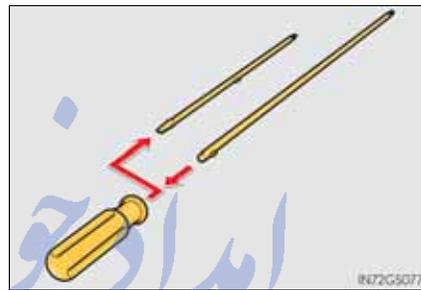

- 8 Insert the tool and press it down firmly while turning it counterclockwise until it stops.



- When installing the tool tray clips (vehicles without a spare tire)

Install the clips as shown in the illustration.



- Manual operation of the parking brake

The parking brake cannot be set manually.

**⚠ CAUTION**

- When releasing the parking brake manually
  - Shift the shift lever to P, turn the engine switch off and chock the tires. Failure to do so may cause the vehicle to move, resulting in an accident.
  - Turn the engine switch off and check that the parking brake indicator is off. Failure to do so may cause the system to operate and turn the inserted parking brake release tool, resulting in an injury.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## If the electronic key does not operate properly

If communication between the electronic key and vehicle is interrupted (→P. 132) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors and trunk can be opened and the engine can be started by following the procedure below.

### Locking and unlocking the doors, unlocking the trunk and key linked functions

Use the mechanical key built in to the electronic keys to operate the doors. (→P. 115)

Vehicles with an alarm: An alarm will sound if the alarm is set when the trunk or doors are unlocked. (→P. 88)

#### ■ Doors


- 1 Remove the cover on the driver's door handle.




**2** Locks and unlocks the doors

- ① Locks all the doors
- ② Closes the windows and moon roof\* (turn and hold)
- ③ Unlocks all the doors
- ④ Opens the windows and moon roof\* (turn and hold)

\*: If equipped

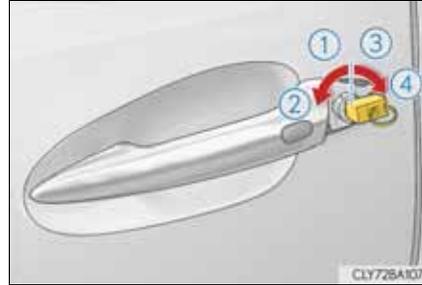**3** After the operation is completed, reinstall the cover.


Hook the upper claw of the cover onto the upper catch on the vehicle side, and then push on the lower side of the cover.

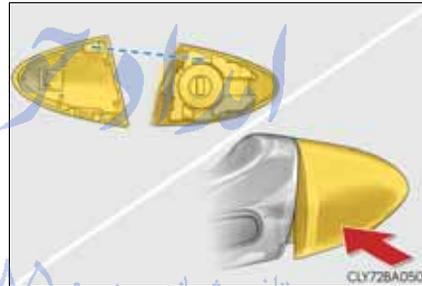

Make sure that the lower claw of the cover is securely fastened to the lower catch on the vehicle side. If the cover is not securely attached, it may fall off while driving.

■ Trunk

Turn the mechanical key clockwise to open.

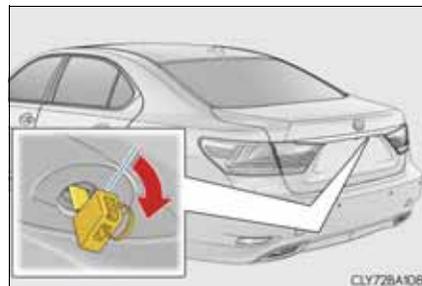


### Starting the engine

**1** Ensure that the shift lever is in P and depress the brake pedal.

**2** Touch the Lexus emblem side of the electronic key to the engine switch.

If any of the doors is opened or closed after the key was touched to the switch to start the vehicle, an alarm will sound to indicate that the start function cannot detect the key.

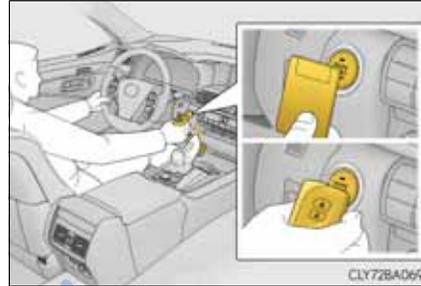

**3** Press the engine switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the engine still cannot be started, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

#### ■ Stopping the engine

Shift the shift lever to P and press the engine switch as you normally do when stopping the engine.

#### ■ Replacing the key battery

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P. 796)

#### ■ Alarm (if equipped)

Using the mechanical key to lock the doors will not set the alarm system. If a door is unlocked using the mechanical key when the alarm system is set, the alarm may be triggered.

#### ■ Changing engine switch modes

Within 10 seconds of the buzzer sounding, release the brake pedal and press the engine switch.

The engine does not start and modes will be changed each time the switch is pressed. (→P. 208)

## If the vehicle battery is discharged

The following procedures may be used to start the engine if the vehicle's battery is discharged.

You can also call any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.

- 1 Open the hood. Remove the engine compartment covers and battery cover. (→P. 757, 763, 765)


امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵


FarmaSOS.com

**2** Connect the jumper cables according to the following procedure:

► Left-hand drive vehicles

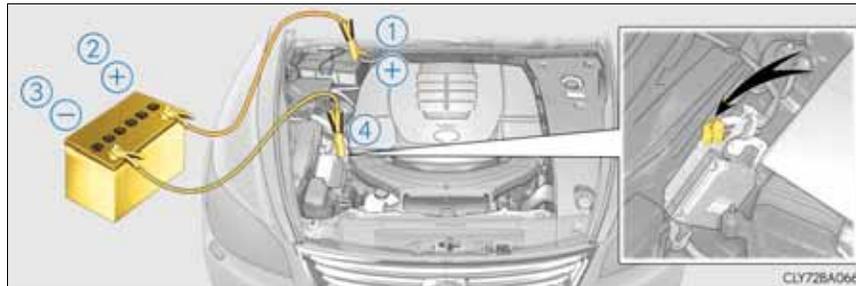

► Right-hand drive vehicles

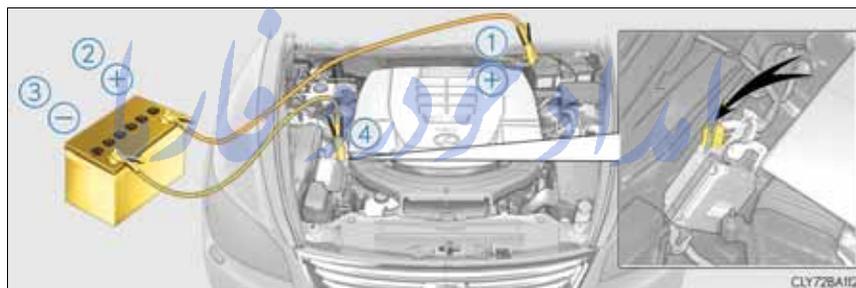

- ① Connect a positive jumper cable clamp to the positive (+) battery terminal on your vehicle.
- ② Connect the clamp on the other end of the positive cable to the positive (+) battery terminal on the second vehicle.
- ③ Connect a negative cable clamp to the negative (-) battery terminal on the second vehicle.
- ④ Connect the clamp at the other end of the negative cable to a solid, stationary, unpainted metallic point away from the battery and any moving parts, as shown in the illustration.

- 3 Start the engine of the second vehicle. Increase the engine speed slightly and maintain at that level for approximately 5 minutes to recharge the battery of your vehicle.
- 4 Open and close any of the doors of your vehicle with the engine switch off.
- 5 Maintain the engine speed of the second vehicle and start the engine of your vehicle by turning the engine switch to IGNITION ON mode.
- 6 Once the vehicle's engine has started, remove the jumper cables in the exact reverse order from which they were connected.

Once the engine starts, have the vehicle inspected at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional as soon as possible.

---

■ Starting the engine when the battery is discharged

The engine cannot be started by push-starting.

■ To prevent battery discharge

- Turn off the headlights and the audio system while the engine is off.
- Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

■ Charging the battery

The electricity stored in the battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the battery may discharge, and the engine may be unable to start. (The battery recharges automatically during driving.)

■ When recharging or replacing the battery

- Vehicles with an alarm: Make sure that the key is not inside the vehicle when recharging or replacing the battery. The key may be locked in the vehicle if the alarm is activated. (→P. 90)
- In some cases, it may not be possible to unlock the doors using the smart entry & start system when the battery is discharged. Use the wireless remote control or the mechanical key to lock or unlock the doors.

■ If the battery is discharged

The information stored in the computer will be deleted.  
If the battery is discharged, have the vehicle inspected at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

7

When trouble arises

 CAUTION

## ■ Avoiding battery fires or explosions

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the other end of the jumper cable connected to the “+” terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and - clamps of the jumper cables to come into contact with each other.
- Do not smoke, use matches, cigarette lighters or allow open flame near the battery.

## ■ Battery precautions

The battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the battery:

- When working with the battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention. Place a wet sponge or cloth over the affected area until medical attention can be received.
- Always wash your hands after handling the battery support, terminals, and other battery-related parts.
- Do not allow children near the battery.

 NOTICE

## ■ When handling jumper cables

When connecting the jumper cables, ensure that they do not become entangled in the cooling fans or engine drive belt.

## If your vehicle overheats

The following may indicate that your vehicle is overheating.

- The needle of the engine coolant temperature gauge (→P. 102) enters the red zone or a loss of engine power is experienced. (For example, the vehicle speed does not increase.)
- Steam comes out from under the hood.

### Correction procedures

- 1 Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the engine.
- 2 If you see steam:  
Carefully lift the hood after the steam subsides.

If you do not see steam:  
Carefully lift the hood.

- 3 After the engine has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.


- ① Radiator
- ② Cooling fans

If a large amount of coolant leaks, immediately contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.




- 4 The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir.

- ① Reservoir
- ② “FULL”
- ③ “LOW”

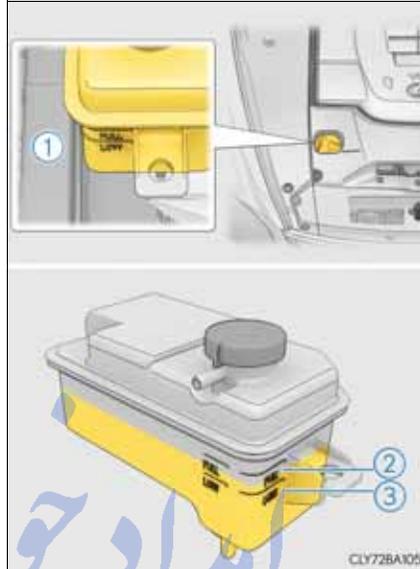

- 5 Add coolant if necessary.  
(→P. 763)

Water can be used in an emergency if coolant is unavailable.

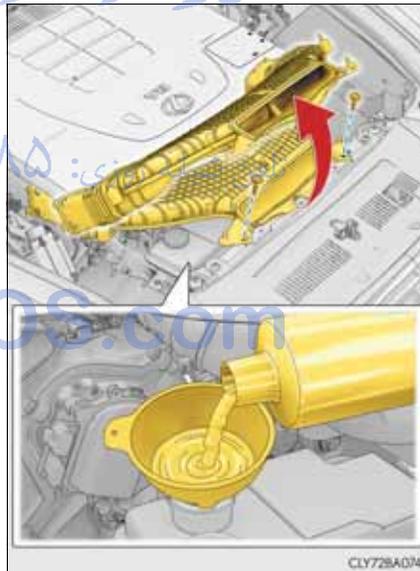

- 6 Start the engine and turn the air conditioning system on to check that the radiator cooling fan operates and to check for coolant leaks from the radiator or hoses.

The fan operates when the air conditioning system is turned on immediately after a cold start. Confirm that the fan is operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly.

(The fan may not operate in freezing temperatures.)

- 7 If the fan is not operating:

Stop the engine immediately and contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

If the fan is operating:

Have the vehicle inspected at the nearest any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵


FarmaSOS.com

**⚠ CAUTION****■ When inspecting under the hood of your vehicle**

Observe the following precautions.

Failure to do so may result in serious injury such as burns.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- Keep hands and clothing (especially a tie, a scarf or a muffler) away from the fans and belts. Failure to do so may cause the hands or clothing to be caught, resulting in serious injury.
- Do not loosen the coolant reservoir cap while the engine and radiator are hot. High temperature steam or coolant could spray out.

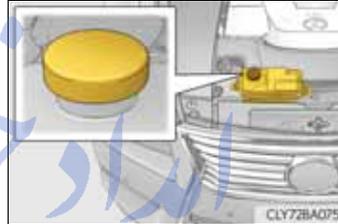**⚠ NOTICE****■ When adding engine coolant**

Add coolant slowly after the engine has cooled down sufficiently. Adding cool coolant to a hot engine too quickly can cause damage to the engine.

**■ To prevent damage to the cooling system**

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust etc.).
- Do not use any coolant additive.


## If the vehicle becomes stuck

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

- 1 Stop the engine. Set the parking brake and shift the shift lever to P.
- 2 Remove the mud, snow or sand from around the rear wheels.
- 3 Place wood, stones or some other material under the rear wheels to help provide traction.
- 4 Restart the engine.
- 5 Shift the shift lever to D or R and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

### ■ When it is difficult to free the vehicle

Press  to turn off TRC.

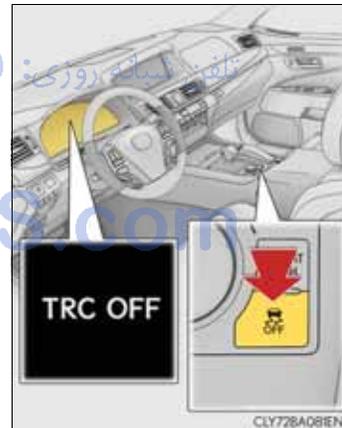

 CAUTION**■ When attempting to free a stuck vehicle**

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

**■ When shifting the shift lever**

Be careful not to shift the shift lever with the accelerator pedal depressed. This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.

 NOTICE**■ To avoid damaging the transmission and other components**

- Avoid spinning the rear wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## Vehicle specifications

## 8

## 8-1. Specifications

Maintenance data  
(fuel, oil level, etc.)..... 888

Fuel information ..... 902

## 8-2. Customization

Customizable features..... 904

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

## Maintenance data (fuel, oil level, etc.)

### Dimensions and weights

#### ► Dimensions

Overall length		5090 mm (200.4 in.)	
Overall width		1875 mm (73.8 in.)	
Overall height* <sup>1</sup>		1465 mm (57.7 in.)* <sup>2</sup> 1455 mm (57.3 in.)* <sup>3</sup>	
Wheelbase		2970 mm (116.9 in.)	
Tread	Front	1615 mm (63.6 in.)* <sup>4</sup> 1610 mm (63.4 in.)* <sup>5</sup>	
	Rear	2WD models	1620 mm (63.8 in.)* <sup>4</sup> 1615 mm (63.6 in.)* <sup>5</sup>
		AWD models	1615 mm (63.6 in.)

#### ► Weights

Gross vehicle mass		2455 kg (5412 lb.)* <sup>6</sup> 2575 kg (5677 lb.)* <sup>7</sup>
Maximum permissible capacity	Front	1235 kg (2723 lb.)* <sup>6</sup> 1385 kg (3053 lb.)* <sup>7</sup>
	Rear	1365 kg (3009 lb.)* <sup>6</sup> 1385 kg (3053 lb.)* <sup>7</sup>

\*<sup>1</sup>: Unladen vehicles

\*<sup>2</sup>: Vehicles without paddle shift switches

\*<sup>3</sup>: Vehicles with paddle shift switches

\*<sup>4</sup>: Vehicles with 18-inch tires

\*<sup>5</sup>: Vehicles with 19-inch tires

\*<sup>6</sup>: 2WD models


\*<sup>7</sup>: AWD models

## Vehicle identification

### ■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.

This number is stamped on the top left of the instrument panel and in the engine compartment.

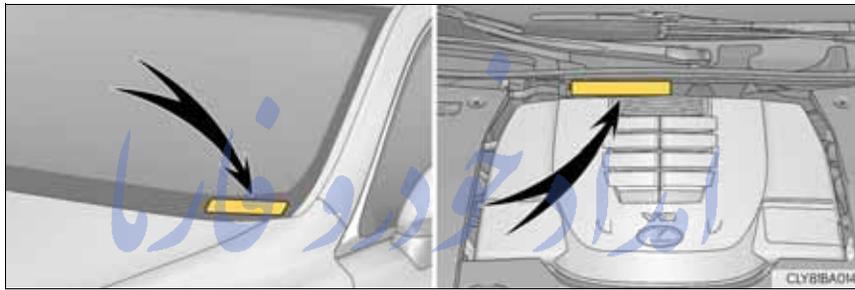


This number is also on the manufacturer's label.



## ■ Engine number


## ▶ 2WD models

The engine number is stamped on the engine block as shown.

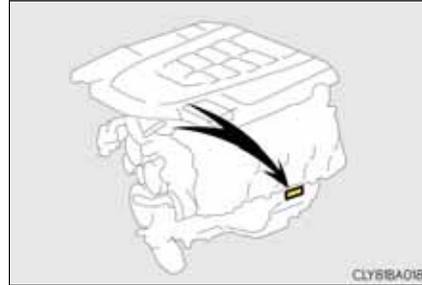

## ▶ AWD models

The engine number is stamped on the engine block as shown.

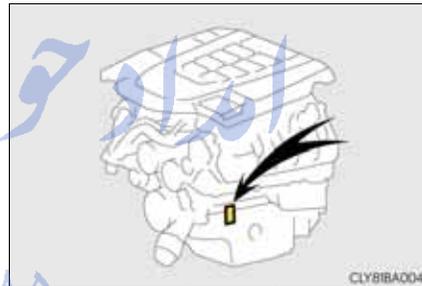

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### Engine

Model	1UR-FSE
Type	8-cylinder V type, 4-cycle, gasoline
Bore and stroke	94.0 × 83.0 mm (3.70 × 3.27 in.)
Displacement	4608 cm <sup>3</sup> (281.2 cu.in.)
Valve clearance (engine cold)	Automatic adjustment
Drive belt tension	Automatic adjustment

### Fuel

Fuel type	EU area: Premium unleaded gasoline conforming to European standard EN228 only Except EU area: Premium unleaded gasoline only
Research Octane Number	95 or higher
Fuel tank capacity (Reference)	84 L (22.2 gal., 18.4 Imp. gal.)

FarmaSOS.com

## Lubrication system

Oil capacity Drain and refill (Reference*) With filter	
2WD models	8.6 L (9.1 qt., 7.6 Imp. qt.)
AWD models	9.0 L (9.5 qt., 7.9 Imp. qt.)
Without filter	8.4 L (8.9 qt., 7.4 Imp. qt.)

\*: The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up and turn off the engine, wait more than 5 minutes, and check the oil level on the dipstick.

### ■ Engine oil selection

“Toyota Genuine Motor Oil” is used in your Lexus vehicle. Lexus recommends the use of approved “Toyota Genuine Motor Oil”. Another motor oil of matching quality can also be used.

Oil grade:

0W-20, 5W-20, 5W-30 and 10W-30:

API grade SL “Energy-Conserving”, SM “Energy-Conserving” or SN “Resource-Conserving”; or ILSAC multigrade engine oil

15W-40 and 20W-50:

API grade SL, SM or SN multigrade engine oil

Recommended viscosity (SAE):


SAE 0W-20 is filled into your Lexus vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather.

If SAE 0W-20 oil is not available, SAE 5W-30 oil may be used. However, it should be replaced with SAE 0W-20 at the next oil change.

If you use SAE 10W-30 or a higher viscosity engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 0W-20, 5W-20 or 5W-30 engine oil is recommended.

Oil viscosity (0W-20 is explained here as an example):

- The 0W in 0W-20 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 20 in 0W-20 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

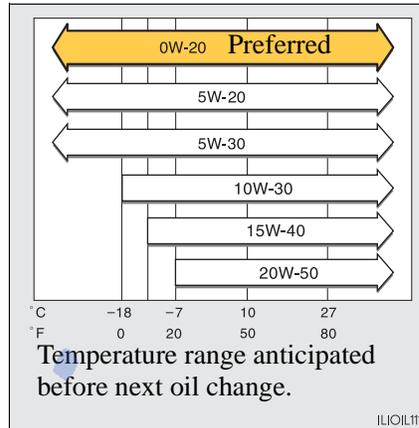

How to read oil container labels:

Either or both API registered marks are added to some oil containers to help you select the oil you should use.

① API Service Symbol

Top portion: “API SERVICE SN” means the oil quality designation by American Petroleum Institute (API).

Center portion: “SAE 0W-20” means the SAE viscosity grade.

Lower portion: “Resource-Conserving” means that the oil has fuel-saving and environmental protection capabilities.



② ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

FarmaSOS.com

### Cooling system

Capacity	2WD models	11.8 L (12.5 qt., 10.4 Imp. qt.)
	AWD models	11.1 L (11.7 qt., 9.8 Imp. qt.)
Coolant type		<p>Use either of the following:</p> <ul style="list-style-type: none"> <li>• “Toyota Super Long Life Coolant”</li> <li>• Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology</li> </ul> <p>Do not use plain water alone.</p>

### Ignition system

Spark plug	
Make	DENSO FK20HBR11
Gap	1.1 mm (0.043 in.)

#### NOTICE

#### ■ Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.

### Electrical system

Battery	
Specific gravity reading at 20°C (68°F):	1.250 — 1.290 Fully charged 1.160 — 1.200 Half charged 1.060 — 1.100 Discharged
Charging rates	
Quick charge	15 A max.
Slow charge	5 A max.

### Automatic transmission

Fluid capacity*	2WD models	10.3 L (10.9 qt., 9.1 Imp. qt.)
	AWD models	10.7 L (11.3 qt., 9.4 Imp. qt.)
Fluid type	Toyota Genuine ATF WS	

\*: The fluid capacity is the quantity of reference.

If replacement is necessary, contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

#### NOTICE

##### ■ Automatic transmission fluid type

Using transmission fluid other than “Toyota Genuine ATF WS” may cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage the transmission of your vehicle.

### Transfer (AWD models)

Oil capacity	0.70 L (0.74 qt., 0.62 Imp. qt.)
Oil type and viscosity*	Toyota Genuine Transfer gear oil LL 80 or equivalent

\*: Your Lexus vehicle is filled with Toyota genuine gear oil at the factory. Use Lexus approved Toyota genuine gear oil or an equivalent of matching quality to satisfy the above specification. Please contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for further details.

### Front differential (AWD models)

Oil capacity	0.75 L (0.79 qt., 0.66 Imp. qt.)
Oil type and viscosity*	Toyota Genuine Differential gear oil LT 75W-85 GL-5 or equivalent

\*: Your Lexus vehicle is filled with “Toyota Genuine Differential Gear Oil” at the factory. Use Lexus approved “Toyota Genuine Differential Gear Oil” or an equivalent of matching quality to satisfy the above specification. Please contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for further details.

### Rear differential

#### ► 2WD models (vehicles without paddle shift switches)

Oil capacity	1.35 L (1.42 qt., 1.19 Imp. qt.)
Oil type and viscosity*	Toyota Genuine Differential gear oil LT 75W-85 GL-5 or equivalent

- 2WD models (vehicles with paddle shift switches) and AWD models

Oil capacity	1.35 L (1.42 qt., 1.19 Imp. qt.)
Oil type and viscosity*	Toyota Genuine Differential gear oil LX 75W-85 GL-5 or equivalent

\*: Your Lexus vehicle is filled with “Toyota Genuine Differential Gear Oil” at the factory.

Use Lexus approved “Toyota Genuine Differential Gear Oil” or an equivalent of matching quality to satisfy the above specification. Please contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional for further details.

## Brakes

Pedal clearance*	147 mm (5.8 in.) Min.
Pedal free play	1.0 - 2.0 mm (0.04 - 0.08 in.)
Fluid type	SAE J1703 or FMVSS No.116 DOT 3 or, SAE J1704 or FMVSS No.116 DOT 4

\*: Minimum pedal clearance when depressed with a force of 500 N (51 kgf, 112 lbf) while the engine is running.

When performing the brake pedal inspection, also be sure to check that the brake system warning light is not illuminated when the engine is running (If the brake system warning light is illuminated, refer to P. 824).

## Steering

Free play	Less than 30 mm (1.2 in.)
-----------	---------------------------

## Tires and wheels

### ► 18-inch tires

Tire size	235/50R18 97W		
Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm <sup>2</sup> or bar, psi)	Rear wheel kPa (kgf/cm <sup>2</sup> or bar, psi)
	More than 210 km/h (130 mph)	330 (3.3, 48)* <sup>1</sup> 300 (3.0, 44)* <sup>2</sup>	330 (3.3, 48)* <sup>1</sup> 320 (3.2, 46)* <sup>2</sup>
	From 160 km/h (100 mph) to 210 km/h (130 mph)	280 (2.8, 41)* <sup>1</sup> 250 (2.5, 36)* <sup>2</sup>	280 (2.8, 41)* <sup>1</sup> 260 (2.6, 38)* <sup>2</sup>
	160 km/h (100 mph) or less	250 (2.5, 36)* <sup>1</sup> 230 (2.3, 33)* <sup>2</sup>	240 (2.4, 35)* <sup>1</sup> 230 (2.3, 33)* <sup>2</sup>
Wheel size	18 × 7 1/2 J		
Wheel nut torque	140 N•m (14.3 kgf•m, 103 ft•lbf)		

\*<sup>1</sup>: For all loads including full rated loads

\*<sup>2</sup>: For reduced loads (1 to 4 passengers only) تلفن شبانه روزی: ۰۲۱ ۸۸۴۲۰۸۸

FarmaSOS.com

## ► 19-inch tires

Tire size	245/45R19 98Y		
Tire inflation pressure (Recommended cold tire inflation pressure)	Vehicle speed	Front wheel kPa (kgf/cm <sup>2</sup> or bar, psi)	Rear wheel kPa (kgf/cm <sup>2</sup> or bar, psi)
	More than 210 km/h (130 mph)	280 (2.8, 41)* <sup>1</sup> 260 (2.6, 38)* <sup>2</sup>	300 (3.0, 44)* <sup>1</sup> 260 (2.6, 38)* <sup>2</sup>
	From 160 km/h (100 mph) to 210 km/h (130 mph)	250 (2.5, 36)* <sup>1</sup> 230 (2.3, 33)* <sup>2</sup>	270 (2.7, 39)* <sup>1</sup> 230 (2.3, 33)* <sup>2</sup>
	160 km/h (100 mph) or less	240 (2.4, 35)* <sup>1</sup> 230 (2.3, 33)* <sup>2</sup>	240 (2.4, 35)* <sup>1</sup> 230 (2.3, 33)* <sup>2</sup>
	160 km/h (100 mph) or less (ECO tire pres- sure * <sup>3</sup> )	250 (2.5, 36)	250 (2.5, 36)
Wheel size	19 × 8 J		
Wheel nut torque	140 N•m (14.3 kgf•m, 103 ft•lbf)		

\*<sup>1</sup>: For all loads including full rated loads

\*<sup>2</sup>: For reduced loads (1 to 4 passengers only)

\*<sup>3</sup>: "For optimizing fuel economy, ECO tire pressure is recommended.  
Tire pressure affects traveling comfort, road noise and steering characteristics."

## Light bulbs

	Light bulbs	W	Type
Exterior	Headlights (vehicles with discharge head-lights)		
	High beam* <sup>1</sup>	60	A
	High beam or high beam/near-infrared ray transmitters* <sup>2</sup>	65	B
	Low/high beam	35	C
	Rear fog lights	21	D
Interior	Vanity lights		
	Front	8	D
	Rear	3	E
	Interior lights		
	Front	8	D
	Rear	8	D
	Rear personal lights (with rear seat entertainment system)	10	F
Trunk lid light	3.8	D	
Trunk light	3.8	D	

A: HB3 halogen bulbs

B: H9 halogen bulbs

C: D4S discharge bulbs

D: Wedge base bulbs

E: Double end bulbs

F: Single end bulbs

\*<sup>1</sup>: Left-hand drive vehicles without Adaptive High-beam System\*<sup>2</sup>: Left-hand drive vehicles with Adaptive High-beam System and right-hand drive vehicles

## Fuel information

### EU area:

Your vehicle must use only unleaded gasoline conforming to European standard EN228.

For optimum engine performance, select premium unleaded gasoline with a Research Octane Number of 95 or higher.

### Except EU area:

Your vehicle must use only unleaded gasoline.

For optimum engine performance, select premium unleaded gasoline with a Research Octane Number of 95 or higher.

- Fuel tank opening for unleaded gasoline  
To help prevent incorrect fueling, your vehicle has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.
- If your engine knocks
  - Consult any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
  - You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.

FarmaSOS.com

 NOTICE

## ■ Notice on fuel quality

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use leaded gasoline.  
Leaded gasoline will cause the three-way catalytic converter to lose its effectiveness and the emission control system to function improperly.
- Gasoline engine (EU area): Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. The use of these fuels will damage the vehicle’s fuel system. In case of any doubt, ask any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.
- Gasoline engine (except EU area): Bioethanol fuel sold under names such as “E50” or “E85” and fuel containing a large amount of ethanol should not be used. Your vehicle can use gasoline mixed with 10% max ethanol. The use of fuel with more than 10% ethanol content (E10) will damage the vehicle’s fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

∞

Vehicle specifications

## Customizable features

Your vehicle includes a variety of electronic features that can be personalized to your preferences. These preferences can be changed by using the “DISP” button, by using the Remote Touch, or at any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

### Customizing vehicle features

- Changing by using the Remote Touch
  - ▶ Vehicles without a navigation system:
    - 1 “Vehicle settings” screen displayed on the Remote Touch screen. (→P. 406)
    - 2 Select “Vehicle customization” on the “Vehicle settings” screen.  
“Vehicle customization” screen will appear.
 
    - 3 Choose a category displayed on the screen to display the settings.
    - 4 Select the setting to be changed. Change each setting.  
For items that can be enabled/disabled, and for items with an operating time that can be changed, select “On” or “Off”, or select the desired operating time.  
For items with sensor sensitivity that can be changed, select “+” or “-” to choose the desired level, then select “OK”.
    - 5 A message indicating that the settings are being saved will appear. Do not perform any other operations while this message is displayed.

- ▶ Vehicles with a navigation system:
  - Refer to “Navigation System Owner’s Manual”.
- Changing by using the “DISP” button
  - P. 113

### Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

- ① Settings that can be changed using the Remote Touch
- ② Settings that can be changed using the “DISP” button
- ③ Settings that can be changed by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional

Definition of symbols: O = Available, —=Not available

تلفن شبانه روزی: ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

∞

Vehicle specifications

Item	Function	Default setting	Customized setting	①	②	③
Multi-information display (→P. 107)	Language* <sup>1</sup>	British English	French			
			German			
			Spanish	—	O	O
			Italian			
			Russia* <sup>2</sup>			
	Units* <sup>1</sup>	km (L/100km)	km (km/L)			
			miles (MPG)* <sup>2</sup>	—	O	O
	ECO lamp	ON (Self-lighting)	OFF			
			ON (Always)	—	O	O
	Drive monitor	Cruising range	Fuel consumption	—	O	O
Lamp brightness	Standard	Bright	—	O	O	
SPORT lamp	ON	OFF	—	O	O	
Background screen	ON	OFF	—	O	O	
Default settings	OFF	ON	—	O	O	

Item	Function	Default setting	Customized setting	①	②	③
Door lock (→P. 147, 877)	Unlocking using a mechanical key	All doors unlocked in one step	Driver's door unlocked in one step, all doors unlocked in two steps	0	—	0
	Speed-detecting automatic door lock function	On	Off	0	—	0
	Shifting gears to position other than P locks all doors.	Off	On	0	—	0
	Shifting gears to P unlocks all doors.	Off	On	0	—	0
	Opening driver's door unlocks all doors.	On	Off	0	—	0
Smart entry & start system (→P. 122) and wireless remote control (→P. 142)	Operation signal (Emergency flashers)	On	Off	0	—	0
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	30 seconds	60 seconds	—	—	0
			120 seconds	—	—	0
Open door warning buzzer	On	Off	—	—	0	

Item	Function	Default setting	Customized setting	①	②	③
Smart entry & start system (→P. 122)	Smart entry & start system	On	Off	0	—	0
	Smart door unlocking	All the doors	Driver's door	0	—	0
			Each door			
			Same side doors			
	Welcome light illumination control	On	Off	—	—	0
Opening trunk without the electronic key when all doors are unlocked	On	Off	—	—	0	
Wireless remote control (→P. 142)	Wireless remote control	On	Off	—	—	0
	Unlocking operation	All doors unlocked in one step	Driver's door unlocked in one step, all doors unlocked in two steps	0	—	0
			Trunk unlocking operation			
Trunk unlocking operation	One long press	One short press				
		Push twice				
Off						

Item	Function	Default setting	Customized setting	①	②	③
Front seats (→P. 158)	Driver's seat movement when exiting the vehicle	Standard	Off	O	—	O
			Partial			
	Driver's seat lumbar support movement when exiting the vehicle	On	Off	O	—	O
	Front passenger's seat lumbar support firmness adjustment when exiting the vehicle	On	Off	—	—	O
	Front passenger's seat ottoman movement when exiting the vehicle*2	On	Off	—	—	O

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

۸

Vehicle specifications

Item	Function	Default setting	Customized setting	①	②	③
Power windows (→P. 185) and moon roof*2 (→P. 188)	One-touch close operation using the power window switches on the front passenger door and each rear door	On	Off	—	—	0
	One-touch front passenger window or rear window close operation using the power window switch on the driver's door	On	Off	—	—	0
	Mechanical key linked operation	On	Off	—	—	0
	Wireless remote control linked operation	Off	On	—	—	0
	Linked entry function	On	Off	—	—	0
Turn signal lever (→P. 225)	Times of flashing of the lane change signal flashers	3	5	0	—	0
			7			
			9			
			11			
			Off			

Item	Function	Default setting	Customized setting	①	②	③
Automatic light control system (→P. 230)	Light sensor sensitivity	Standard	-2 to 2	O	—	O
	Time elapsed before headlights automatically turn off	30 seconds	60 seconds	—	—	O
			90 seconds			
			120 seconds			
AFS (Adaptive Front-lighting System) (→P. 232)	Adaptive Front-lighting System	On	Off	—	—	O
Adaptive High-beam System*2 (→P. 235)	Changing to variable shade beam	On	Off	—	—	O
	Vehicle speed at which Adaptive High-beam System operates and variable shade beam adaptation angle	Normal driving	For ease of operation under mountain road driving conditions	—	—	O
Lexus parking assist-sensor (→P. 297)	Detection distance of the front center sensor	Far	Near	O	—	O
	Detection distance of the front side sensor	Far	Near	O	—	O
	Detection distance of the rear center sensor	Far	Near	O	—	O
	Buzzer volume	3	1 to 5	O	—	O
	Display setting (when Lexus parking assist-sensor is operating)	All sensors displayed	Display off	O	—	O

Item	Function	Default setting	Customized setting	①	②	③
Automatic air conditioning system (→P. 438)	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	On	Off	O	—	O
	A/C Auto switch operation	On	Off	O	—	O
	Exhaust gas sensor sensitivity	Standard	-3 to 3	O	—	O
	Air conditioning control of Eco drive mode	On	Off	—	—	O
Climate control seats*2/ seat heaters*2 (→P. 727)	Front climate control seat/seat heater temperature adjustment during automatic operation (individual seat adjustment available)*2	Level 3 (standard)	Level 1 (cool) to level 5 (warm)	O	—	O
	Rear climate control seat/rear seat heater start-up conditions when engine switch is in the ON position (individual seat adjustment available)*2	Off	On (AUTO)	O	—	O
	Function that warms seats faster than usual (individual seat adjustment available)	On	Off	—	—	O
	Time until function that warms seats faster than usual turns off (individual seat adjustment available)	Standard	Short	—	—	O
Long			—	—	O	

Item	Function	Default setting	Customized setting	①	②	③
Heated steering wheel*2 (→P. 725)	Automatic steering wheel heating	On	Off	0	—	0
	Time until automatic steering wheel heating turns off	Level 3 (standard)	Level 1 (short) to level 5 (Long)	0	—	0

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

۸

Vehicle specifications

Item	Function	Default setting	Customized setting	①	②	③
Illumination (→P. 700)	Time elapsed before the interior lights turn off	15 seconds	Off			
			7.5 seconds	O	—	O
			30 seconds			
	Operation after the engine switch is turned off	On	Off	—	—	O
	Operation when the doors are unlocked	On	Off	—	—	O
	Operation when you approach the vehicle with the electronic key on your person	On	Off	—	—	O
	Footwell and inside door handle lights	On	Off	—	—	O
	Shift lever light	On	Off	—	—	O
	Seat belt buckle illumination when driver's door is opened	On	Off	—	—	O
	Seat belt buckle illumination after the engine switch is turned off	On	Off	—	—	O
	Instrument panel illumination method	Choreographed illumination	Simple illumination	—	—	O
			Off			
Exterior light control	On	Off	—	—	O	

Item	Function	Default setting	Customized setting	①	②	③
Illumination (→P. 700)	Time elapsed before the outer foot lights turn off	15 seconds	Off			
			7.5 seconds	O	—	O
			30 seconds			
	Operation of the outer foot lights when you approach the vehicle with the electronic key on your person	On	Off	—	—	O
	Operation of the outer foot lights when the doors are unlocked with the power door lock switch	On	Off	—	—	O

\*1: The default setting varies according to countries.

\*2: If equipped ایراد جوڑو مارا تلفن شبانه روزی: ۰۸۵ ۸۸۶۲ ۰۸۱

FarmaSOS.com

8

Vehicle specifications

**■ Vehicle customization**

- When the smart entry & start system is off, the entry unlock function cannot be customized.
- When the doors remain closed after unlocking the doors and the timer activated automatic door lock function activates, signals will be generated in accordance with the operational signal (Emergency flashers) function settings.

**■ When customizing using the Remote Touch**

Stop the vehicle in a safe place, apply the parking brake, and shift the shift lever to P. Also, to prevent battery discharge, leave the engine running while customizing the features.

**⚠ CAUTION****■ During customization**

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

**⚠ NOTICE****■ During customization**

To prevent battery discharge, ensure that the engine is running while customizing features.

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

∞

Vehicle specifications

## Index

What to do if... (Troubleshooting).....	918
Alphabetical index.....	924

امداد خودرو فارما

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

For vehicles with a navigation system, refer to the “Navigation System Owner’s Manual” for information regarding the navigation system.

## What to do if... (Troubleshooting)

If you have a problem, check the following before contacting any authorized Lexus dealer or repairer, or another duly qualified and equipped professional.

### The doors cannot be locked, unlocked, opened or closed



#### You lose your keys

- If you lose your mechanical keys, new genuine mechanical keys can be made by any authorized Lexus dealer or repairer, or another duly qualified and equipped professional. (→P. 117)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact any authorized Lexus dealer or repairer, or another duly qualified and equipped professional immediately. (→P. 121)



#### The doors cannot be locked or unlocked

- Is the electronic key battery weak or depleted? (→P. 796)
- Is the engine switch in IGNITION ON mode?  
When locking the doors, turn the engine switch off. (→P. 208)
- Is the electronic key left inside the vehicle?  
When locking the doors, make sure that you have the electronic key on your person.
- The function may not operate properly due to the condition of the radio wave. (→P. 132)



The rear door cannot be opened

- Is the child-protector lock set?

The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P. 148)

---



The trunk lid is closed with the electronic key left inside

- The function to prevent the electronic key from being left inside the trunk will operate and you can open the trunk as usual. Take the key out from the trunk. (→P. 124)

تلفن شبانه روزی: ۰۲۱-۸۸۸۶۲۰۸۵

FarmaSOS.com

### If you think something is wrong



The engine does not start

- Did you press the engine switch while firmly depressing the brake pedal? (→P. 207)
- Is the shift lever in P? (→P. 207)
- Is the electronic key anywhere detectable inside the vehicle?  
(→P. 126)
- Is the steering wheel unlocked? (→P. 209)
- Is the electronic key battery weak or depleted?  
In this case, the engine can be started in a temporary way.  
(→P. 879)
- Is the battery discharged? (→P. 880)



The shift lever cannot be shifted from P even if you depress the brake pedal

- Is the engine switch in IGNITION ON mode?  
If you cannot release the shift lever by depressing the brake pedal with the engine switch in IGNITION ON mode  
(→P. 870)



The steering wheel cannot be turned after the engine is stopped

- It is locked automatically to prevent theft of the vehicle.  
(→P. 209)



The windows do not open or close by operating the power window switches

- Is the window lock switch pressed?  
The power window except for the one at the driver's seat cannot be operated if the window lock switch is pressed.  
(→P. 185)



The engine switch is turned off automatically

- The auto power off function will be operated if the vehicle is left in ACCESSORY mode for a period of time.  
(→P. 209)



A warning buzzer sounds during driving

- The seat belt reminder light is flashing  
Are the driver and the front passenger wearing the seat belts?  
(→P. 828)
  - The parking brake indicator is on  
Is the parking brake released? (→P. 226)
- Depending on the situation, other types of warning buzzer may also sound. (→P. 824, 833)



An alarm is activated and the horn sounds (if equipped)

- Did anyone inside the vehicle open a door or anything move inside the vehicle\* during setting the alarm?

The sensor detects them and the alarm sounds. (→P. 88)

\*: If the vehicle is equipped with intrusion sensor and tilt sensor.

Do one of the following to stop the alarm:

- Unlock the doors or open the trunk using the entry function or wireless remote control.
- Start the engine.



A warning buzzer sounds when leaving the vehicle

- Is the electronic key left inside the vehicle or the moon roof opened?

Check the message on the multi-information display.

(→P. 833)



A warning light turns on or a warning message is displayed

- When a warning light turns on or a warning message is displayed, refer to P. 824, 833.

**When a problem has occurred****If you have a flat tire**

- Vehicles with a spare tire  
Stop the vehicle in a safe place and replace the flat tire with the spare tire. (→P. 837)
- Vehicles with an emergency tire puncture repair kit  
Stop the vehicle in a safe place and repair the flat tire temporarily with the emergency tire puncture repair kit. (→P. 848)

**The vehicle becomes stuck**

- Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow. (→P. 889)

FarmaSOS.com

## Alphabetical index

### A

- A/C
  - Air conditioning filter.....793
  - Front automatic air conditioning system .....438
  - Rear air conditioning system 456
- ABS (Anti-lock Brake System).346
  - Function.....346
  - Warning light.....826
- Adaptive Front-lighting System (AFS) .....232
- Adaptive High-beam System (AHS).....235
- AFS (Adaptive Front-lighting System) .....232
- AHS (Adaptive High-beam System) .....235
- Air conditioning filter .....793
- Air conditioning system
  - Air conditioning filter.....793
  - Front automatic air conditioning system .....438
  - Rear air conditioning system 456
- Airbags ..... 47
  - Airbag manual on-off system 59
  - Airbag operating conditions .. 54
  - Airbag precautions for your child ..... 50
  - Airbag warning light..... 825
  - Correct driving posture..... 40
  - Curtain shield airbag operating conditions ..... 54
  - Curtain shield airbag precautions ..... 50
  - General airbag precautions ... 50
  - Locations of airbags..... 47
  - Modification and disposal of airbags ..... 53
  - Side airbag operating conditions ..... 54
  - Side airbag precautions..... 50
  - Side and curtain shield airbags operating conditions ..... 54
  - Side and curtain shield airbags precautions ..... 50
  - SRS airbags..... 47
  - Airbag manual on-off system ..... 59
- Alarm
  - Alarm ..... 88
  - Warning buzzer..... 824, 833
- Anchor brackets..... 73

Antennas (smart entry & start system) .....	125	Audio visual input .....	625
Anti-lock Brake System (ABS).....	346	Automatic headlight leveling system .....	232
Function.....	346	Automatic light control system .....	230
Warning light.....	826	Automatic transmission....	212, 217
Approach warning .....	260, 275	If the shift lever cannot be shifted from P.....	870
Armrest.....	732	M mode.....	220
Armrest door .....	739	Paddle shift switches .....	219
Ashtrays.....	720	AUX port.....	559
Assist grips .....	742	Auxiliary boxes .....	712
Audio input.....	559	A/V input port .....	625
Audio system.....	464		
Audio input.....	559		
Audio visual input .....	625		
AUX port/USB port .....	540, 551, 559		
A/V input port .....	625		
Bluetooth® audio.....	527		
CD/DVD player.....	498		
CD/DVD player information.....	518		
DVD video .....	506		
iPod.....	549		
MP3/WMA disc .....	500		
Optimal use.....	561		
Portable music player .....	559		
Radio .....	491		
Rear seat audio controls.....	563		
Steering wheel audio switch.....	566		
USB memory .....	538		

B	C
Back-up lights	Card key ..... 114
Replacing light bulb .....810	Care ..... 744, 748
Battery .....771	Aluminum wheels..... 745
Battery checking .....771	Exterior ..... 744
If the vehicle has discharged	Interior ..... 748
battery.....880	Seat belts..... 749
Preparing and checking	Cargo hooks..... 714
before winter .....386	Cargo net ..... 714
Warning light.....825	CD player ..... 498
Blind Spot Monitor (BSM) .....375	Chains..... 388
Bluetooth®	Child restraint system..... 62
Audio system .....527	Baby seats, definition ..... 62
Hands-free system	Baby seats, installation ..... 74
(for cellular phone).....630	Child seats, definition ..... 62
Brake	Child seats, installation..... 74
Brake Hold .....229	Installing CRS with ISOFIX
Emergency brake signal .....347	rigid anchors ..... 77
Fluid.....898	Installing CRS with seat belts 74
Parking brake.....226	Installing CRS with top strap. 78
Warning light.....824, 827	Junior seats, definition ..... 62
Brake assist .....346	Junior seats, installation..... 76
Brake Hold .....229	
Break-in tips .....197	
Brightness control	
Instrument panel light control ....	
104	
BSM (Blind Spot Monitor) .....375	

Child safety .....	61	Climate control seat .....	727
Airbag precautions.....	50	Climate control seat filter .....	730
Battery precautions.....	773, 884	Clock .....	719
Child restraint system .....	62	Clock light .....	700
Climate control seat		Coat hooks.....	741
precautions .....	731	Coin holder .....	706
Heated steering wheel		Condenser .....	771
precautions .....	726	Console box.....	709
How your child should		Cool box .....	710
wear the seat belt.....	43, 44	Coolant .....	769
Installing child restraints .....	73	Capacity .....	895
Moon roof precautions .....	191	Checking.....	769
Power window lock switch...185		Preparing and checking	
Power window precautions...187		before winter .....	386
Rear door child-protectors....148		Cooling system .....	769
Removed electronic key		Engine overheating .....	885
battery precautions .....	798	Cruise control	
Seat belt comfort guide.....	43	Cruise control .....	250
Seat belt precautions.....	46	Dynamic radar cruise control ....	
Seat heater precautions .....	731	254	
Trunk precautions .....	155	Dynamic radar cruise control	
Child-protectors .....	148	with full-speed range.....	268
Cigarette lighter .....	721	Cup holders.....	707
Cleaning .....	744, 748	Curtain shield airbags .....	48
Aluminum wheels.....	745	Customizable features .....	904
Exterior .....	744		
Interior .....	748		
Seat belts.....	749		

## D

- DAB (Digital Audio Broadcast) 493
- Daytime running light system ..232
- Defogger
  - Front windshield .....445
  - Outside rear view mirrors ....462
  - Rear window .....462
- Differential
  - Front differential .....897
  - Rear differential .....897
- Digital Audio Broadcast (DAB) 493
- Dimensions .....888
- Display
  - Dynamic radar cruise control ..... 254
  - Dynamic radar cruise control with full-speed range .....268
  - LKA (Lane-Keeping Assist) 291
  - Multi-information display ....107
  - Remote Touch screen .....395
  - Trip information .....108
  - Warning message .....833
- Do-it-yourself maintenance .....754
- Door courtesy lights .....700
- Door lock
  - Doors .....147
  - Smart entry & start system ...122
  - Wireless remote control .....142
- Door pockets .....706
- Doors ..... 147
  - Automatic door locking and unlocking system ..... 149
  - Door glasses ..... 185
  - Door lock ..... 147
  - Open door warning buzzer .. 127
  - Open door warning light ..... 828
  - Outside rear view mirrors .... 181
  - Rear door child-protector .... 148
- Double locking system ..... 87
- Driver's seat position memory . 168
- Driving ..... 194
  - Break-in tips ..... 197
  - Correct driving posture ..... 40
  - Driving mode select switch . 340
  - Procedures ..... 194
  - Winter drive tips ..... 386
- DVD player ..... 498, 506
- Dynamic radar cruise control ... 254
  - Function ..... 254
- Dynamic radar cruise control with full-speed range ..... 268
  - Function ..... 268

## E

Eco drive mode .....	340
Eco Driving Indicator.....	110
Electric Power Steering (EPS) ..	347
Function.....	347
Warning light.....	827
Electronic key.....	114
If the electronic key does not operate properly .....	877
Replacing the battery .....	796
Electronically modulated air suspension .....	344
Emergency brake signal .....	347
Emergency flashers .....	814
Emergency, in case of	
If the battery is discharged ...	880
If the electronic key does not operate properly .....	877
If the engine will not start.....	868
If the parking brake cannot be released.....	872
If the shift lever cannot be shifted from P.....	870
If the warning buzzer sounds	824
If the warning light turns on	824
If the warning message is displayed .....	833
If you have a flat tire ....	837, 848
If you think something is wrong.....	822
If your vehicle becomes stuck ....	889
If your vehicle has to be stopped in an emergency....	815
If your vehicle needs to be towed.....	816

If your vehicle overheats ..... 885

Emergency tire puncture repair kit.....848	<b>F</b>	First-aid kit storage belt..... 716
Engine		Flat tire
Accessory mode.....208		Vehicles with a spare tire..... 837
Compartment .....761		Vehicles without a spare tire 848
Engine switch .....207		Floor mats..... 38
Hood .....757		Fluid
How to start the engine.....207		Automatic transmission ..... 896
Identification number .....890		Brake..... 898
If the engine will not start....868		Washer ..... 775
Ignition switch (engine switch).....207		Fog lights..... 242
Overheating .....885		Replacing light bulbs ... 809, 810
Engine compartment cover.....763		Switch ..... 242
Engine coolant.....769		Wattage..... 901
Capacity .....895		Follow me home system..... 231
Checking.....769		Footwell light ..... 700
Preparing and checking before winter .....386		Front automatic air conditioning system ..... 438
Engine coolant temperature gauge .....102		Front fog lights ..... 242
Engine immobilizer system.....82		Replacing light bulbs ..... 810
Engine oil .....766		Switch ..... 242
Capacity.....892		Front position lights..... 230
Checking.....766		Light switch ..... 230
Preparing and checking before winter .....386		Replacing light bulbs ..... 810
Engine switch .....207		Welcome light illumination control ..... 123
EPS (Electric Power Steering) ..347		
Function.....347		
Warning light.....827		

Front seats .....158	
Adjustment .....158	
Cleaning.....748	
Climate control seat.....727	
Correct driving posture.....40	
Driving position memory .....168	
Head restraints .....176	
Power easy access system ....160	
Seat position memory .....168	
Front turn signal lights .....225	
Replacing light bulbs.....810	
Turn signal lever.....225	
Fuel.....246	
Capacity .....891	
Fuel gauge .....102	
Fuel pump shut off system ...823	
Information .....902	
Refueling .....246	
Type.....246, 891	
Warning light.....828	
Fuel filler door.....246	
If the fuel filler door	
cannot be opened.....248	
Refueling .....246	
Fuel pump shut off system .....823	
Fuses.....799	
	<b>G</b>
	Gauges ..... 102
	Gear Shift Indicator ..... 221
	Glove box ..... 705
	<b>H</b>
	Hands-free system
	(for cellular phone) ..... 630
	Head restraints ..... 176
	Active head restraint ..... 177
	Adjustment ..... 176
	Pre-crash intelligent
	head restraint ..... 369
	Headlight cleaner..... 246
	Headlights..... 230
	Adaptive Front-lighting
	System (AFS) ..... 232
	Adaptive High-beam System.....235
	Discharge headlights
	precautions ..... 812
	Follow me home system..... 231
	Light switch ..... 230
	Replacing light bulbs ..... 810
	Wattage ..... 901

Heaters	
Front automatic air conditioning system .....	438
Heated steering wheel.....	725
Outside rear view mirrors.....	462
Rear air conditioning system.....	456
Seat heaters .....	728
Height control	
Electronically modulated air suspension .....	344
Hill-start assist control .....	346
Hood.....	757
Open .....	757
Hooks	
Cargo hooks.....	714
Coat hooks .....	741
Retaining hooks (floor mat) ...	38
Shopping bag hooks .....	714
Horn.....	231
	<b>I</b>
Identification .....	889
Engine.....	890
Vehicle.....	889
Ignition switch (engine switch) .....	207
Illuminated entry system .....	703
Immobilizer system .....	82
Indicators.....	99
Initialization	
Moon roof .....	190
Power windows.....	186
Tire pressure warning system.....	778
Initiators (tire pressure warning system) .....	787
Inside door handle lights .....	700
Inside rear view mirror .....	179
Instrument panel light control ..	104
Instrument panel ornament lights.....	700
Interior lights .....	701
Front interior light .....	701
Rear interior light.....	701
Wattage.....	901
Interior lights list .....	700
Intrusion sensor and tilt sensor...	91
ISOFIX rigid anchors .....	73

## J

- Jack
  - Positioning the jack .....758
  - Vehicle-equipped jack ..838, 849
- Jack handle .....838, 849
- Jam protection function
  - Moon roof .....189
  - Power trunk lid .....154
  - Power window .....186
  - Rear door sunshade.....737

## K

- Keyless entry .....122
  - Smart entry & start system ...122
  - Wireless remote control.....142
- Keys.....114
  - Electronic key .....114
  - Engine switch .....207
  - If the electronic key does not operate properly .....877
  - If you lose your keys ....117, 121
  - Key number plate .....114
  - Keyless entry .....122, 142
  - Mechanical key .....115
  - Replacing the battery .....796
  - Warning buzzer .....127
  - Wireless remote control key .142
- Knee airbags .....47

## L

- Lane-Keeping Assist (LKA) .... 287
  - Operation ..... 289
- Language (multi-information display)..... 113
- Lever
  - Auxiliary catch lever ..... 757
  - Hood lock release lever ..... 757
  - Shift lever ..... 212, 217
  - Turn signal lever..... 225
  - Wiper lever ..... 243
- Lexus Climate Concierge ..... 437
- Lexus night view ..... 386
- Lexus parking assist monitor.... 308
- Lexus parking assist-sensor..... 297
  - Function ..... 297
- License plate lights..... 230
  - Light switch ..... 230
- Replacing light bulbs ..... 810
  - Welcome light illumination control ..... 123
- Light bulbs
  - Replacing ..... 806
  - Wattage..... 901

Lights

Adaptive High-beam System 235  
 Fog light switch .....242  
 Follow me home system .....231  
 Headlight switch .....230  
 Illuminated entry system .....703  
 Interior lights .....701  
 Interior lights list .....700  
 Personal lights .....702  
 Replacing light bulbs .....806  
 Trunk lid light .....154  
 Trunk light .....154  
 Turn signal lever .....225  
 Vanity lights .....717  
 Wattage .....901  
 Welcome light illumination  
 control .....123  
 LKA (Lane-Keeping Assist) .....287  
 Operation .....289  
 Lock steering column .....209  
 Luggage security system .....153

M

Maintenance  
 Do-it-yourself maintenance . 754  
 Maintenance data ..... 888  
 Maintenance requirements... 751  
 Malfunction indicator lamp ..... 825  
 Master warning light ..... 828  
 Meter ..... 102  
 Indicators ..... 99  
 Instrument panel light control...  
 104  
 Meters ..... 102  
 Multi-information display... 107  
 Warning lights ..... 98  
 Mirrors  
 Inside rear view mirror ..... 179  
 Outside rear view mirror  
 defoggers ..... 462  
 Outside rear view mirrors .... 181  
 Vanity mirrors..... 717  
 Moon roof ..... 188  
 Door lock linked moon roof  
 operation ..... 189  
 Jam protection function ..... 189  
 Operation ..... 188  
 MP3 disc ..... 500  
 Multi-information display ..... 107  
 Dynamic radar cruise control ....  
 254  
 Dynamic radar cruise control  
 with full-speed range ..... 268  
 Lane-Keeping Assist ..... 291  
 Language ..... 113  
 Switching the display ..... 108  
 Trip information ..... 108  
 Warning message ..... 833

N	P
nanoe™ .....454	Paddle shift switches ..... 219
Navigation system*	Parking assist sensors ..... 297
	Parking brake..... 226
	If the parking brake cannot
	be released..... 872
	Operation ..... 226
	Parking brake engaged
	warning buzzer ..... 228
	PCS
	(Pre-Crash Safety system)..... 355
	Function ..... 355
	Pre-crash braking off switch 357
	Warning light ..... 827
	Pelvic support seat with
	seat vibrator..... 165
	Personal lights ..... 702
	Front personal lights ..... 702
	Rear personal lights ..... 702
	Wattage..... 901
	Pollen removal mode..... 449
O	
Odometer .....102	
Oil	
Engine oil .....892	
Front differential oil .....897	
Rear differential oil.....897	
Opener	
Fuel filler door.....248	
Hood .....757	
Trunk .....152	
Outer foot lights	
Location.....700	
Replacing light bulbs.....810	
Outside rear view mirrors.....181	
Adjusting and folding .....181	
BSM (Blind Sport Monitor) .375	
Linked mirror function	
when reversing .....183	
Mirror position memory .....168	
Outside rear view mirror	
defoggers .....462	
Outside temperature display.....102	
Overheating, Engine.....885	

\*: Refer to the “Navigation System Owner’s Manual”.

Power easy access system .....160	<b>R</b>
Power outlets .....723	Radar cruise control (dynamic
Power steering .....347	radar cruise control) ..... 254
Warning light .....827	Radiator ..... 771
Power trunk lid .....152	Radio ..... 491
Power windows .....185	Radio Data System (RDS)..... 493
Door lock linked window	Rear air conditioning system .... 456
operation.....187	Rear Crossing Traffic Alert..... 383
Jam protection function .....186	Rear door sunshades ..... 736
Operation .....185	Rear fog lights ..... 242
Window lock switch .....185	Replacing light bulbs ..... 809
Pre-Crash Safety system	Switch ..... 242
(PCS) .....355	Wattage ..... 901
Function .....355	Rear seat ..... 164
Pre-crash braking off switch.357	Adjustment.....164
Warning light .....827	Climate control seat ..... 728
	Seat heaters ..... 728
	Seat position memory ..... 174
	Rear seat entertainment
	system ..... 566
	Rear sunshade..... 733
	Operation ..... 733
	Reverse operation feature .... 734
	Rear turn signal lights..... 225
	Replacing light bulbs ..... 810
	Turn signal lever ..... 225
	Rear view mirror
	Inside rear view mirror ..... 179
	Outside rear view mirrors .... 181

Rear view monitor system.....308  
 Rear window defogger .....462  
 Refueling .....246  
   Capacity .....891  
   Fuel types .....246, 891  
   If the fuel filler door cannot  
     be opened .....248  
   Opening the fuel tank cap.....248  
 Remote Touch .....392  
 Remote Touch screen .....395  
 Replacing  
   Electronic key battery .....796  
   Fuses .....799  
   Light bulbs .....804  
   Tires .....837

## S

Seat belt reminder light ..... 828  
 Seat belts..... 42  
   Adjusting the seat belt ..... 43  
   Child restraint system  
     installation ..... 74  
   Cleaning and maintaining  
     the seat belt..... 749  
   Emergency locking retractor  
     (ELR)..... 44  
   How to wear your seat belt .... 42  
   How your child should wear  
     the seat belt..... 44  
   Pre-crash seat belts ..... 44  
   Pregnant women, proper  
     seat belt use ..... 45  
   Reminder light and buzzer... 828  
   Seat belt pretensioners ..... 43  
   SRS warning light..... 825  
 Seat heaters ..... 728  
 Seat position memory ..... 168, 174

۰۲۱-۸۸۶۲۰۸۵ : فارما سوس  
 FarmaSOS.com

- Seats .....158, 164  
 Adjustment .....158, 164  
 Adjustment precautions 162, 167  
 Child seats/child restraint  
   system installation .....73  
 Cleaning .....748  
 Climate control seat .....727  
 Driving position memory ....168  
 Head restraints .....176  
 Pelvic support seat with  
   seat vibrator .....165  
 Power easy access system ....160  
 Properly sitting in the seat .....40  
 Rear seat position memory ...174  
 Seat heaters .....728  
 Seat position memory ...168, 174
- Sensor  
 Adaptive High-beam System 241  
 Automatic headlight system .232  
 Camera sensors .....358  
 Driver monitor sensor .....358  
 Inside rear view mirror .....180  
 Intrusion sensor and tilt sensor ...  
   91  
 Lexus night view .....386  
 Lexus parking assist-sensor ..297  
 LKA (Lane-Keeping Assist).287  
 Radar sensor .263, 279, 357, 379  
 Rain-sensing windshield  
   wipers .....244
- Shift lever ..... 212, 217  
 Automatic transmission 212, 217  
 If the shift lever cannot be  
   shifted from P ..... 870  
 Shift lever light ..... 700  
 Shift lock system ..... 870  
 Shopping bag hooks ..... 714  
 Side airbags ..... 48  
 Side mirrors ..... 181  
   Adjusting and folding ..... 181  
   BSM (Blind Spot Monitor).. 375  
   Linked mirror function when  
     reversing ..... 183  
   Mirror position memory ..... 168  
 Side turn signal lights ..... 225  
   Replacing light bulbs ..... 810  
   Turn signal lever ..... 225  
 Smart entry & start system ..... 122  
   Antenna location ..... 125  
   Entry functions ..... 122  
   Starting the engine ..... 207  
 Snow mode ..... 214, 222  
 Snow tires ..... 389  
 Spare tire ..... 837  
   Inflation pressure ..... 899  
   Storage location ..... 838  
 Spark plug ..... 895  
 Specifications ..... 888  
 Speech command system ..... 433  
 Speedometer ..... 102  
 Sport mode ..... 340

- Steering lock.....209  
 Column lock release .....209  
 Steering wheel .....178  
 Adjustment .....178  
 Audio switches .....566  
 Heated steering wheel.....725  
 Power easy access system ....160  
 Steering wheel position  
 memory .....168  
 Stop lights  
 Emergency brake signal .....347  
 Replacing light bulbs.....810  
 Storage feature.....704  
 Stuck  
 If the vehicle becomes stuck.889  
 Sun shade  
 Rear .....733  
 Rear door .....736  
 Roof.....189  
 Sun visors .....717  
 Switches  
 Adaptive High-beam System  
 switch .....236  
 Airbag manual on-off switch..59  
 Audio remote control  
 switches .....566  
 Brake hold switch.....229  
 BSM (Blind Spot Monitor)  
 main switch .....375  
 Climate control seat  
 switches .....727  
 Cruise control switch.....250  
 “DISP” button.....108  
 Door lock switches .....147  
 Driving mode select switch ..340  
 Driving position memory  
 switches ..... 168  
 Dynamic radar cruise control  
 switch ..... 254  
 Dynamic radar cruise control  
 with full-speed range ..... 268  
 Emergency flashers switch .. 814  
 Engine switch ..... 207  
 Fog light switch ..... 242  
 Headlight cleaner switch ..... 246  
 Heated steering wheel  
 switch ..... 725  
 Ignition switch ..... 207  
 Lexus night view switch ..... 386  
 Lexus parking assist-sensor  
 switch ..... 297  
 Light switches..... 230  
 LKA (Lane-Keeping Assist)  
 switch..... 289  
 Moon roof switches ..... 188  
 Outside rear view mirror  
 switches ..... 181  
 Paddle shift switches ..... 219  
 Parking brake switches ..... 226  
 Power door lock switch ..... 147  
 Power trunk lid ..... 152  
 Power window switches ..... 185

Pre-crash braking off switch.357  
 Rear door sunshade switch ...736  
 Rear seat position memory  
   switches .....174  
 Rear sunshade switch .....733  
 Rear window and outside rear  
   view mirror defoggers  
   switch .....462  
 Seat heater switches.....728  
 Snow mode switch.....214, 222  
 Talk switch .....433, 652  
 Telephone switches .....630  
 Tilt and telescopic steering  
   control switch .....178  
 Tire pressure warning reset  
   switch .....779  
 Trunk closer switch .....153  
 Trunk opener switch .....152  
 Trunk opener main switch....153  
 Vehicle-to-vehicle distance  
   button .....257, 271  
 VSC OFF switch .....348  
 Window lock switch .....185  
 Windshield wipers  
   and washer switch .....243

## T

Tachometer ..... 102  
 Tail lights..... 230  
   Light switch ..... 230  
 Replacing light bulbs ..... 810  
 Welcome light illumination  
   control ..... 123  
 Talk switch ..... 433, 652  
 Telephone switches ..... 630  
 Theft deterrent system  
   Alarm ..... 88  
   Double locking system ..... 87  
   Engine immobilizer system ... 82  
   Intrusion sensor and tilt sensor ..  
     91  
 Tire inflation pressure ..... 789  
   Maintenance data ..... 899  
   Tire inflation pressure display  
     function ..... 111  
   Warning light ..... 829  
 Tire pressure warning system... 778  
   Function ..... 778  
   Initializing ..... 778  
   Installing tire pressure warning  
     valves and transmitters ..... 778  
   Registering ID codes ..... 780  
   Tire pressure warning reset  
     switch ..... 779  
   Warning light ..... 829

- Tires.....776
- Chains .....388
  - Checking.....776
  - Emergency tire puncture
    - repair kit .....848
  - If you have a flat tire ....837, 848
  - Inflation pressure .....899
  - Replacing .....837
  - Rotating tires .....777
  - Size .....899
  - Snow tires .....389
  - Spare tire.....837
  - Tire inflation pressure display
    - function .....111
  - Tire pressure warning system.....
    - 778
    - Warning light.....829
  - Tools.....838, 849
  - Top strap.....78
  - Towing .....816
    - Emergency towing.....816
    - Towing eyelet .....817
    - Trailer towing .....207
  - Traction Control (TRC).....346
  - Trailer towing.....207
  - Transmission ..... 212, 217
    - Automatic transmission 212, 217
    - Driving mode select switch . 340
    - If the shift lever cannot be
      - shifted from P ..... 870
    - M mode..... 220
    - Paddle shift switches ..... 219
    - S mode ..... 213
  - TRC (Traction Control)..... 346
  - Trip information ..... 108
  - Trip meters ..... 102
  - Trunk ..... 152
    - Extending a space ..... 739
    - Jam protection function ..... 154
    - Luggage security system ..... 153
    - Power trunk lid ..... 152
    - Smart entry & start system .. 124
    - Trunk closer switch ..... 153
    - Trunk easy closer..... 154
    - Trunk features..... 714
    - Trunk grip ..... 153
    - Trunk lid light ..... 154
    - Trunk light ..... 154
    - Trunk opener main switch ... 153
    - Trunk opener switch ..... 152
    - Trunk storage extension..... 739
    - Wireless remote control..... 142

Trunk light	
Trunk lid light.....	154
Trunk light.....	154
Wattage.....	901
Turn signal lights.....	225
Replacing light bulbs.....	810
Turn signal lever.....	225

U

USB port.....	540, 551
---------------	----------

V

Vanity lights	
Vanity lights .....	717
Wattage.....	901
Vanity mirrors .....	717
Variable Gear Ratio Steering	
(VGRS) .....	347
Function .....	347
VDIM (Vehicle Dynamics	
Integrated Management) .....	347
Vehicle Dynamics Integrated	
Management (VDIM) .....	347
Vehicle identification number ..	889
Vehicle Stability Control	
(VSC) .....	346
VGRS (Variable Gear Ratio	
Steering).....	347
Function .....	347
VSC (Vehicle Stability Control).....	346

فارسودرو فارما

تلفن شبانه روزی ۰۲۱-۸۸۶۲۰۸۵

FarmaSOS.com

## W

- |                                   |                                    |     |
|-----------------------------------|------------------------------------|-----|
| Warning buzzers                   | Washer.....                        | 243 |
| Approach warning .....260, 275    | Checking.....                      | 775 |
| Brake system .....824             | Preparing and checking             |     |
| Downshifting .....214, 222        | before winter ..... 386            |     |
| Key reminder.....127              | Switch.....                        | 243 |
| Lexus parking assist-sensor..297  | Washing and waxing ..... 744       |     |
| No-handed driving warning..292    | Weight.....                        | 888 |
| Open door.....828                 | Welcome light illumination         |     |
| Open moon roof.....191            | control.....                       | 123 |
| Pre-crash braking.....356         | Wheels.....                        | 791 |
| Seat belt reminder.....828        | Replacing.....                     | 791 |
| Warning lights.....98             | Size.....                          | 899 |
| ABS.....826                       | Window glasses.....                | 185 |
| Brake hold operated               | Window lock switch.....            | 185 |
| indicator.....827                 | Windows.....                       | 185 |
| Brake system .....824, 827        | Power windows.....                 | 185 |
| Charging system.....825           | Rear window defogger.....          | 462 |
| Electric power steering           | Windshield wiper de-icer ..... 463 |     |
| system.....827                    | Windshield wipers.....             | 243 |
| Low fuel level.....828            | Winter driving tips.....           | 386 |
| Malfunction indicator lamp..825   | Wireless remote control key....    | 142 |
| Master warning light .....828     | Locking/Unlocking.....             | 142 |
| Open door.....828                 | Replacing the battery.....         | 796 |
| Parking brake indicator.....827   | WMA disc.....                      | 500 |
| Pre-Crash Safety system.....827   |                                    |     |
| Seat belt reminder light .....828 |                                    |     |
| Slip indicator .....827           |                                    |     |
| SRS.....825                       |                                    |     |
| Tire pressure .....829            |                                    |     |

GAS STATION INFORMATION		
Auxiliary catch lever	Trunk opener	Fuel filler door
P. 757	P. 152	P. 246
Hood lock release lever	Fuel filler door opener	Tire inflation pressure
P. 757	P. 246	P. 899
Fuel tank capacity (Reference)	84 L (22.2 gal., 18.4 Imp. gal.)	
Fuel type	EU area: Unleaded gasoline conforming to European standard EN228 only Except EU area: Premium unleaded gasoline only P. 246, 891	
Cold tire inflation pressure	P. 899	
Engine oil capacity (Drain and refill — reference)	L (qt., Imp. qt.)	
	With filter	
	2WD models	8.6 (9.1, 7.6)
	AWD models	9.0 (9.5, 7.9)
	Without filter	8.4 (8.9, 7.4)
Engine oil type	“Toyota Genuine Motor Oil” or equivalent P. 892	